






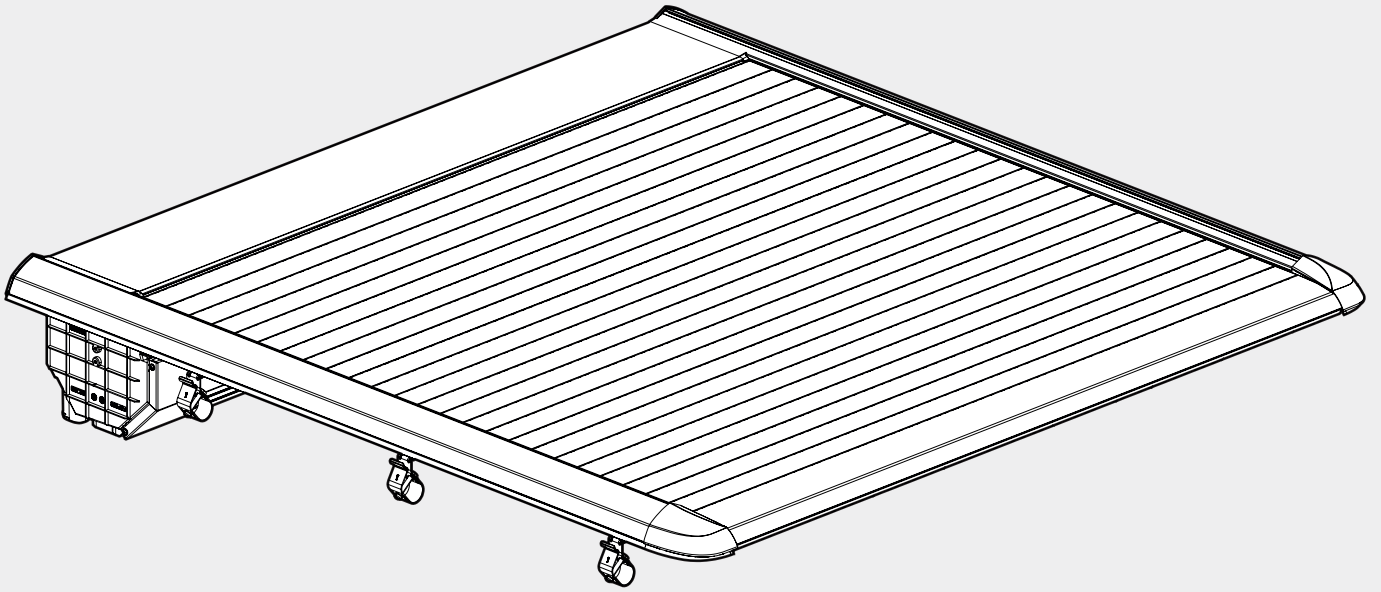


OWNER'S MANUAL

RealTruck® MRC-2000




1 WARNINGS

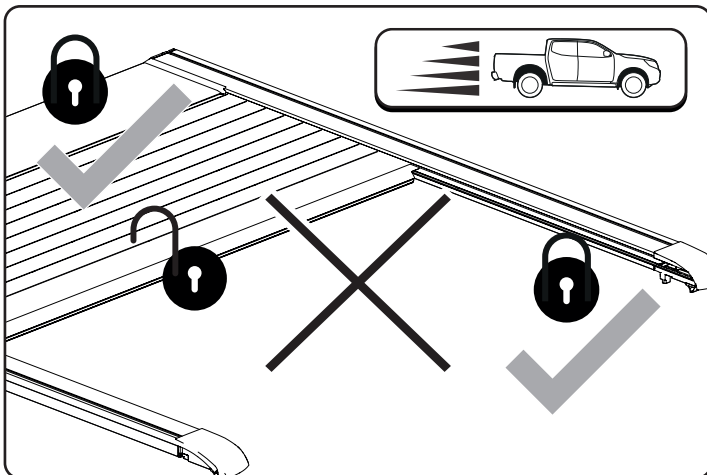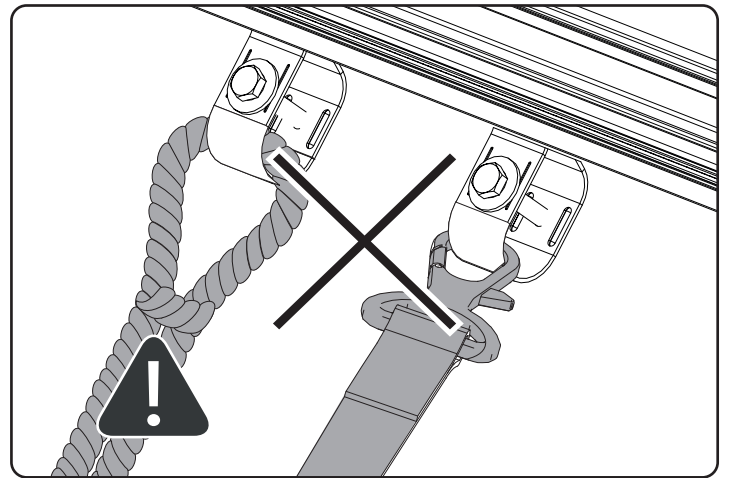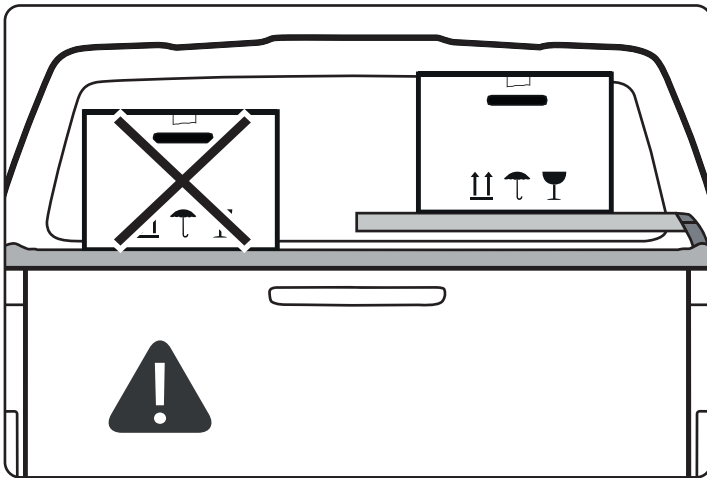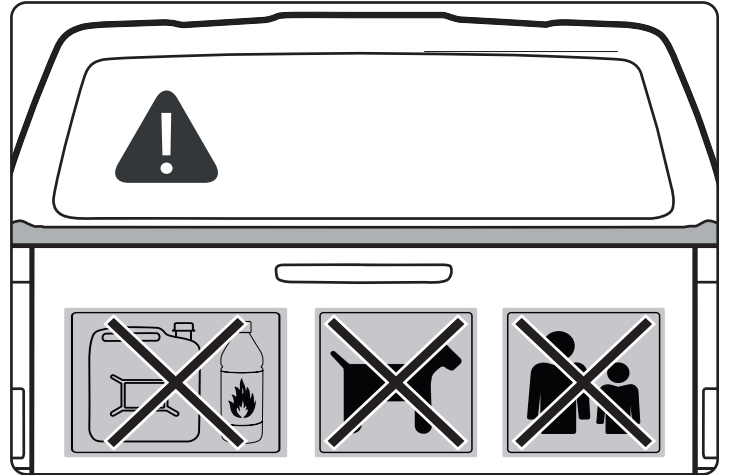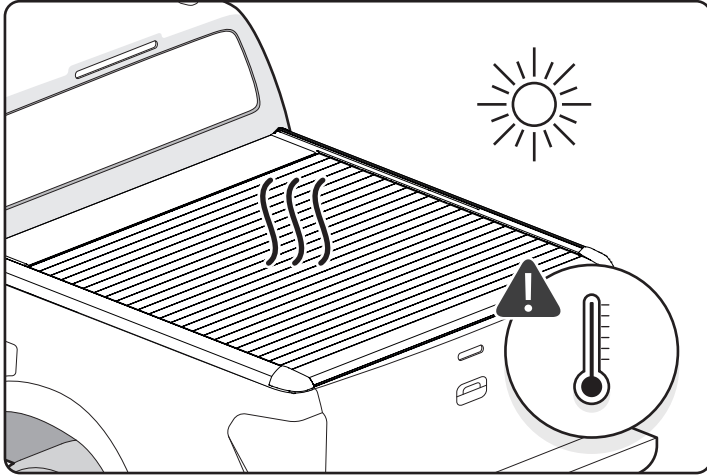



- Temperatures can be very high under the cover when closed.
- We do not recommend washing the MRC-2000 in a brushless carwash, as the coating may be damaged due to use of chemicals.
- Do not load directly ontop of the MRC-2000. For loading capability, use RealTruck accessories such as Cross Bars / Cargo Carriers.
- Driving is only permitted with the shutter locked in fully open or fully closed position.

2 CONDITIONS OF USE

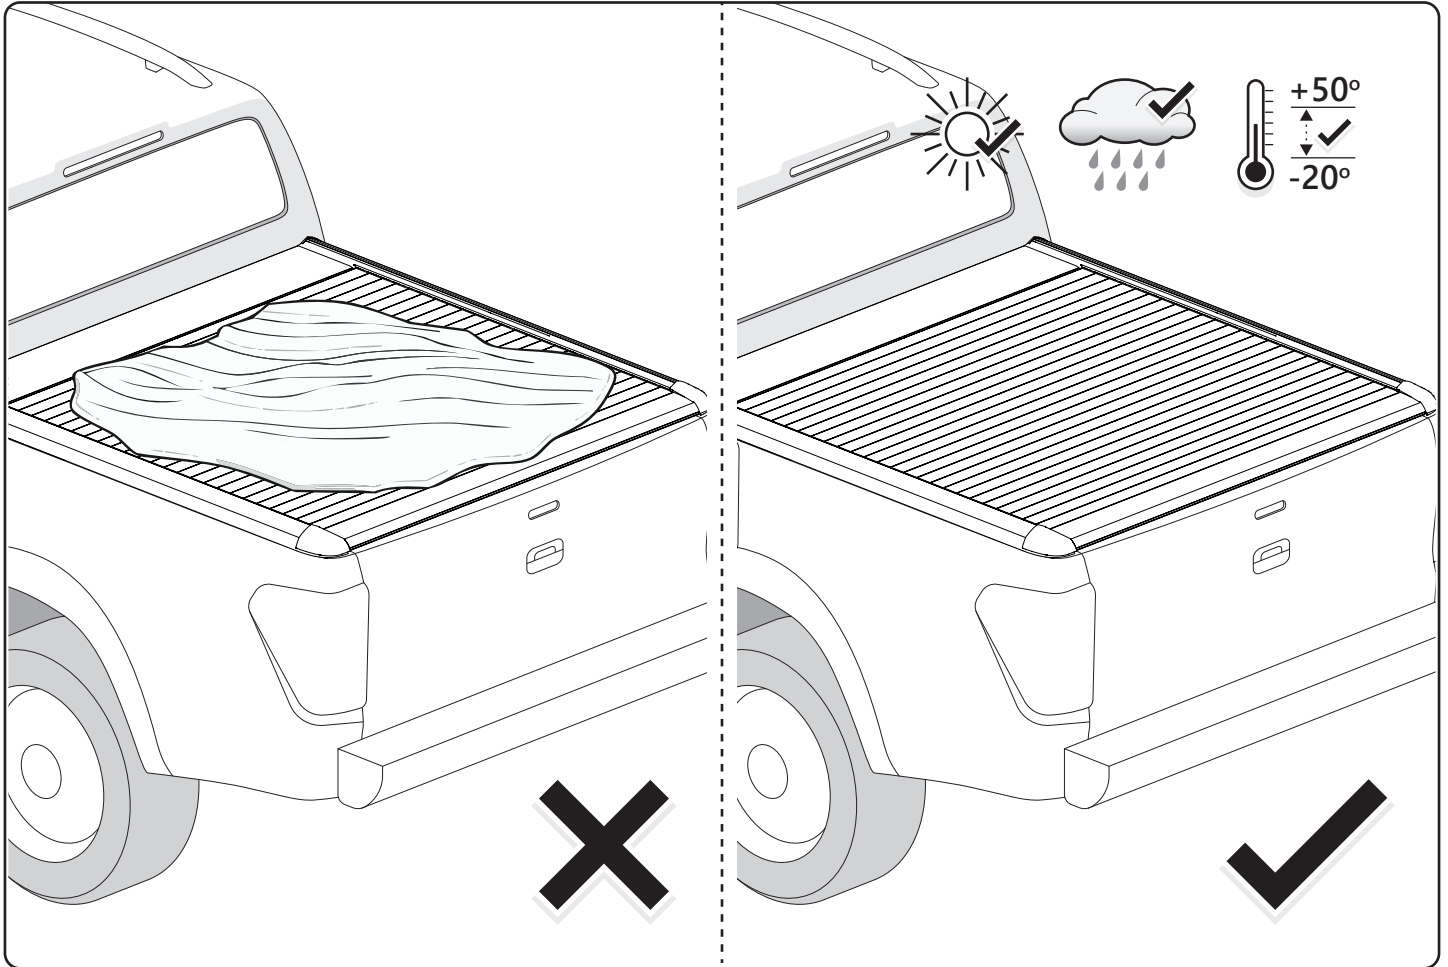


- The MRC-2000 design is lightweight and not suitable for extreme usage.
- Designed to withstand rain water, some water ingress may occur.
- Dust can enter the compartment through various gaps.
- Due to profiles which relatively quick heats up and cools down according to weath conditions can cause condensation on the inside.
- The MRC-2000 is not designed for loading although it can support normal snow loads.
- Goods in the bed must be secured during transportation to prevent damage.
- Leave truck in a warm environment for 10-15 minutes to defrost or clear out frozen locking mechanisms from ice in case of freezing weather conditions.
- The MRC-2000 area must be clear of heavy dirt, snow or ice in able to operate.

3 MRC-2000 OPERATION

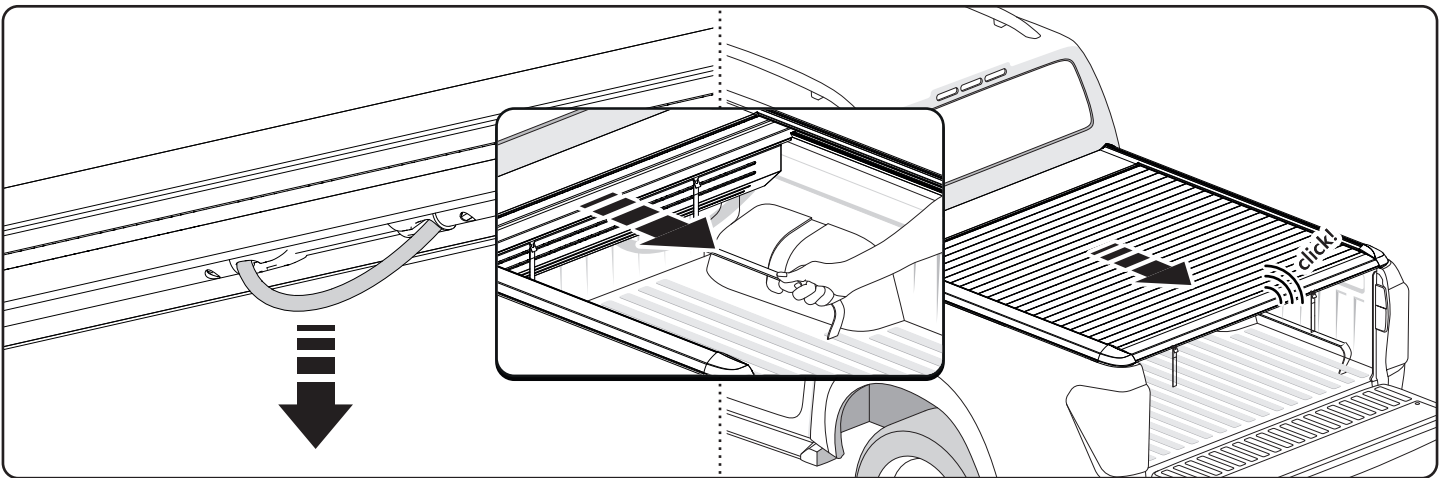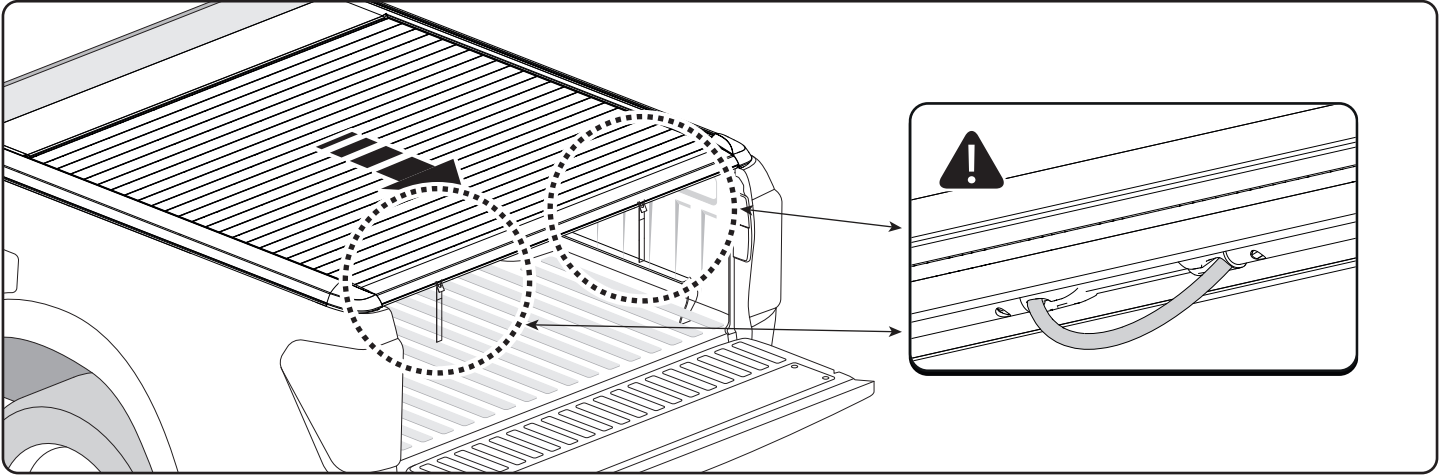



- Close

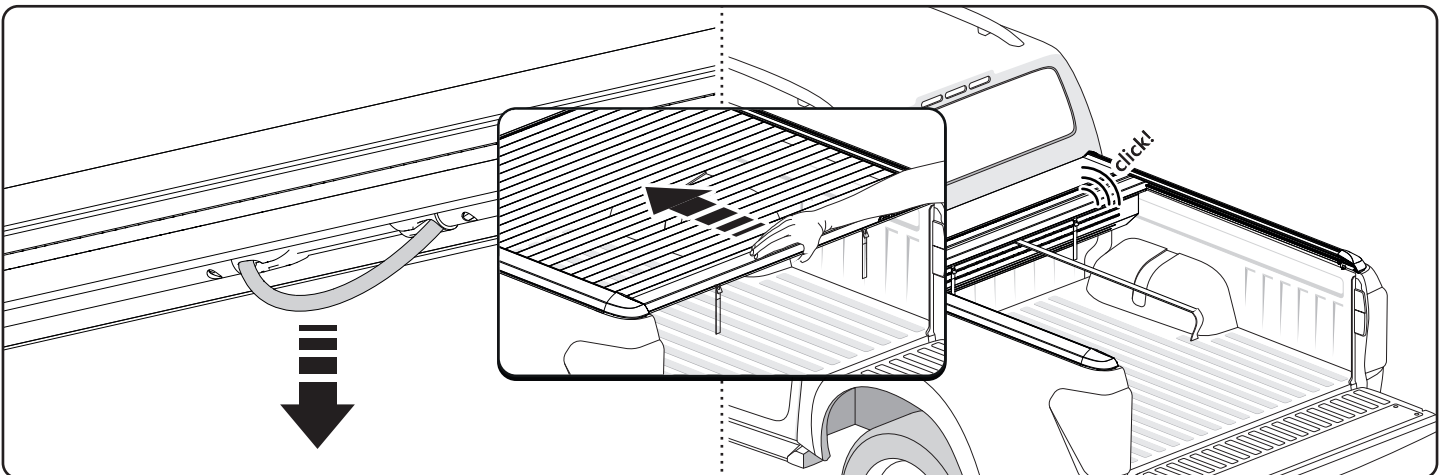


- Open

- When the MRC-2000 is fully opened, a lock activator is automatically triggered, engaging the locking system.
- For the MRC-2000 to close correctly, the locking system must be engaged before the cover is closed.


4 MAINTENANCE

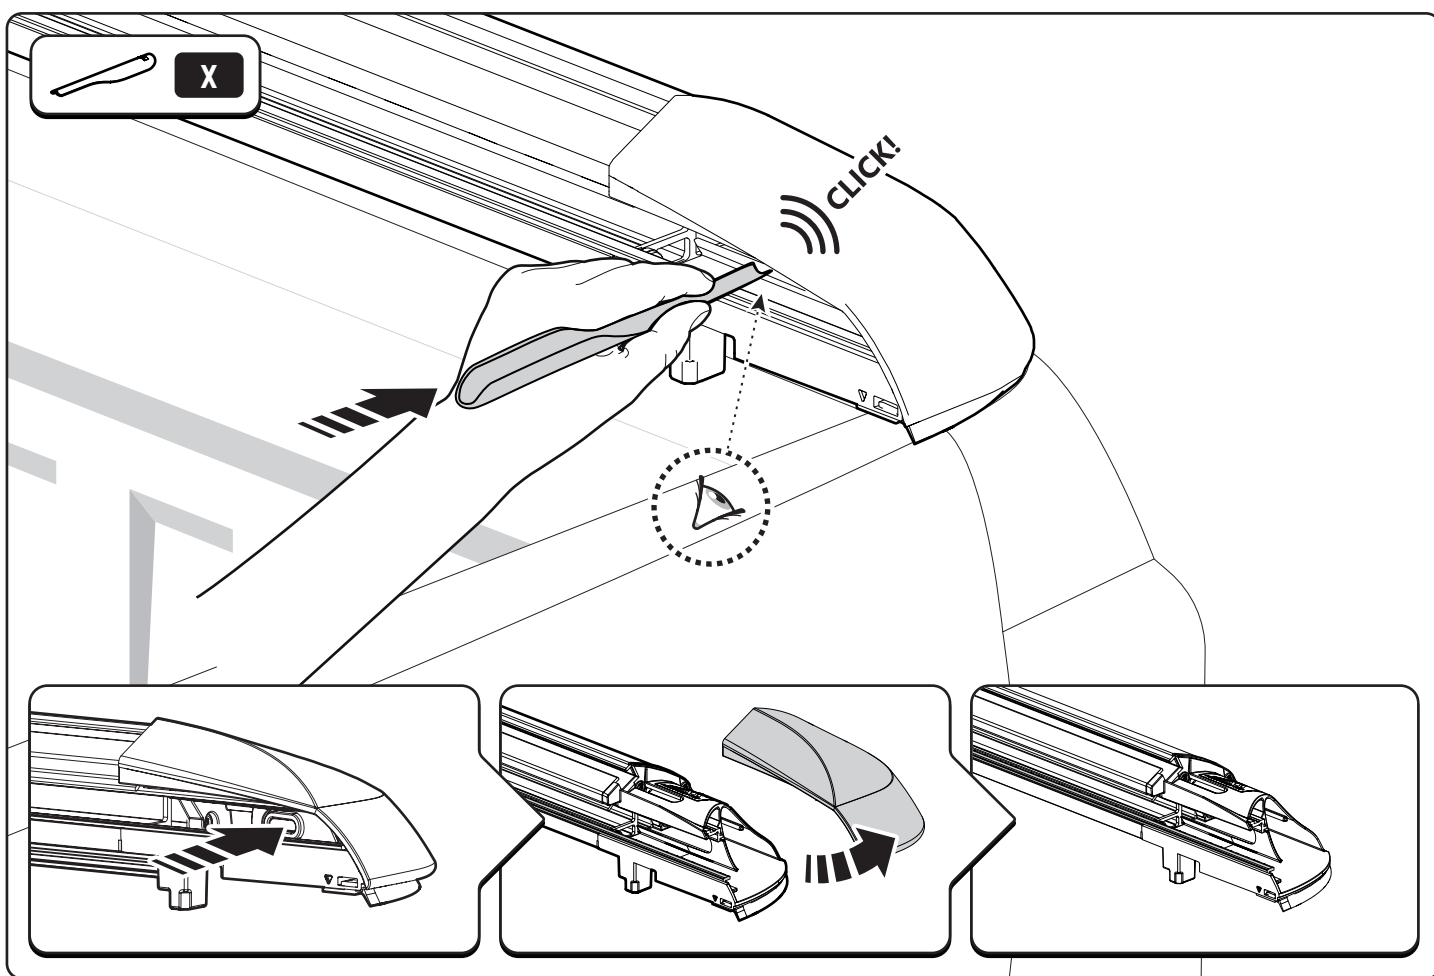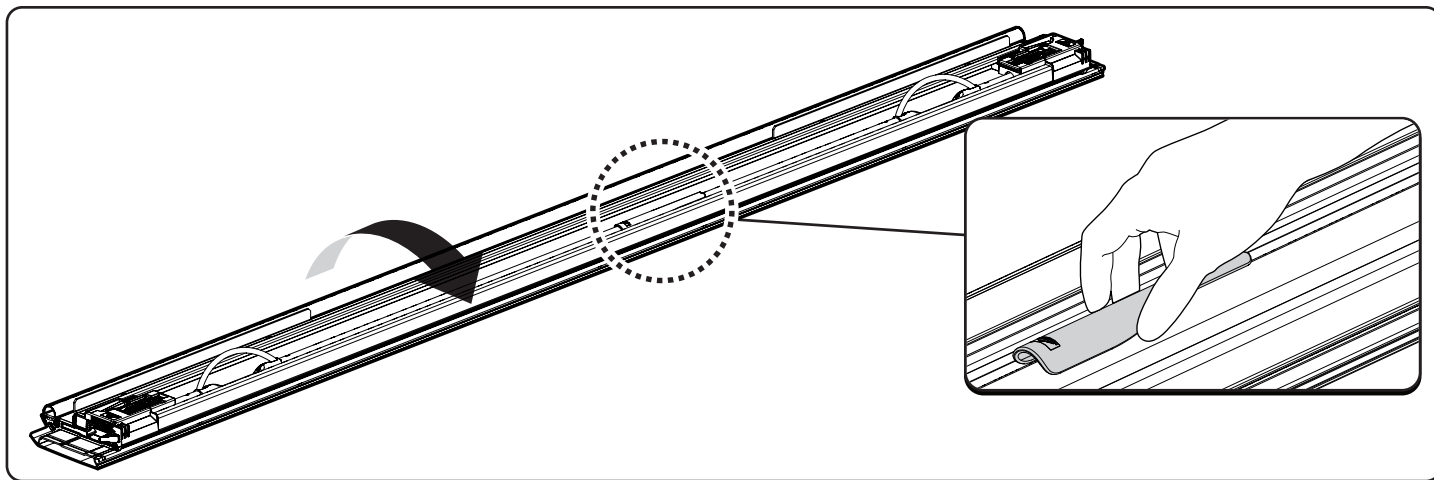


- Use the multi tool to remove the plastic covers on the side profiles.

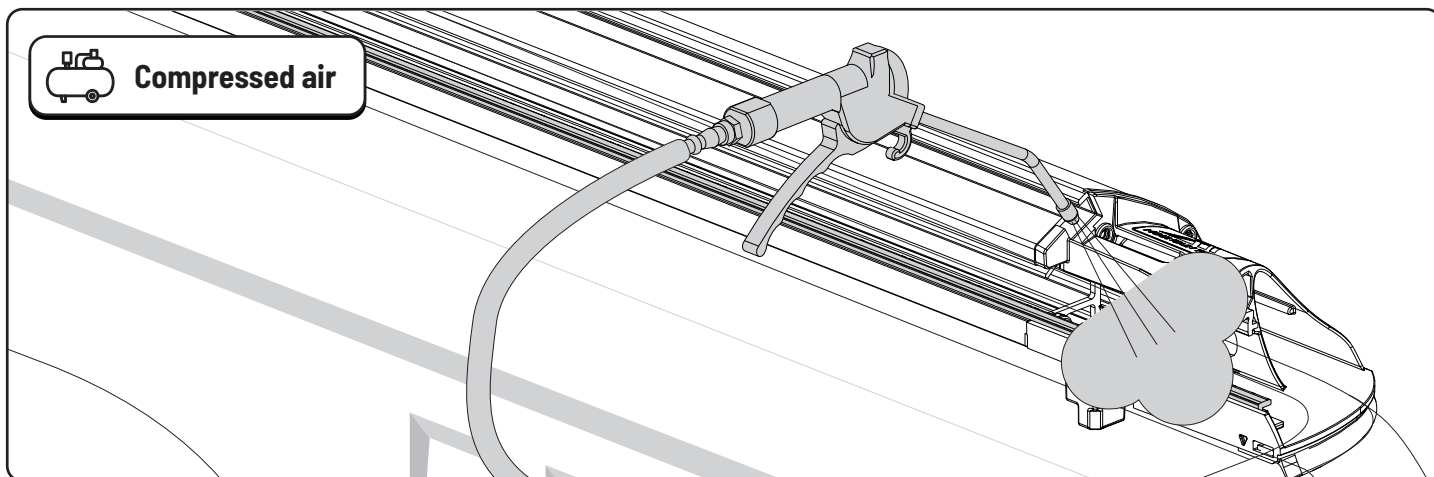


- Remove dirt and debris using compressed air.

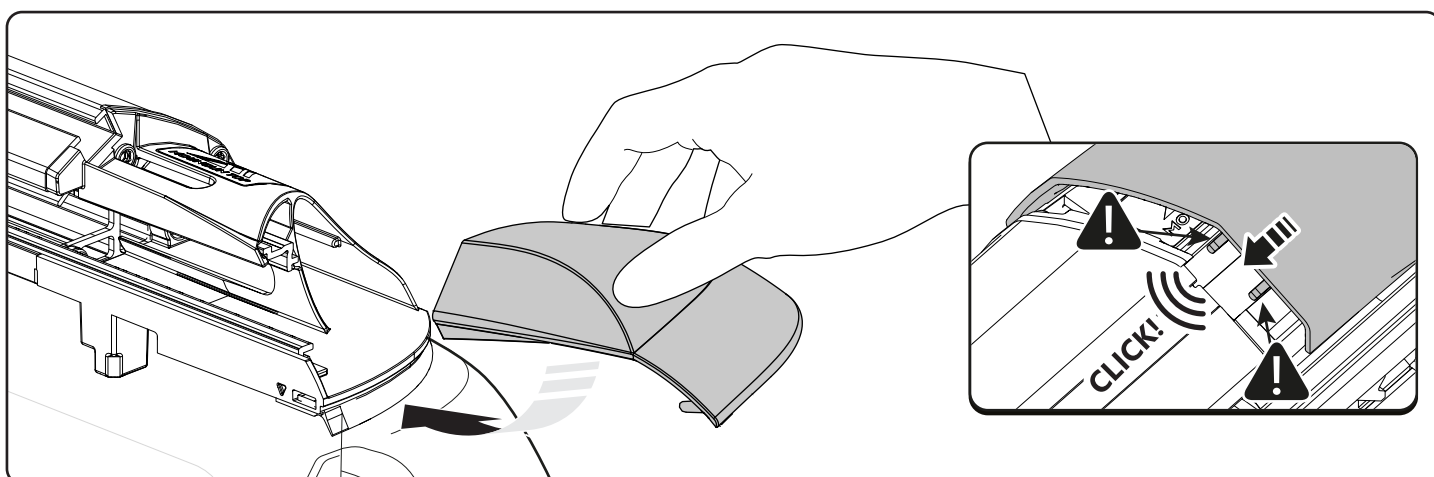


- Mount plastic covers.

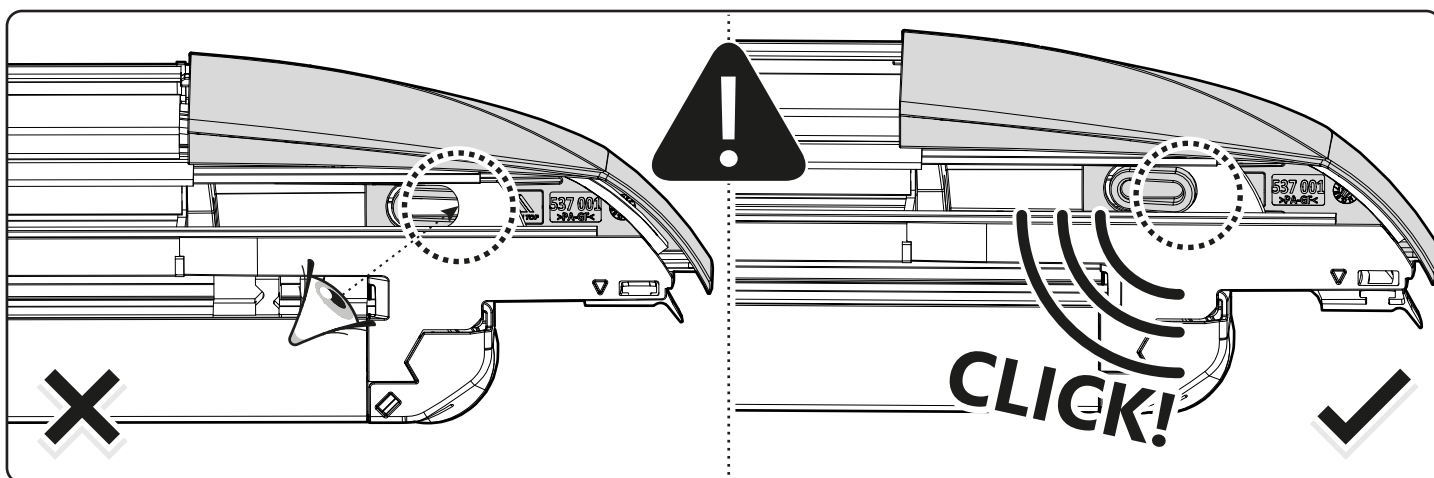


- Make sure plastic cover is mounted correctly.

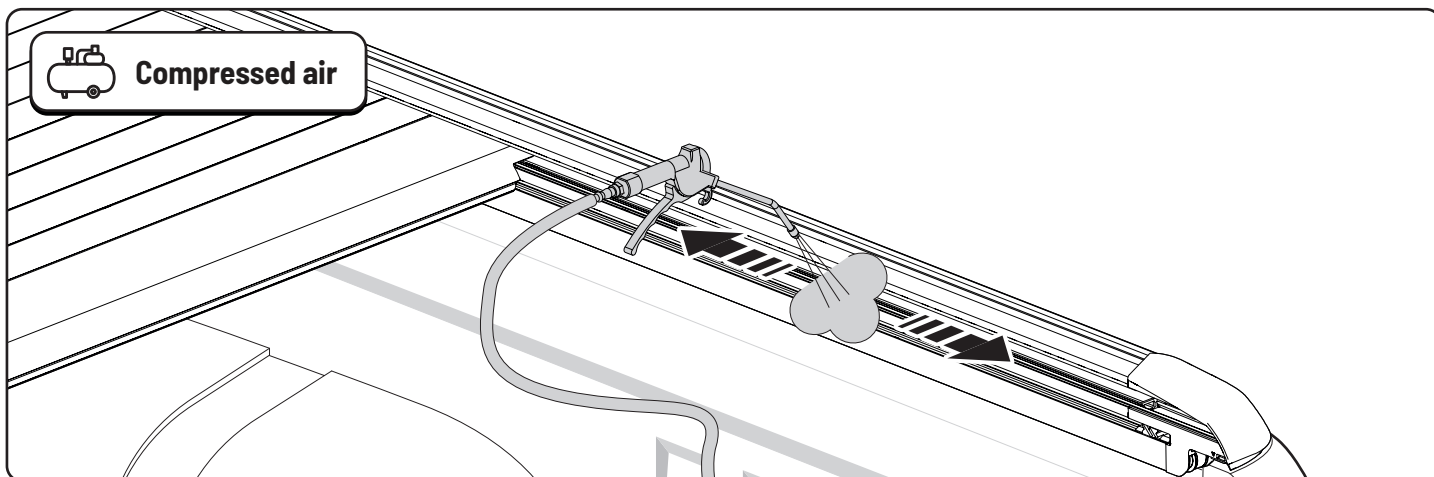


- Clean the side profiles.

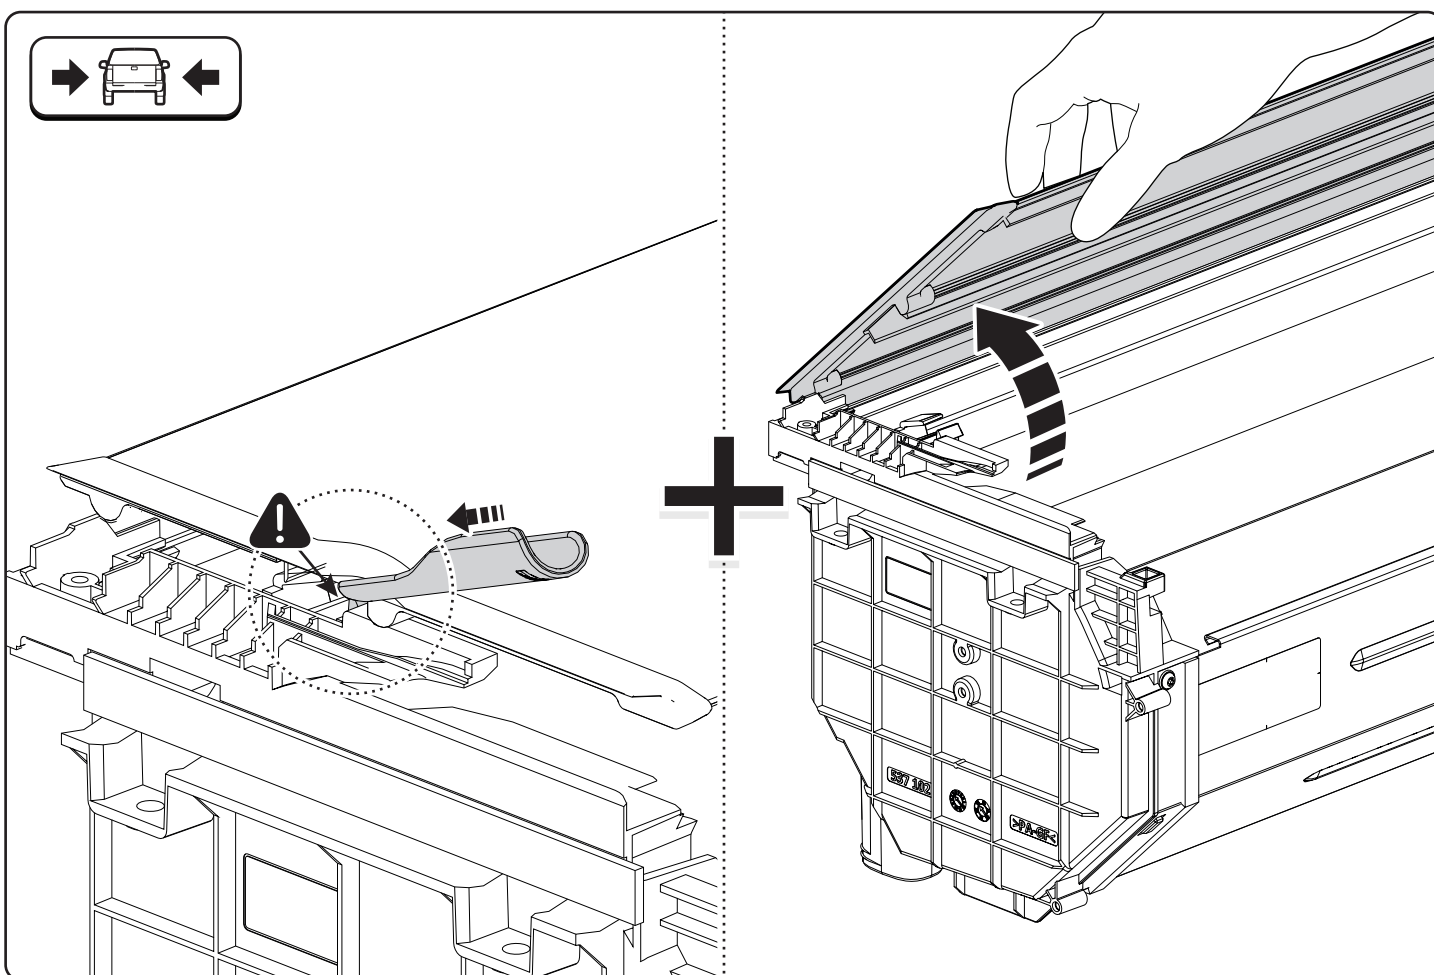


- Open the canister.

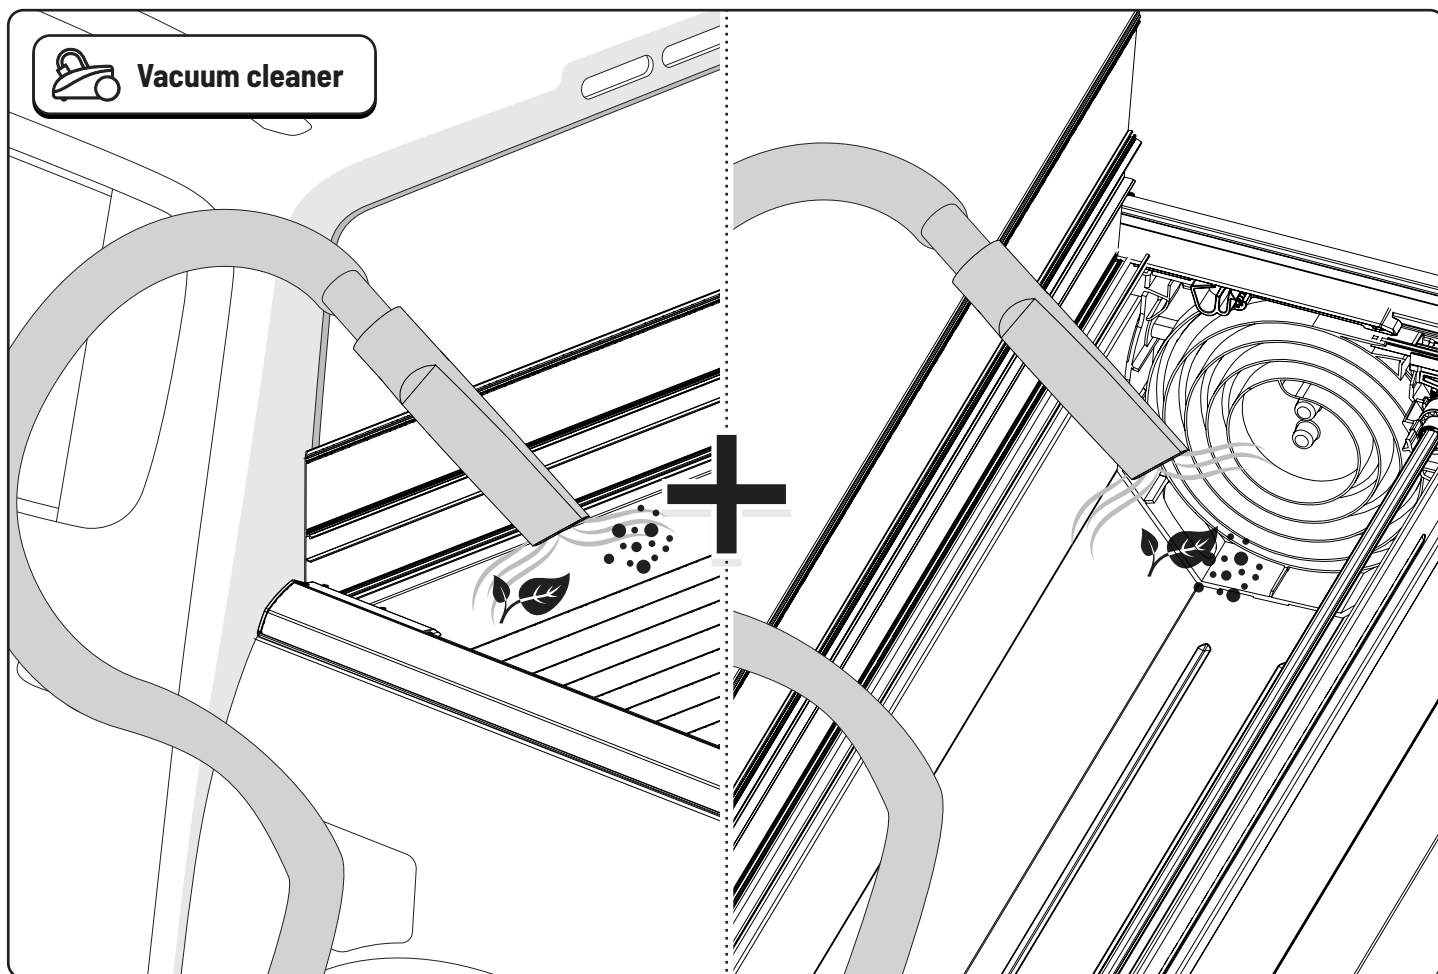


- Clean the canister.

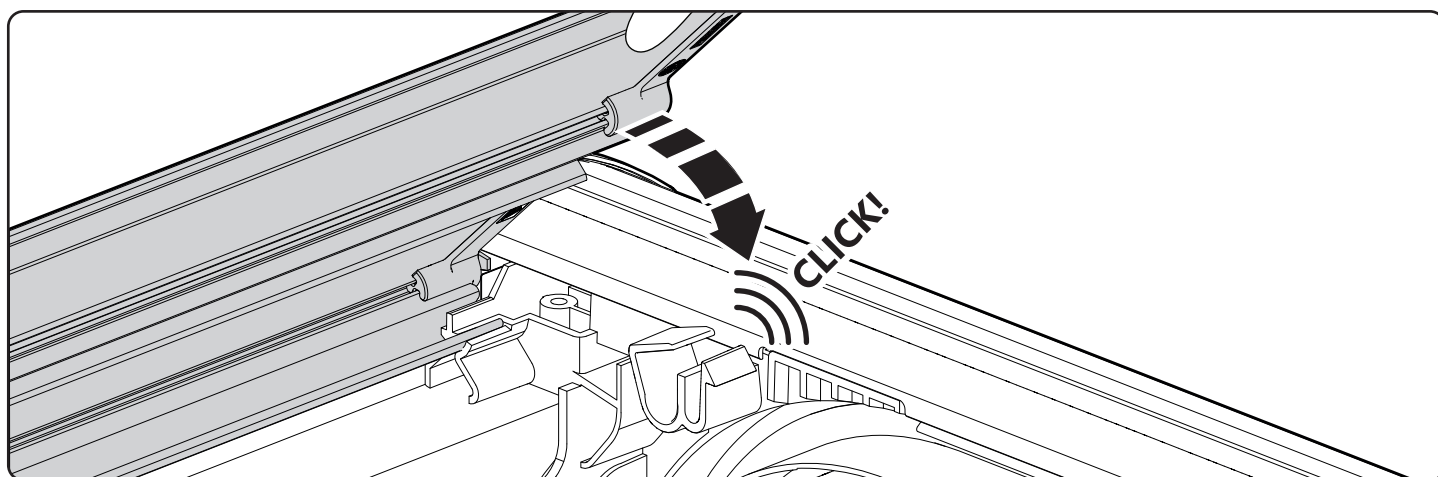


- Close the canister.

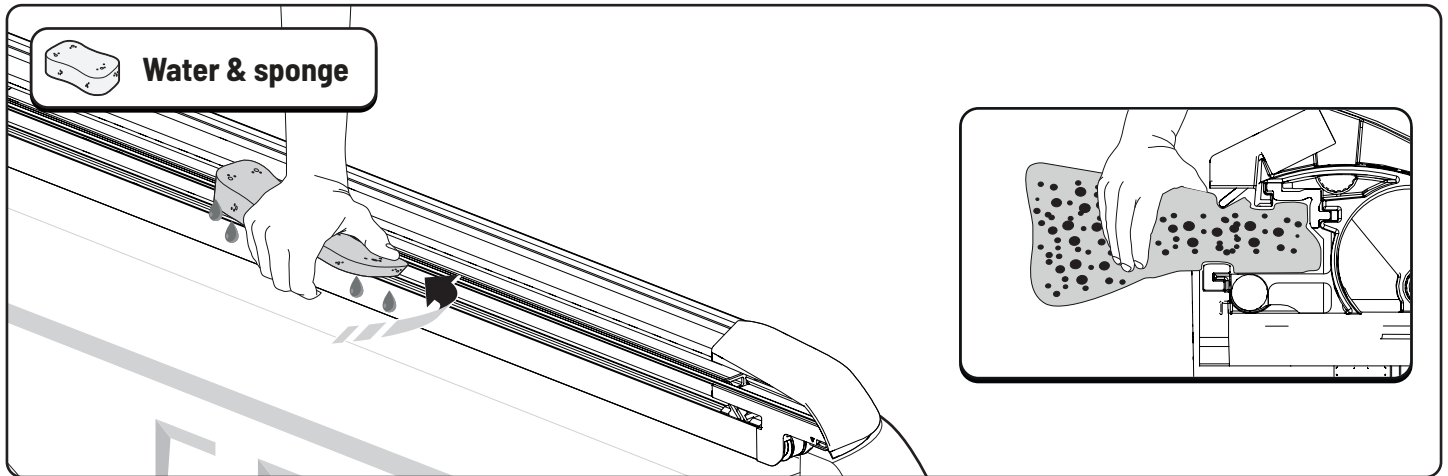


- Clean the drainage channels on the side profiles.

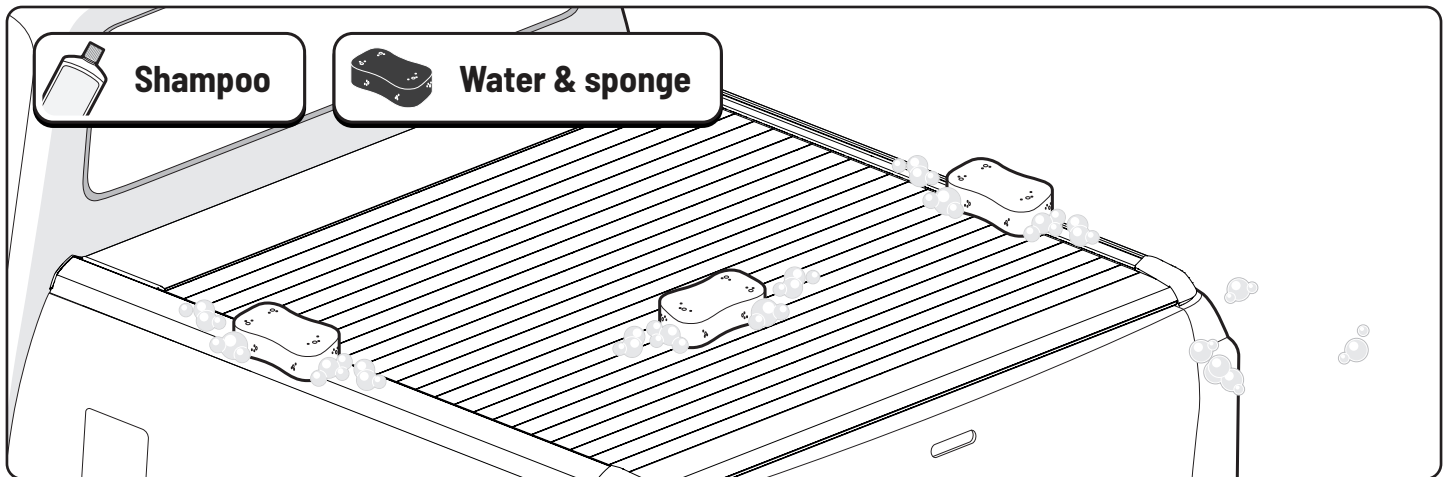

- The MRC-2000 should be cleaned regularly.

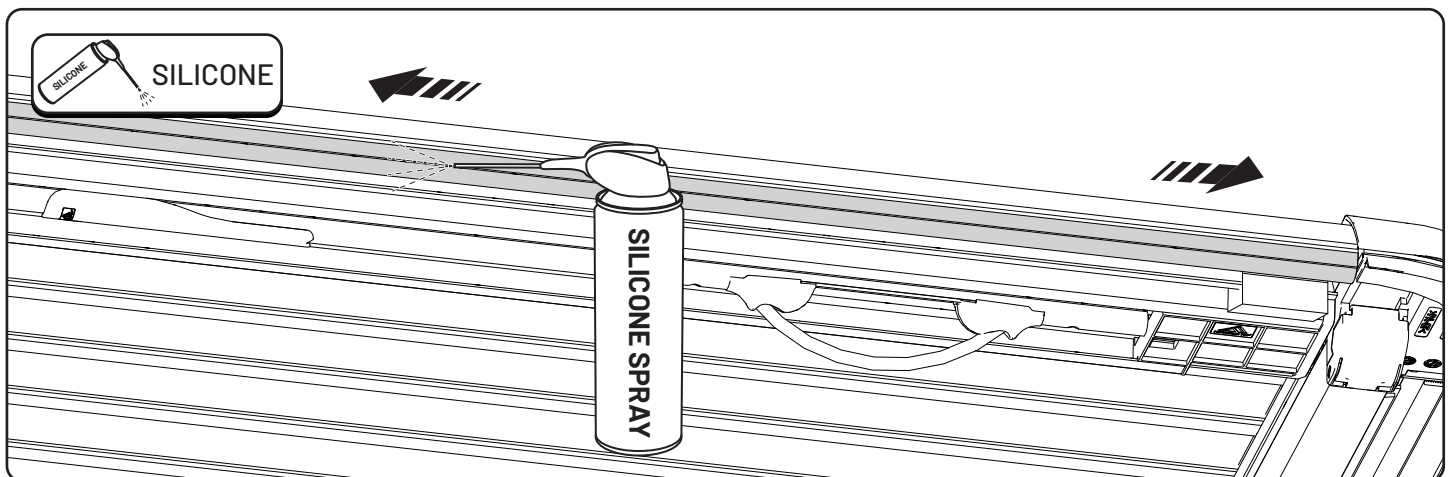


5 CHECK GLIDE RAILS MAINTENANCE

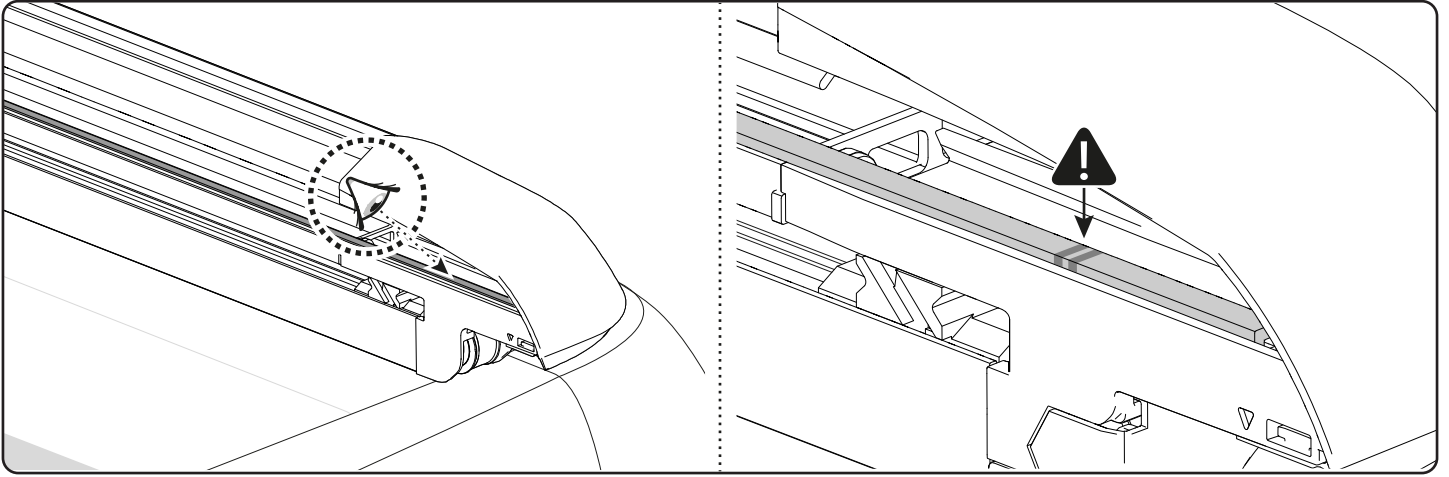


- If abnormal sounds occur during operation of the roll cover, inspect the glide rails for debris or damage. If the glide rails are damaged or worn, then replacement glide rails are needed.

6 CHECK MEASUREMENTS MAINTENANCE

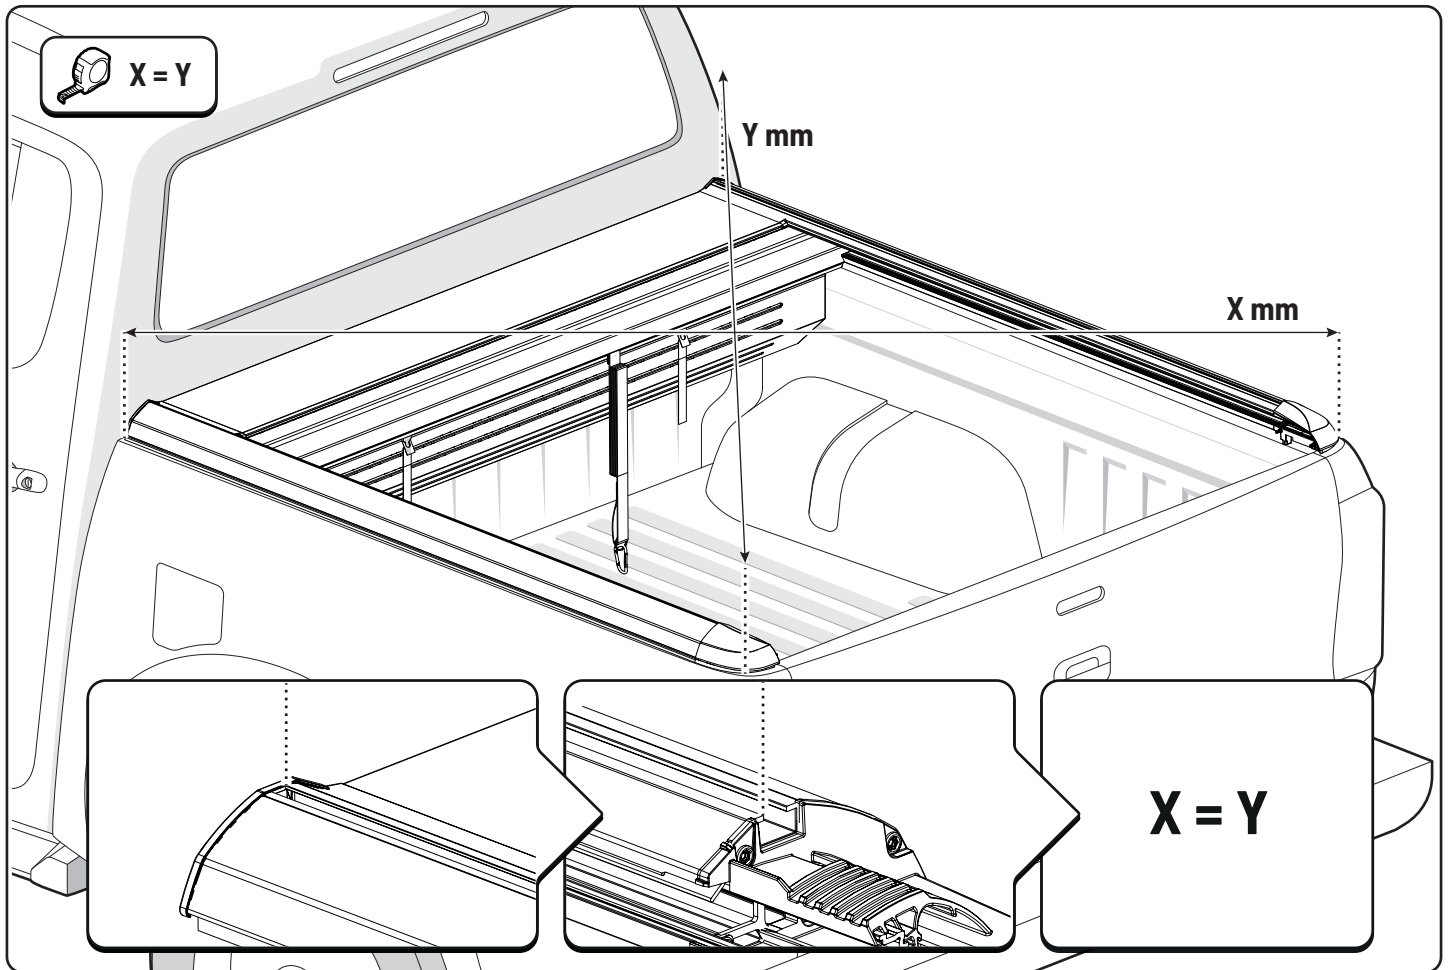


- Ensure the cross measurements are identical.

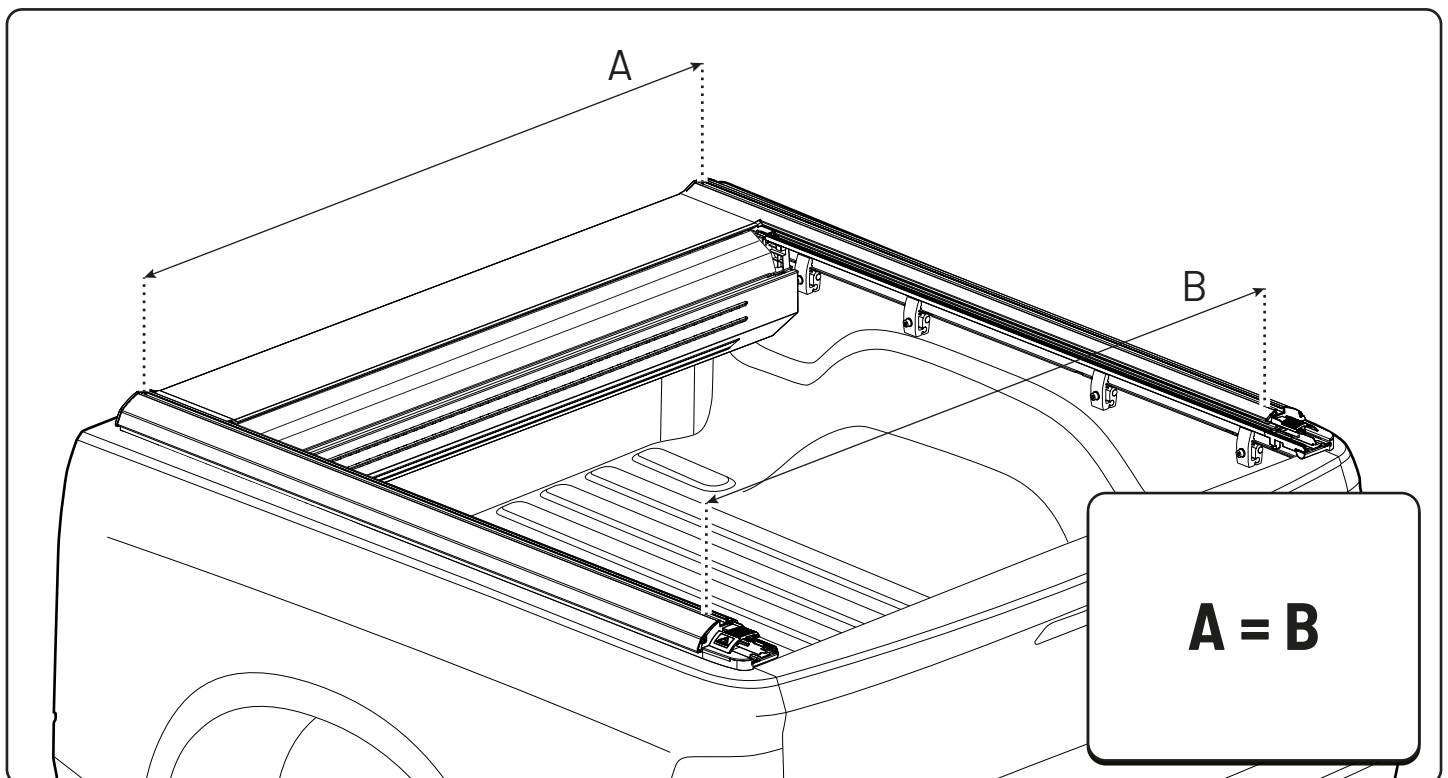


7 CLAMPS



Clamps

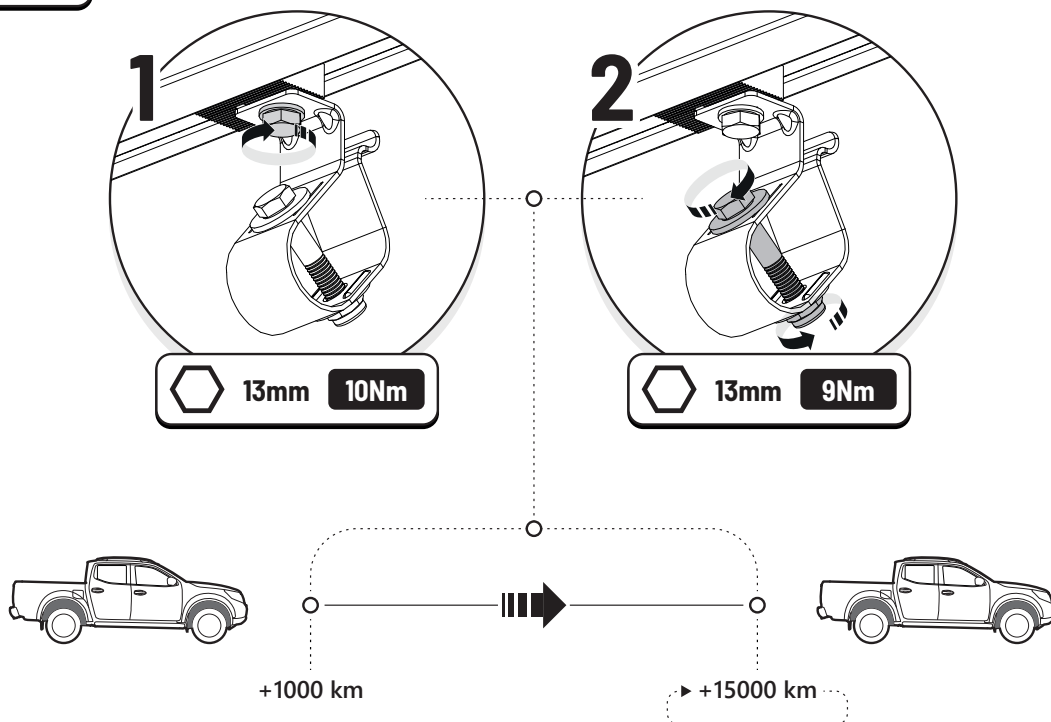

Brackets

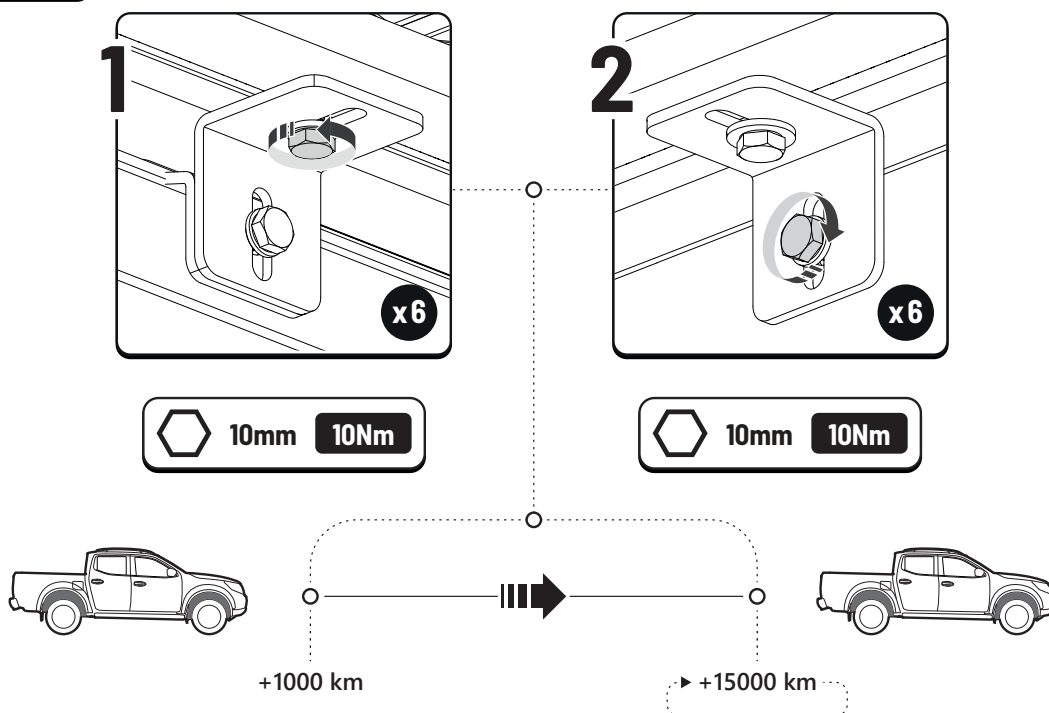

- Re-tighten the clamps after the first 1000 km. And then every 15.000 km



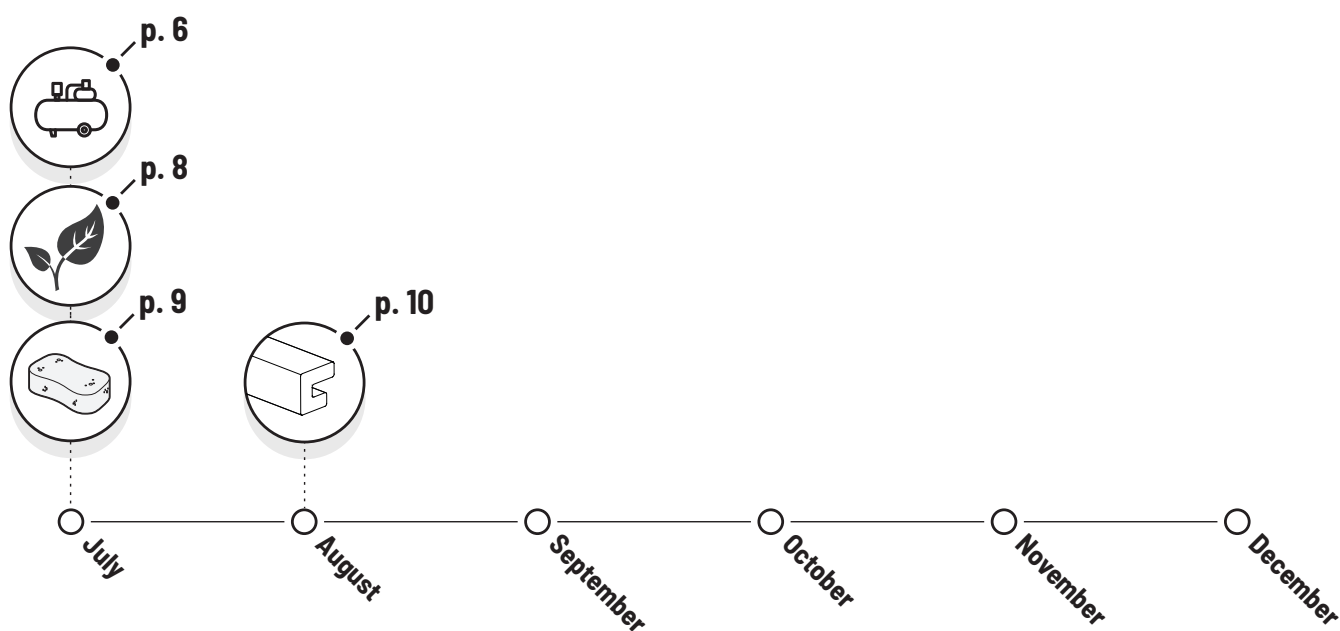
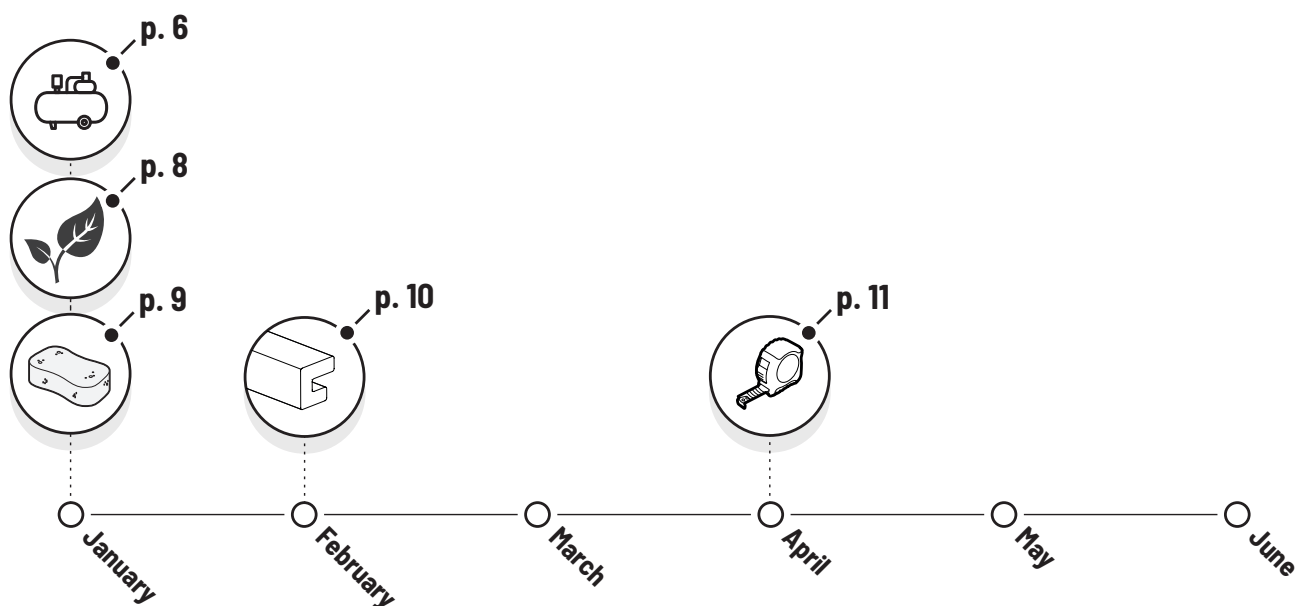


Recommended part change	Km	Years
Side profiles	100.000	3
Rear profiles	200.000	5

- Maintenance requirements and frequency depend on the actual usage of the roll cover and the environments and elements that it is exposed to.
- Clean and lubricate the cover accordingly to ensure the best possible operation and function.

[illegible]

ACCESSORIES

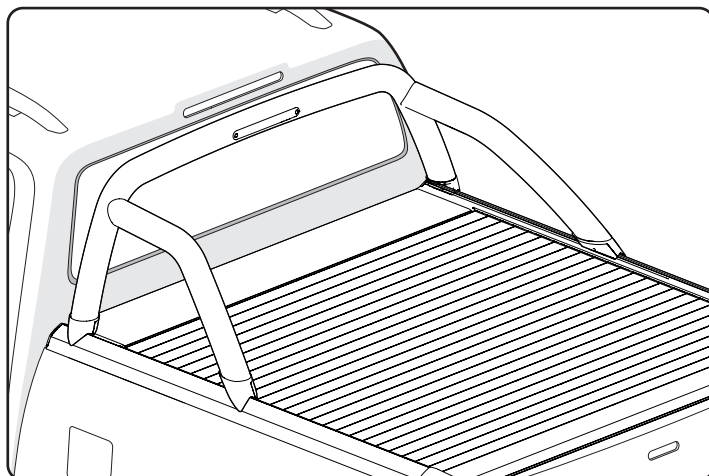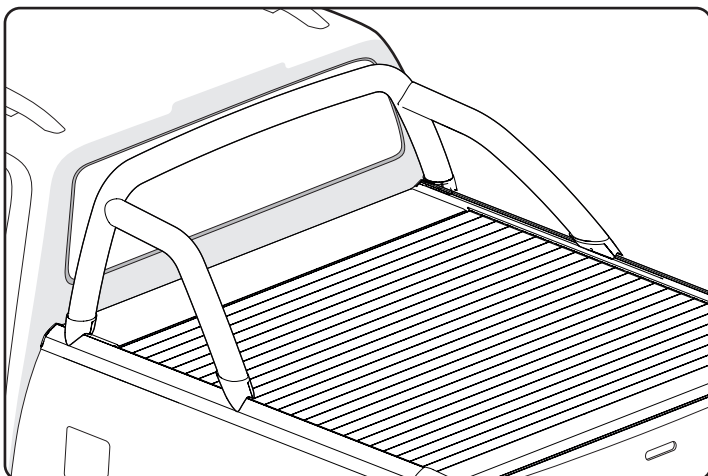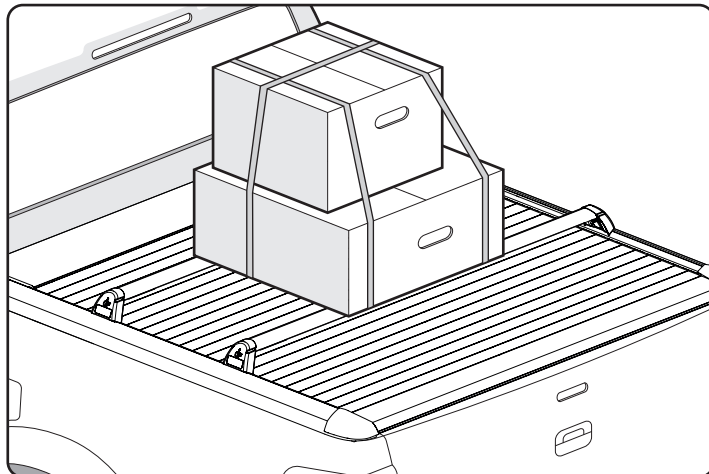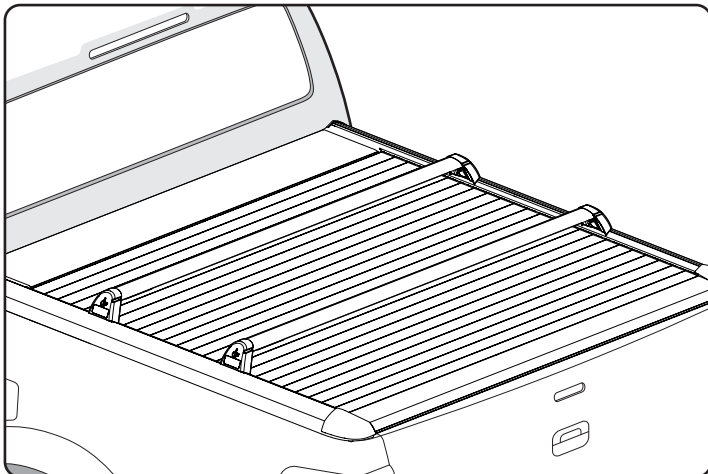

- Cargo Carrier combined load capacity of 75 Kg.
- Sports Bar available in 2 versions; with and without brakelight.
- See more accessories www.realtruck.eu.



Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Support	info@realtruck.dk
Website	www.realtruck.eu
Address	Pedersholmparken 10, 3600 Frederikssund, Denmark