

## MOUNTAIN TOP® EV0m

Spare parts overview for

Toyota Hilux

Ford Wildtrak

Isuzu D-Max

Mitsubishi L200

Mazda BT-50

Ford Ranger

## Toyota Hilux (2016-TD / EV0m T090)

Position	Spare part type	Bed Size	Part number
1	Main Kit EV0m	Double Cab	<b>EVO SPm 580</b>
2	Side Profile Complete Right EV0m	Double Cab	<b>EVO SPm 480</b>
3	Side Profile Complete Left EV0m	Double Cab	<b>EVO SPm 481</b>
4	Rear Corner set EVO	Double Cab	<b>EVO SP 003</b>
5	Lamella x 2 set EVO	Double Cab	<b>EVO SPm 180</b>
6	Rear Profile Complete EV0m	Double Cab	<b>EVO SPm 380</b>
7	Canister with Lid EV0m	Double Cab	<b>EVO SPm 280</b>
8	Slide rails EV0m	Double Cab	<b>EVO SPm 680</b>
9	Safety Pawl set	Double Cab	<b>EVO SP 008</b>
10	Clamp set x 1	Double Cab	<b>EVO SP 010</b>
11	Drain set	Double Cab	<b>EVO SP 012</b>

## Isuzu D-Max & Mazda BT-50 (2020-TD / EV0m IS10/11)

Position	Spare part type	Bed Size	Part number
1	Main Kit EV0m	All	<b>EVO SPm 510</b>
2	Side Profile Complete Right EV0m	Double Cab	<b>EVO SPm 410</b>
2	Side Profile Complete Right EV0m	Extended Cab	<b>EVO SPm 412</b>
3	Side Profile Complete Left EV0m	Double Cab	<b>EVO SPm 411</b>
3	Side Profile Complete Left EV0m	Extended Cab	<b>EVO SPm 413</b>
4	Rear Corner set EVO	All	<b>EVO SP 003</b>
5	Lamella x 2 set EVO	All	<b>EVO SPm 110</b>
6	Rear Profile Complete EV0m	All	<b>EVO SPm 310</b>
7	Canister with Lid EV0m	All	<b>EVO SPm 210</b>
8	Slide rails EV0m	Double Cab	<b>EVO SPm 610</b>
8	Slide rails EV0m	Extended Cab	<b>EVO SPm 611</b>
9	Safety Pawl set	All	<b>EVO SP 008</b>
10	Clamp set x 1	All	<b>EVO SP 010</b>
11	Drain set	All	<b>EVO SP 012</b>

## Ford Ranger (2011-TD / EV0m F090)

Position		Bed Size	Part number
1	Main Kit EV0m	Double Cab	<b>EVO SPm 502</b>
2	Side Profile Complete Right EV0m	Double Cab	<b>EVO SPm 402</b>
3	Side Profile Complete Left EV0m	Double Cab	<b>EVO SPm 403</b>
4	Rear Corner set EVO	Double Cab	<b>EVO SP 003</b>
5	Lamella x 2 set EVO	Double Cab	<b>EVO SPm 101</b>
6	Rear Profile Complete EV0m	Double Cab	<b>EVO SPm 301</b>
7	Canister with Lid EV0m	Double Cab	<b>EVO SPm 201</b>
8	Slide rails EV0m	Double Cab	<b>EVO SPm 601</b>
9	Safety Pawl set	Double Cab	<b>EVO SP 008</b>
10	Clamp set x 1	Double Cab	<b>EVO SP 010</b>
11	Drain set	Double Cab	<b>EVO SP 012</b>

## Ford Wildtrak (2011-TD / EV0m F090 H)



















Position	Spare part type	Bed Size	Part number
	Main Kit EV0m	Double Cab	<b>EVO SPm 503</b>
2	Side Profile Complete Right EV0m	Double Cab	<b>EVO SPm 404</b>
3	Side Profile Complete Left EV0m	Double Cab	<b>EVO SPm 405</b>
4	Rear Corner set EVO	Double Cab	<b>EVO SP 006</b>
5	Lamella x 2 set EVO	Double Cab	<b>EVO SPm 102</b>
6	Rear Profile Complete EV0m	Double Cab	<b>EVO SPm 302</b>
7	Canister with Lid EV0m	Double Cab	<b>EVO SPm 202</b>
8	Slide rails EV0m	Double Cab	<b>EVO SPm 602</b>
9	Safety Pawl set	Double Cab	<b>EVO SP 008</b>
10	Bracket set x 1	Double Cab	<b>EVO SP 013</b>
11	Drain set	Double Cab	<b>EVO SP 011</b>

## Mitsubishi L200 (2019-TD / EVOm MI10)

Position	Spare part type	Bed Size	Part number
1	Main Kit EVOm	Double Cab	<b>EVO SPm 540</b>
2	Side Profile Complete Right EVOm	Double Cab	<b>EVO SPm 440</b>
3	Side Profile Complete Left EVOm	Double Cab	<b>EVO SPm 441</b>
4	Rear Corner set EVO	Double Cab	<b>EVO SP 007</b>
5	Lamella x 2 set EVO	Double Cab	<b>EVO SPm 140</b>
6	Rear Profile Complete EVOm	Double Cab	<b>EVO SPm 340</b>
7	Canister with Lid EVOm	Double Cab	<b>EVO SPm 240</b>
8	Slide rails EVOm	Double Cab	<b>EVO SPm 640</b>
9	Safety Pawl set	Double Cab	<b>EVO SP 008</b>
10	Bracket set x 1	Double Cab	<b>EVO SP 013</b>
11	Drain set	Double Cab	<b>EVO SP 012</b>


# 1 Main Kit EV0m

(Spare part content may vary between vehicle models)

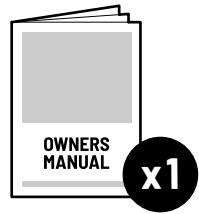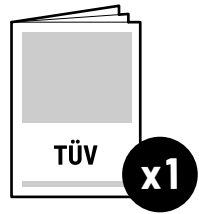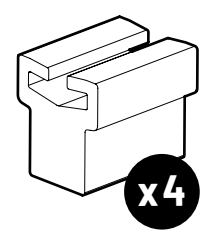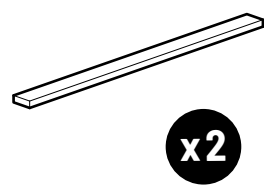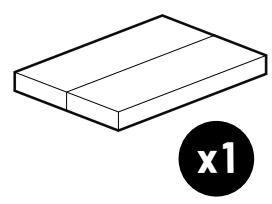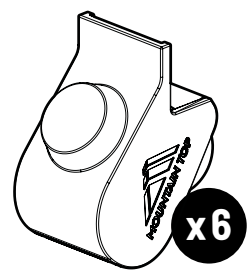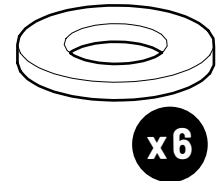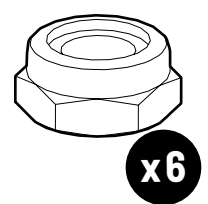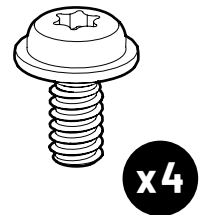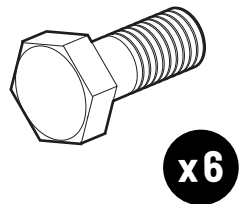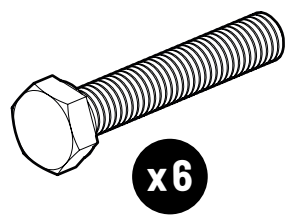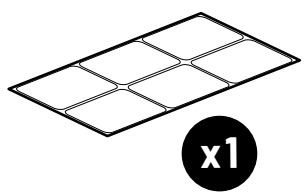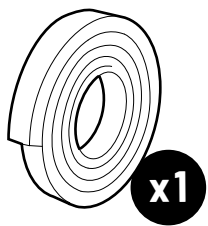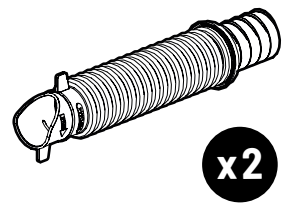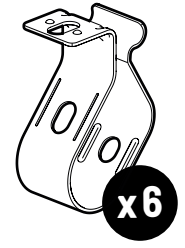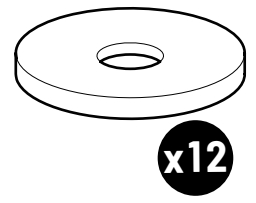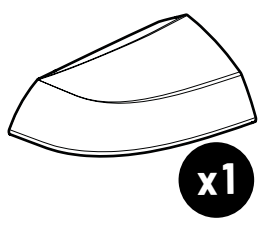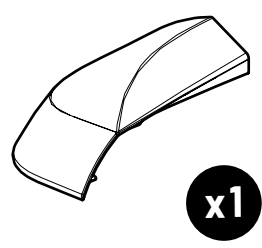


## 2 Side Profile Complete Right EV0m

(Spare part content may vary between vehicle models)

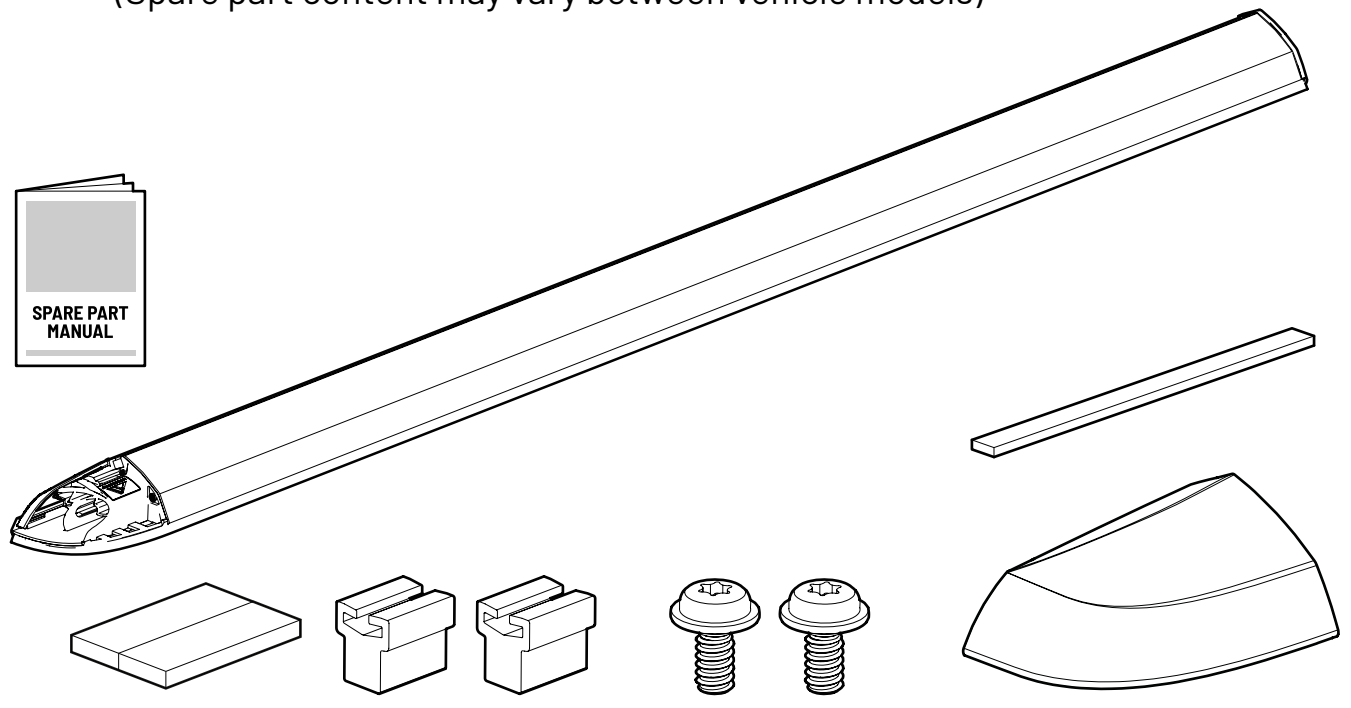




## 3 Side Profile Complete Left EV0m

(Spare part content may vary between vehicle models)

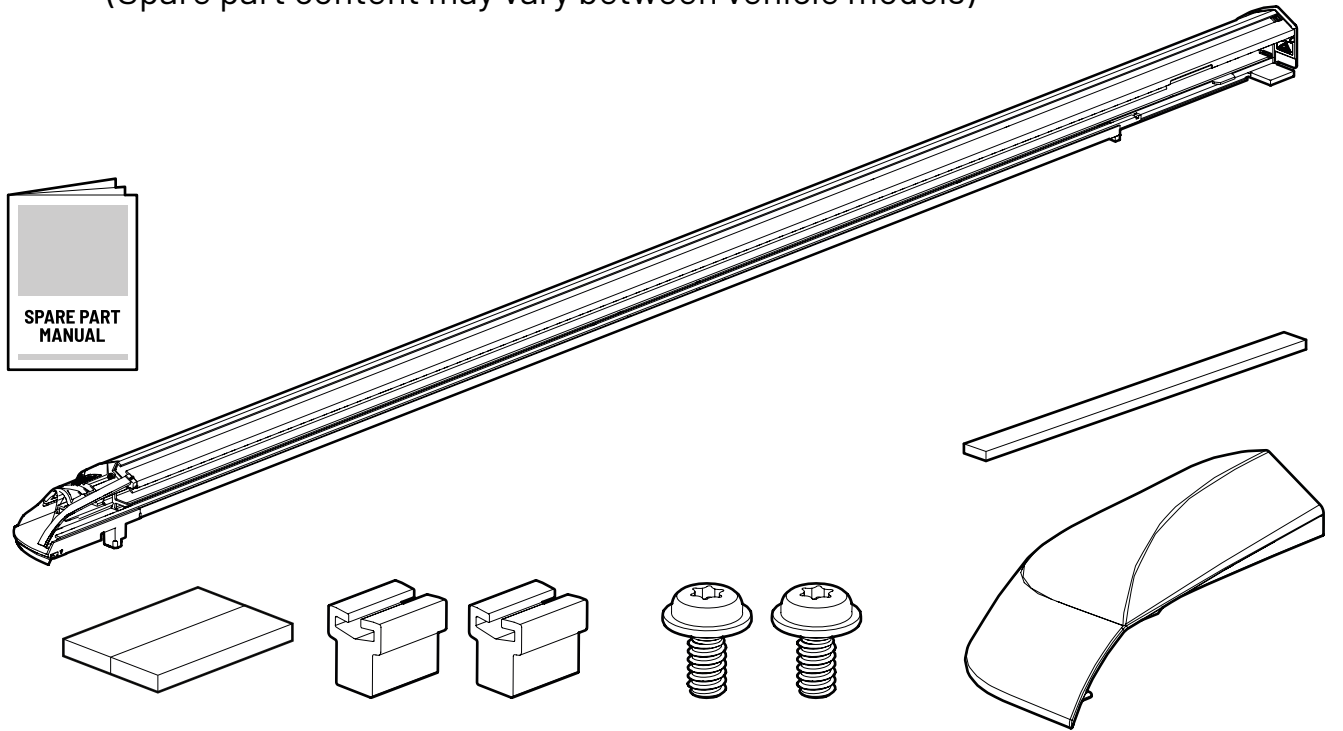


# 4 Rear Corner set EVO

(Spare part content may vary between vehicle models)

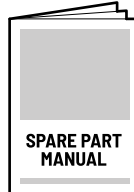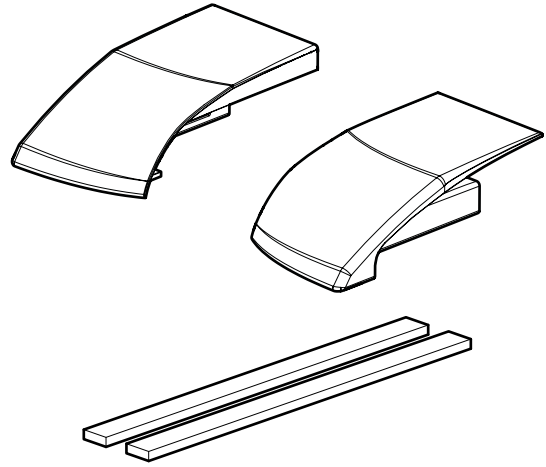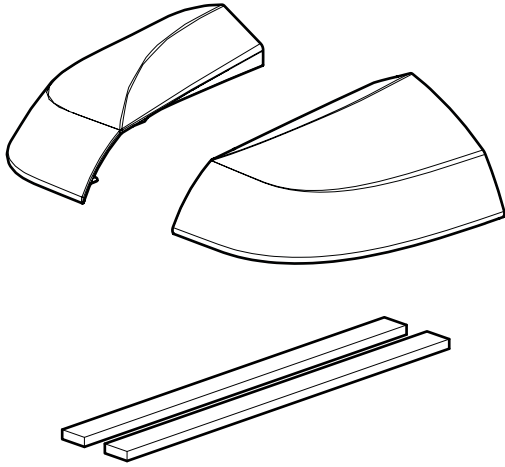


# 5 Lamella x2 set EVO

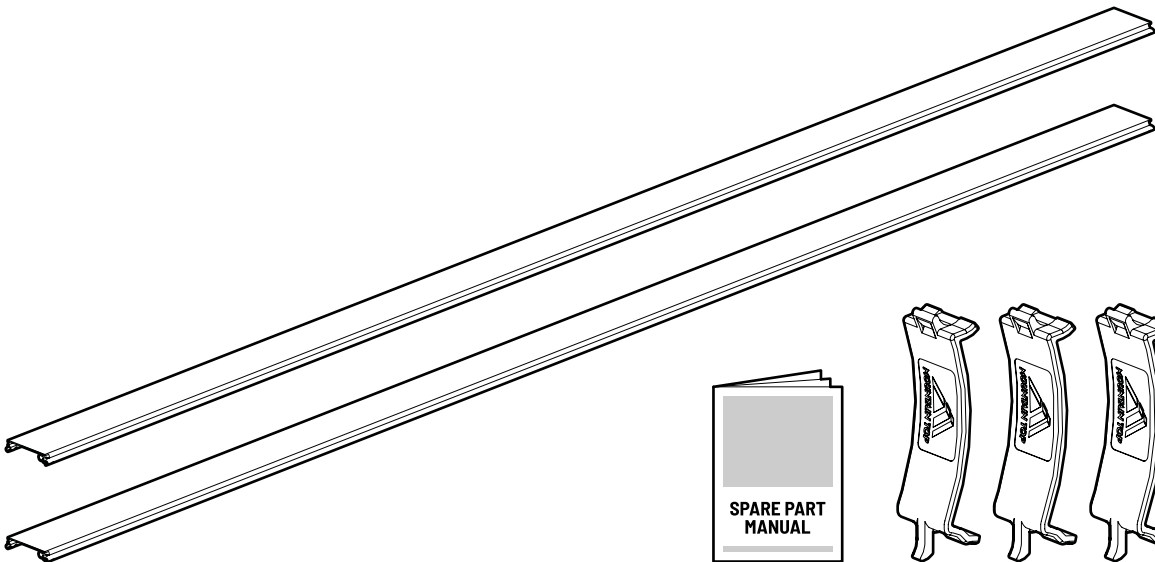





Xm03

# 6 Rear Profile Complete EV0m

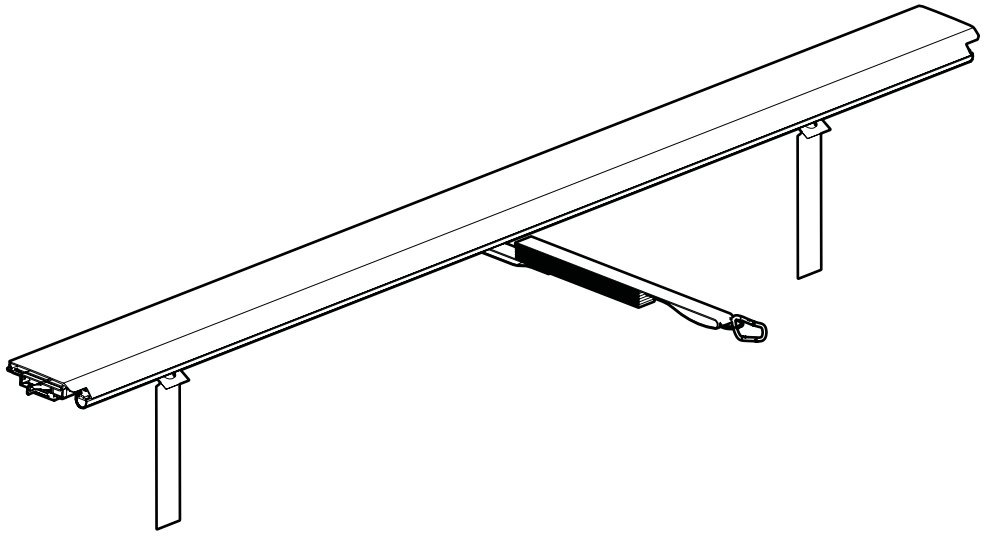

Xm02


# 7 Canister with Lid EV0m

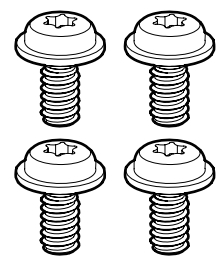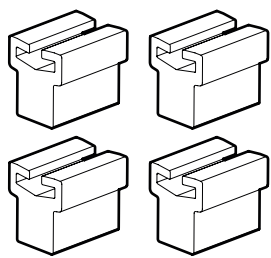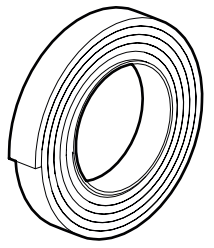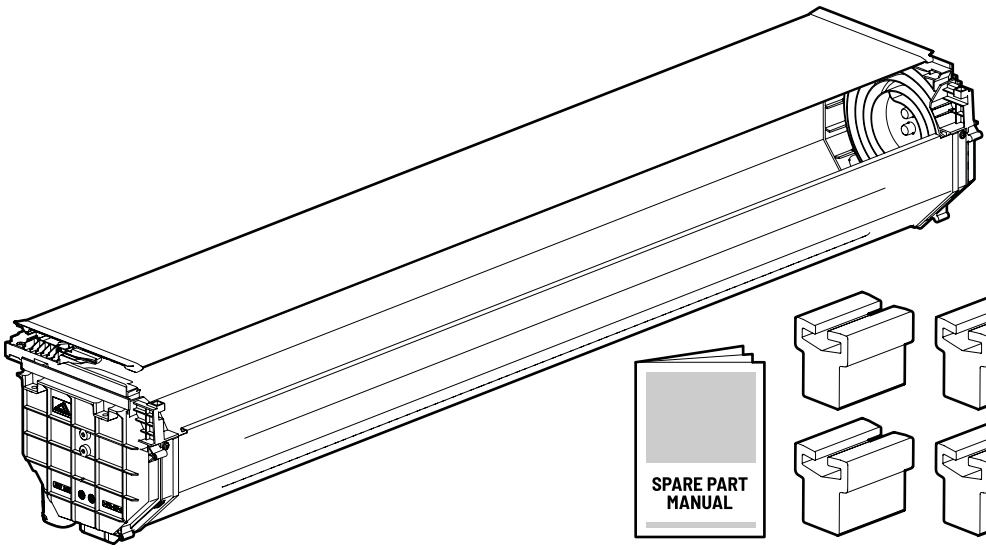





Xm06

# 8 Slide rails EV0m

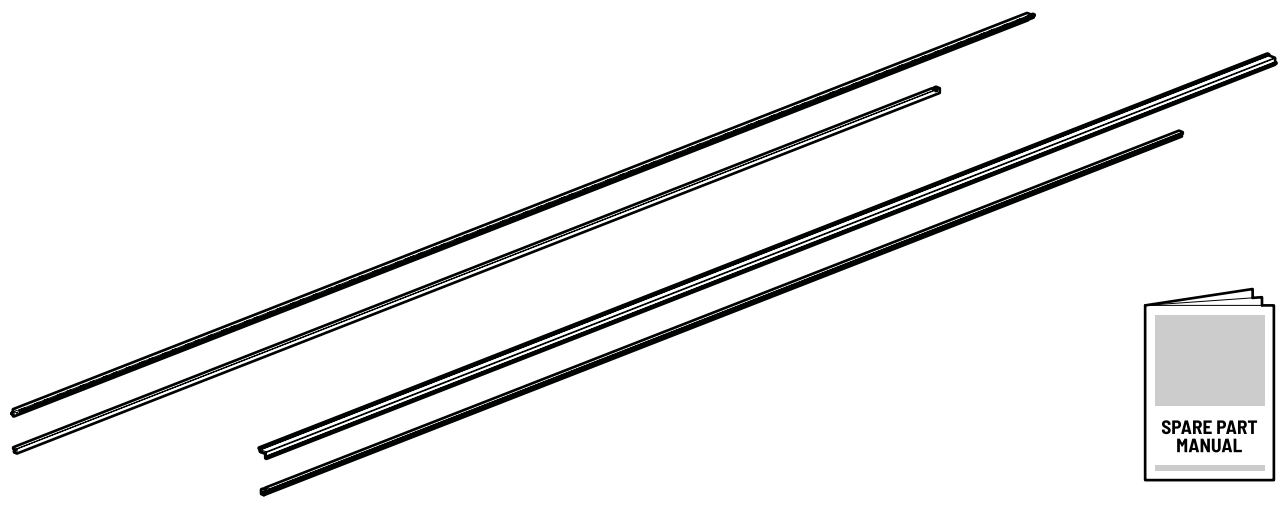


Xm12

# 9 Safety Pawl set

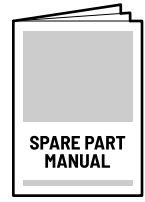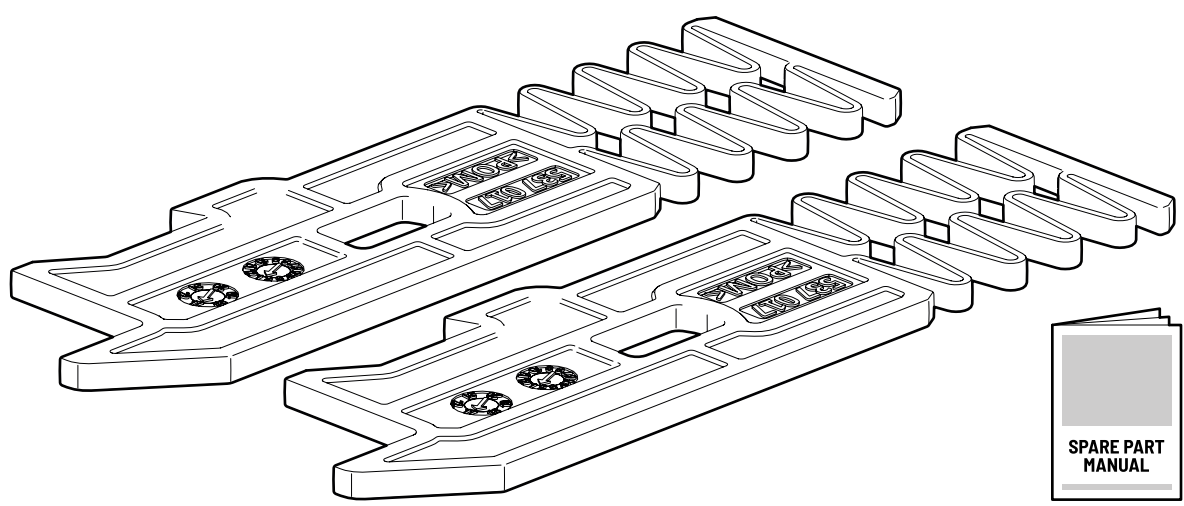


# 10 Clamp / bracket set x1

(Spare part content may vary between vehicle models)

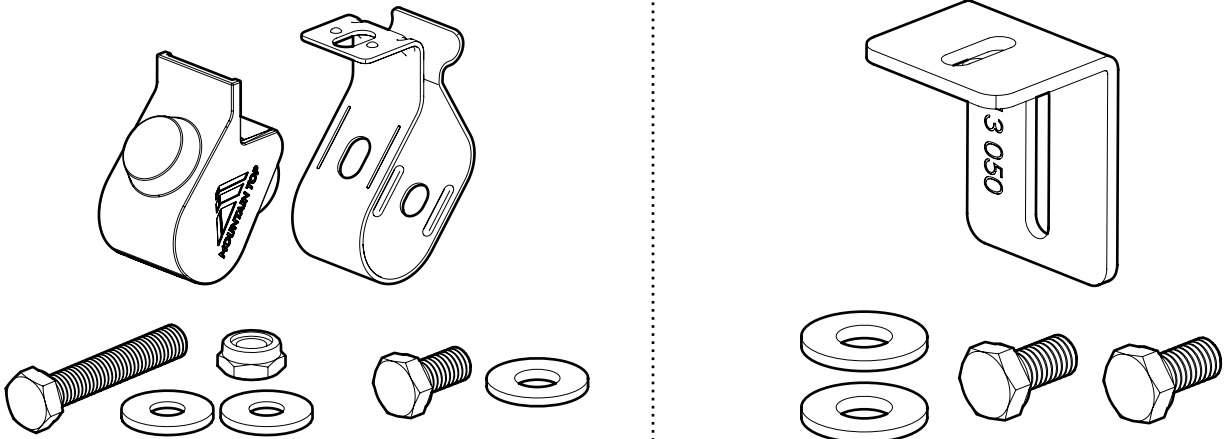

# 11 Drain set

(Spare part content may vary between vehicle models)

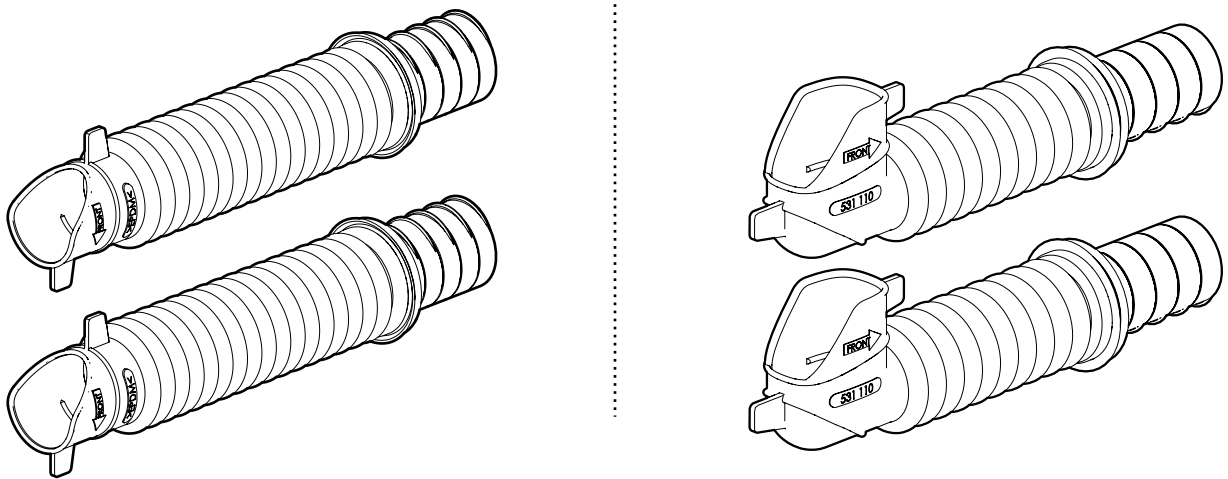





Customer Service	+45 4810 2950 (08:00 - 16:00 CET)
Support	info@mountaintop.dk
Website	www.mountaintop.dk
Address	Pedersholmparken 10, 3600 Frederikssund, Denmark