


AMAROK

039795

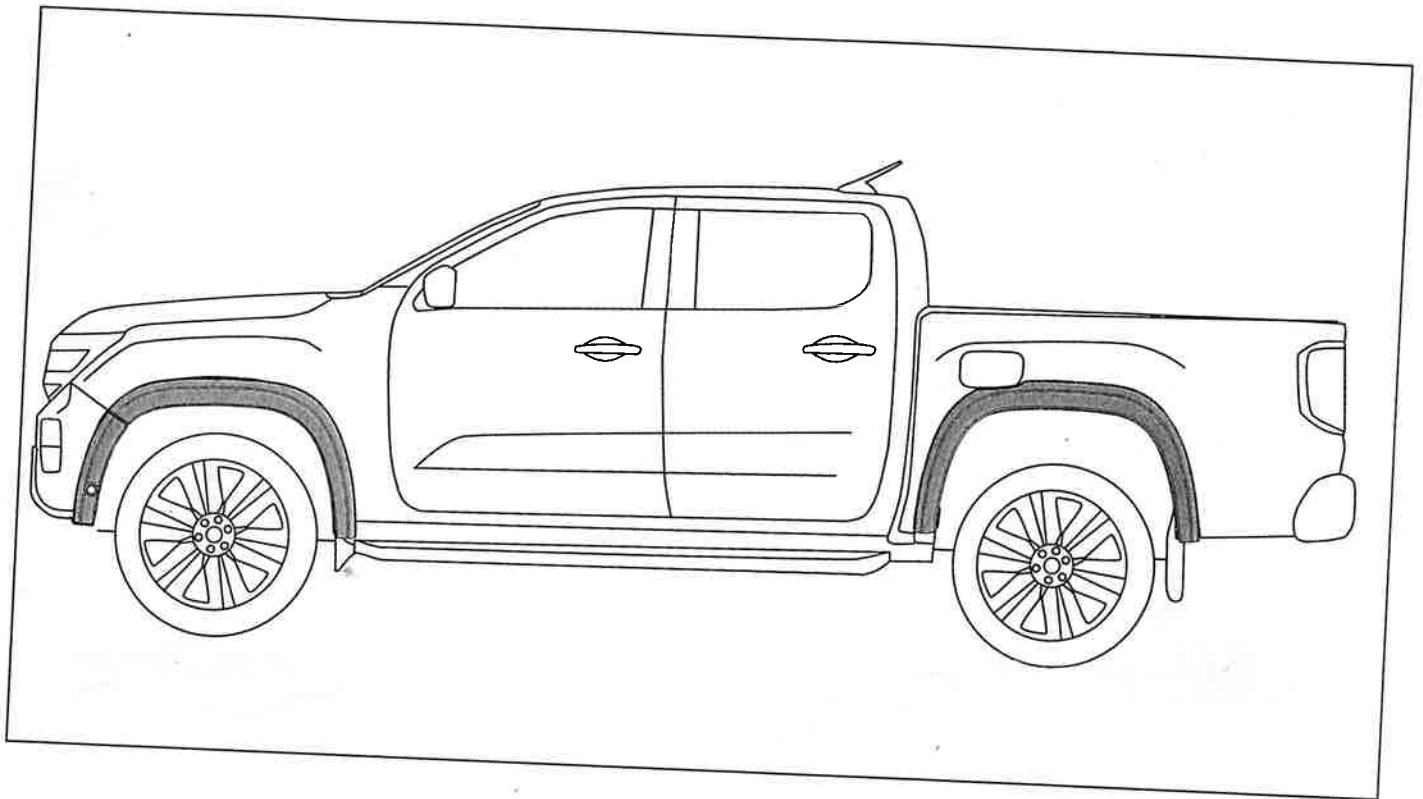

Fitting instructions | Amarok Fender Flares

To suit: Amarok | DC | MY23>

Part number: 2HJ071680SLFR

Installation time: 1 hour



Commercial
Vehicles

General notes and cautions.

Read the fitting instructions prior to accessory fitment.

- Install this accessory following the fitting instructions. Failure to follow these fitting instructions could result in vehicle or accessory damage and/or serious injury or death.
- Be sure to recycle all discarded components and packaging following the local regulations.
- Ensure appropriate clothing is worn and use safety equipment.

Vehicle and accessory warranty notes and cautions.

- For correct installation and proper operation of vehicle and accessory, Volkswagen Group Australia Pty Ltd recommends this accessory be fitted by a qualified Volkswagen technician.
- During the accessory fitment, ensure all Australian automotive and dealership safety practices are followed.

Vehicle notes and cautions.

- Inspect the vehicle and note any damage or concerns found prior to accessory fitment.
- If any damage or concerns are found that interfere with the installation of the accessory, inform the customer prior to the accessory fitment.
- Ensure special care is taken and the applicable fitting instructions are followed to prevent any damage to the vehicle and/or vehicle components.
- Protect and safely store any vehicle components that are removed.
- Ensure all bare metal surfaces are protected using automotive bare metal primer and touch-up paint or suitable soft seal compound with rust inhibitor.
- Ensure metal swarf and dust is removed from all vehicle surfaces.

Accessory notes and cautions.

- It is advisable to seek assistance when lifting heavy components.
- Do not repair or modify this accessory in any way as this will void the warranty.
- Do not remove any of the accessory labels.

Important.

- Read instructions carefully before installation.

PERSONAL PROTECTIVE EQUIPMENT:



Mask



Rubber Gloves



Goggles



Hearing Protection

FRONT FENDER FLARE KIT:

1 Front Bumper Flares
x2




2 Front Fender Flares
x2



3 Extrusion
x1



4 Pan Head Screw
x16



5 J-Nut
x12



6 Alcohol Wipe
x2



7 Primer
x2



PARK ASSIST KIT:

10 Foam Spacer
x4



11 Bezel Nut
x2



12 Bezel
x2



13 Blank
x2



14 Foam
x2



15 Cap
x2



16 Screw
x4



REAR FENDER FLARE KIT:

1 Rear Fender Flares
x2



2 M6x20 Screw
x2



3 Extrusion
x2



4 J-Nut
x8



5 Pan Head Screw
x8



6 Alcohol Wipe
x2



7 Primer
x2



8 Fitting Instructions
x1



9 Anti-Abrasive Tape
x2




10 U-Nut
x4



11 Spacer 5.5mm
x2



12 M6x30 Screw
x2



13 M6 Hex Nut
x2




14 M6 Washer
x6




TOOLS:

Flat screwdriver



Phillips head screwdriver



Scissors



Torx bits: T15 & T25



Round File



Sockets set, extension bar and ratchet



Car wash kit



GLOSSARY



: Vehicle Part



: Sequence



: Part Provided



: Torque Setting



: Even Space



: Reuse



: Discard



: Complete for Both Sides



: Location



: Loose



: Adjust



: Install / Remove



: Two People



: Check



: Caution



: Equal



: Disconnect



: Connect



: No Torque



: Lock



: Unlock



: Clean



FRONT FENDER FLARES INSTALLATION INSTRUCTIONS




LHS INSTALLATION INSTRUCTIONS SHOWN. REPEAT ALL STEPS FOR THE RHS.





1

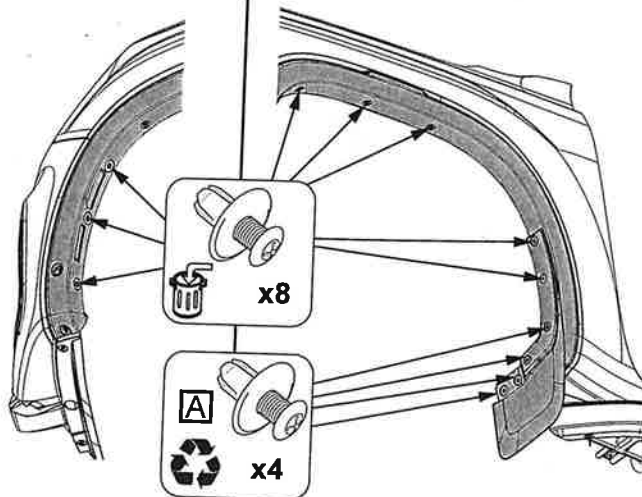


2

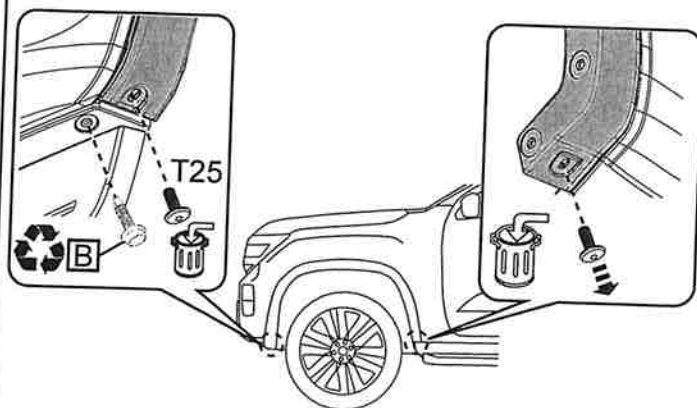


3

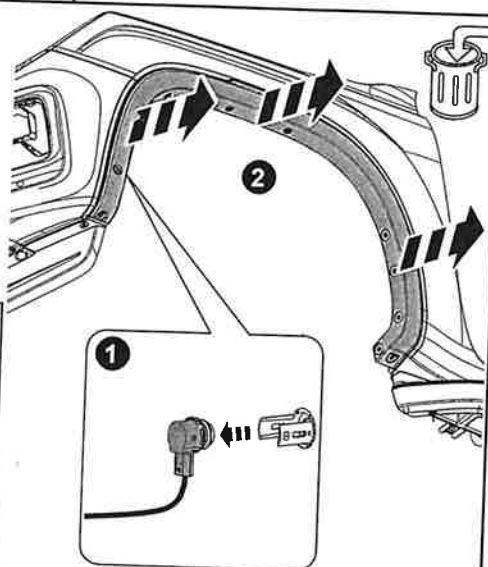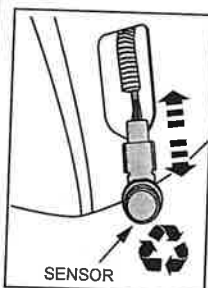


4

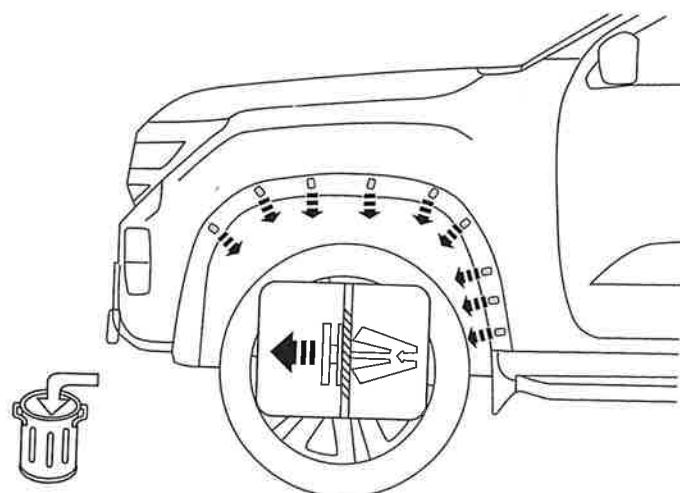

5


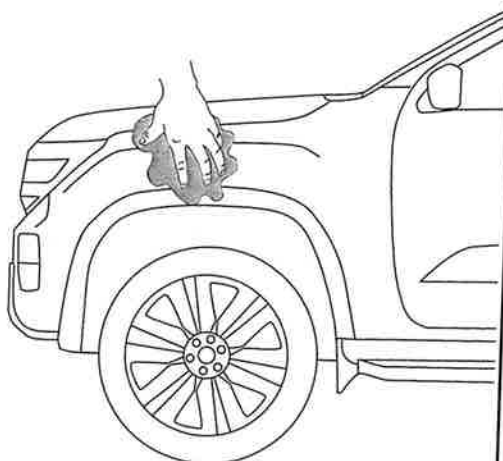


6



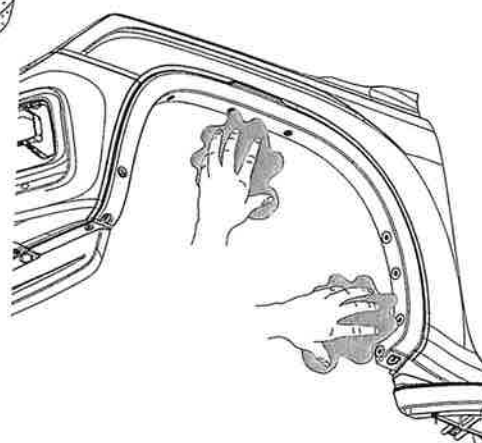


FRONT FENDER FLARES INSTALLATION INSTRUCTIONS


7

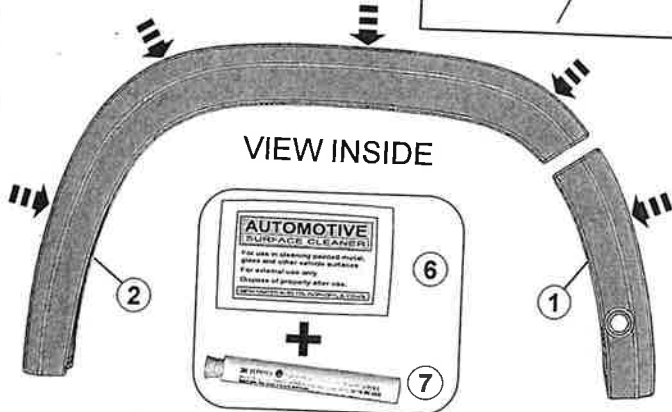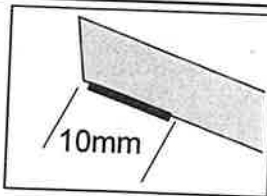


8

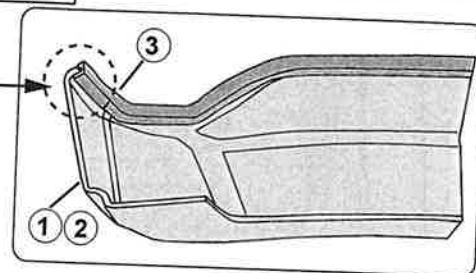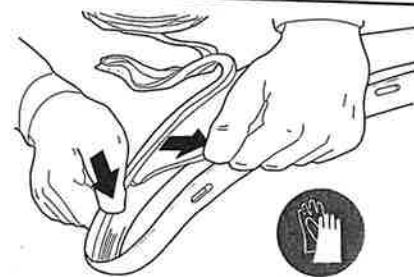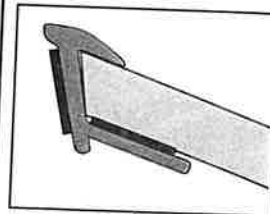


9

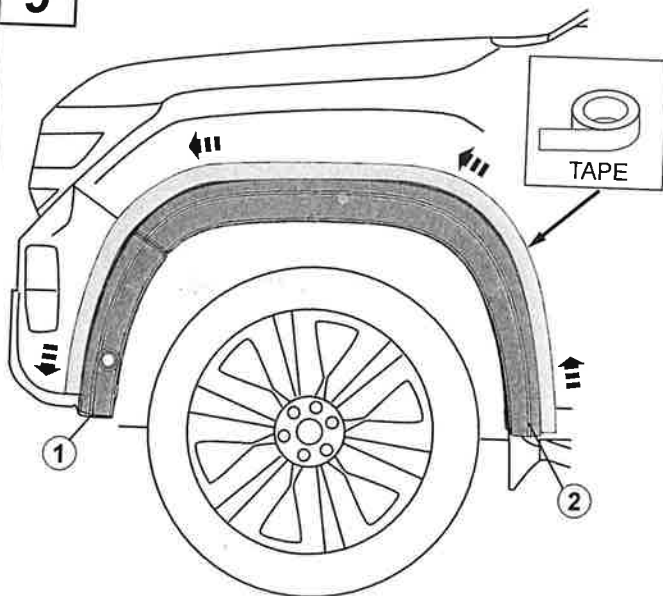



10

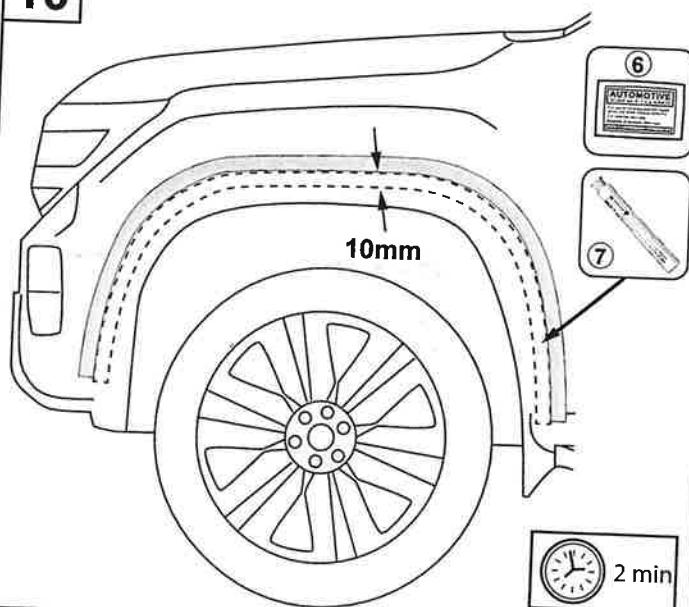

11

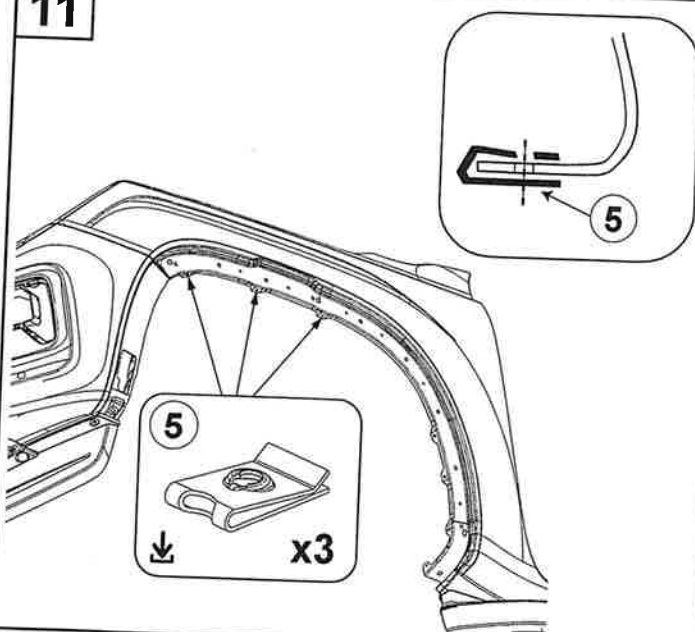


12

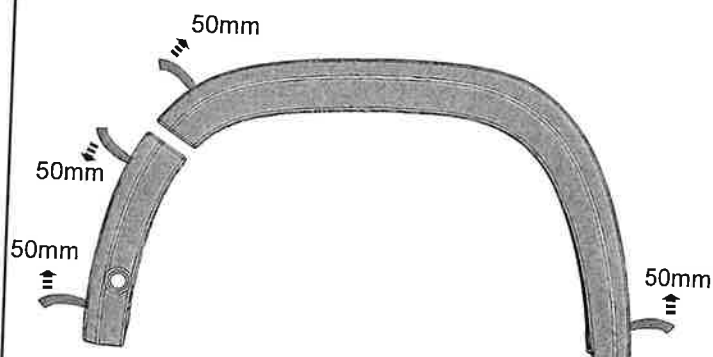
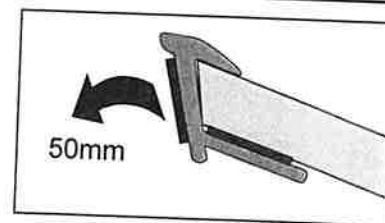


FRONT FENDER FLARES INSTALLATION INSTRUCTIONS


13

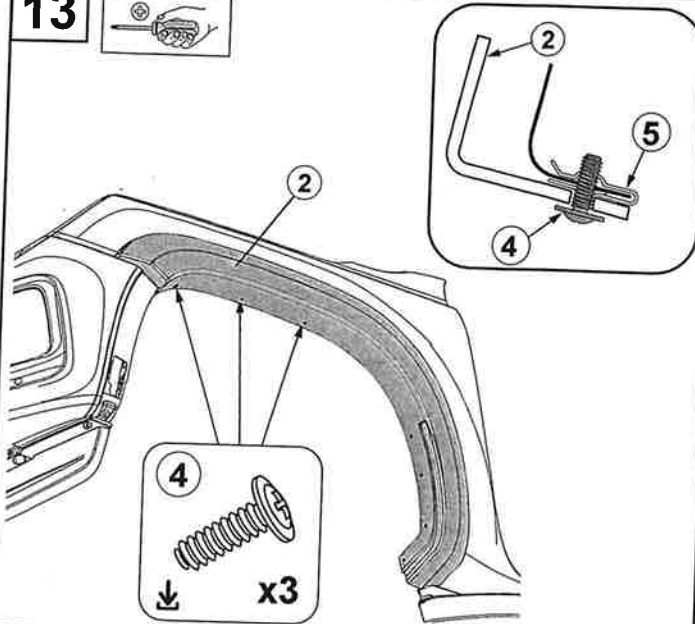

14

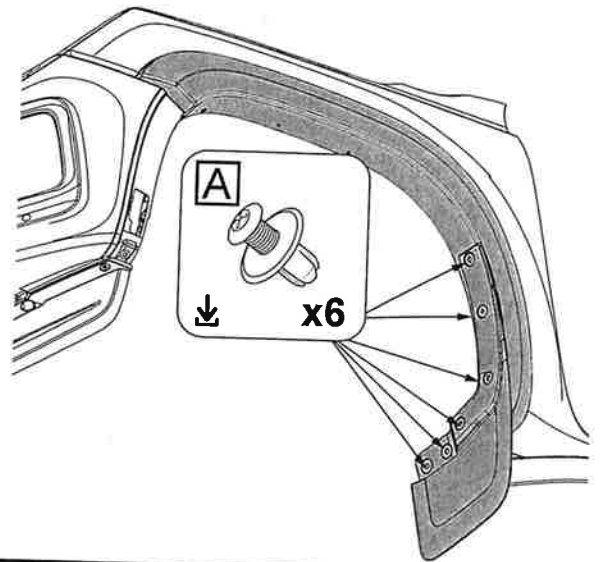


15

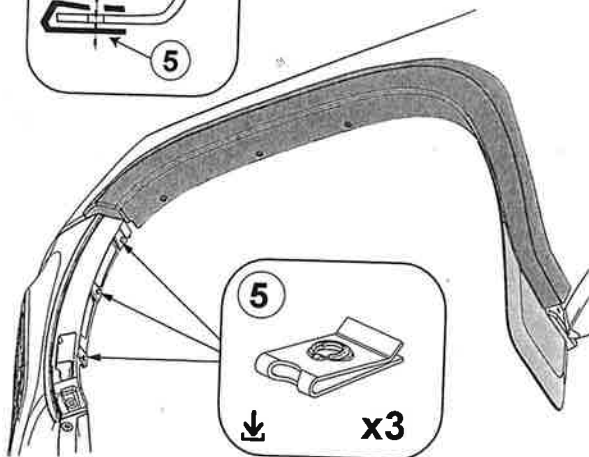


16

This step is required only for vehicles with park assist

1

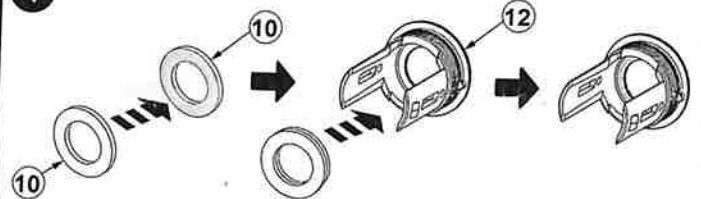


2

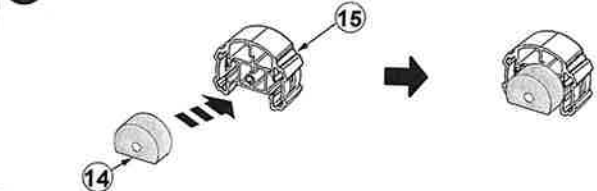

17


This step is required only for vehicles with park assist

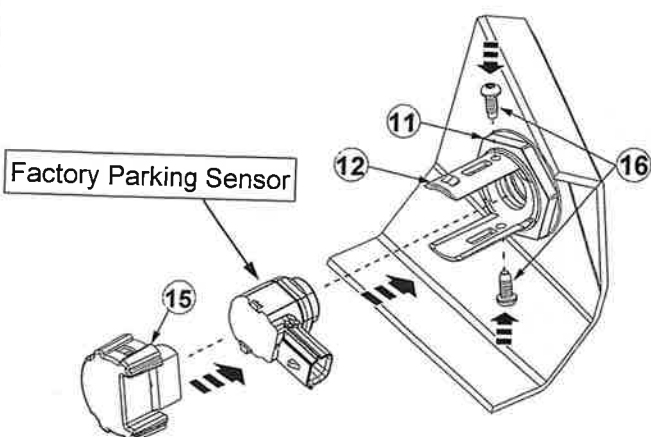

18

This step is required only for vehicles with park assist


1

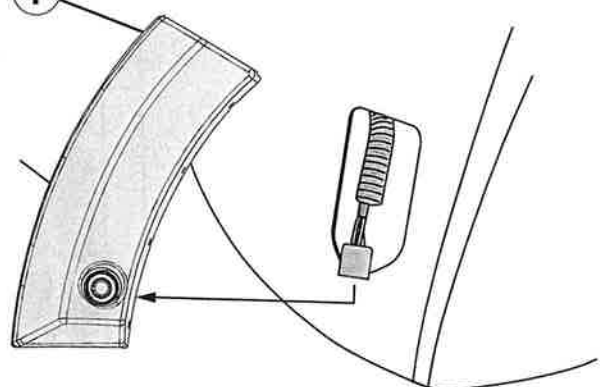


STEP 20

FRONT FENDER FLARES INSTALLATION INSTRUCTIONS


19 This step is required only for vehicles without park assist

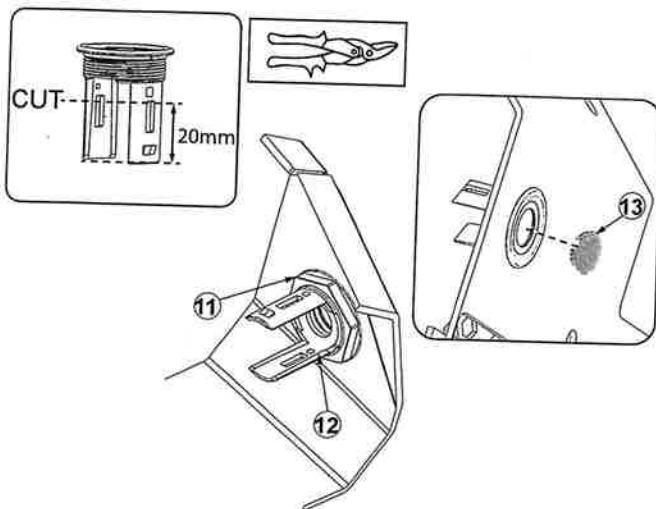


20

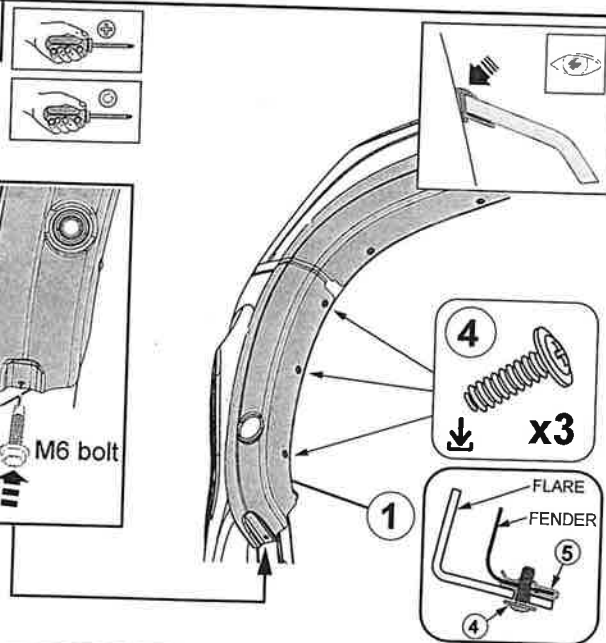


21

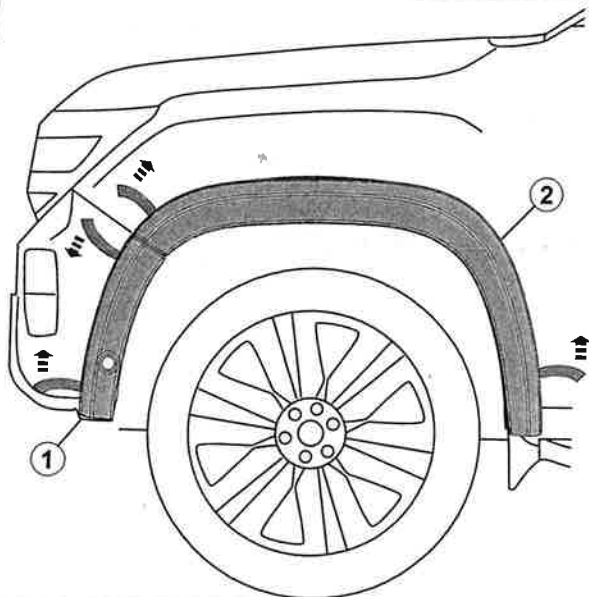







22

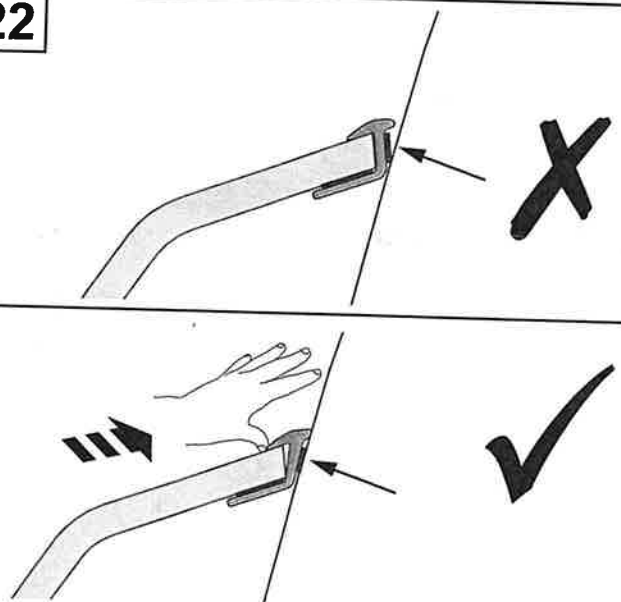

24 HOURS

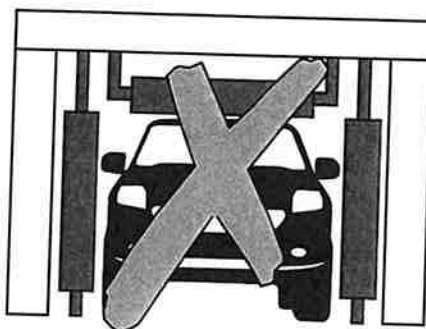


REAR FENDER FLARES INSTALLATION INSTRUCTIONS

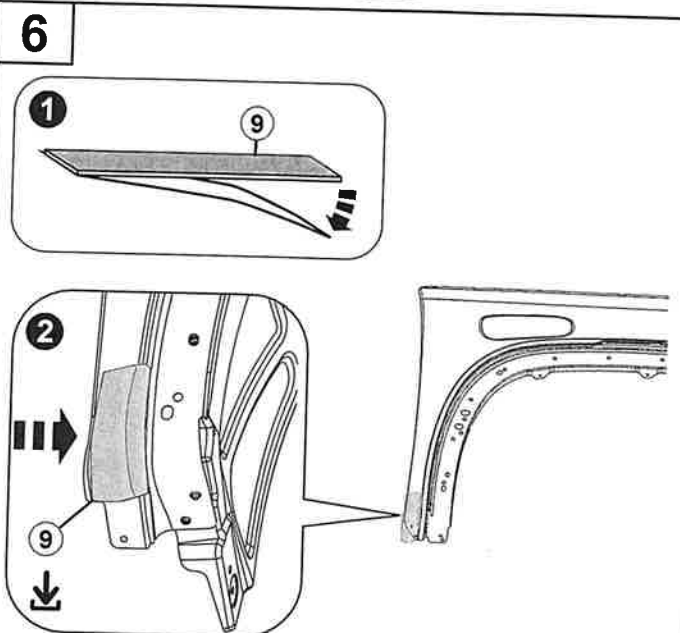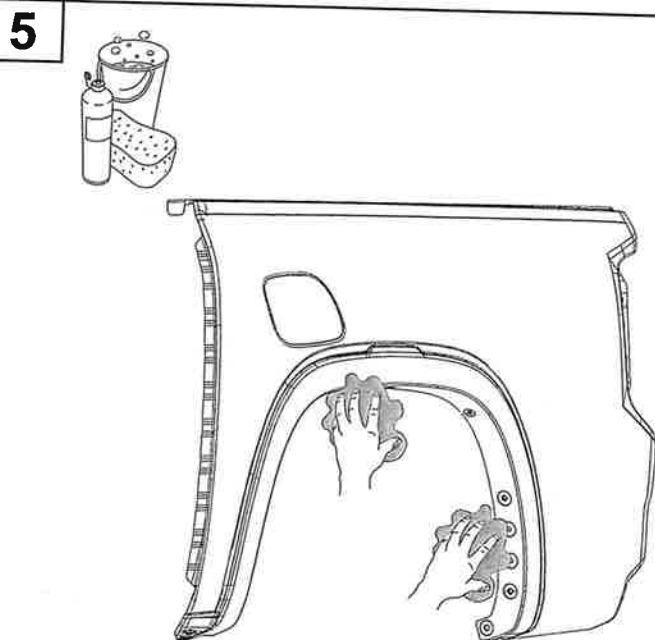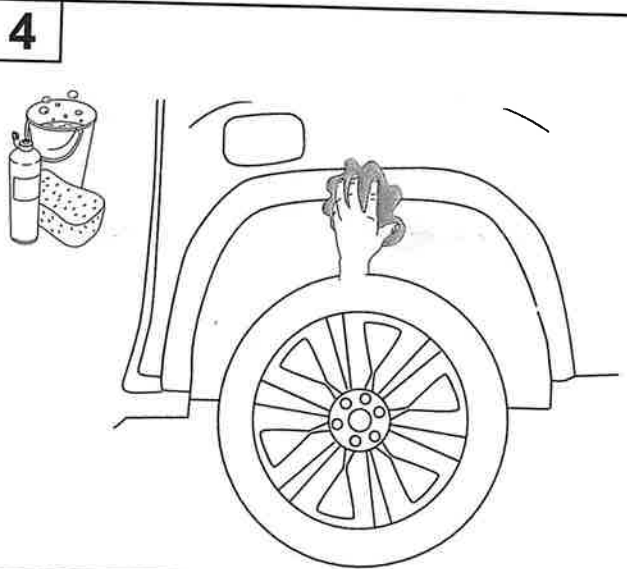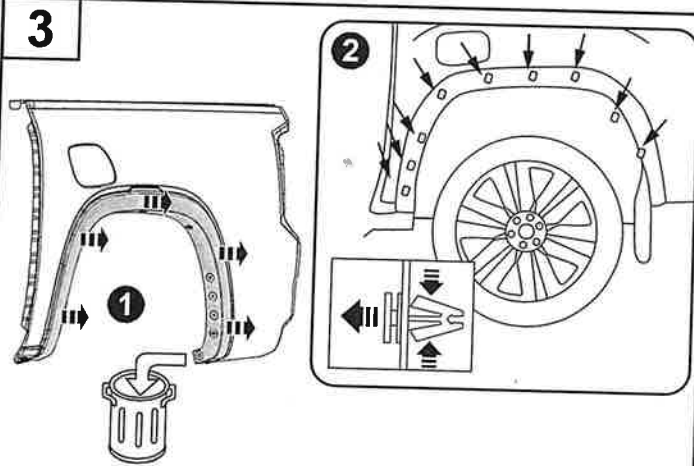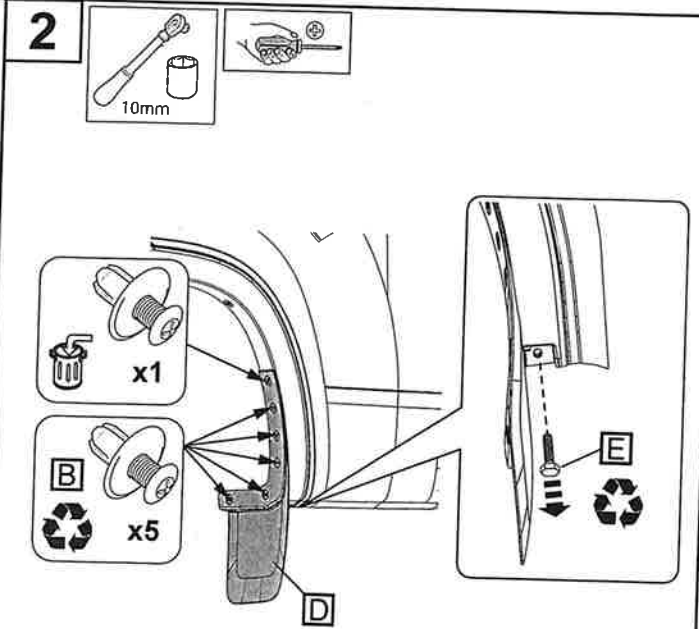
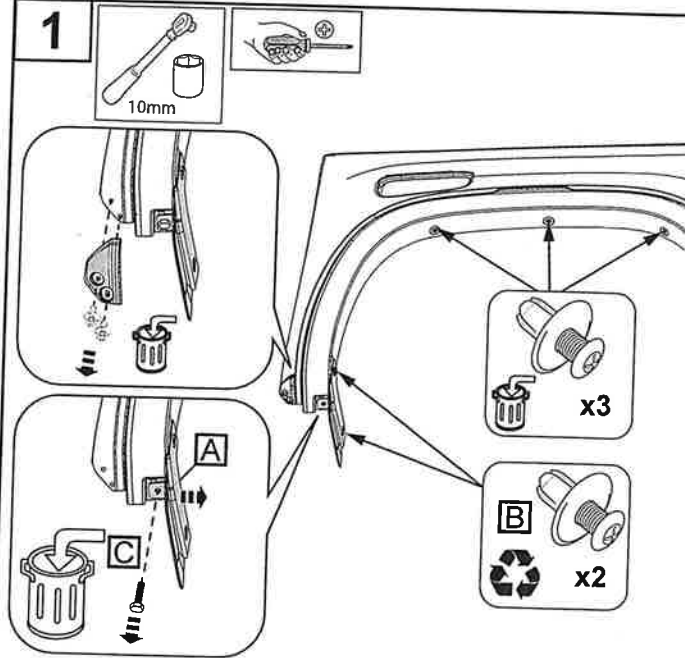


REAR FENDER FLARES INSTALLATION INSTRUCTIONS


7

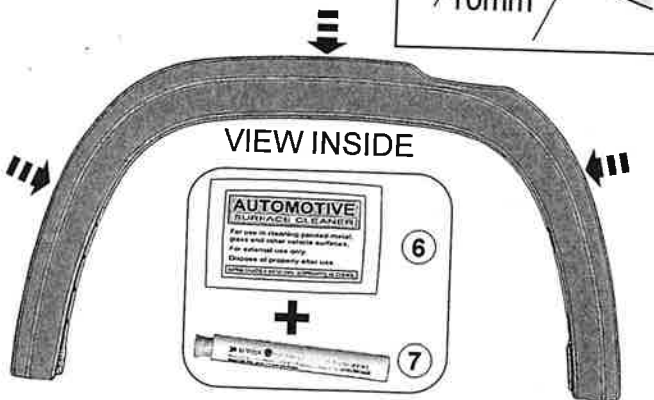


8

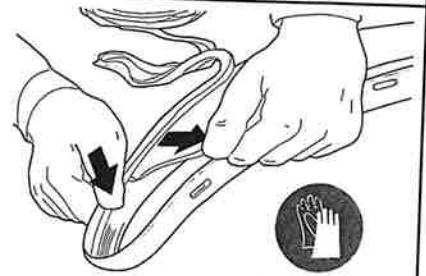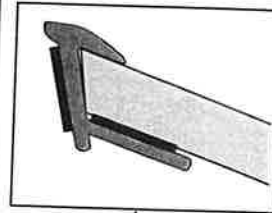


Rubber Gloves

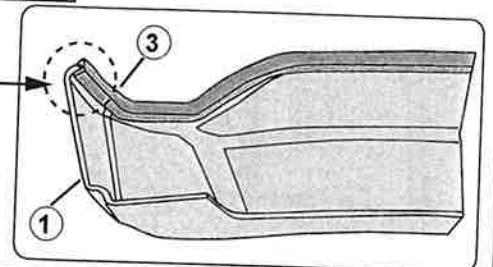


9

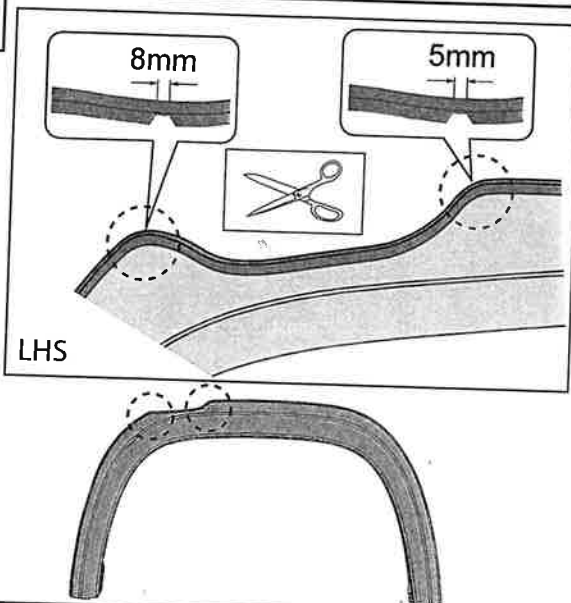



10

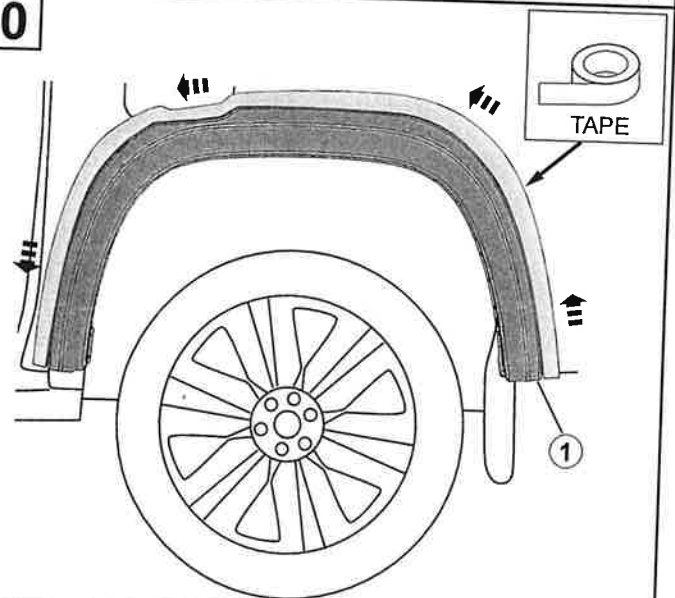

11


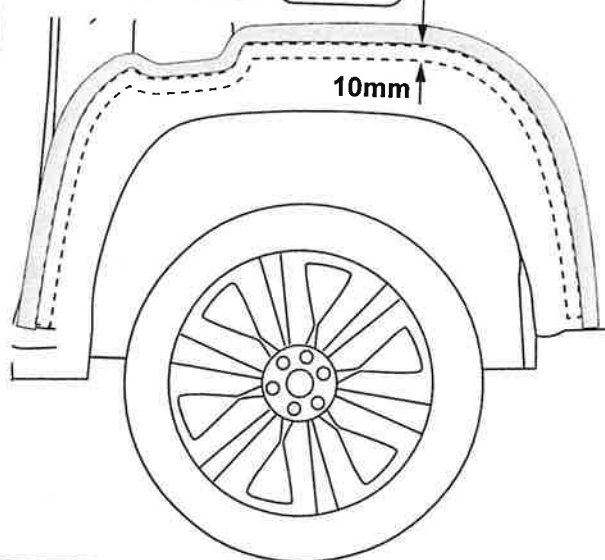


12

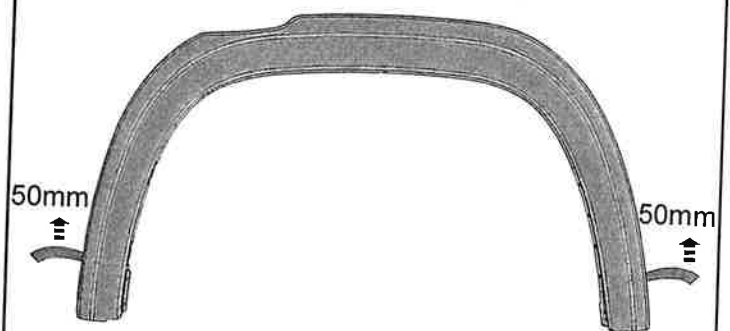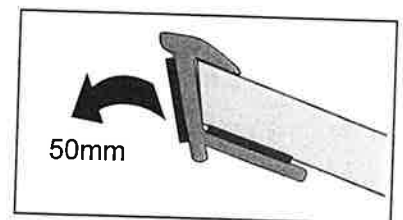


REAR FENDER FLARES INSTALLATION INSTRUCTIONS




13

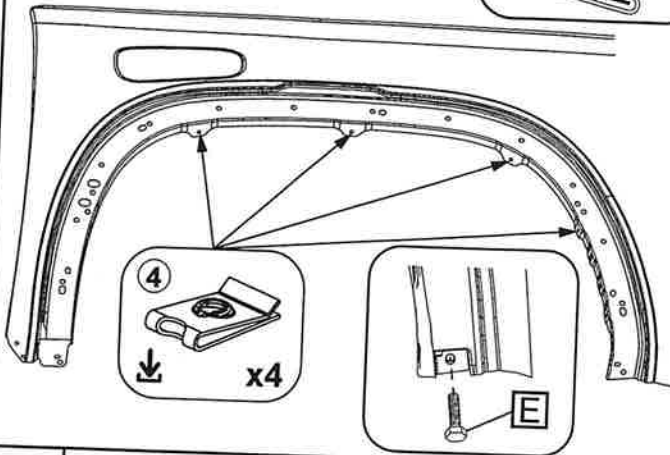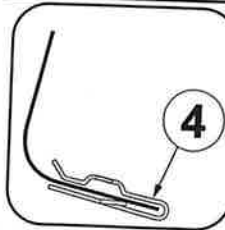


14

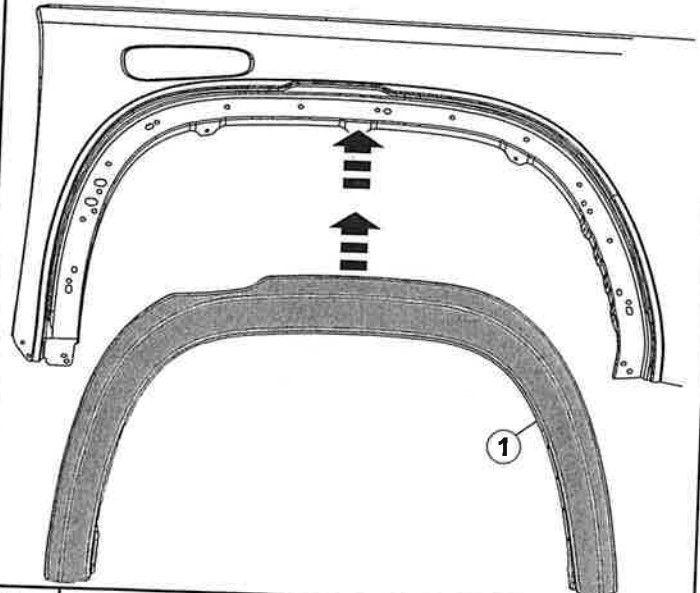


15

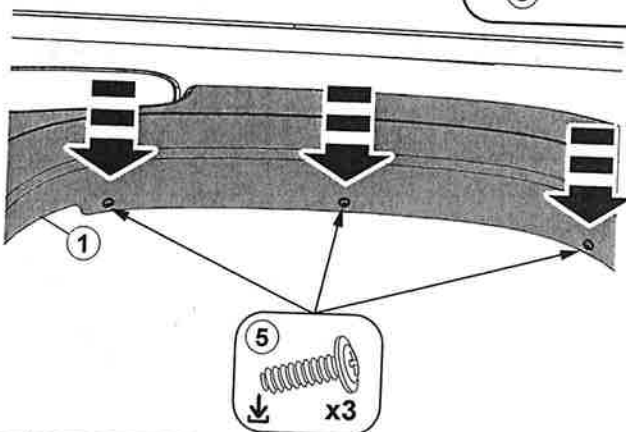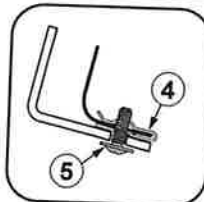



16

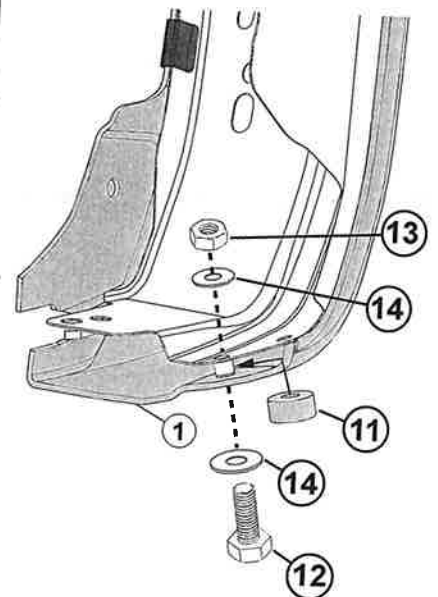

17

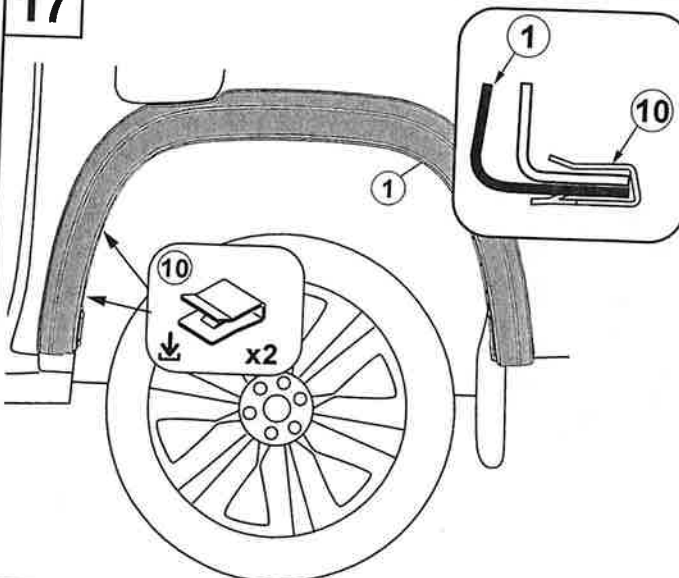


18



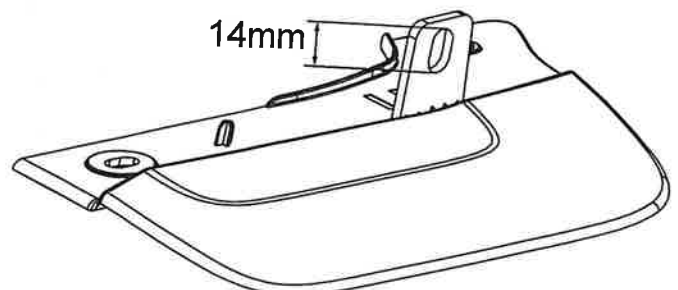
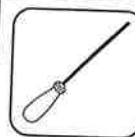


REAR FENDER FLARES INSTALLATION INSTRUCTIONS


19

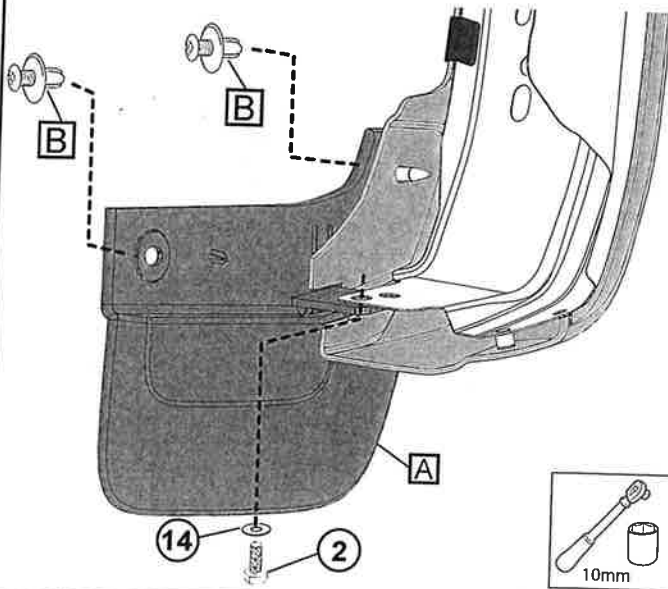


20

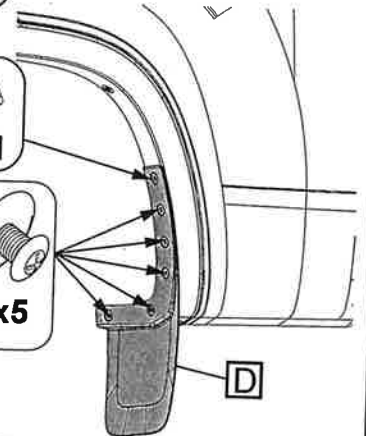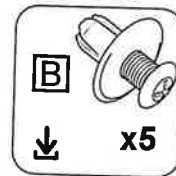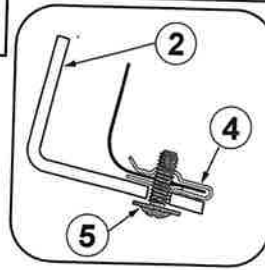

21

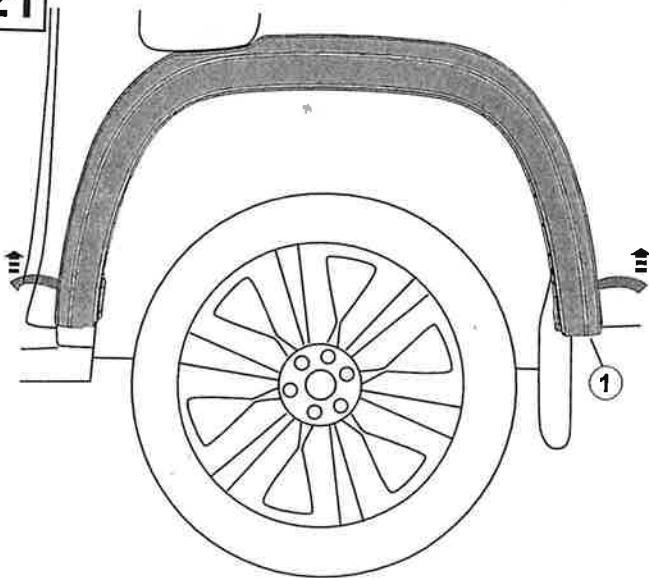

22

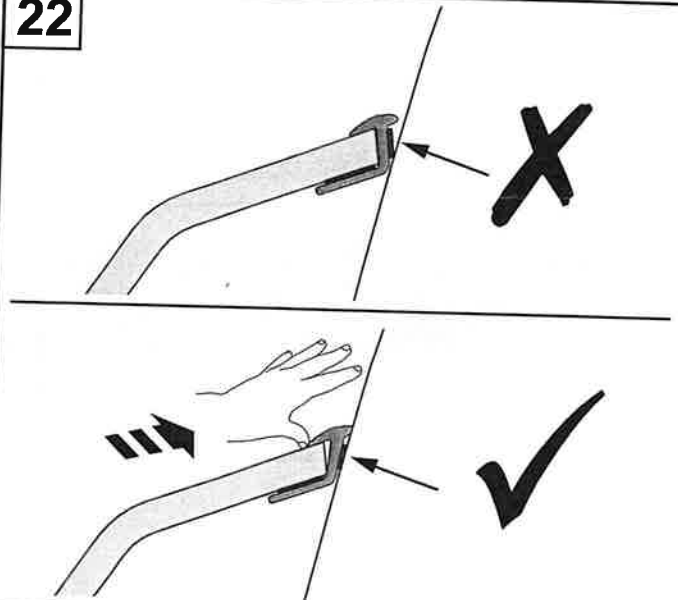

24 HOURS

