



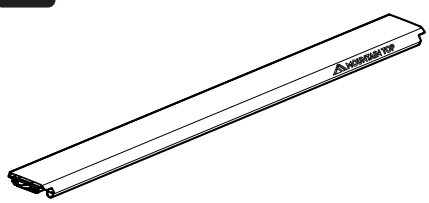



MOUNTAIN TOP[®] EVOe

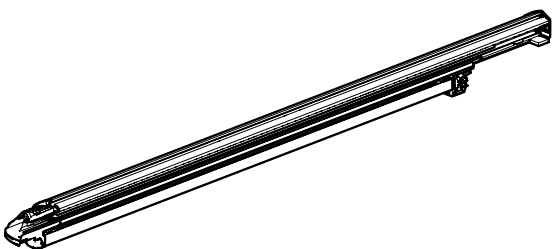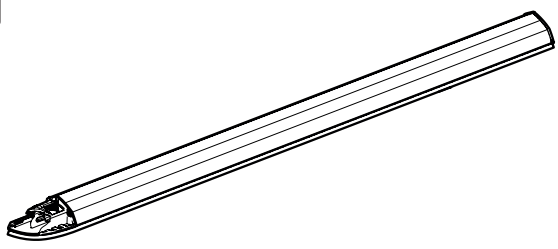














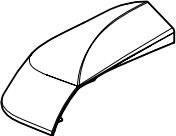


Installation manual



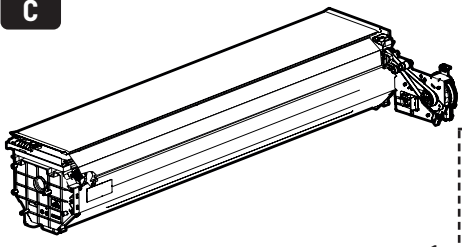




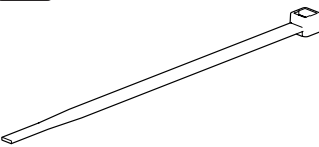
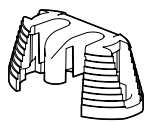
Parts




<p>A</p>  <p>x1</p>	<p>B</p>  <p>x1</p>
<p>C</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 5px; display: inline-block;"> <p>L2</p>  <p>x2</p> </div>	<p>D</p>  <p>x1</p> <div style="border: 1px dashed black; padding: 5px; display: inline-block;"> <p>M2</p>  <p>x1</p> </div>

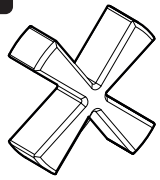
Kit

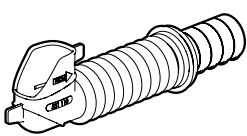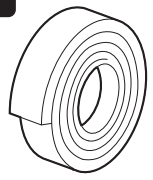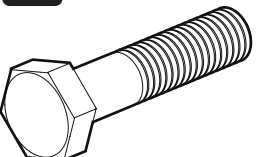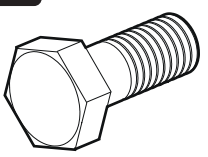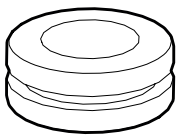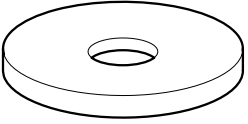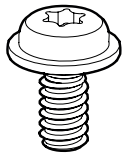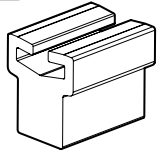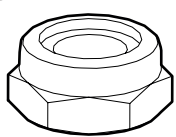

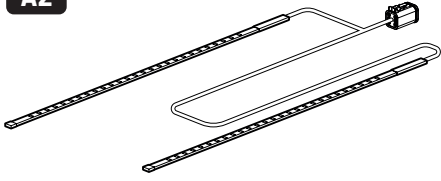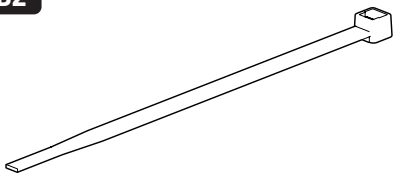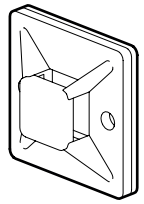
<p>E</p>  <p>x2</p>	<p>F</p>  <p>x6</p>	<p>G</p>  <p>x6</p>	<p>H</p>  <p>x2</p>	<p>I</p>  <p>x1</p>
<p>J</p>  <p>M8x45 x6</p>	<p>K</p>  <p>M8x10 x6</p>	<p>L</p>  <p>x6</p>	<p>M</p>  <p>x1</p>	<p>N</p>  <p>x12</p>
<p>O</p>  <p>x5</p>	<p>P</p>  <p>x1</p>	<p>R</p>  <p>x1</p>	<p>S</p>  <p>x6</p>	<p>T</p>  <p>x2</p>
<p>U</p>  <p>x1</p>	<p>V</p>  <p>x1</p>	<p>X</p>  <p>x1</p>		

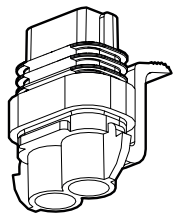Kit		
A2  x1	B2  x6	C2  x6

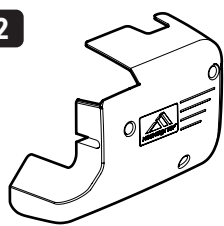
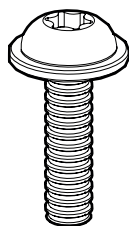

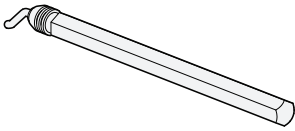
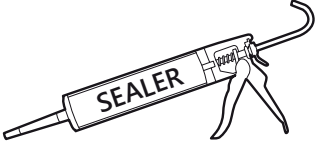
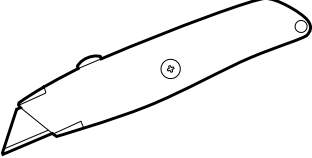

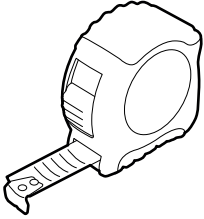
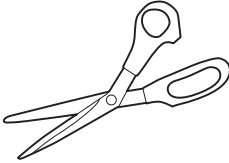


Power supply kit			
D2  x1	E2  x1	F2  x10	G2  x1

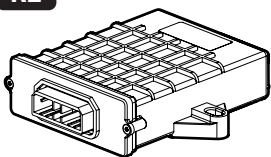Kit		
H2  x1	I2  x3	J2  x2


Kit
K2  x1

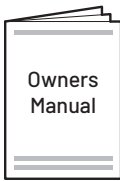Kit		
 Manual x1	 TÜV x1	 Owners Manual x1


Tools needed

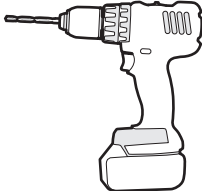
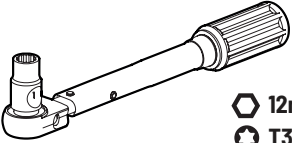
 <p>Ø3.5MM</p>	<p>1 - 25 Nm</p>  <ul style="list-style-type: none"> ⬡ 12mm ⊕ T30 ● 4mm 	 <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>	
			
			

Applying rust protection

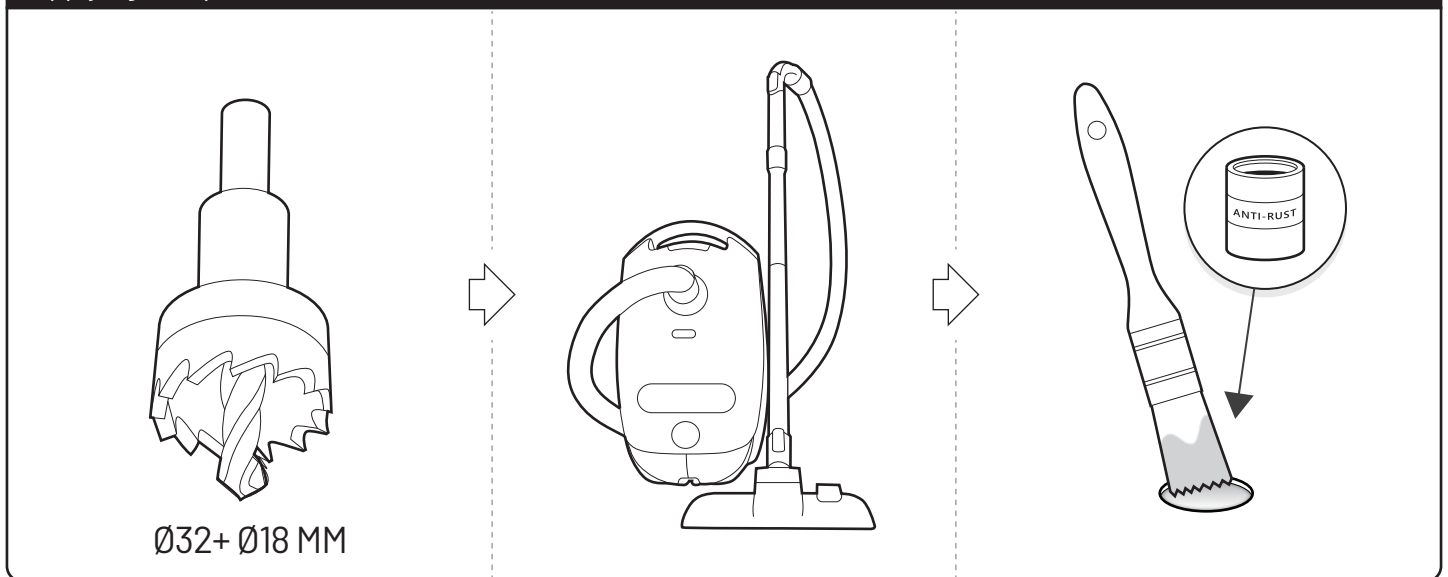


Sharp edge

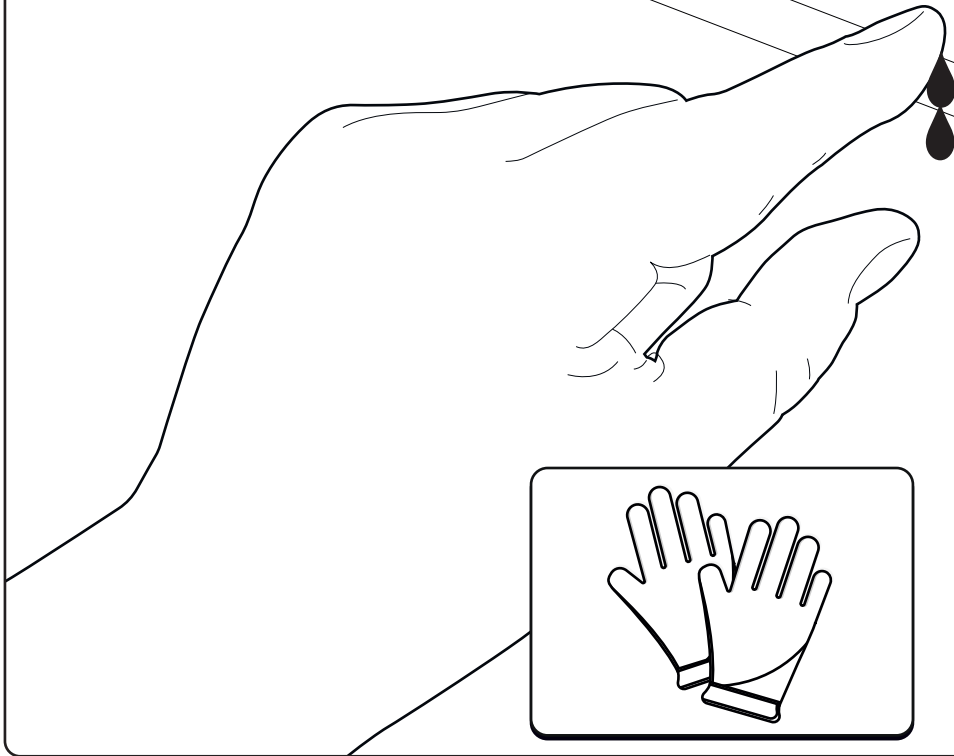


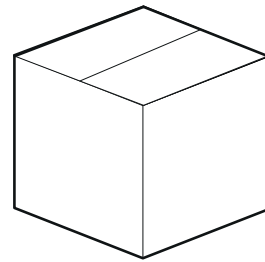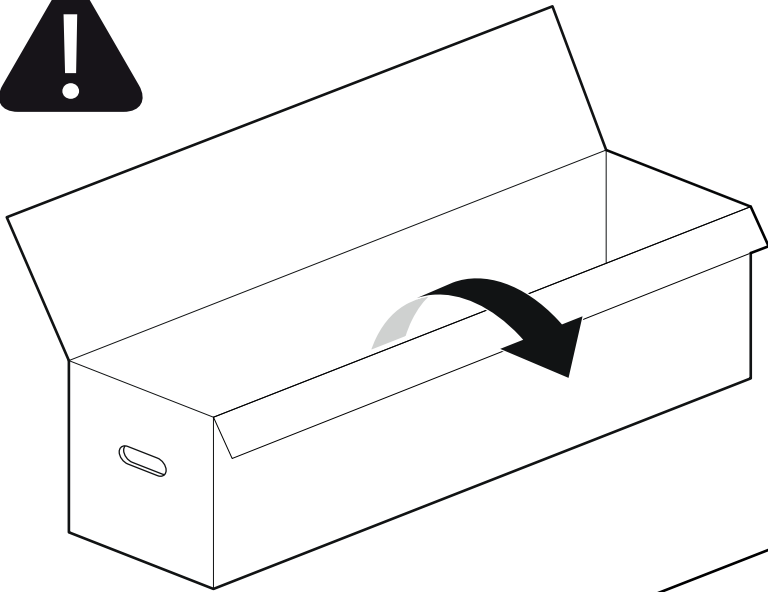


C

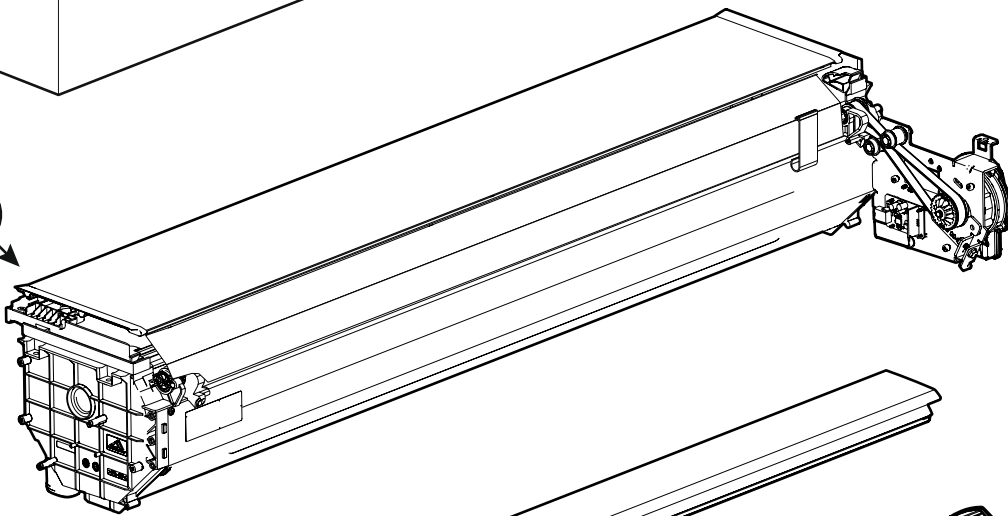


D

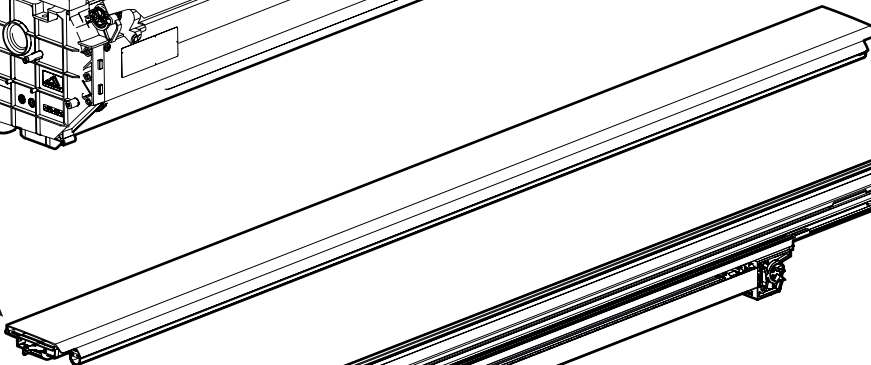

A

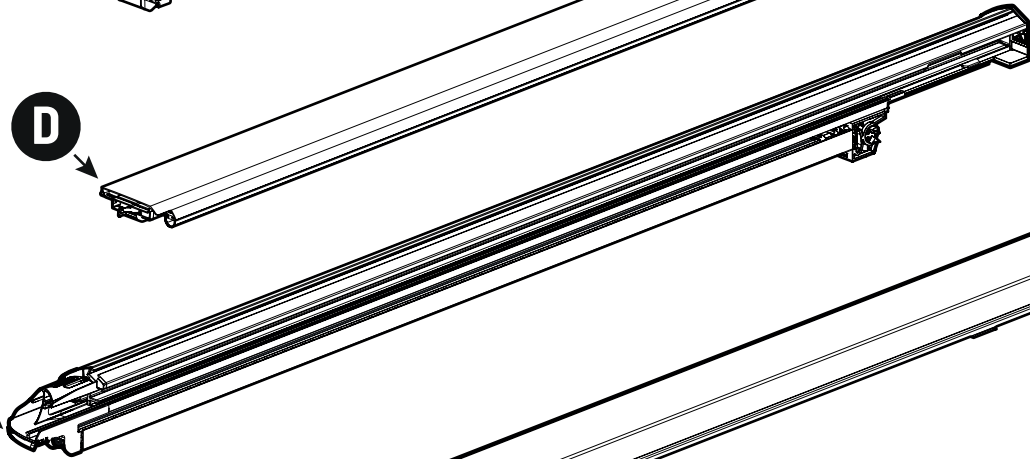


B

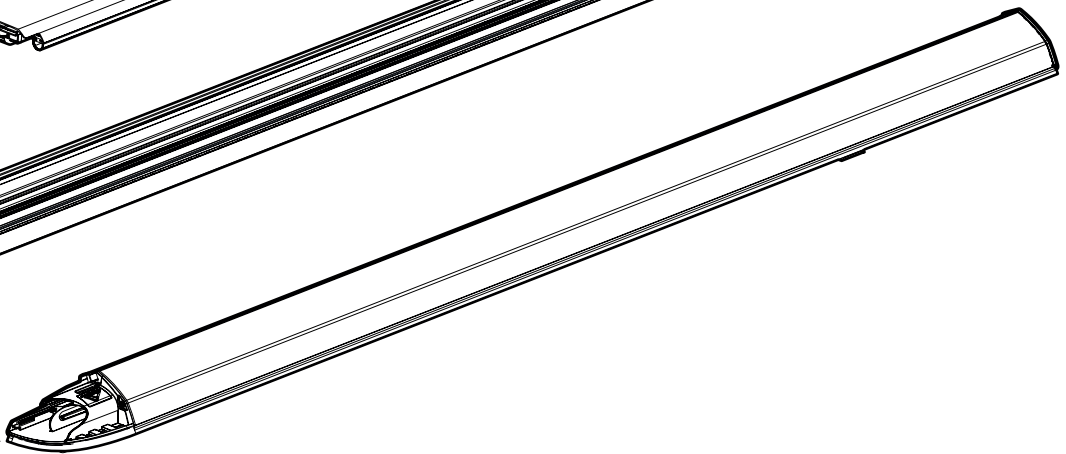



 Water & sponge

2

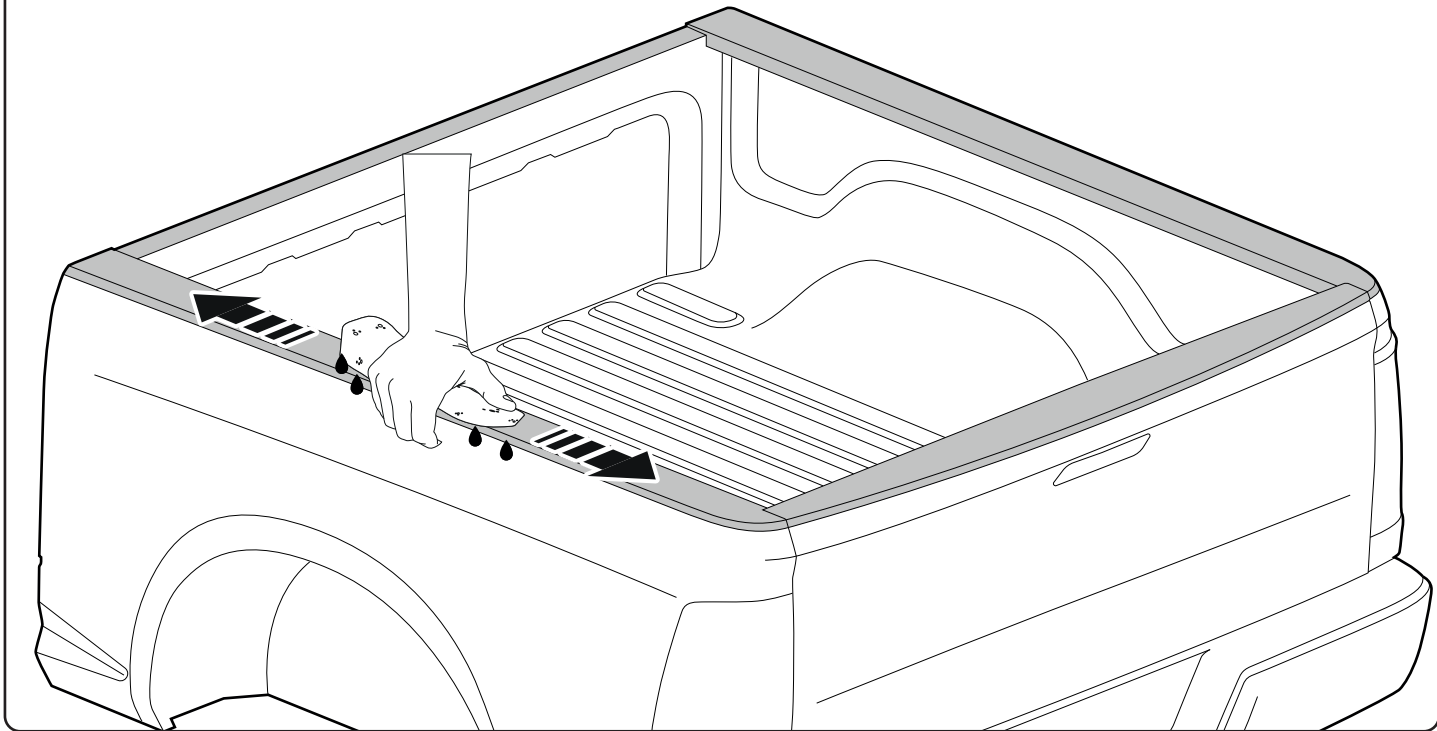


3

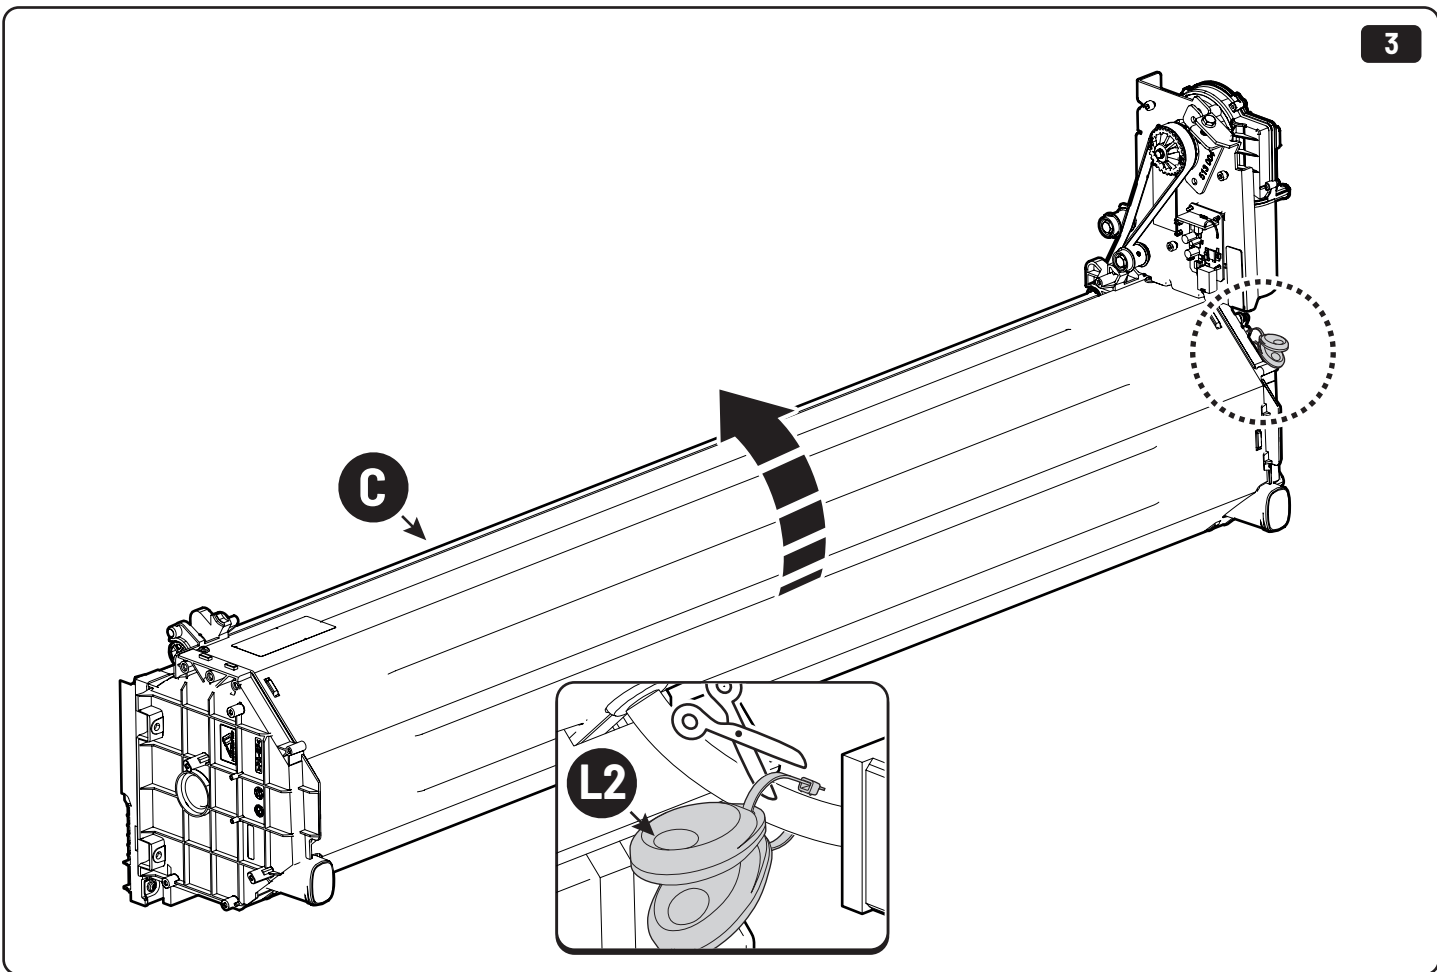

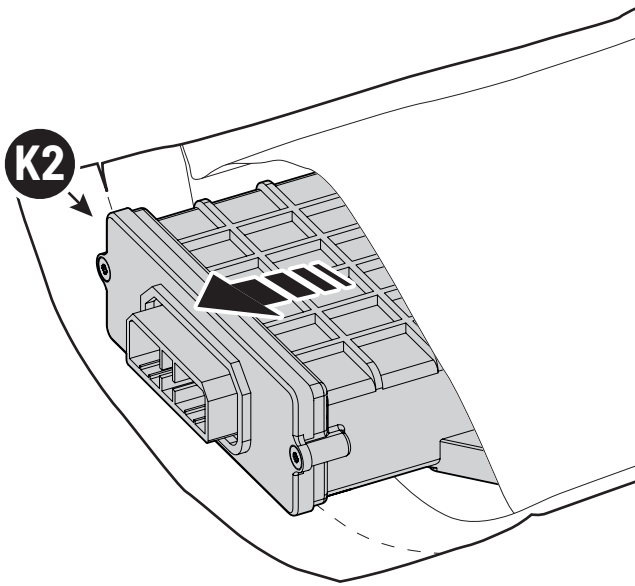


1

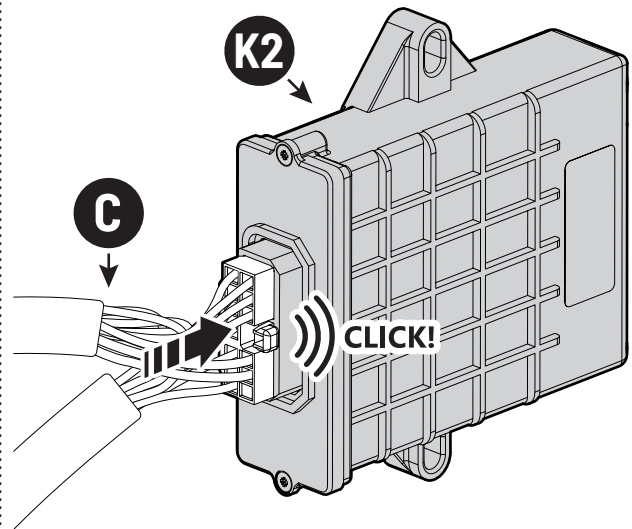


2


4mm 2,4Nm

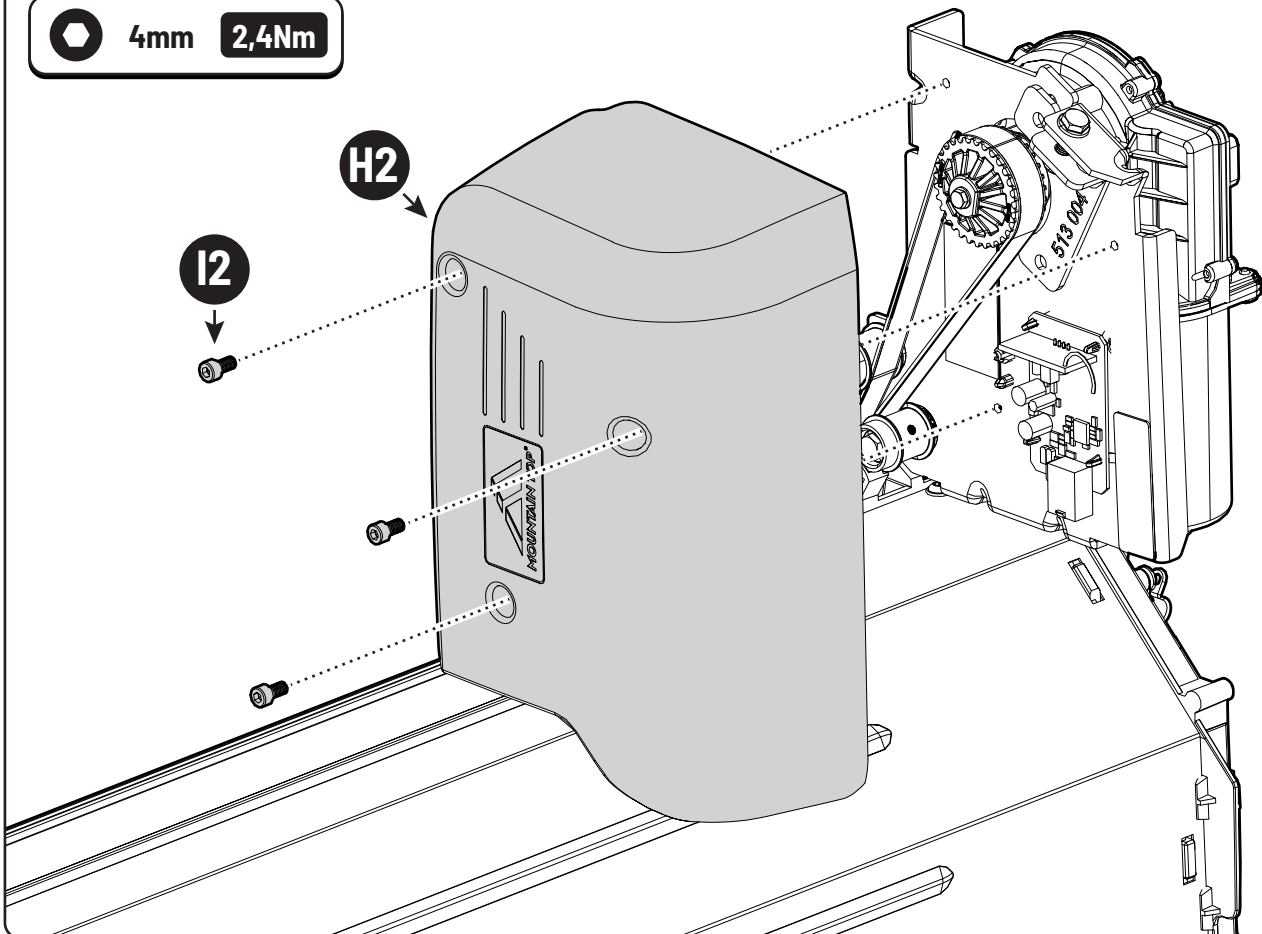


6

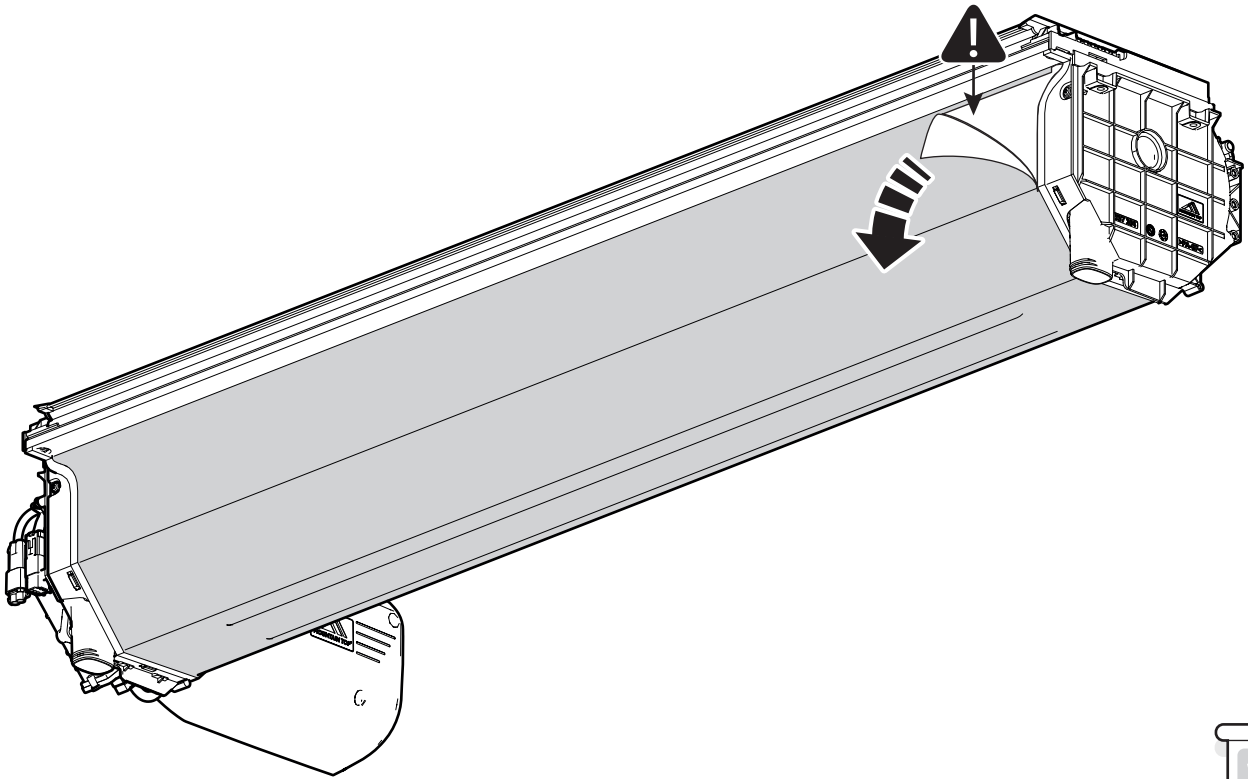



7



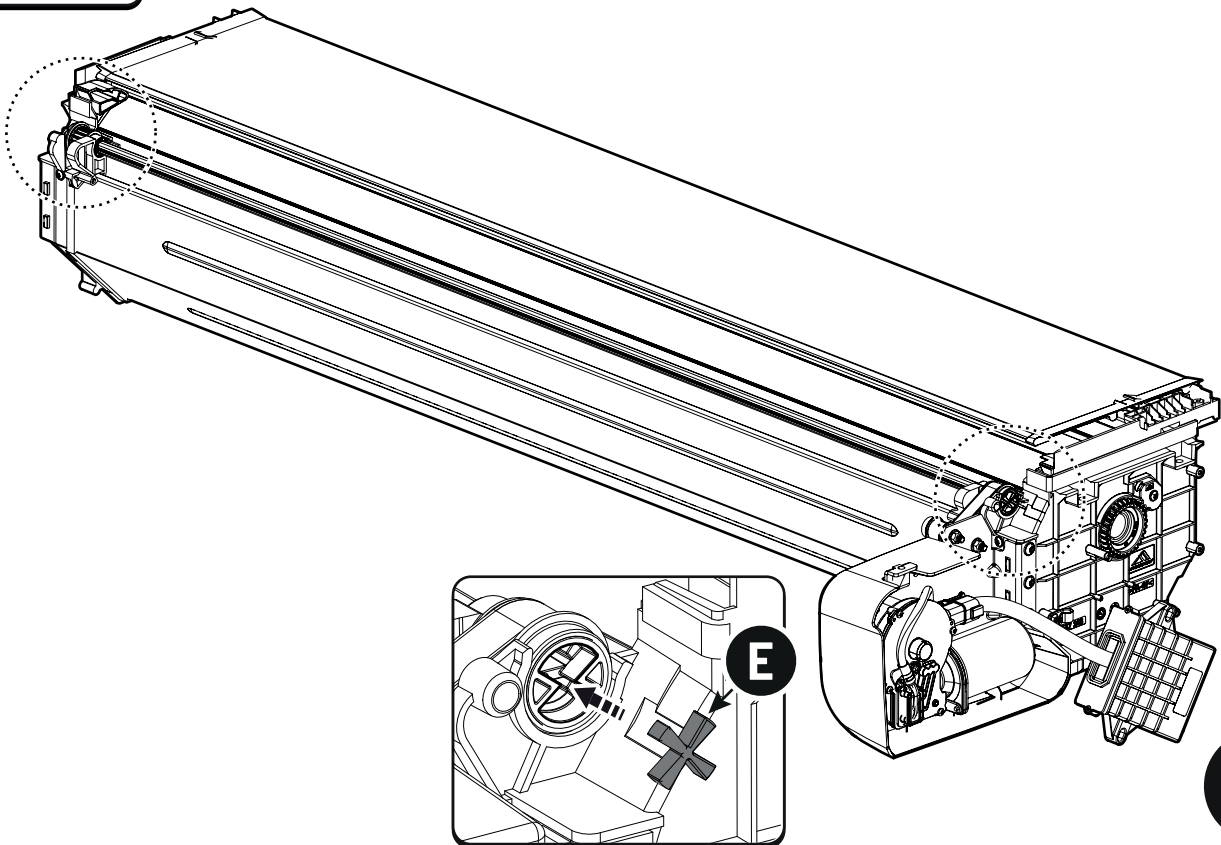



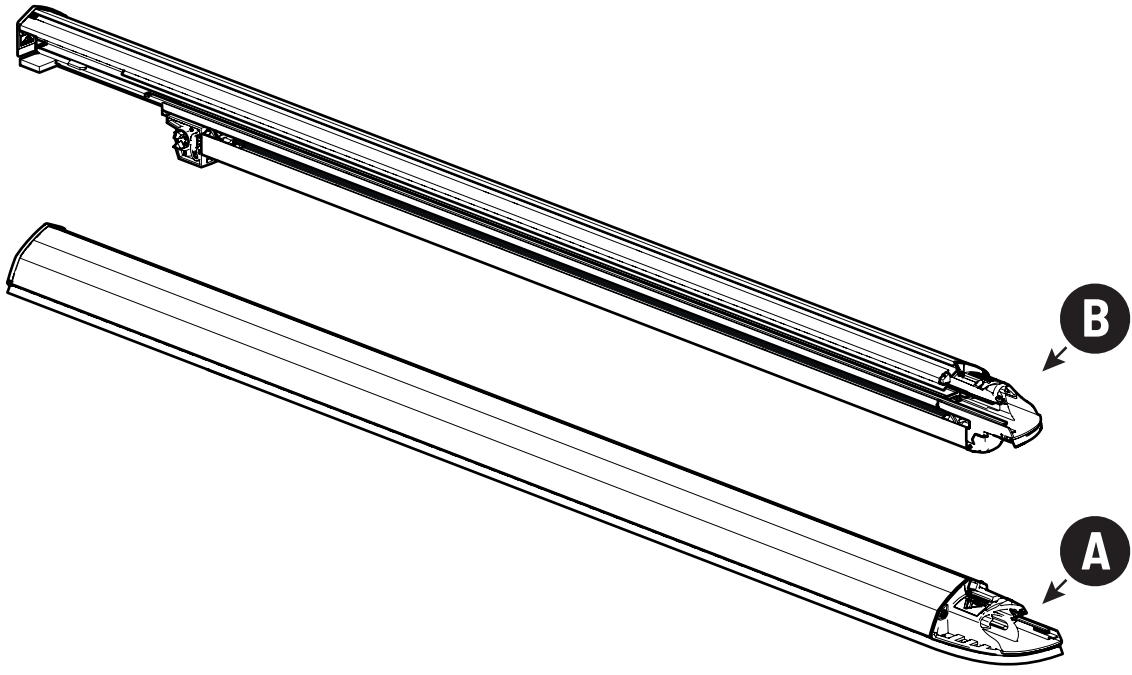



1

2

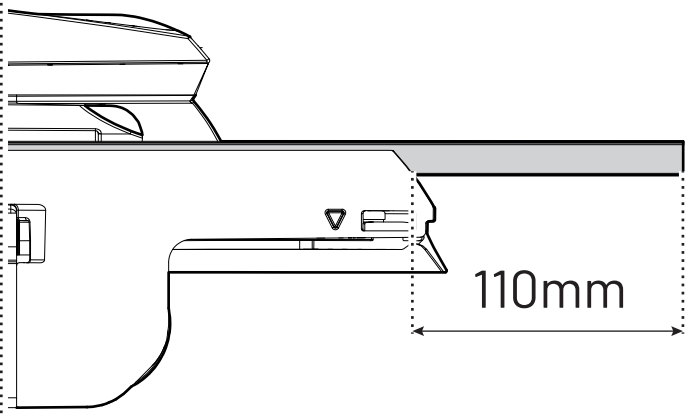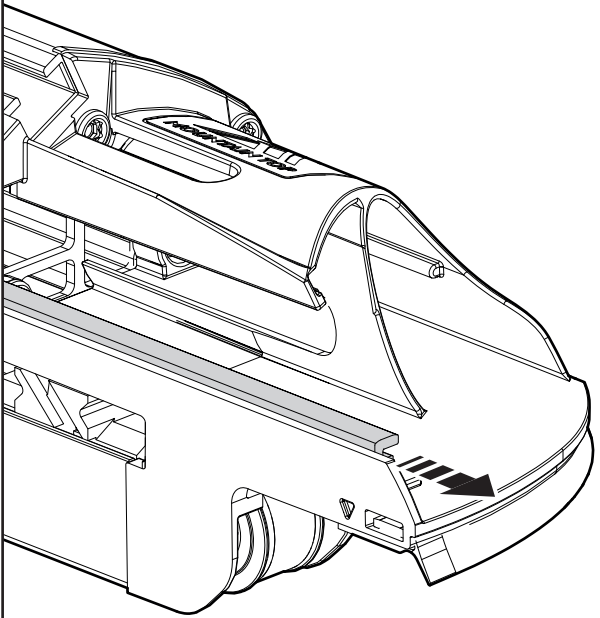


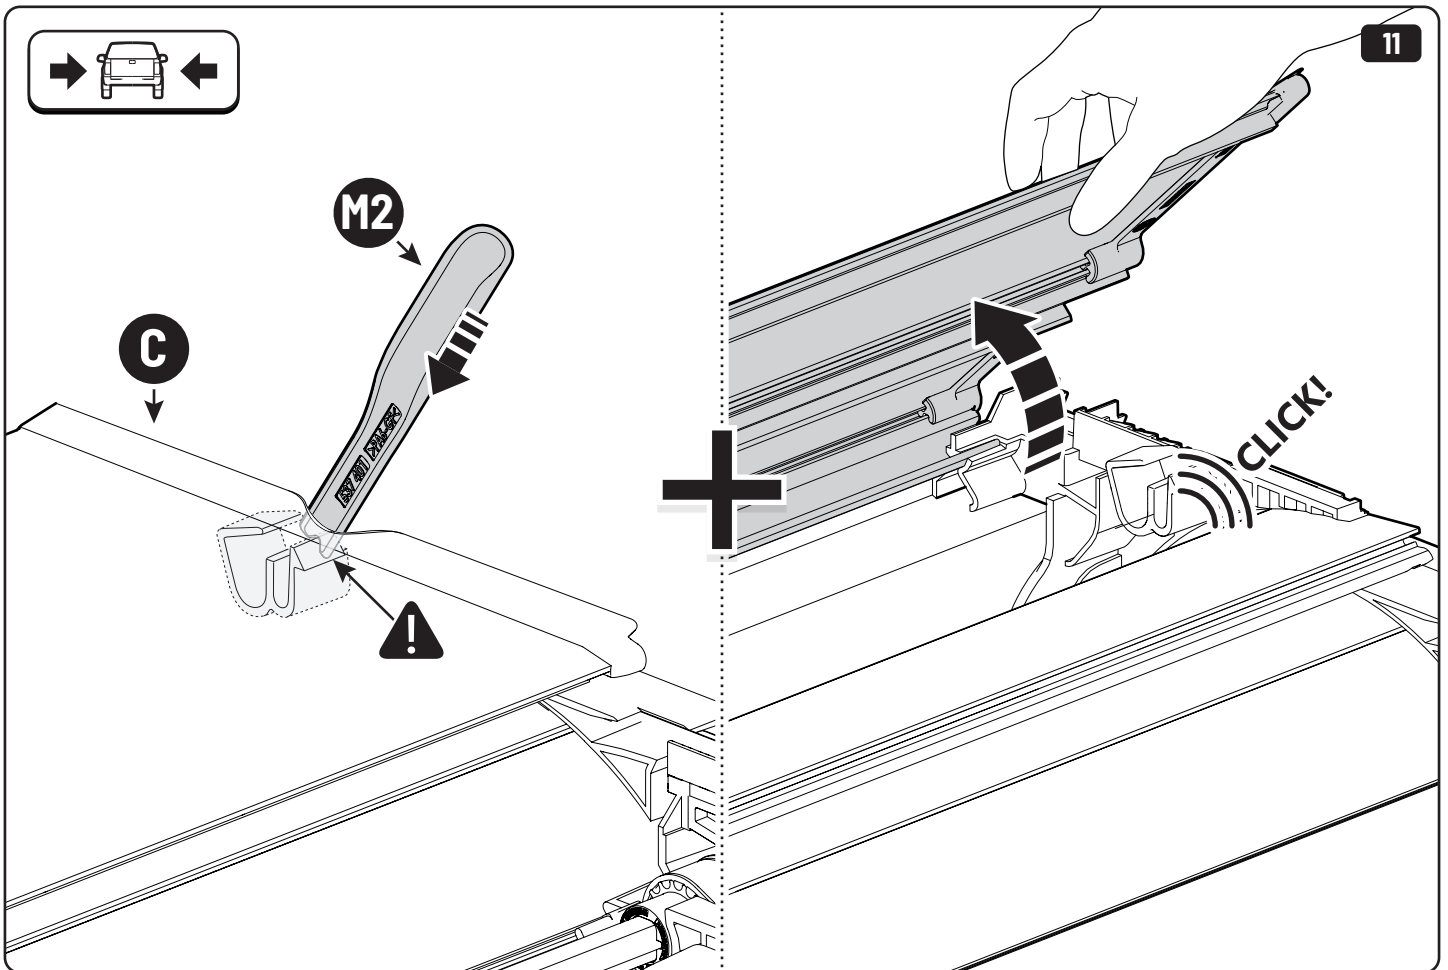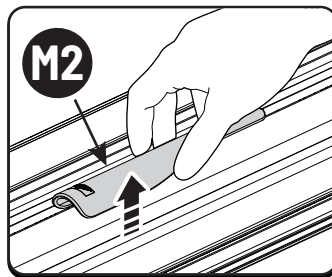
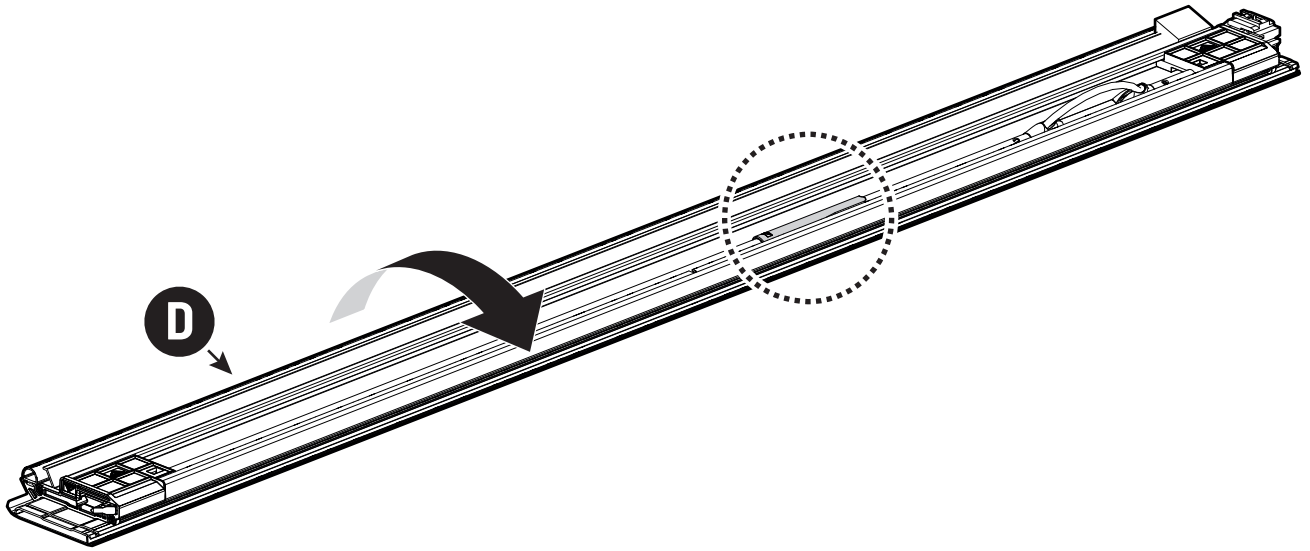


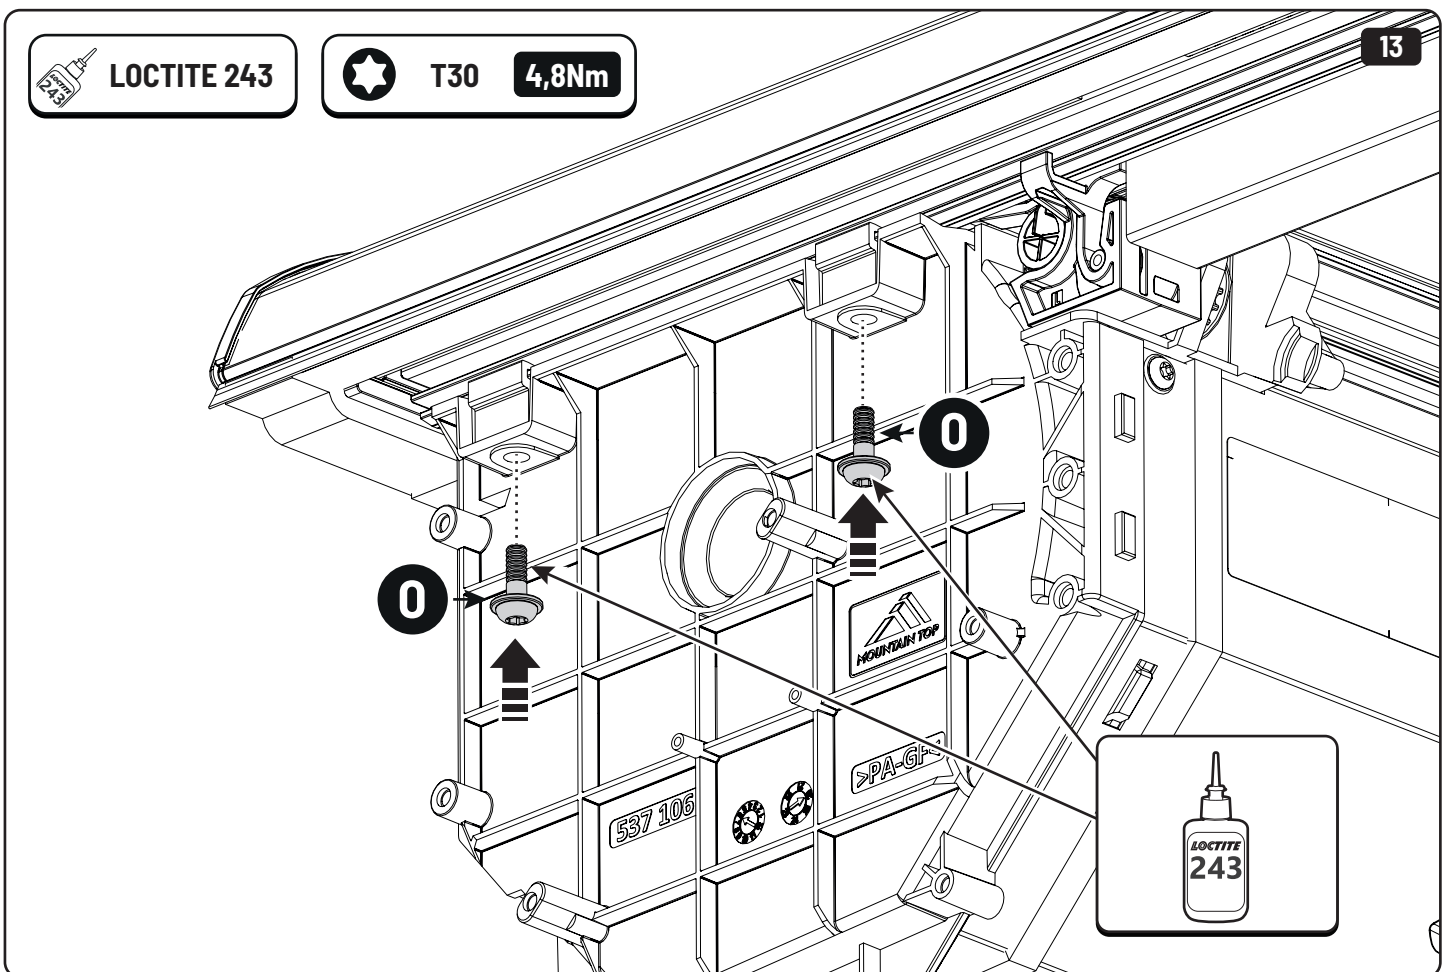
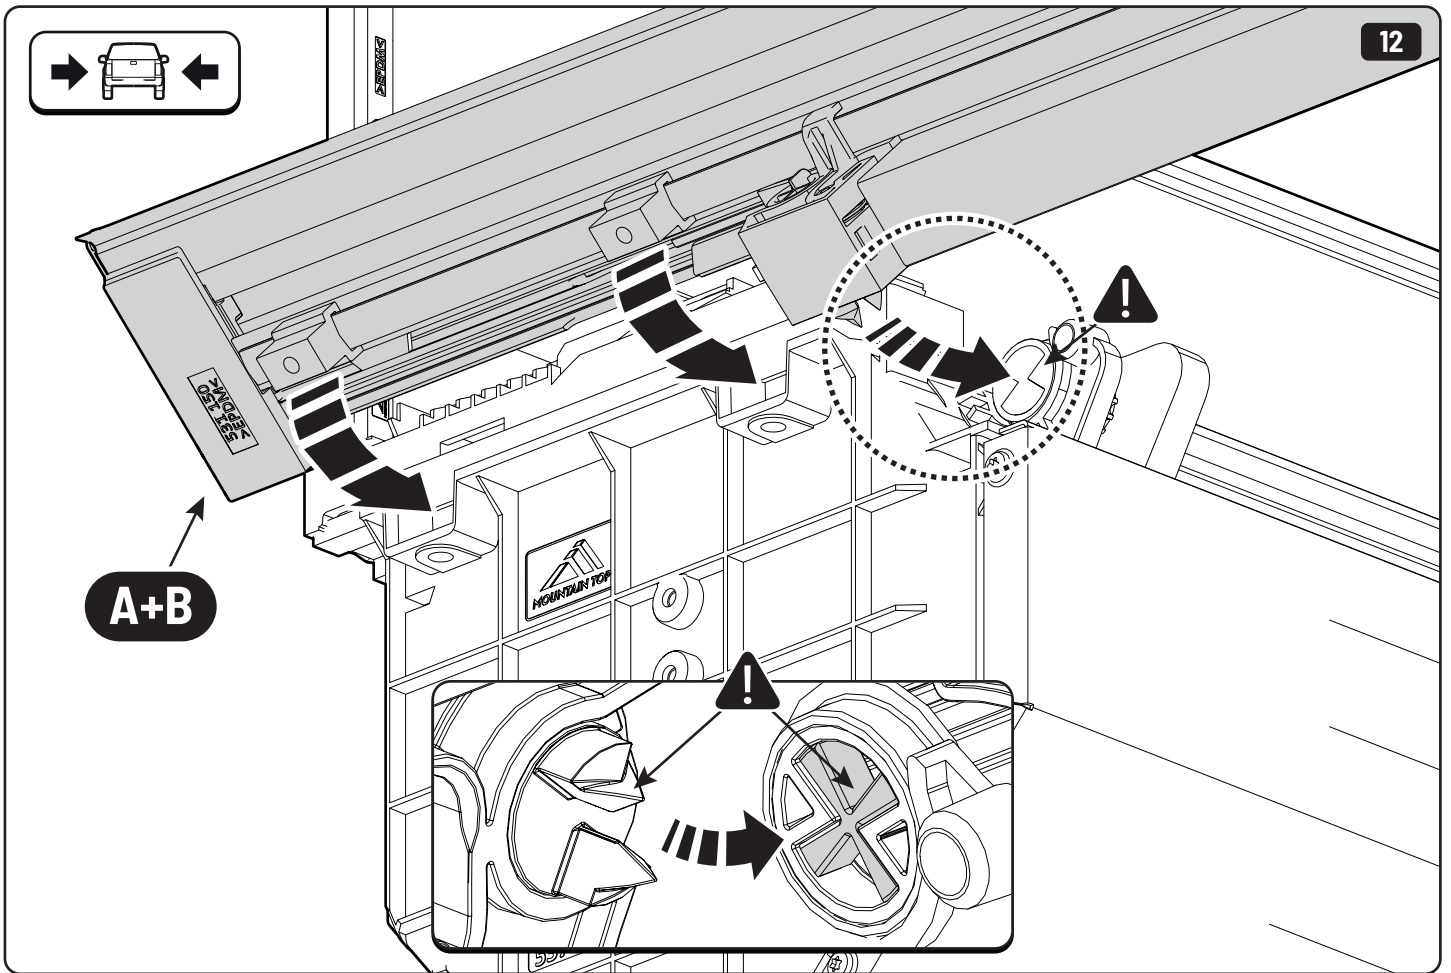



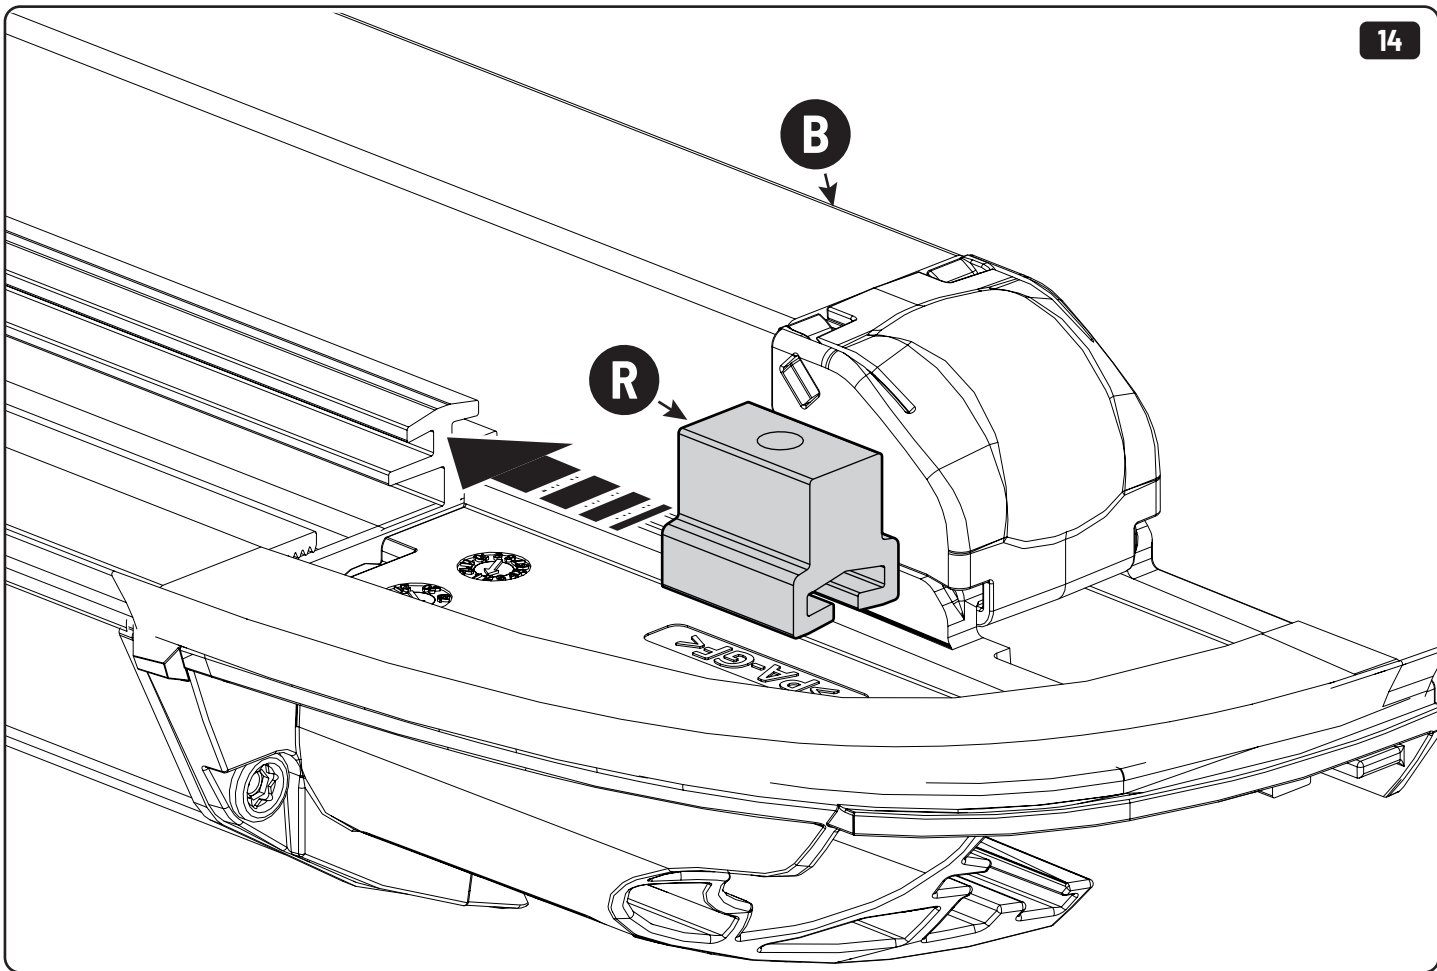




 **LOCTITE 243**


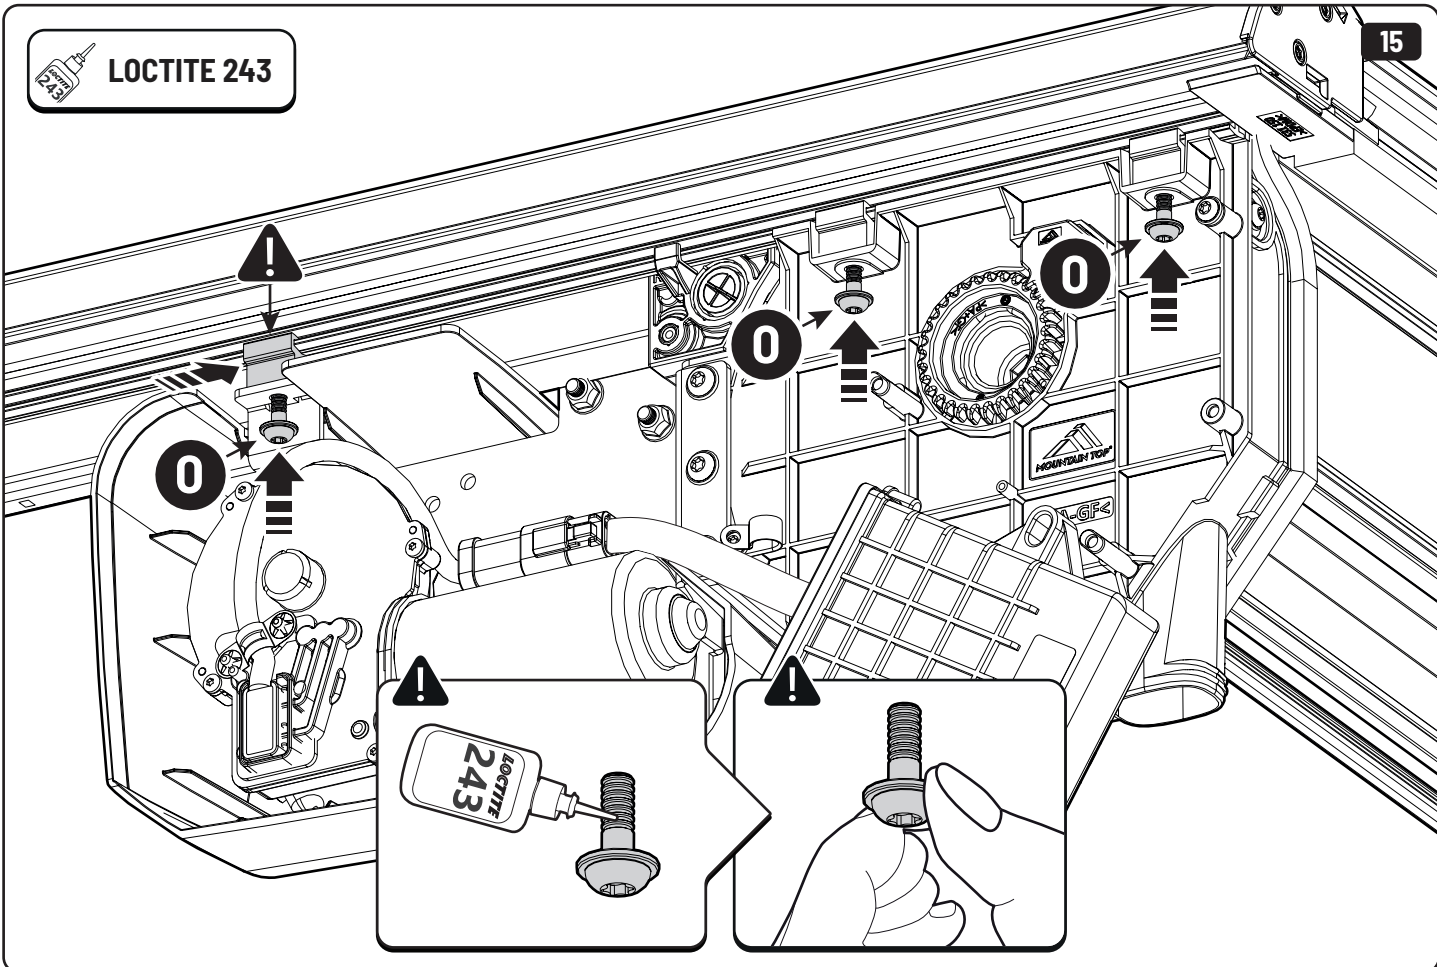



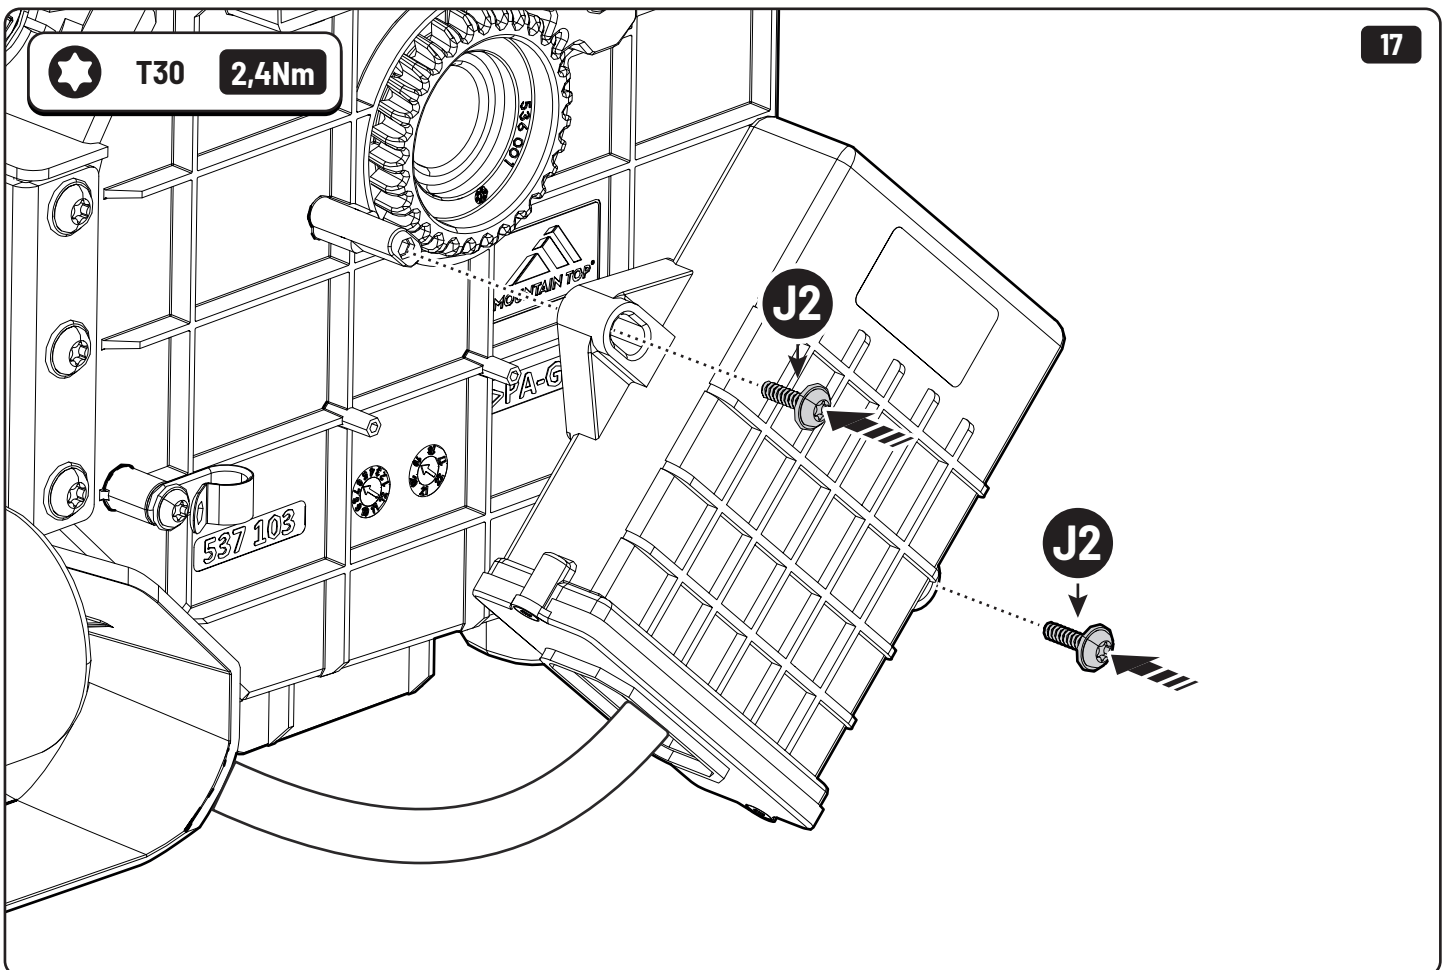
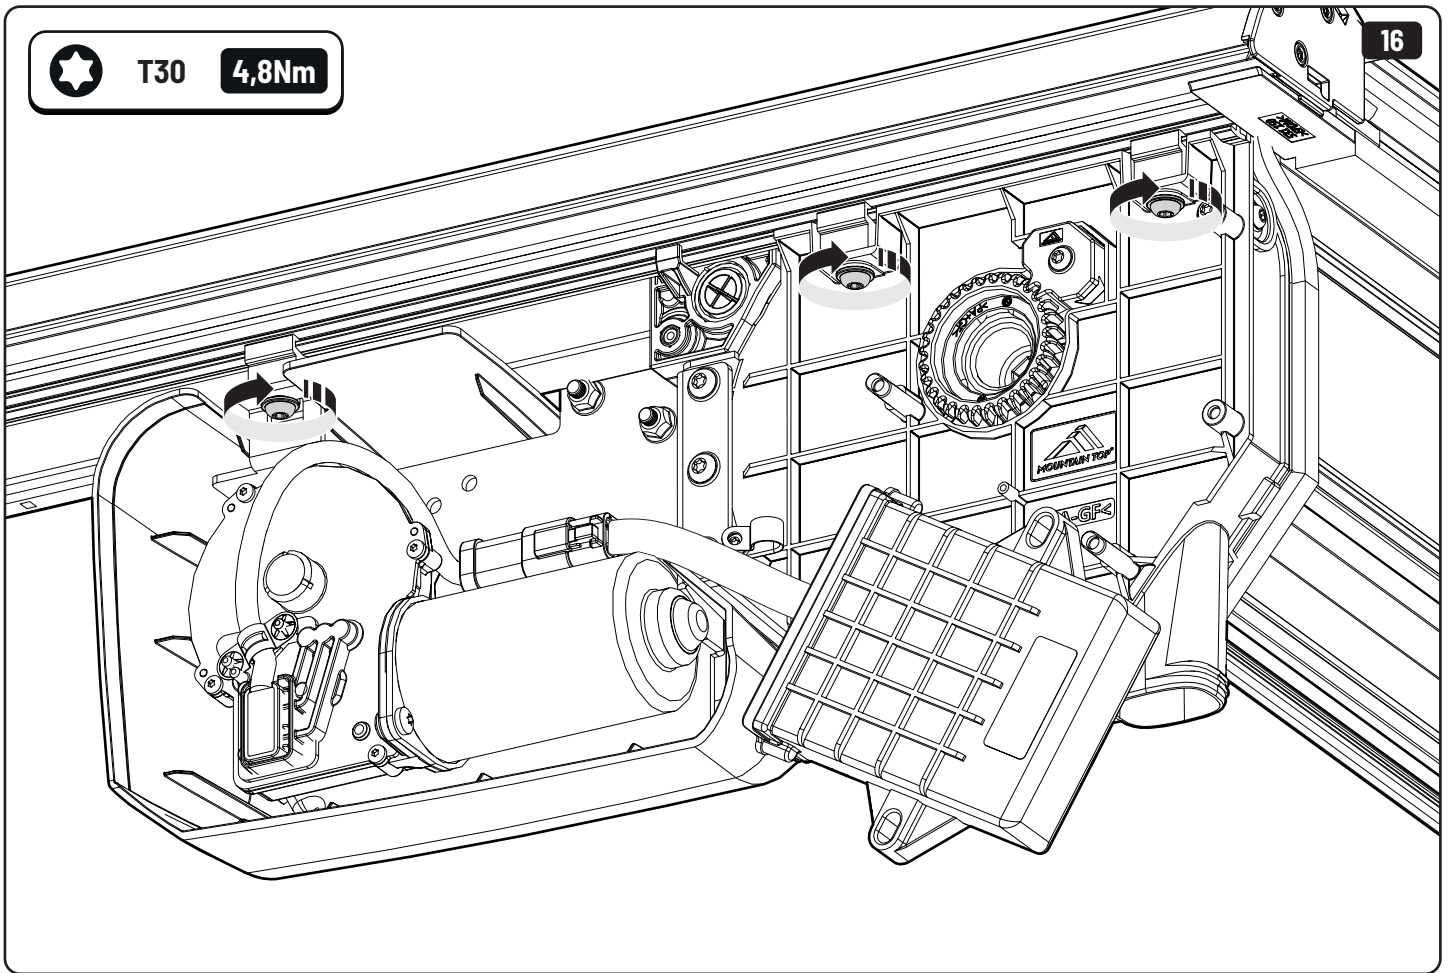


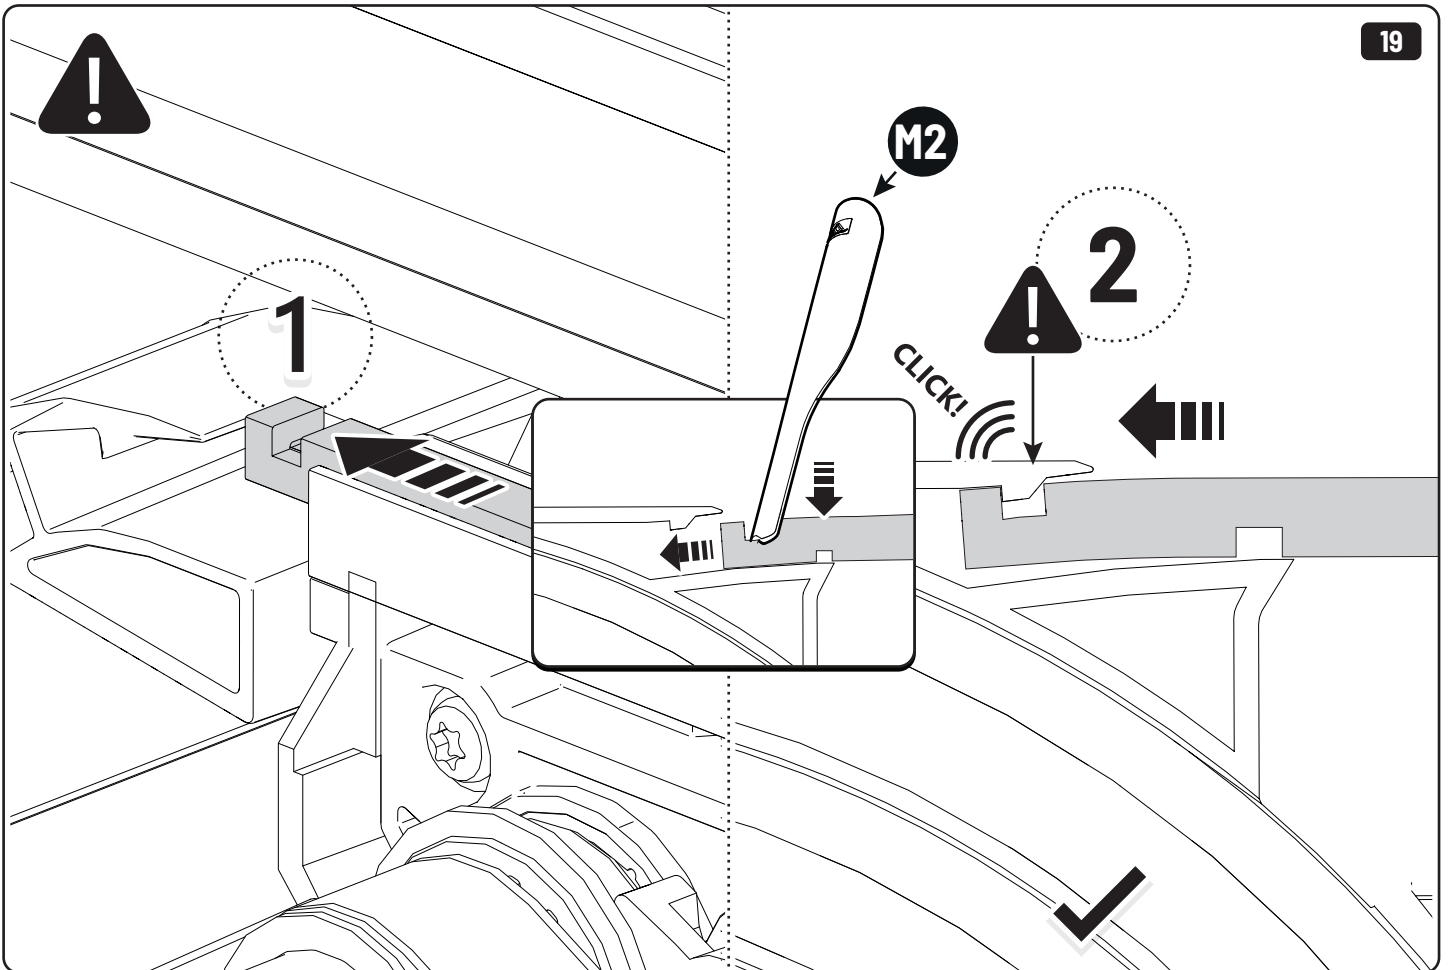
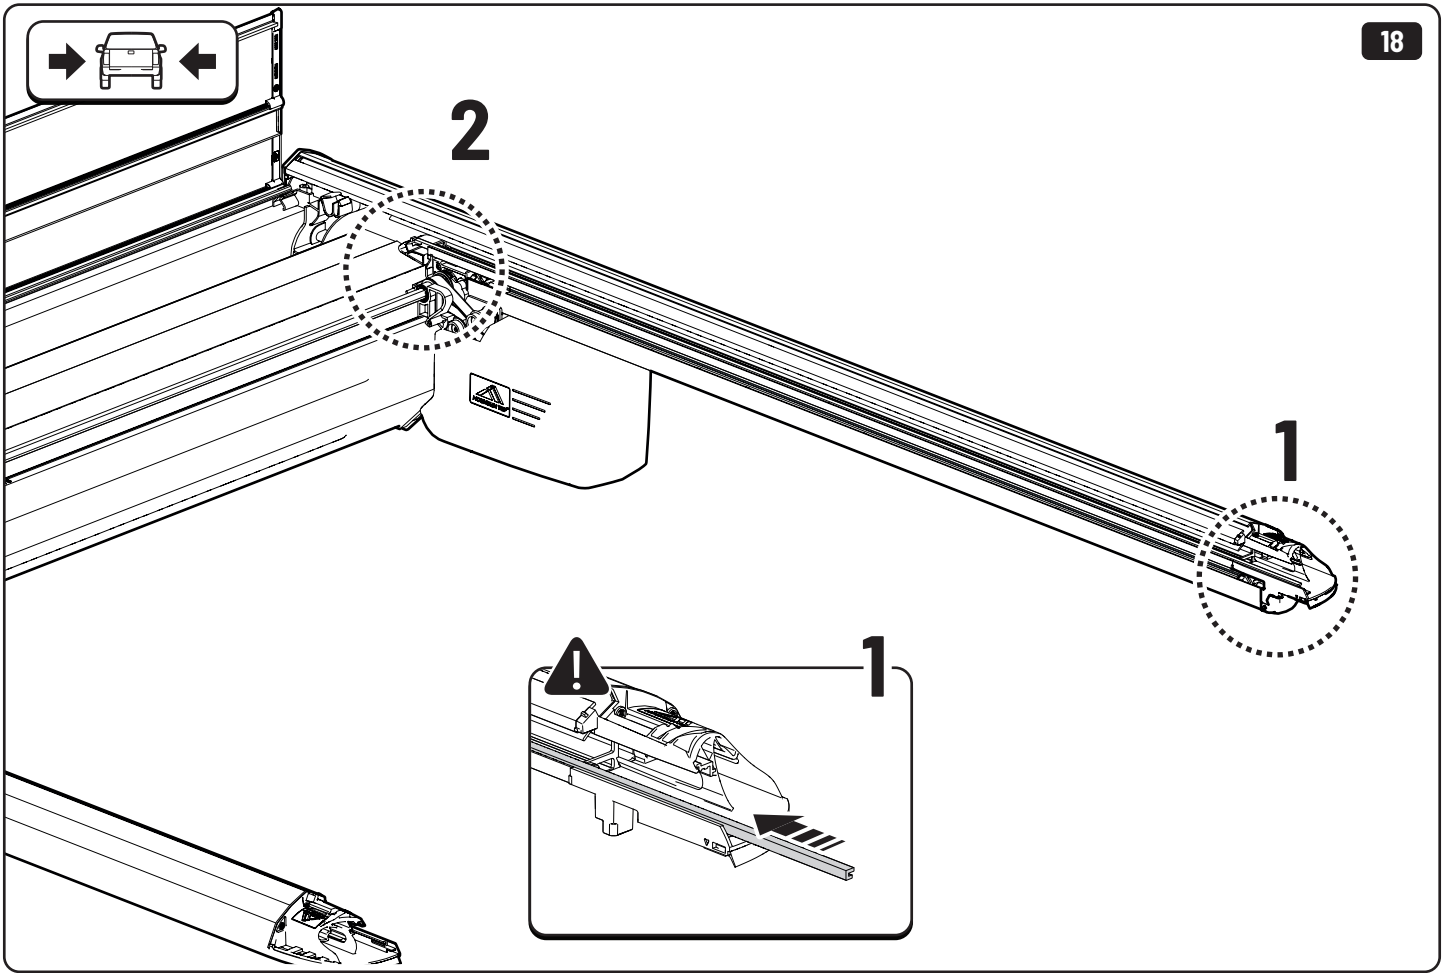


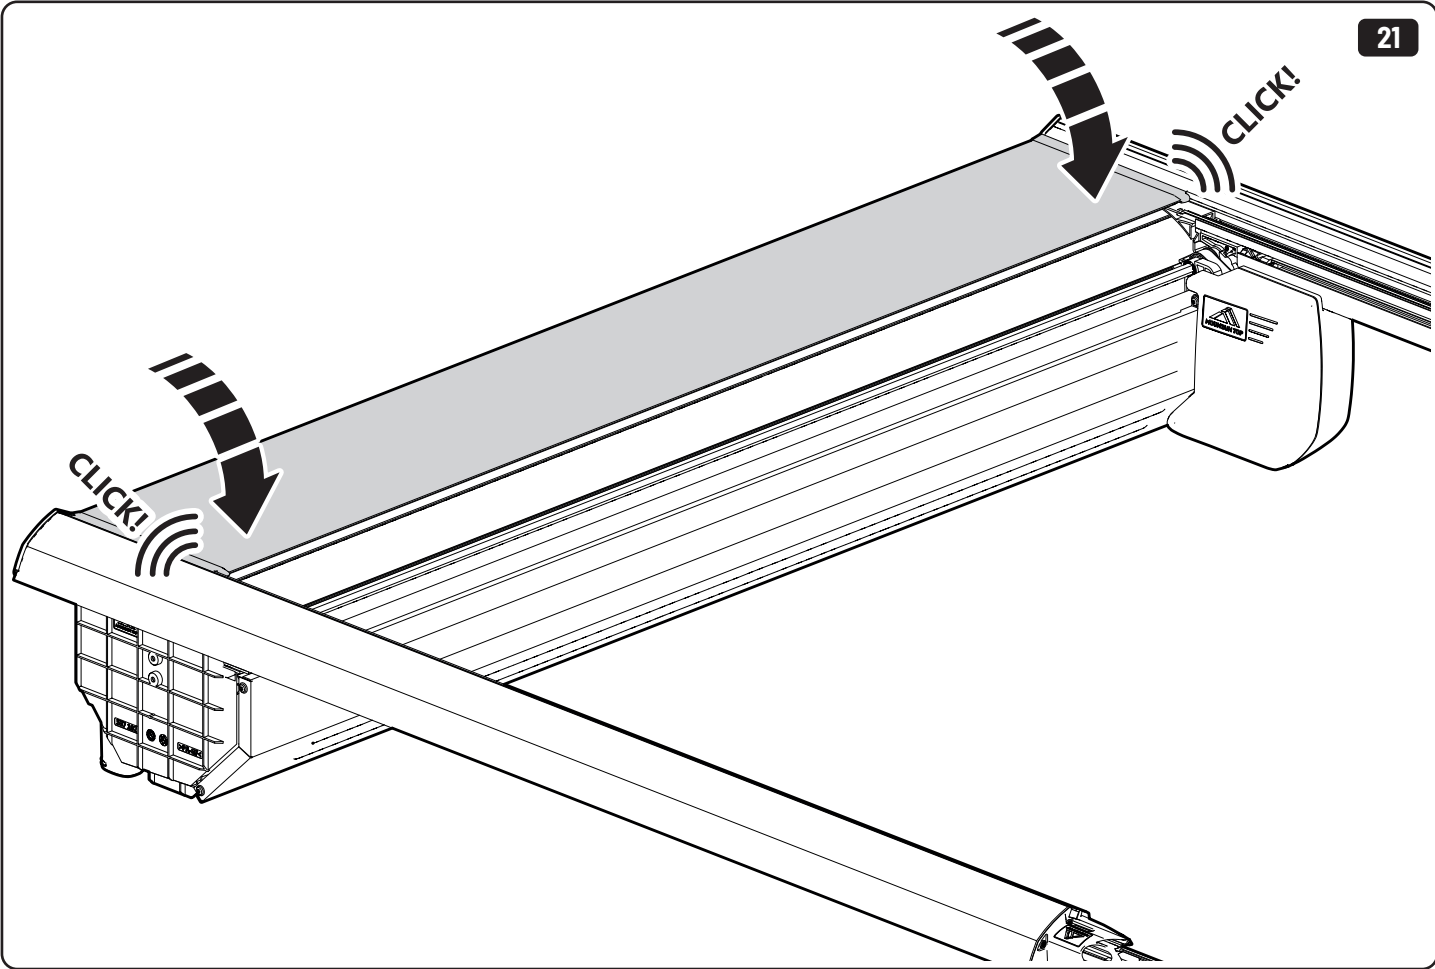
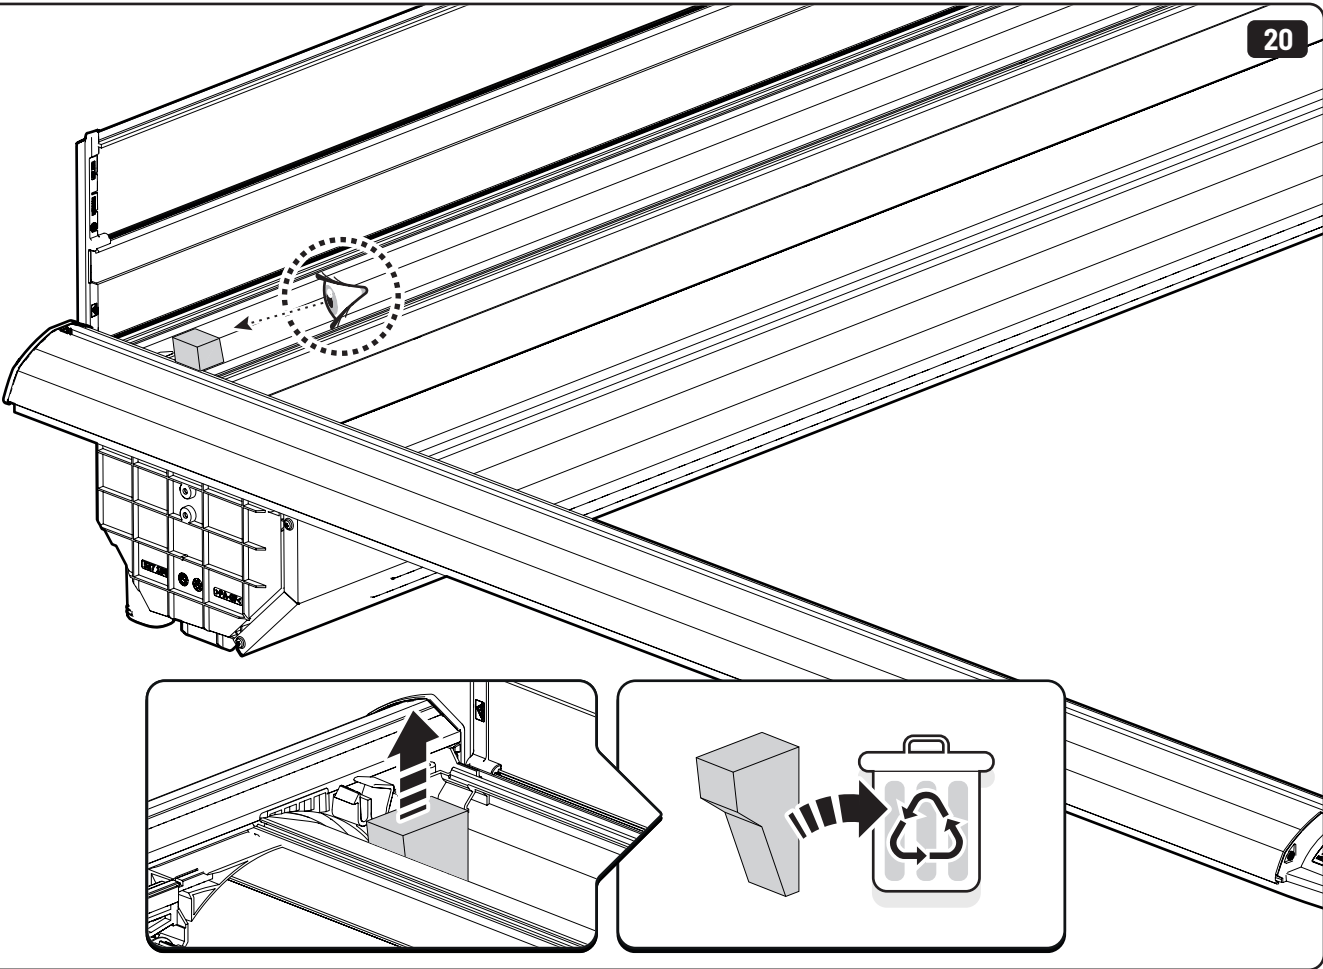


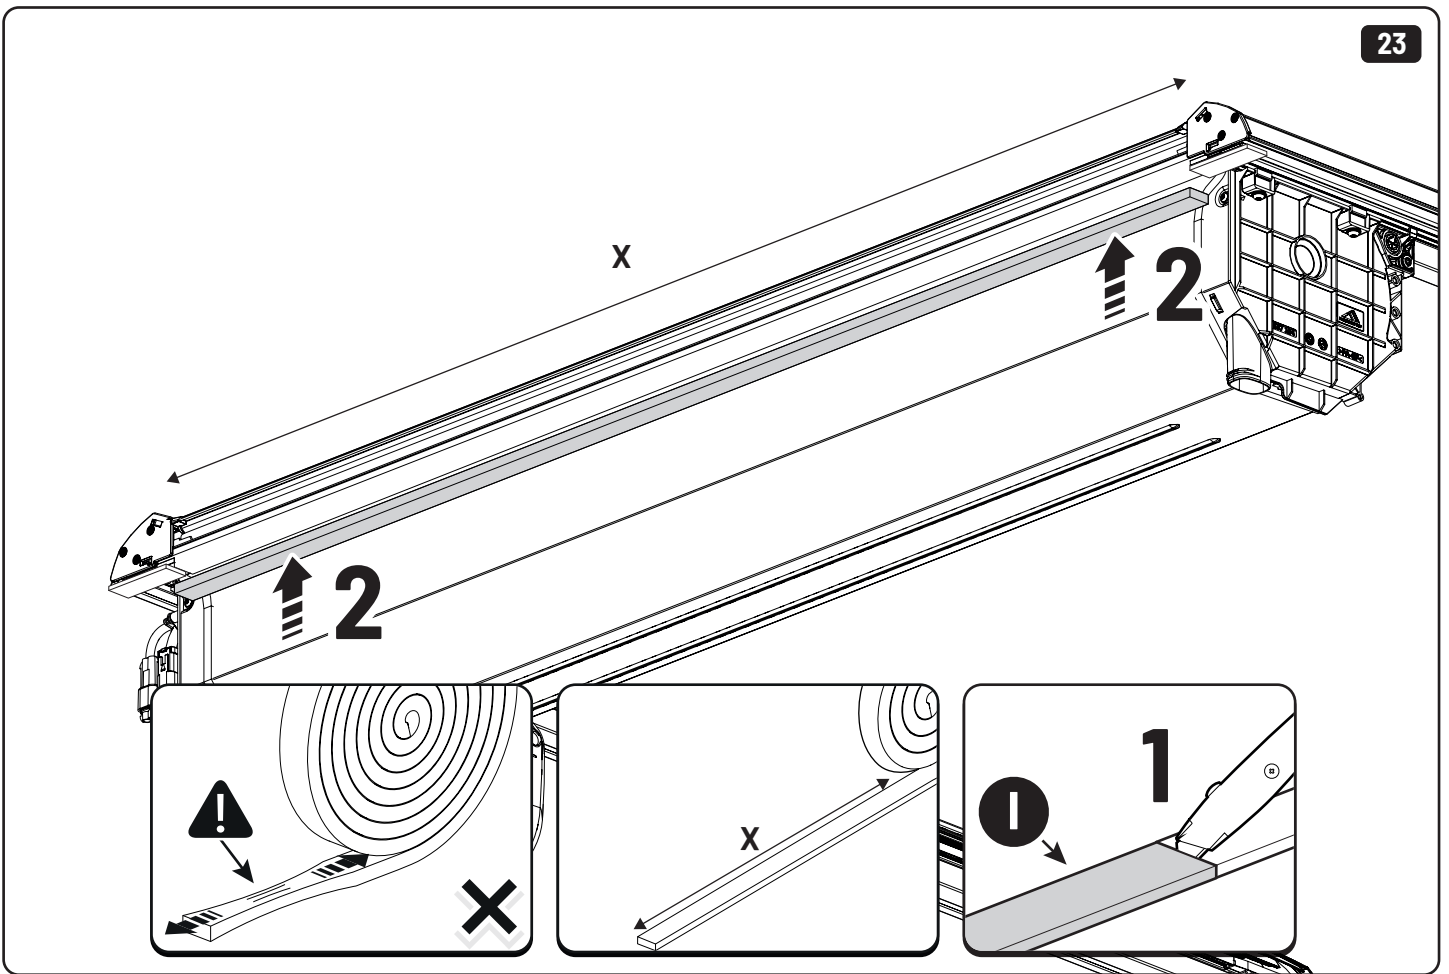
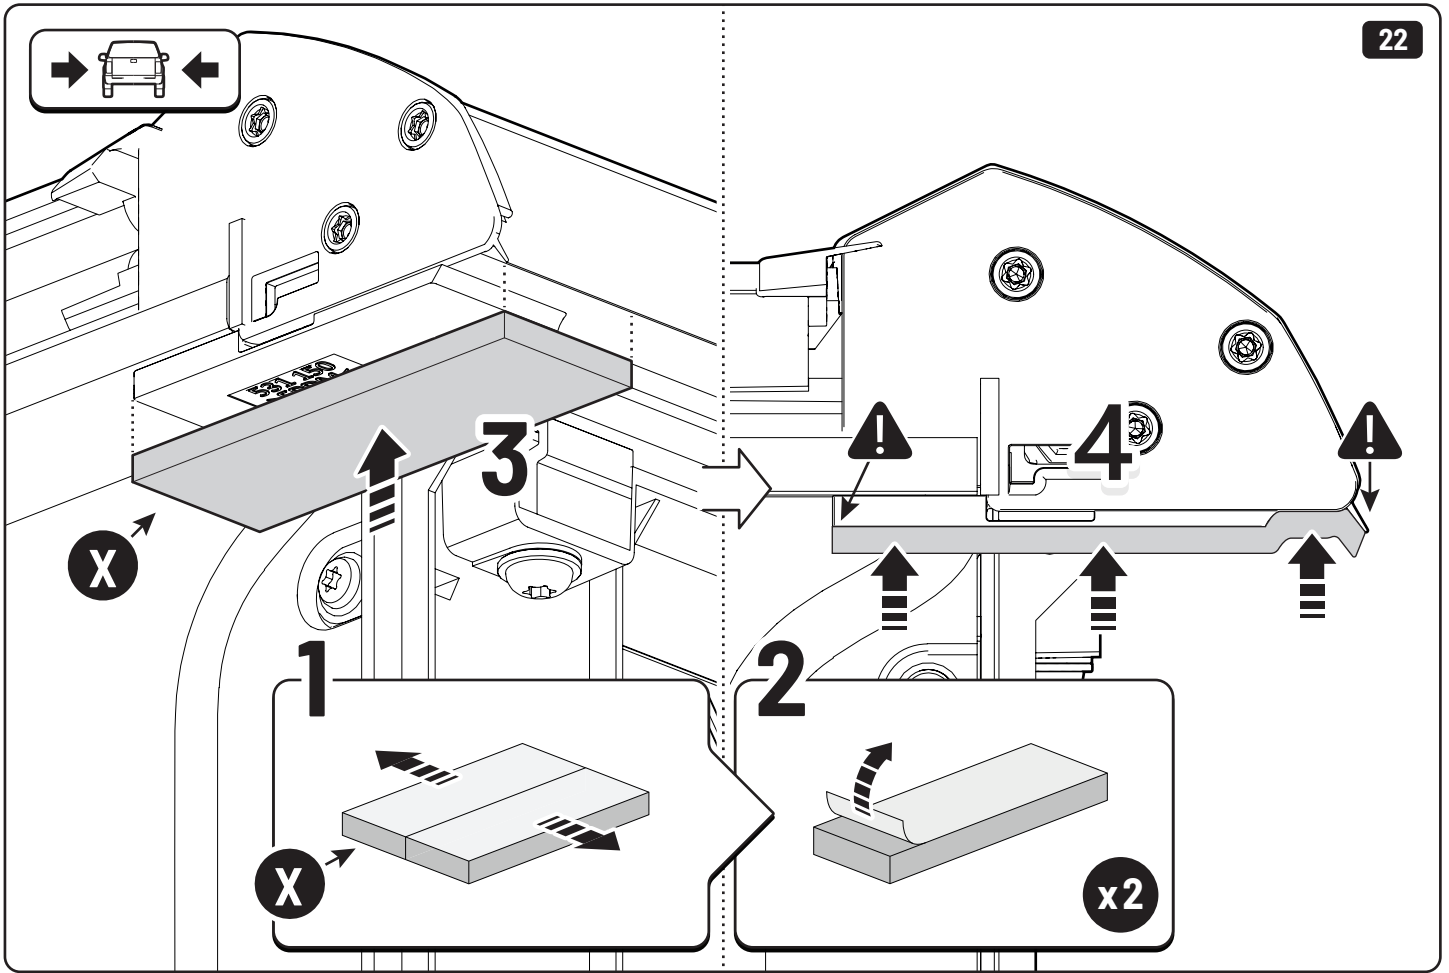


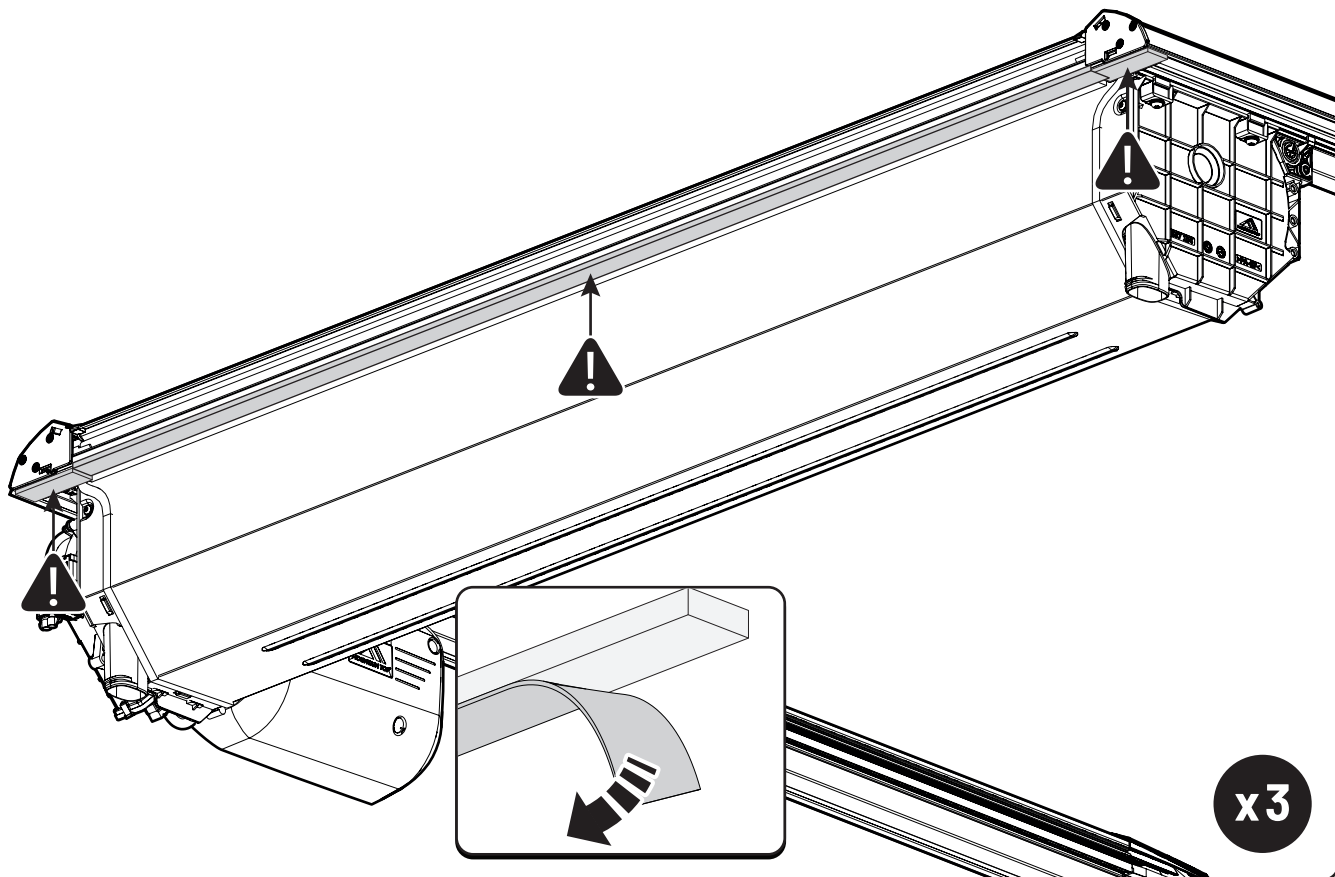
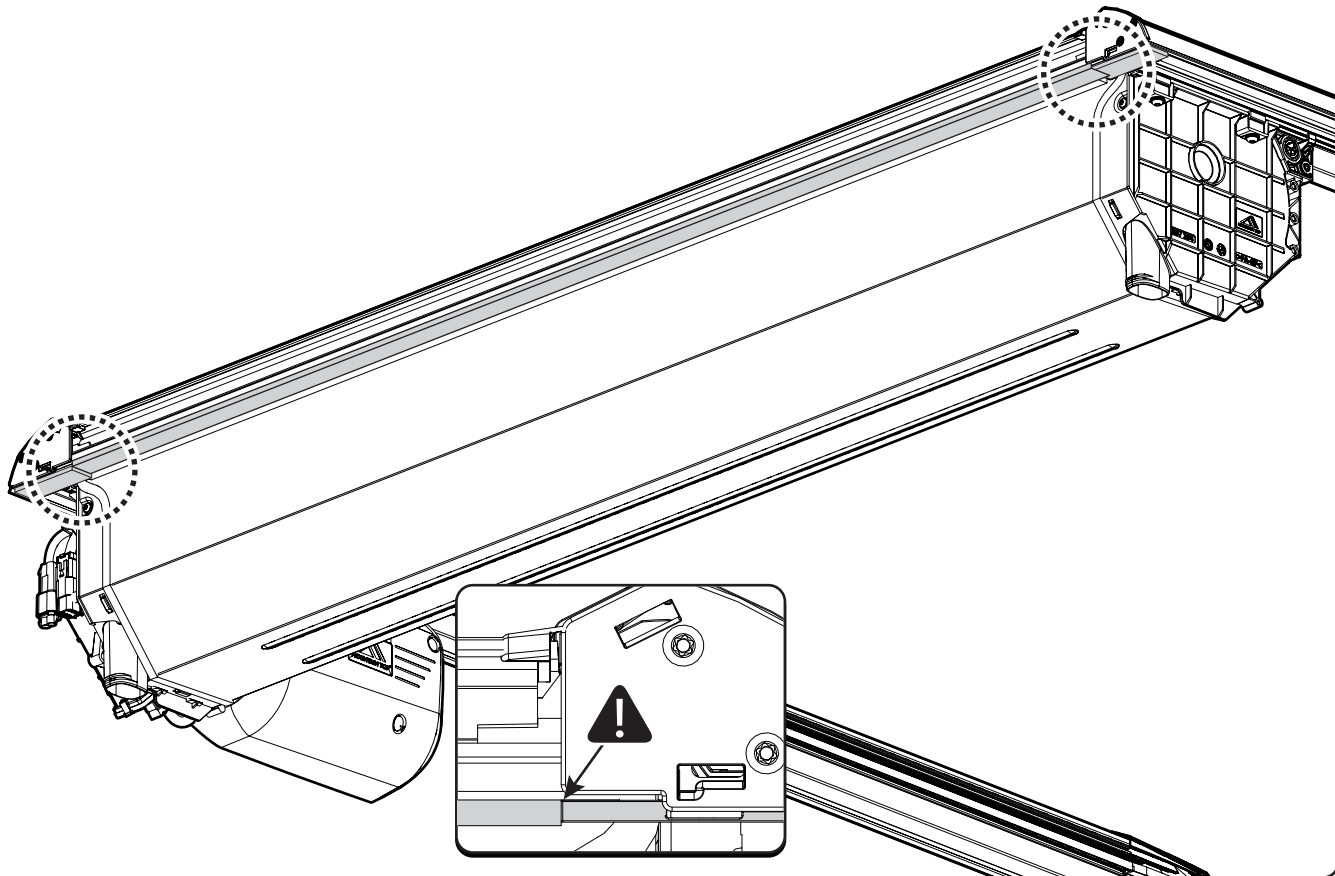


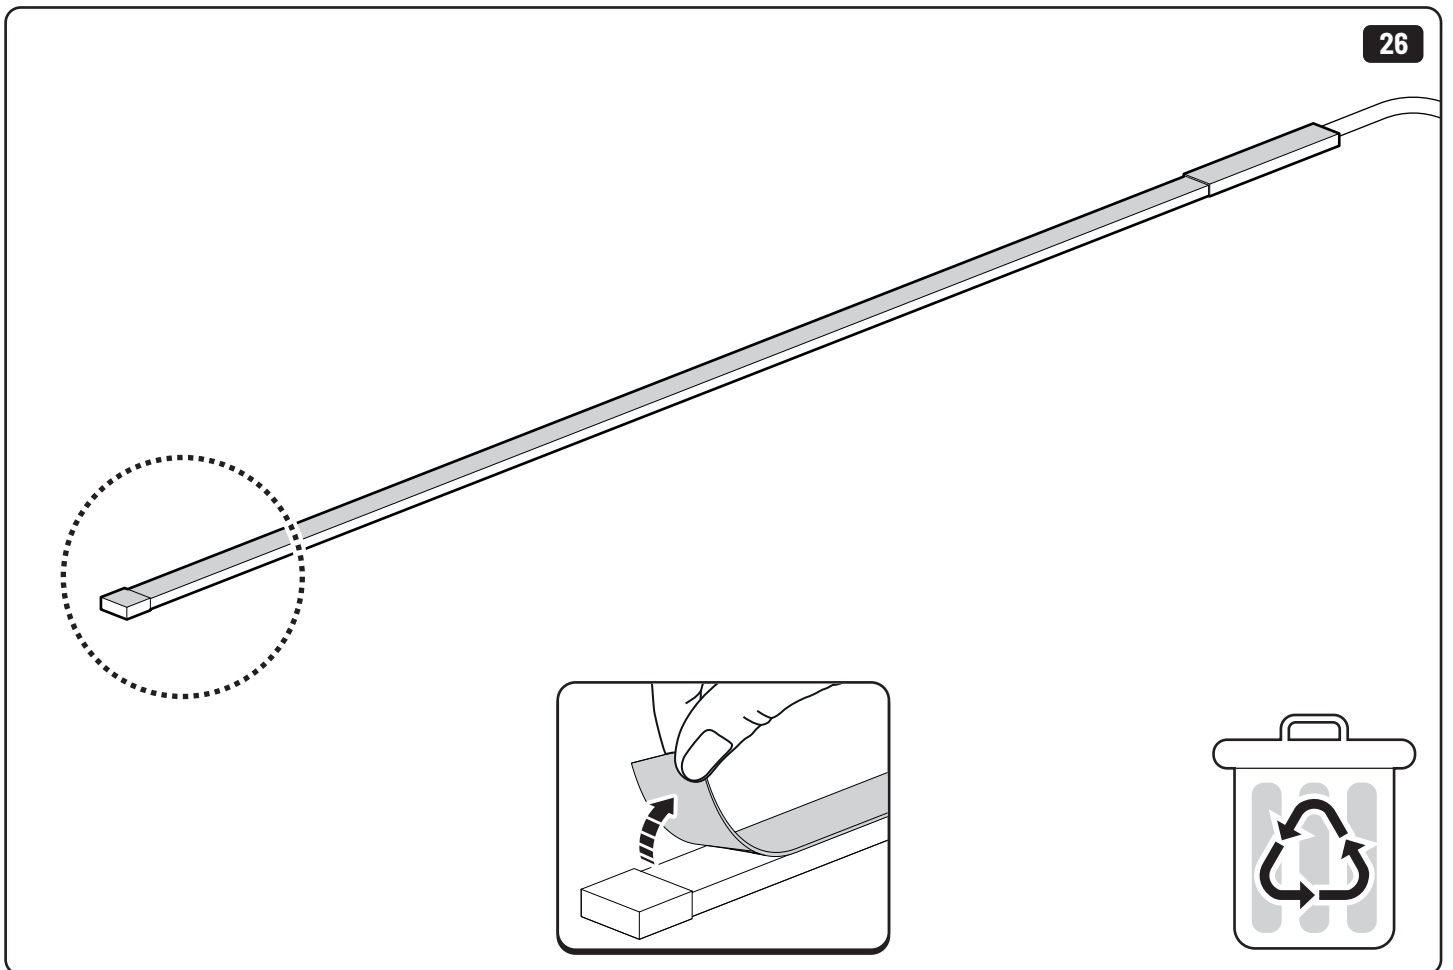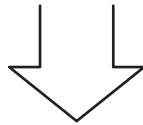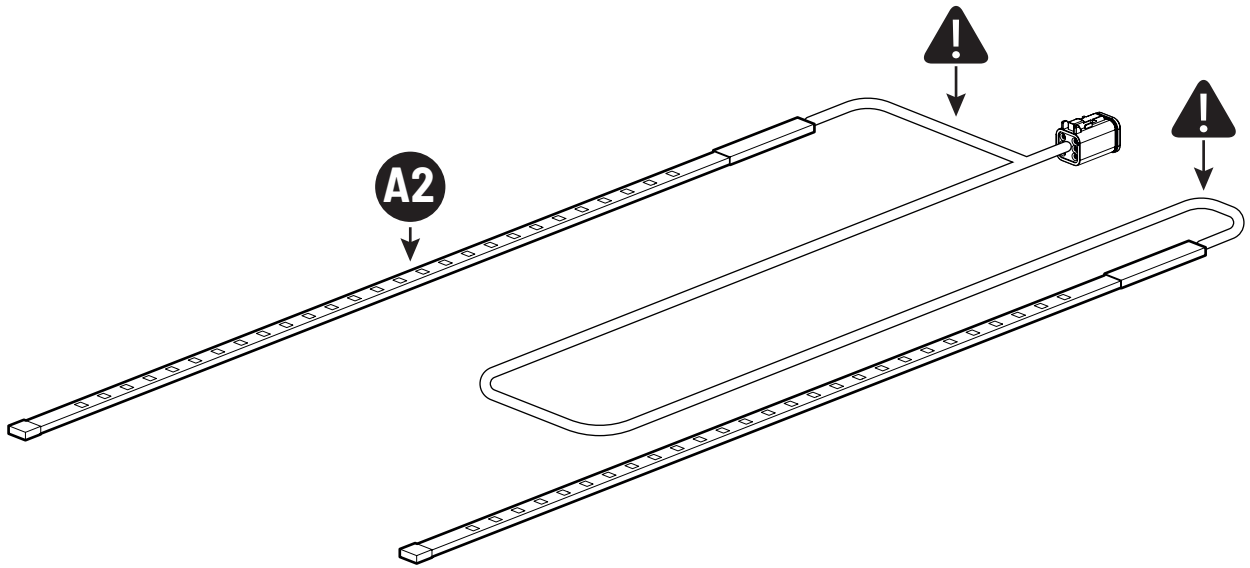

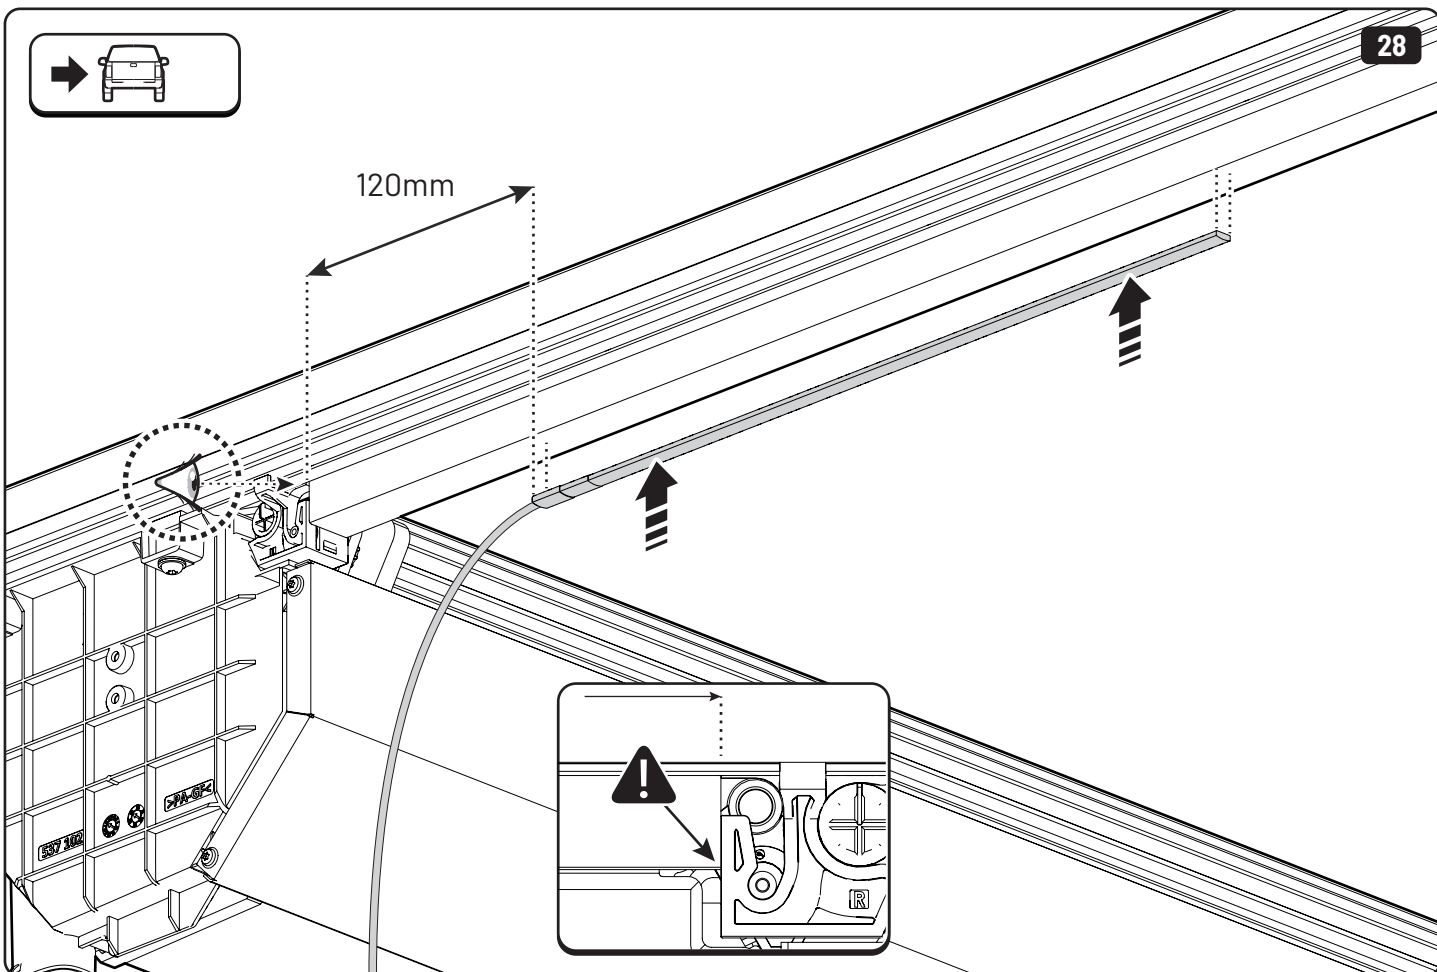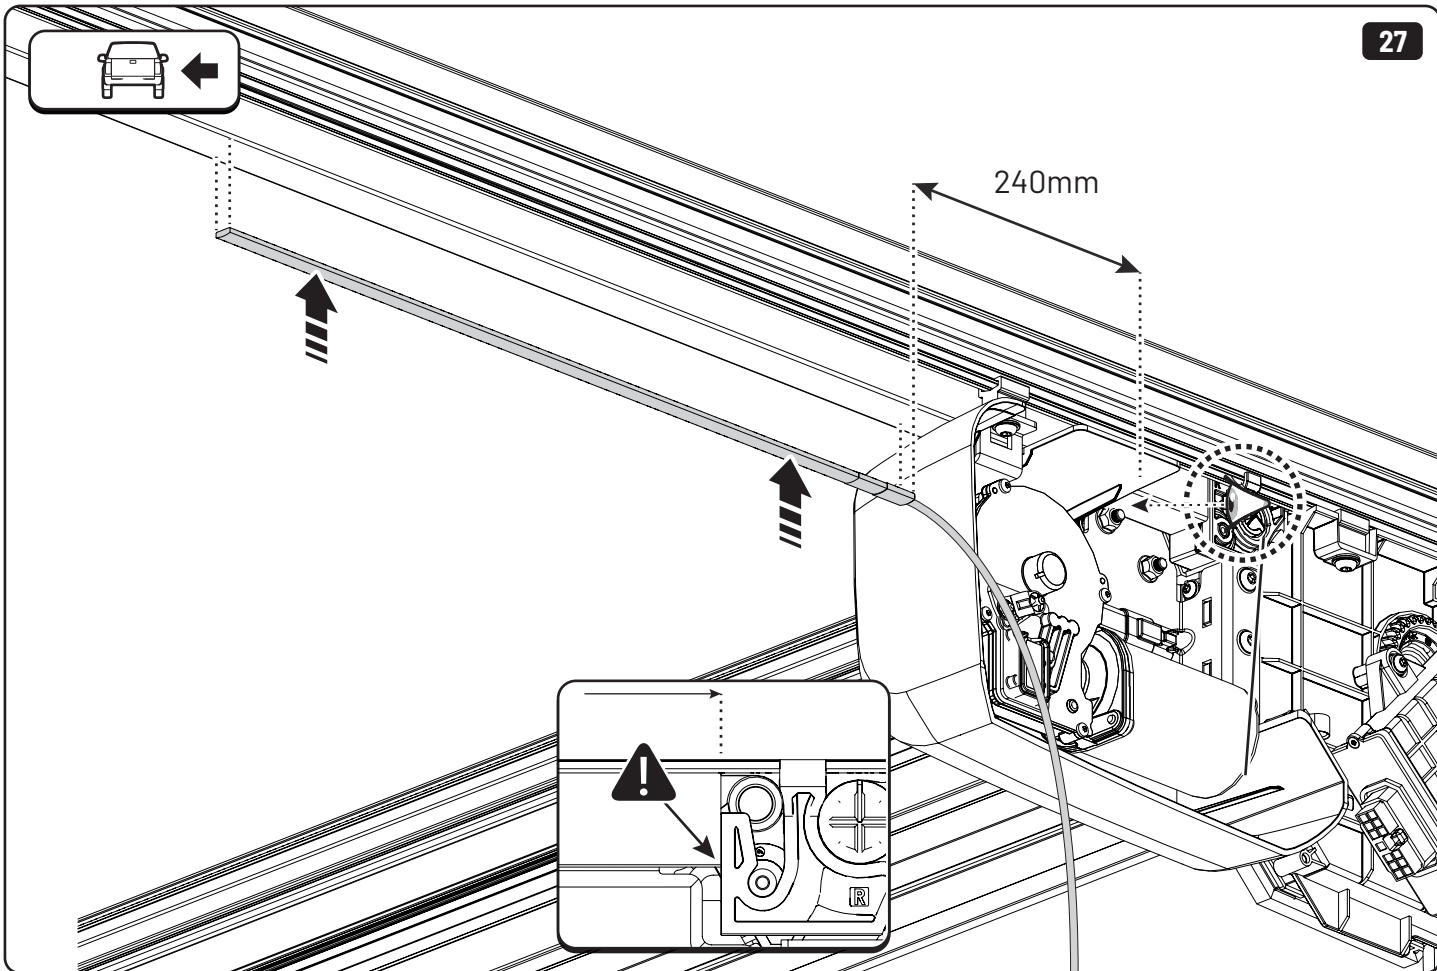








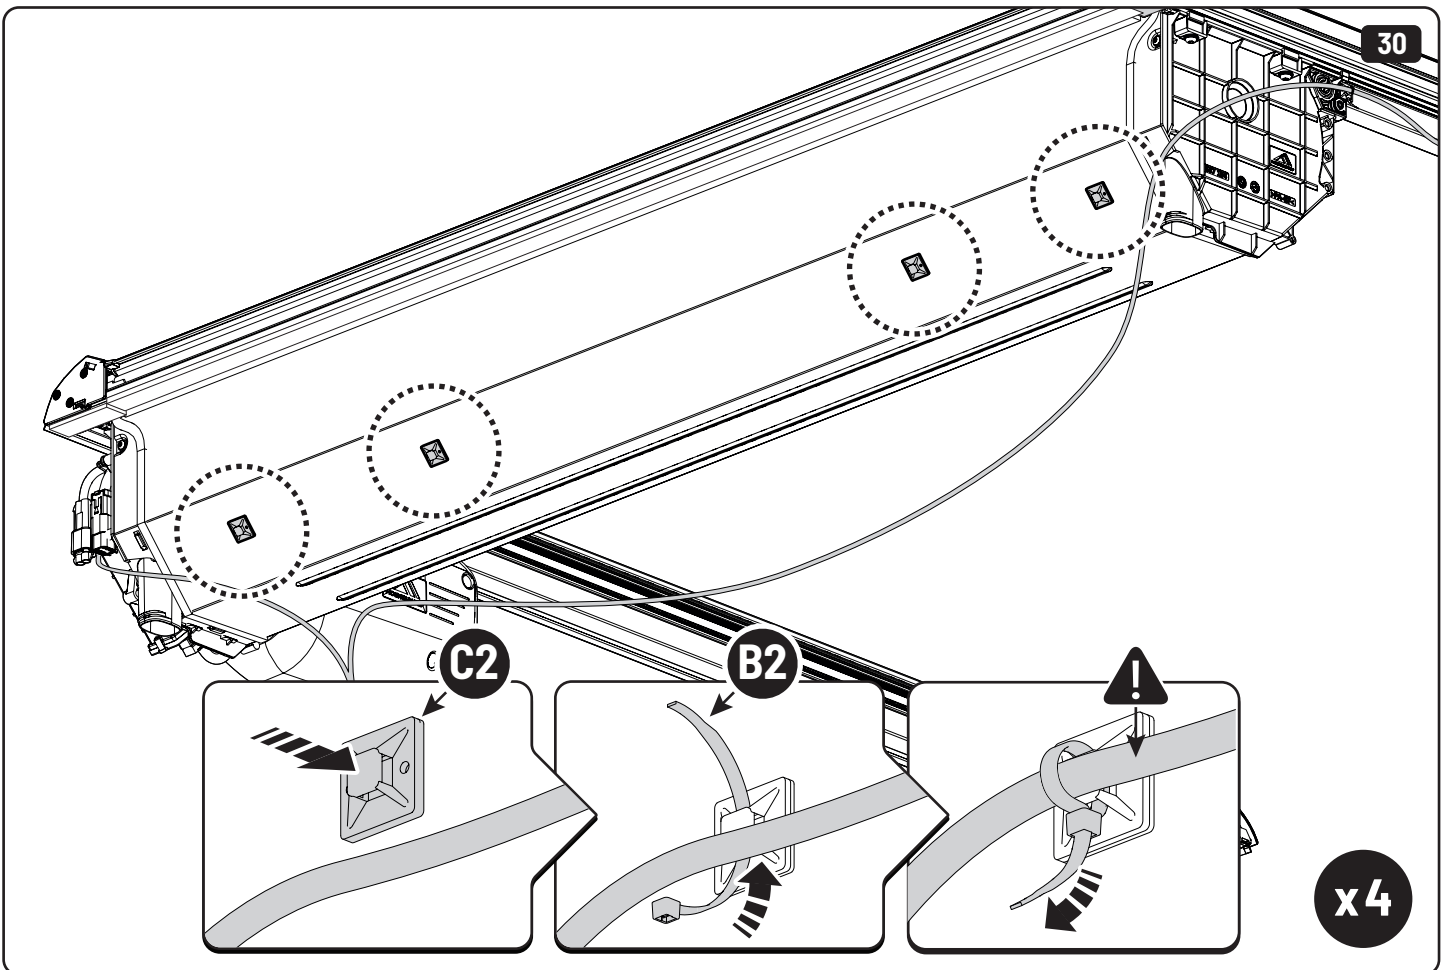
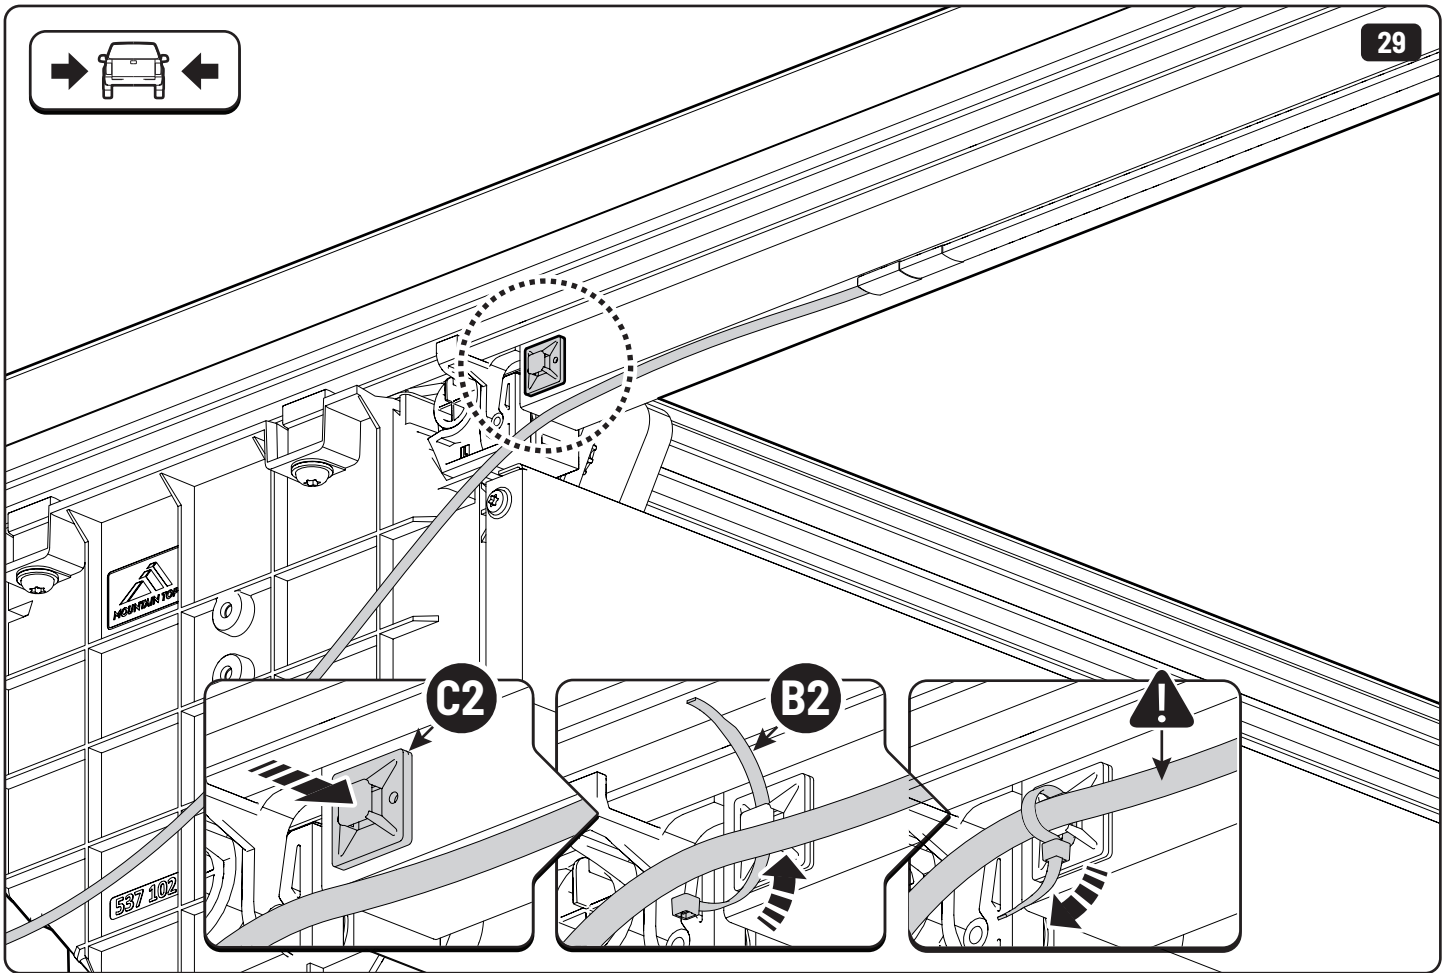








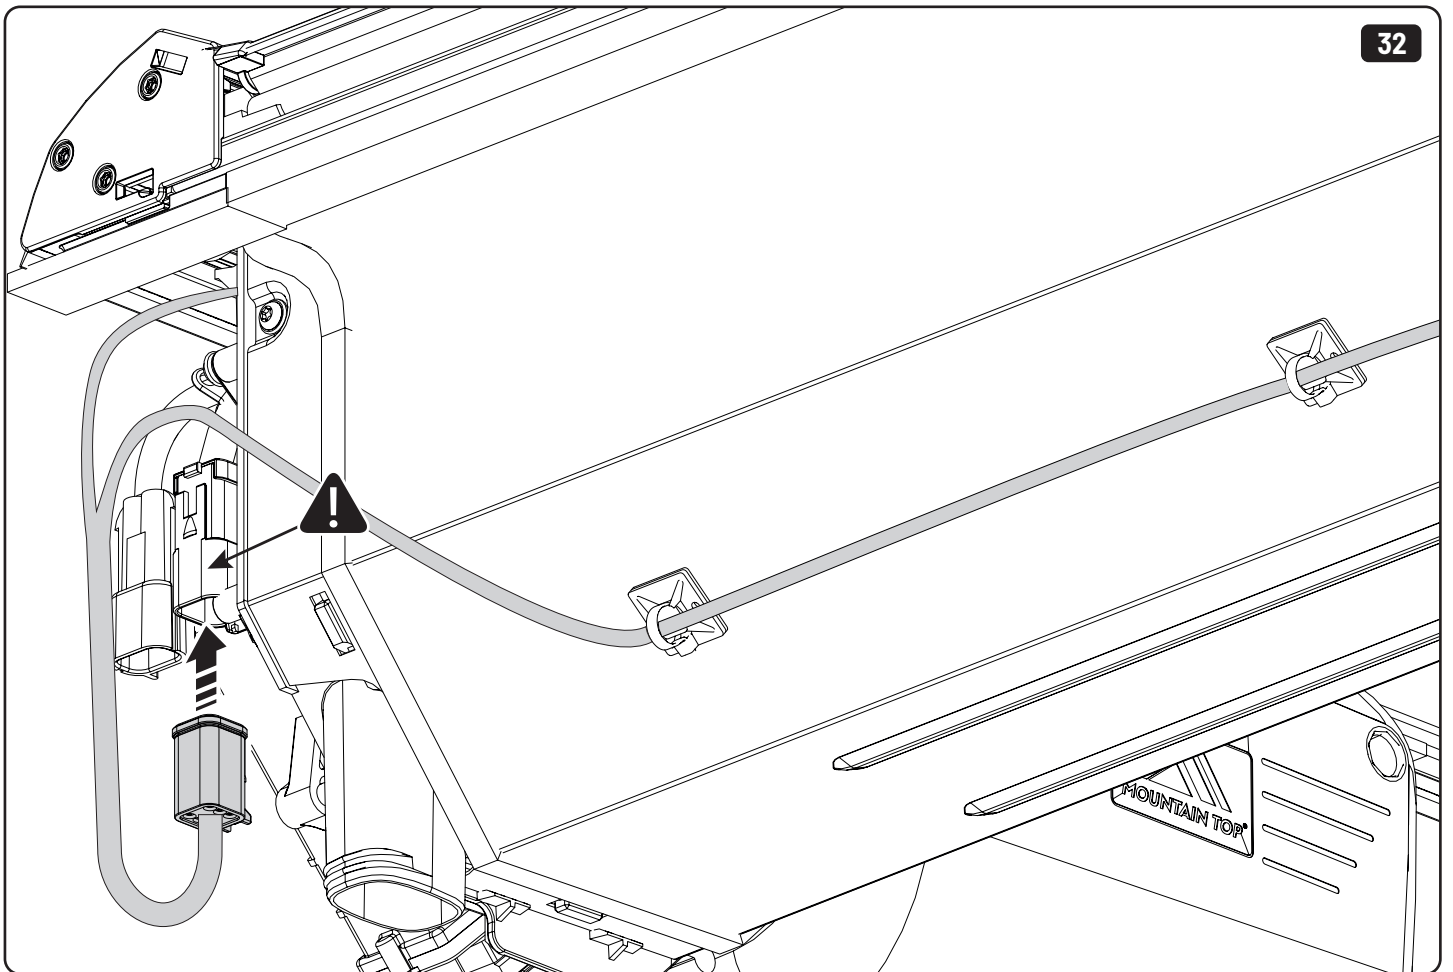
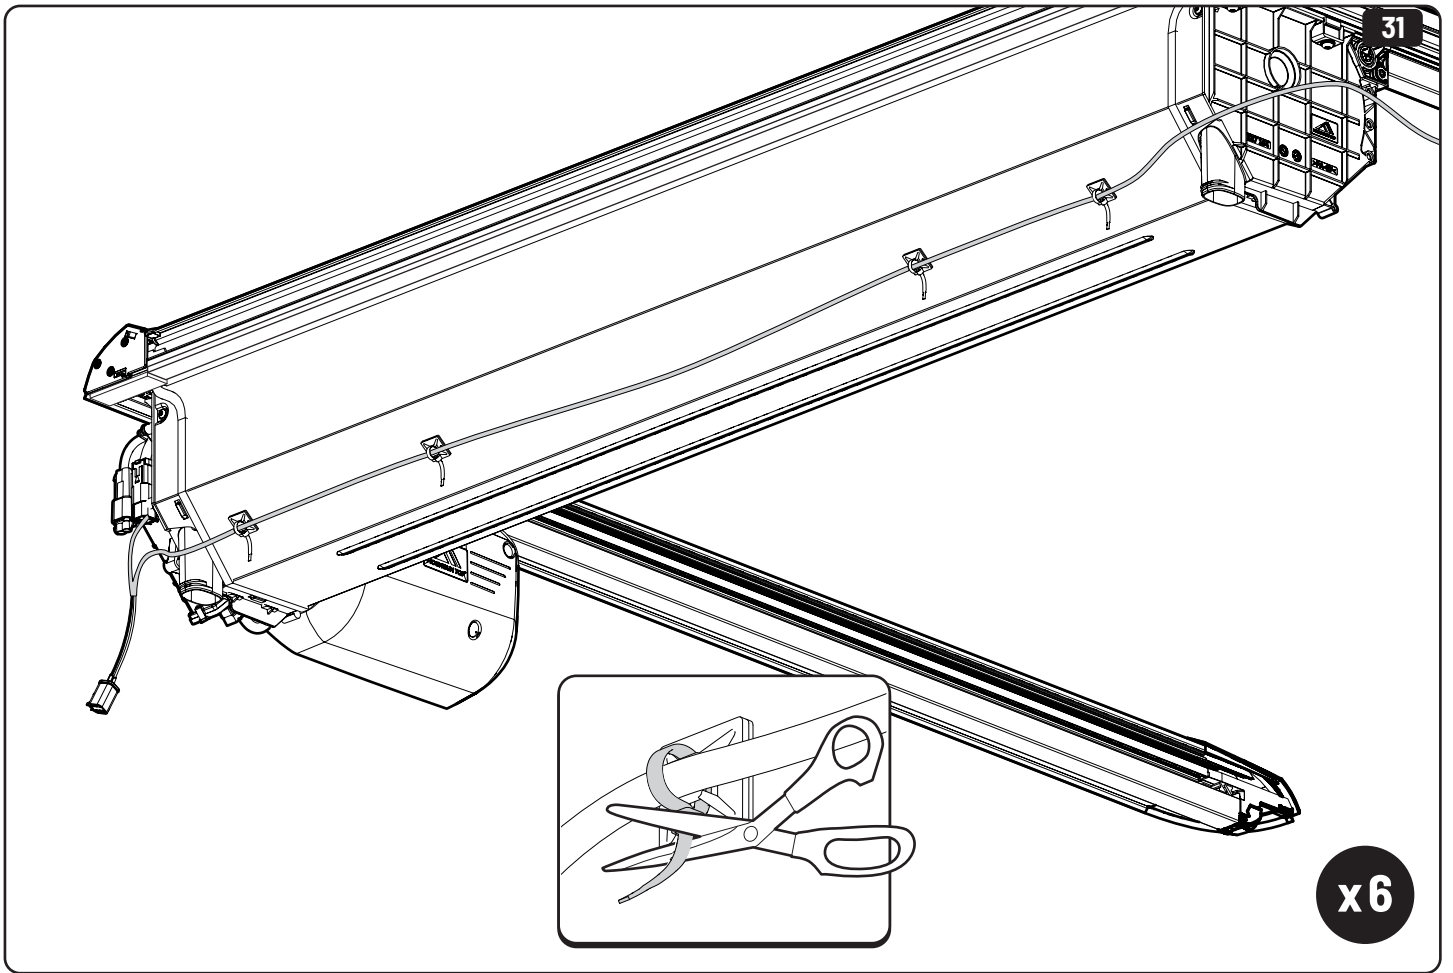


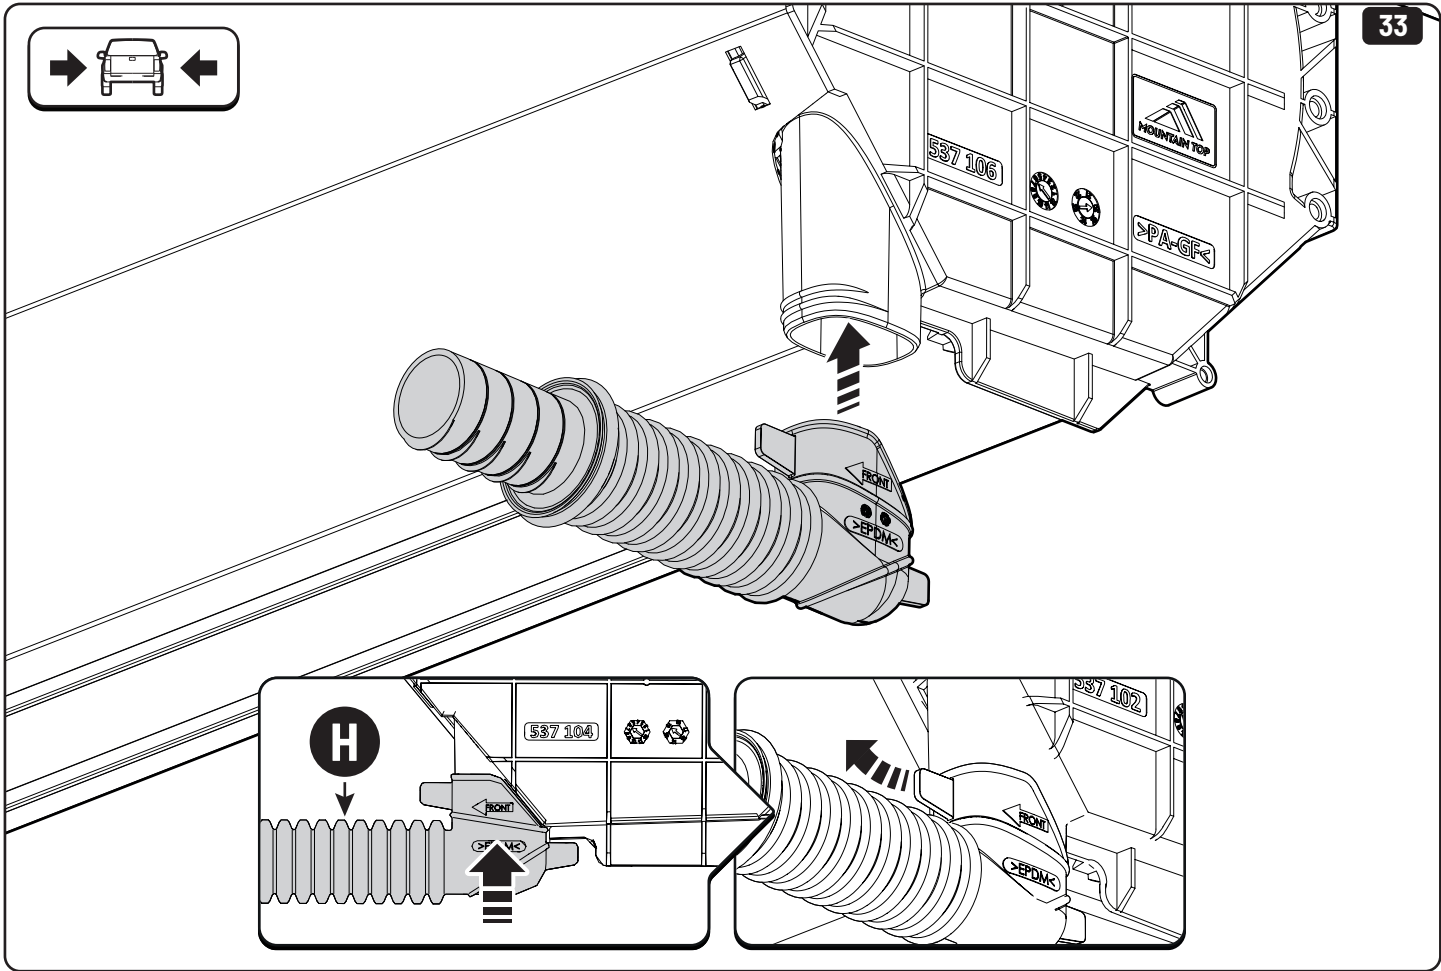



Toyota Hilux X: 700mm Y: 300mm


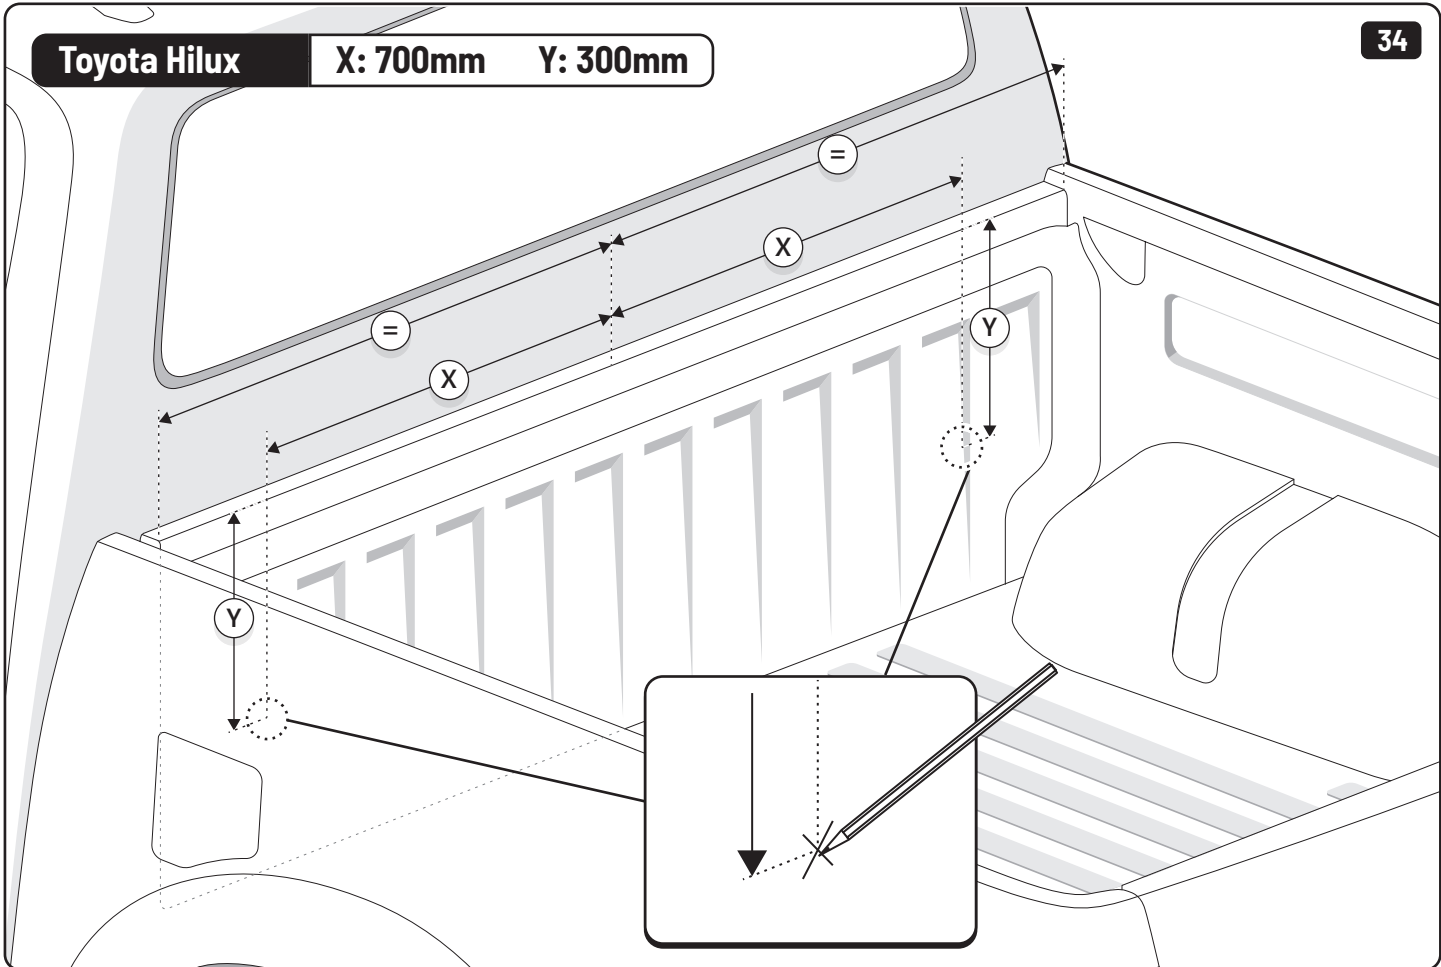


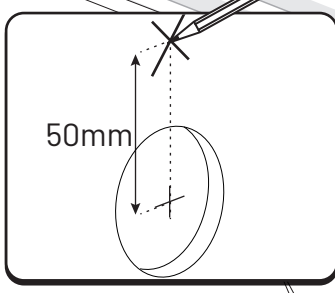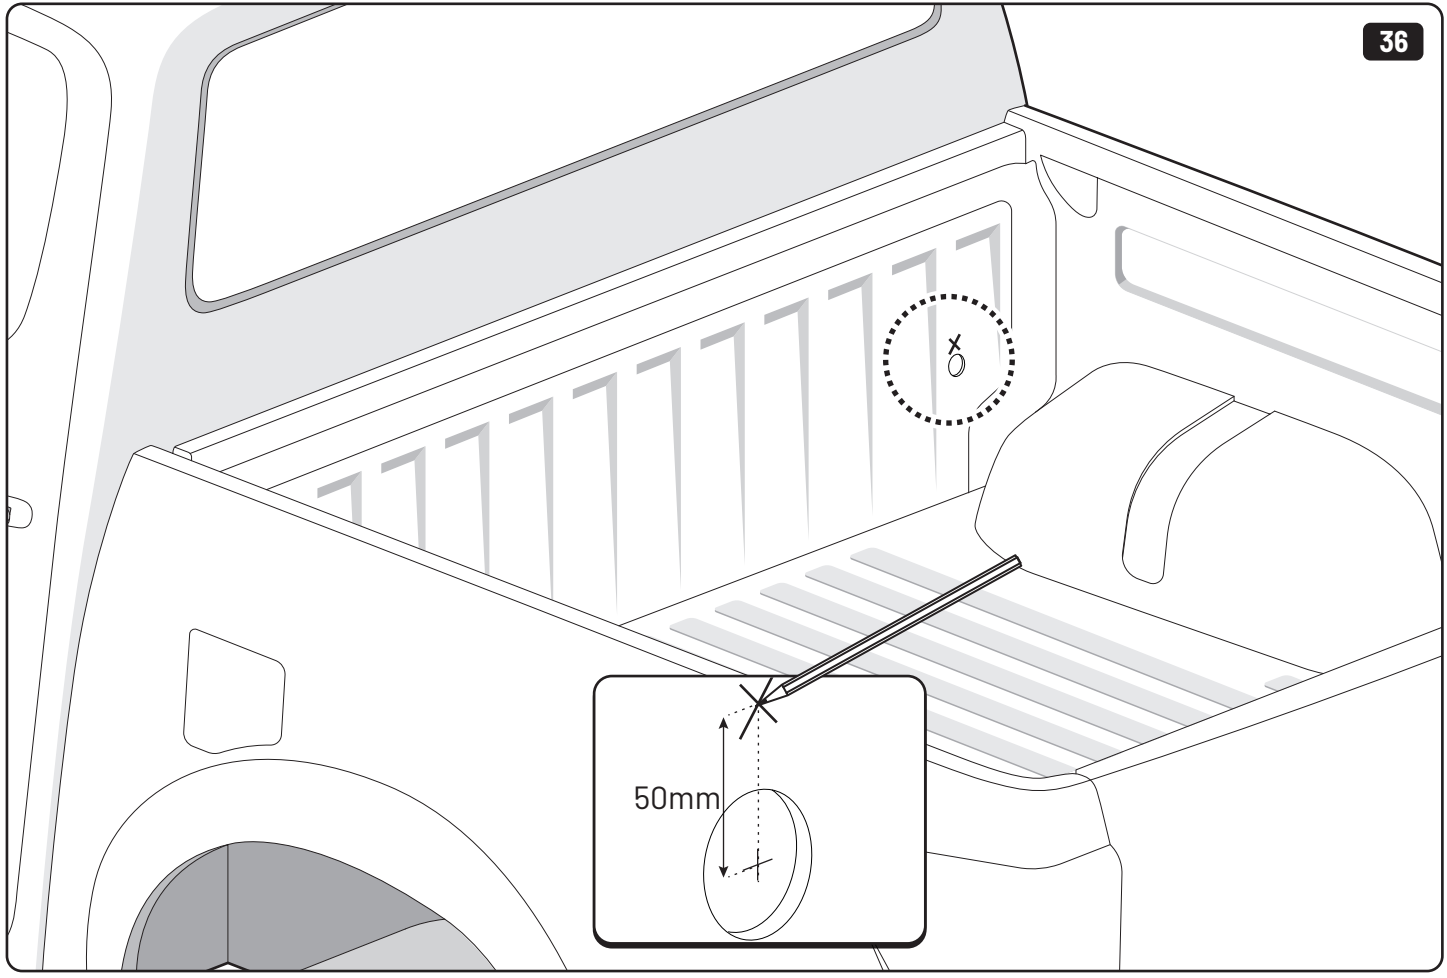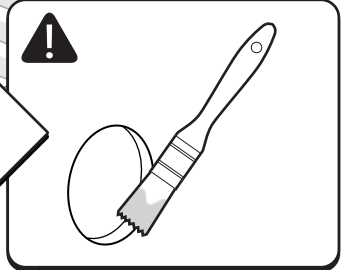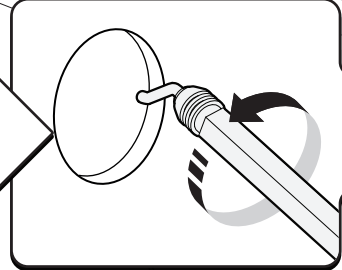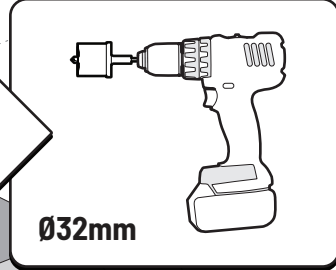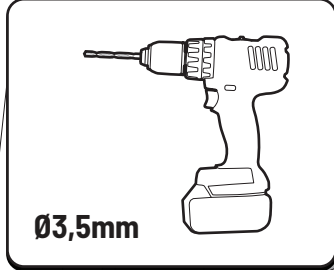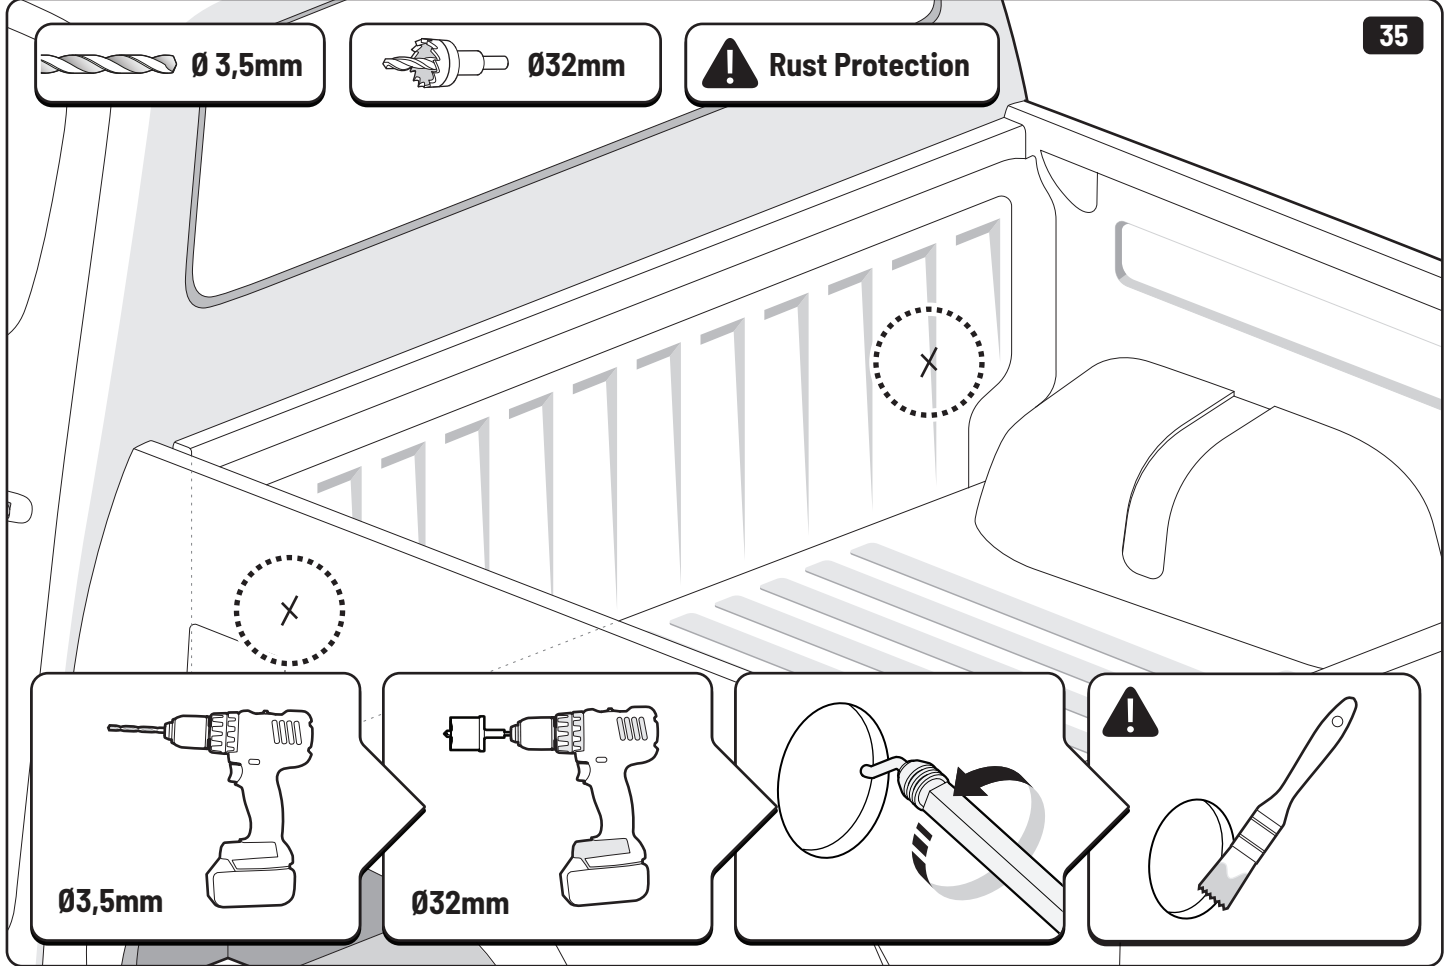



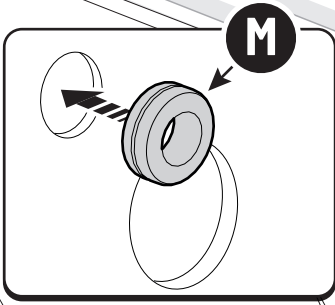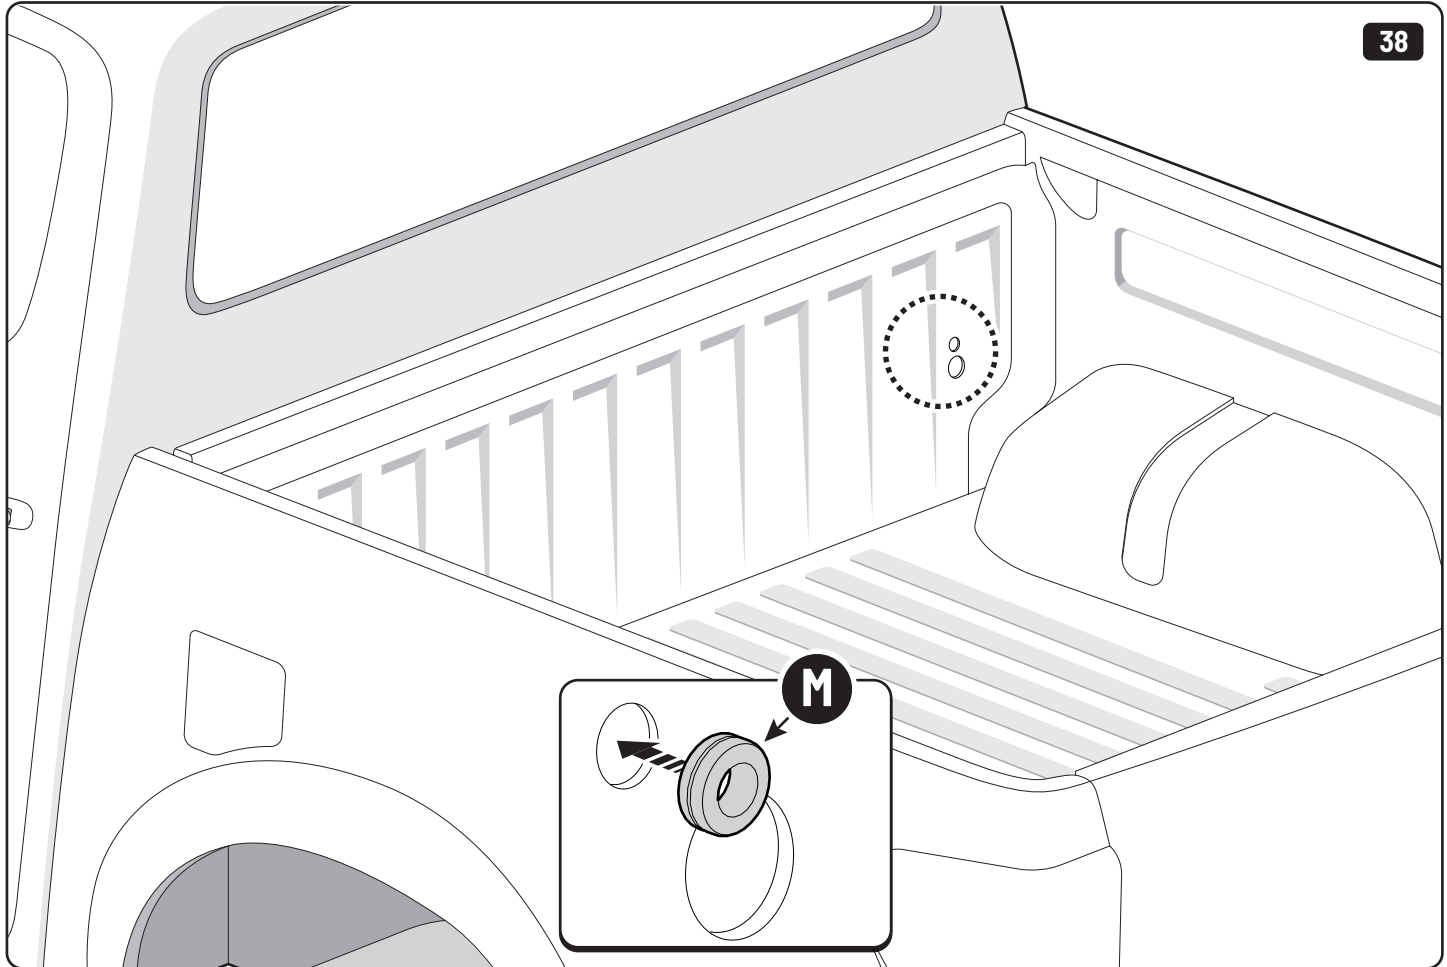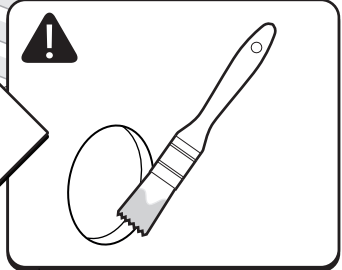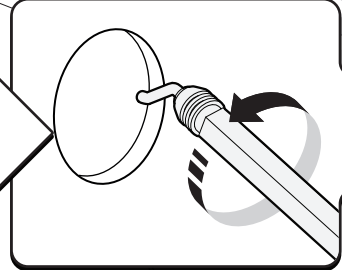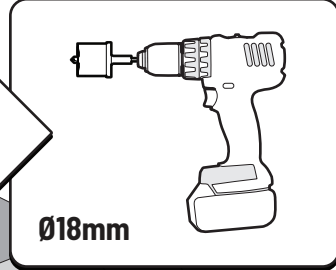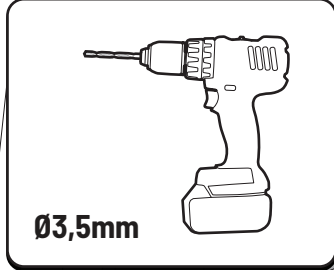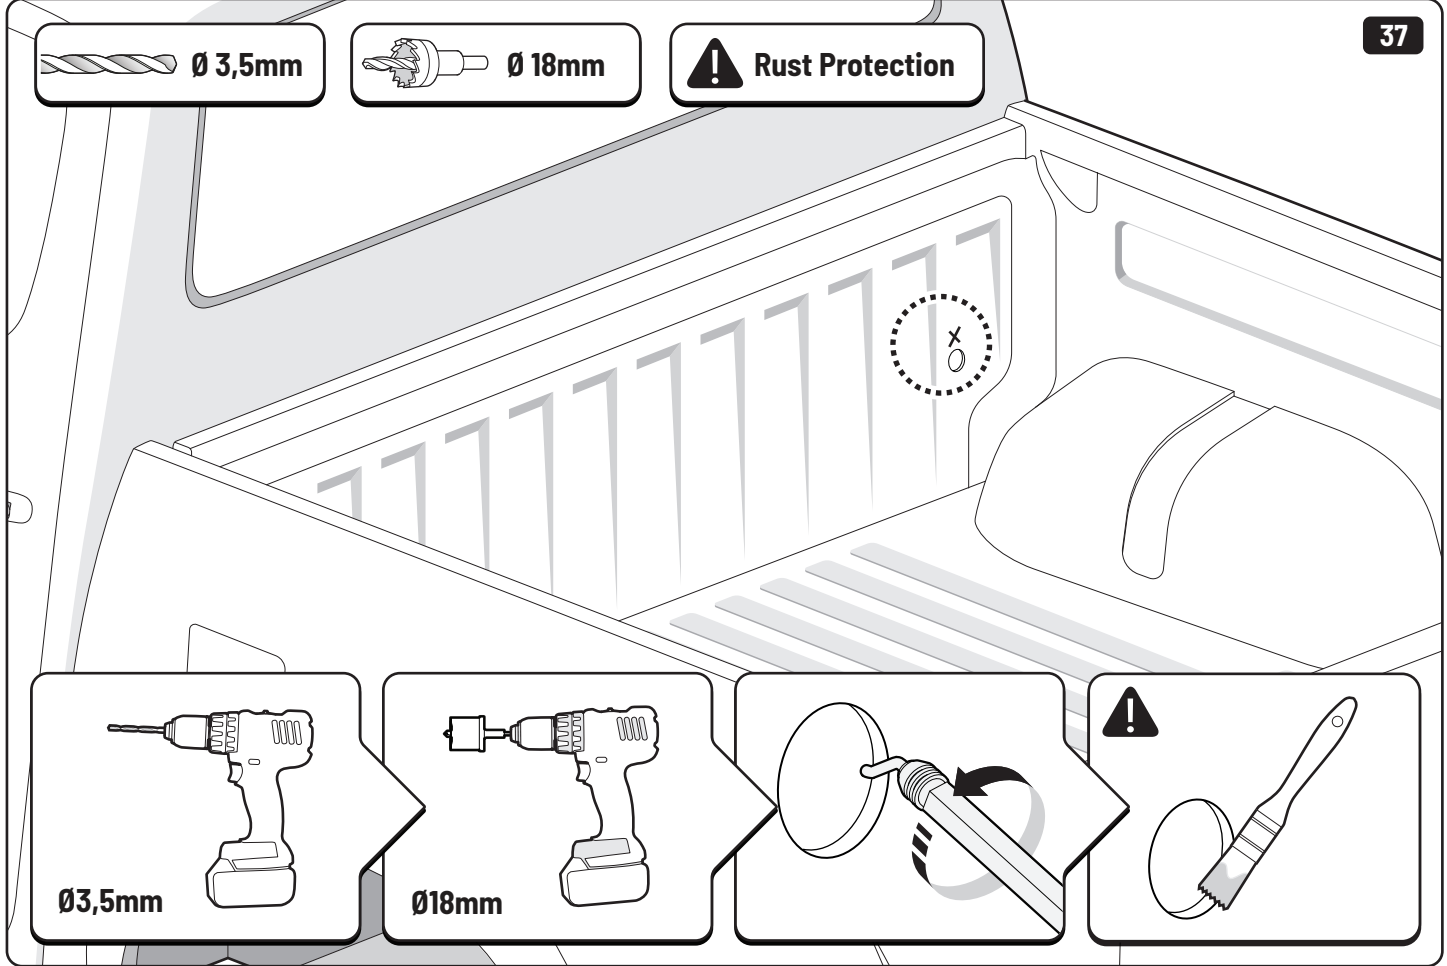




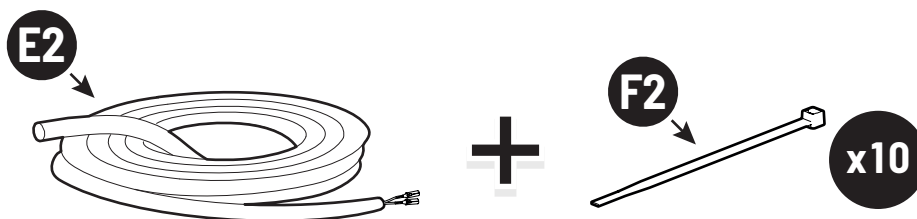
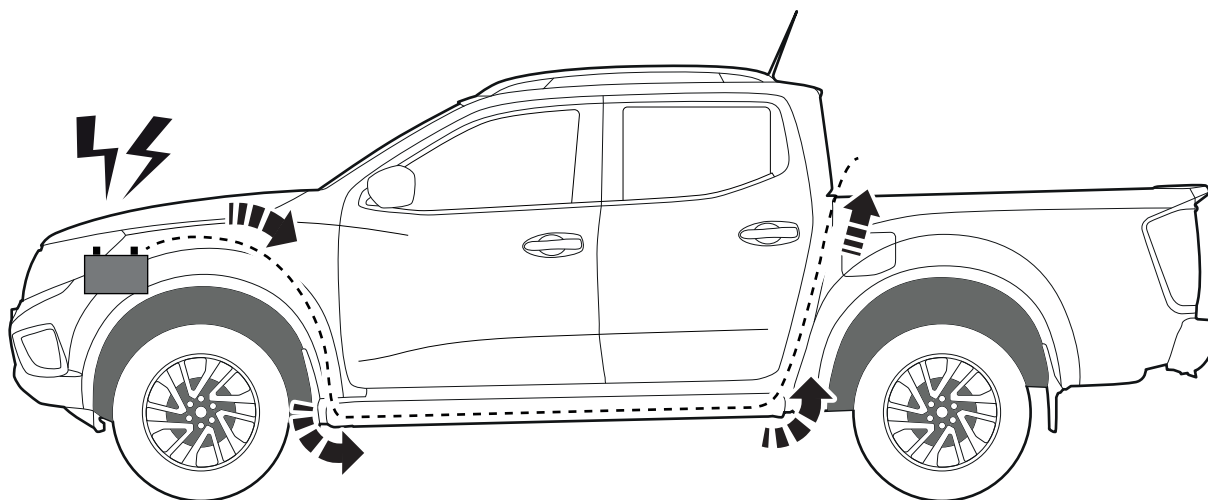




Only to be installed by authorized personnel

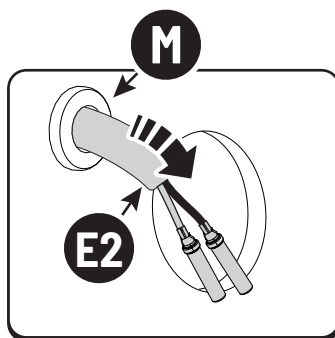
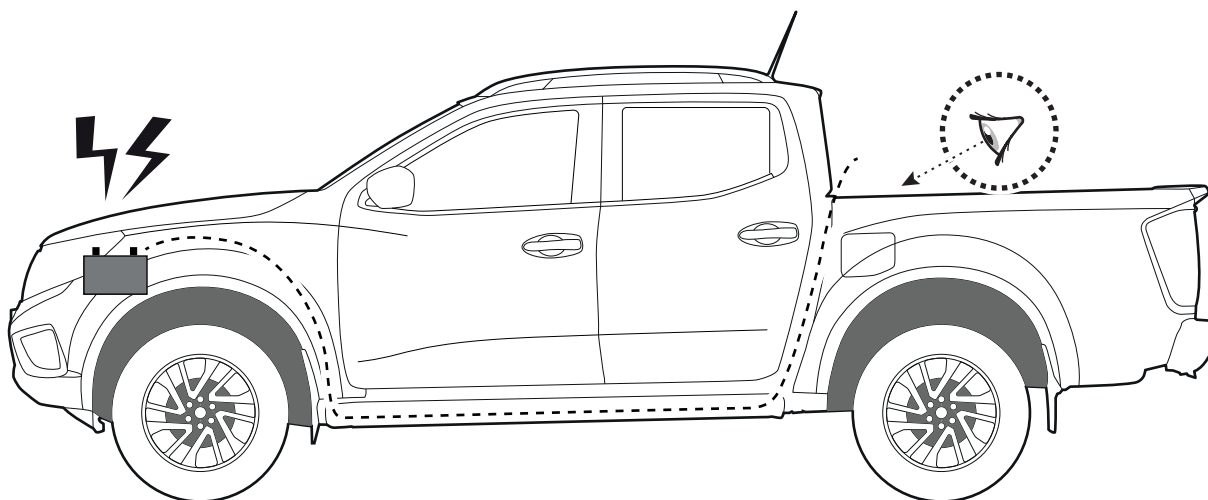


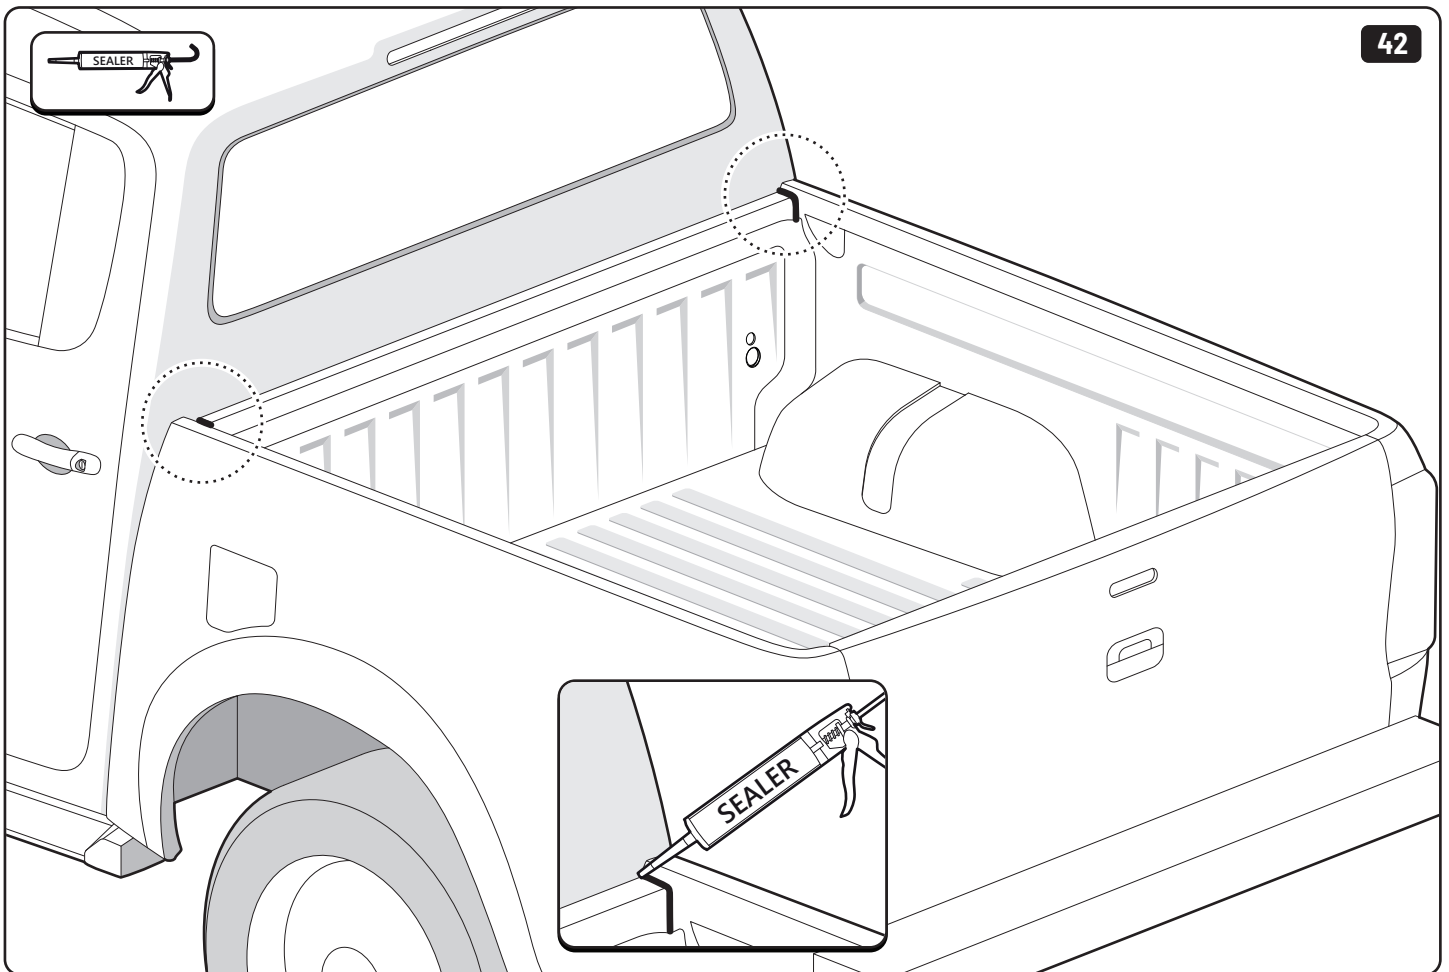
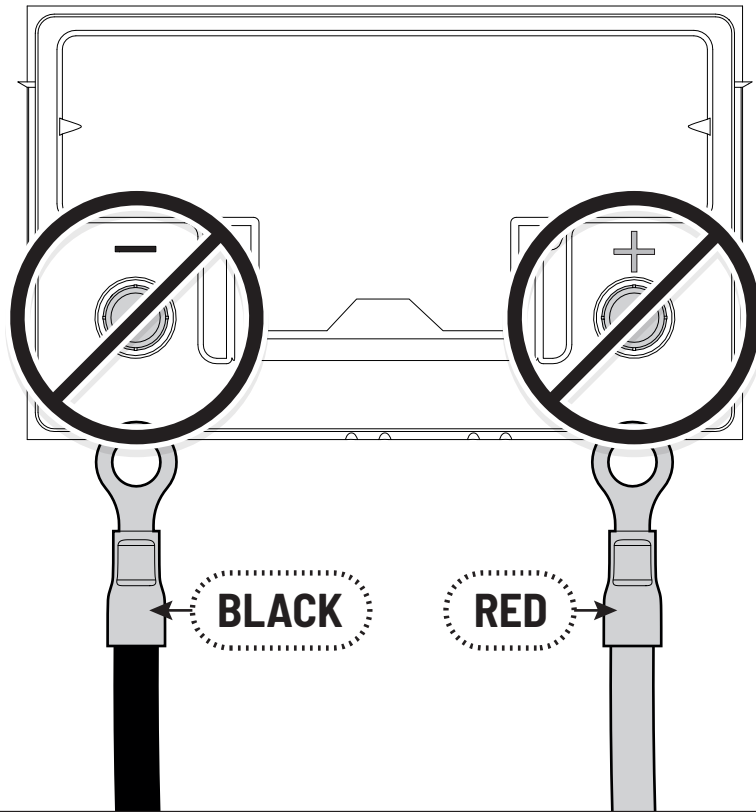


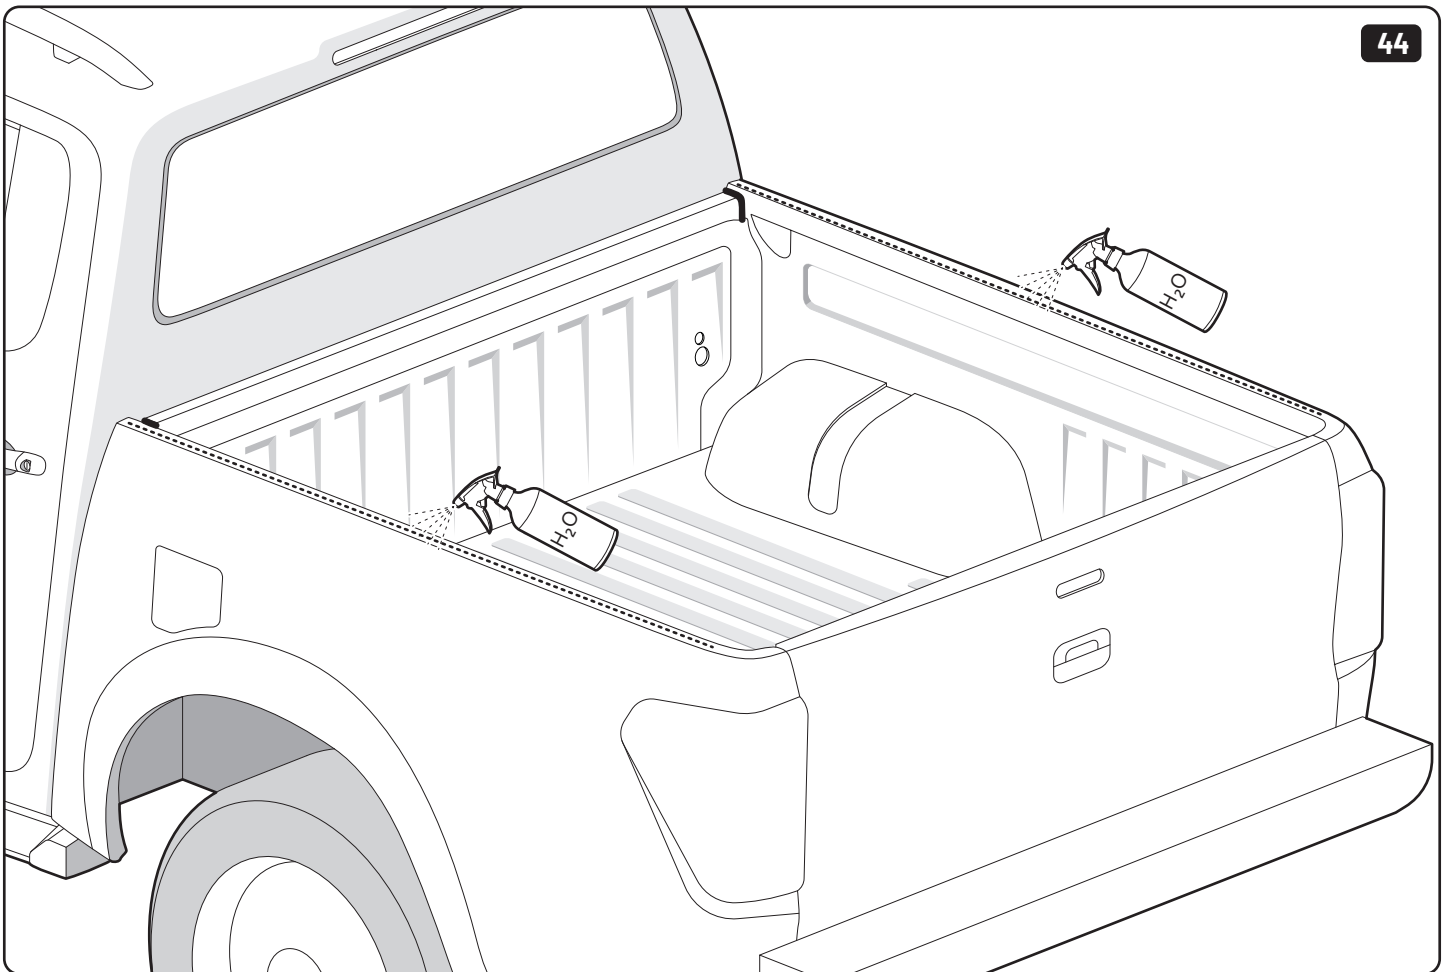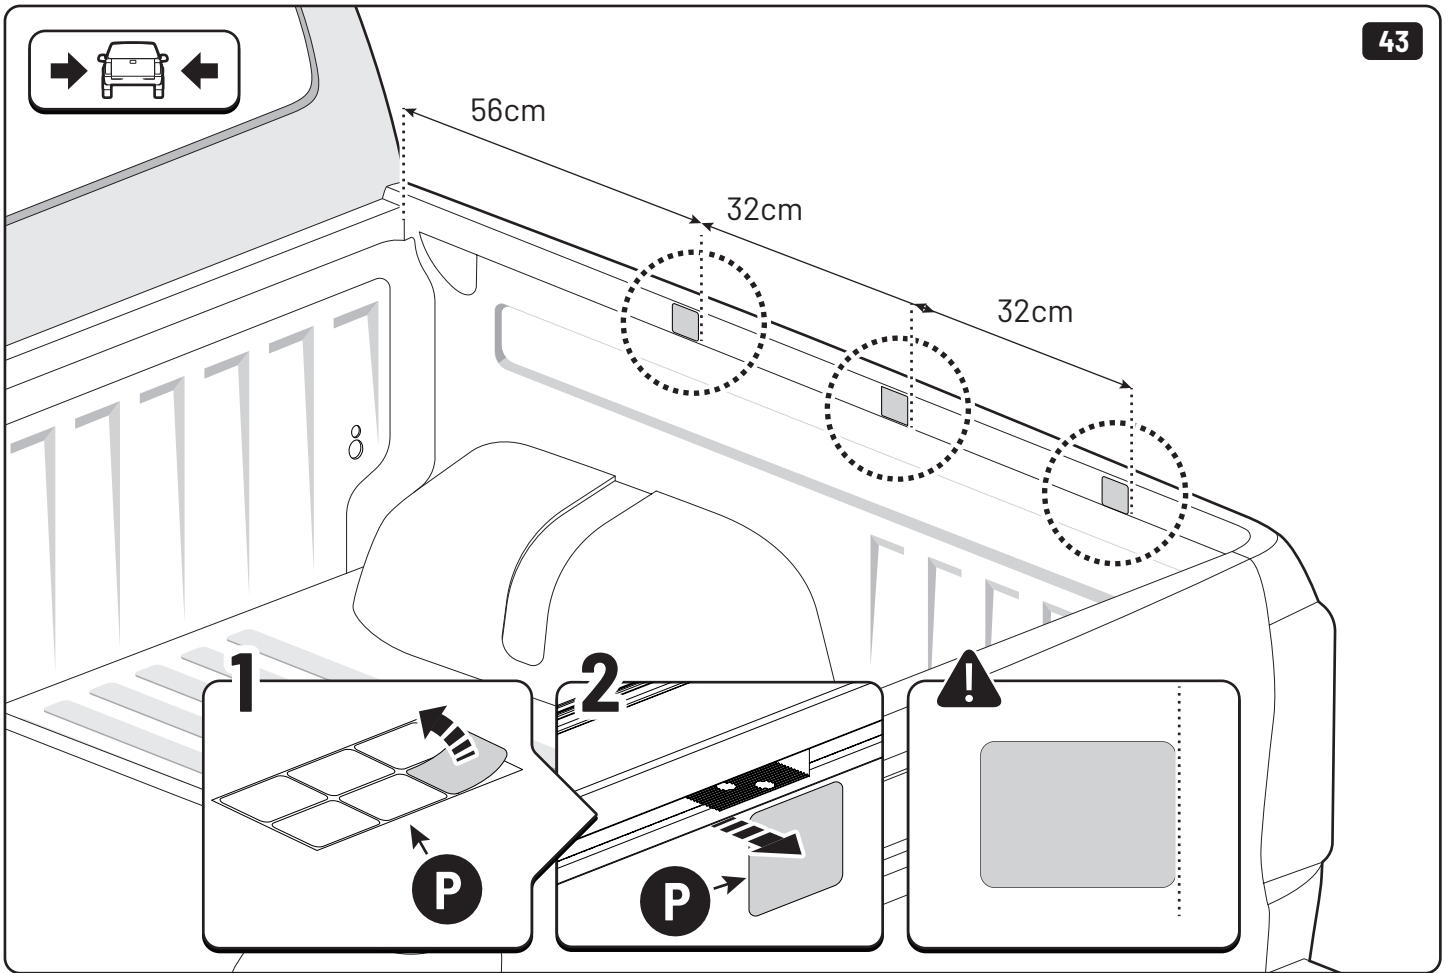


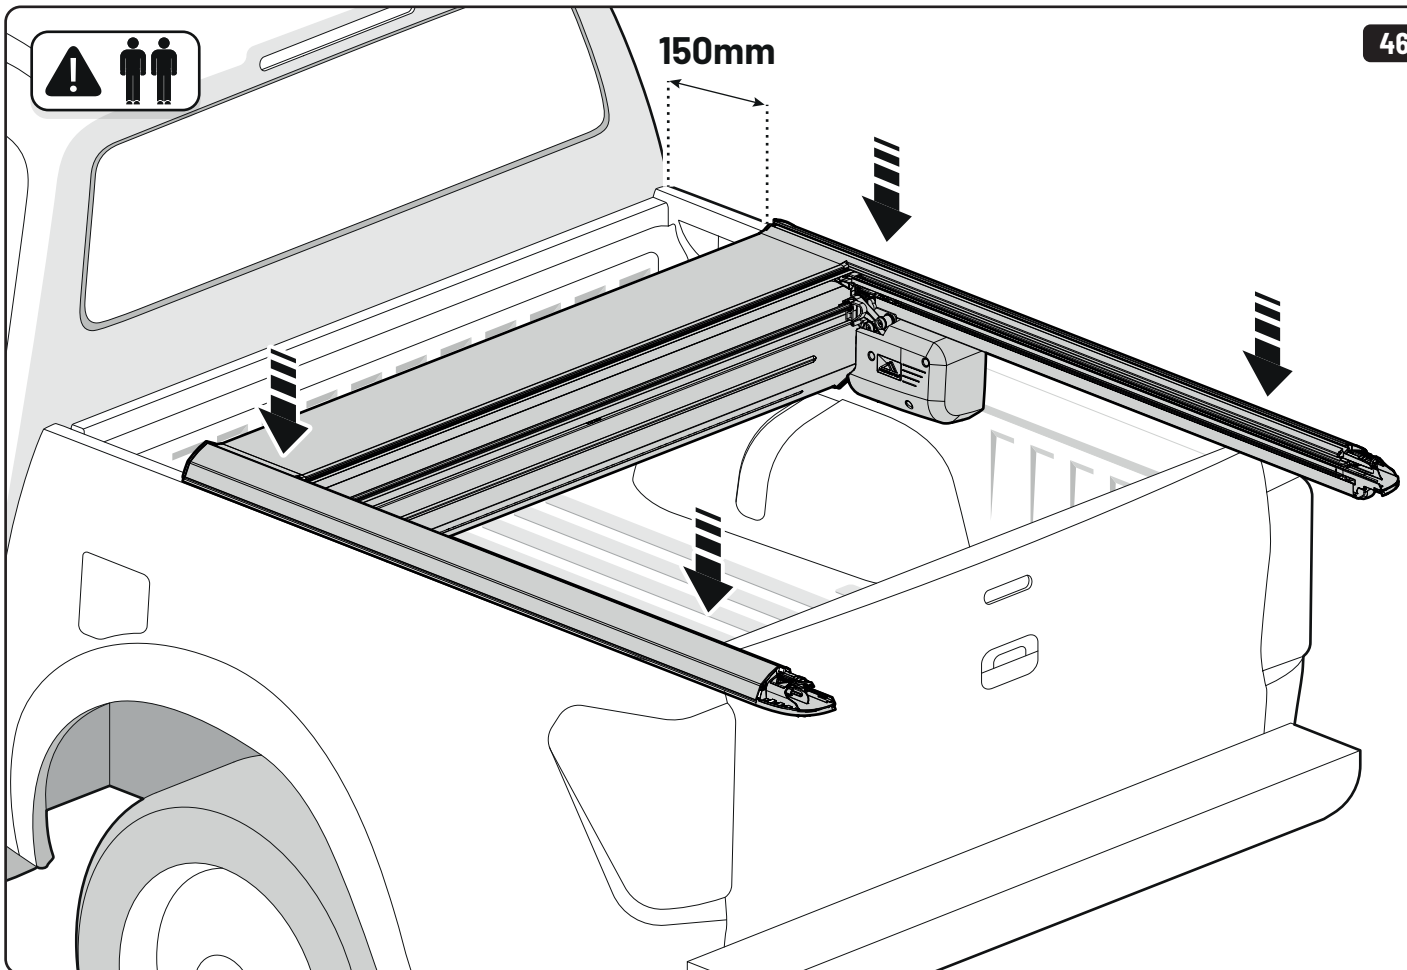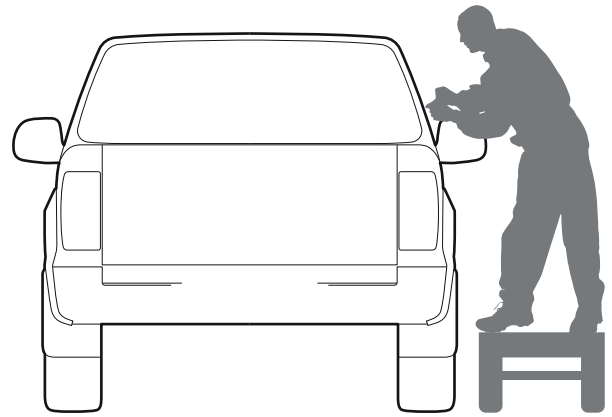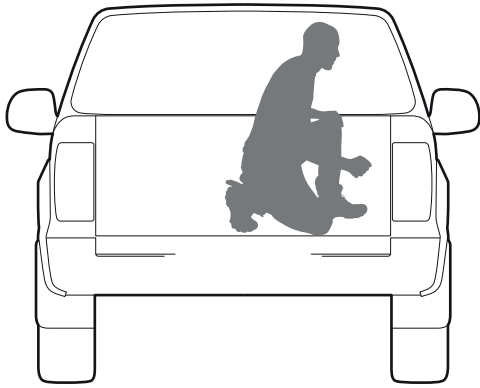

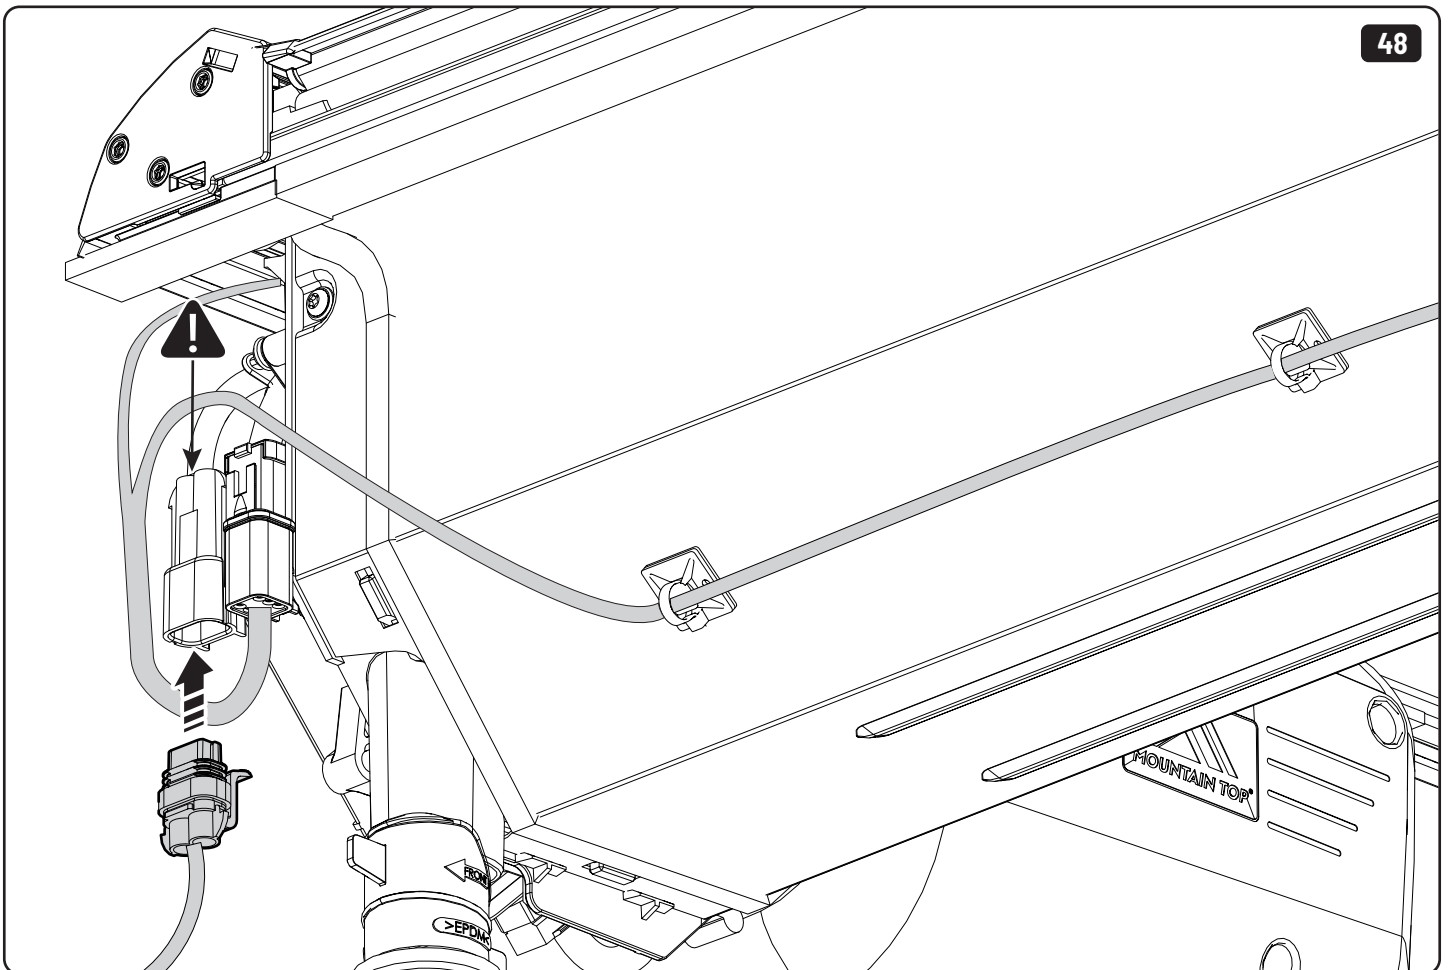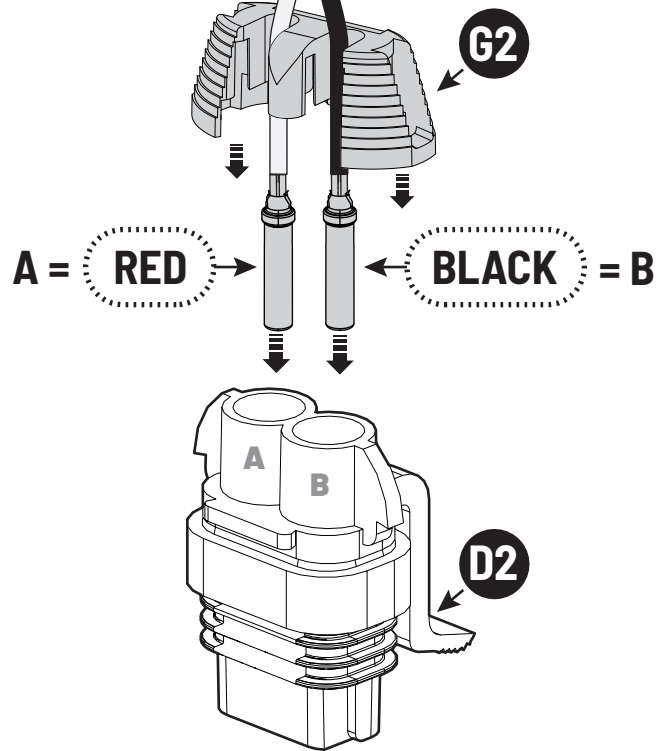


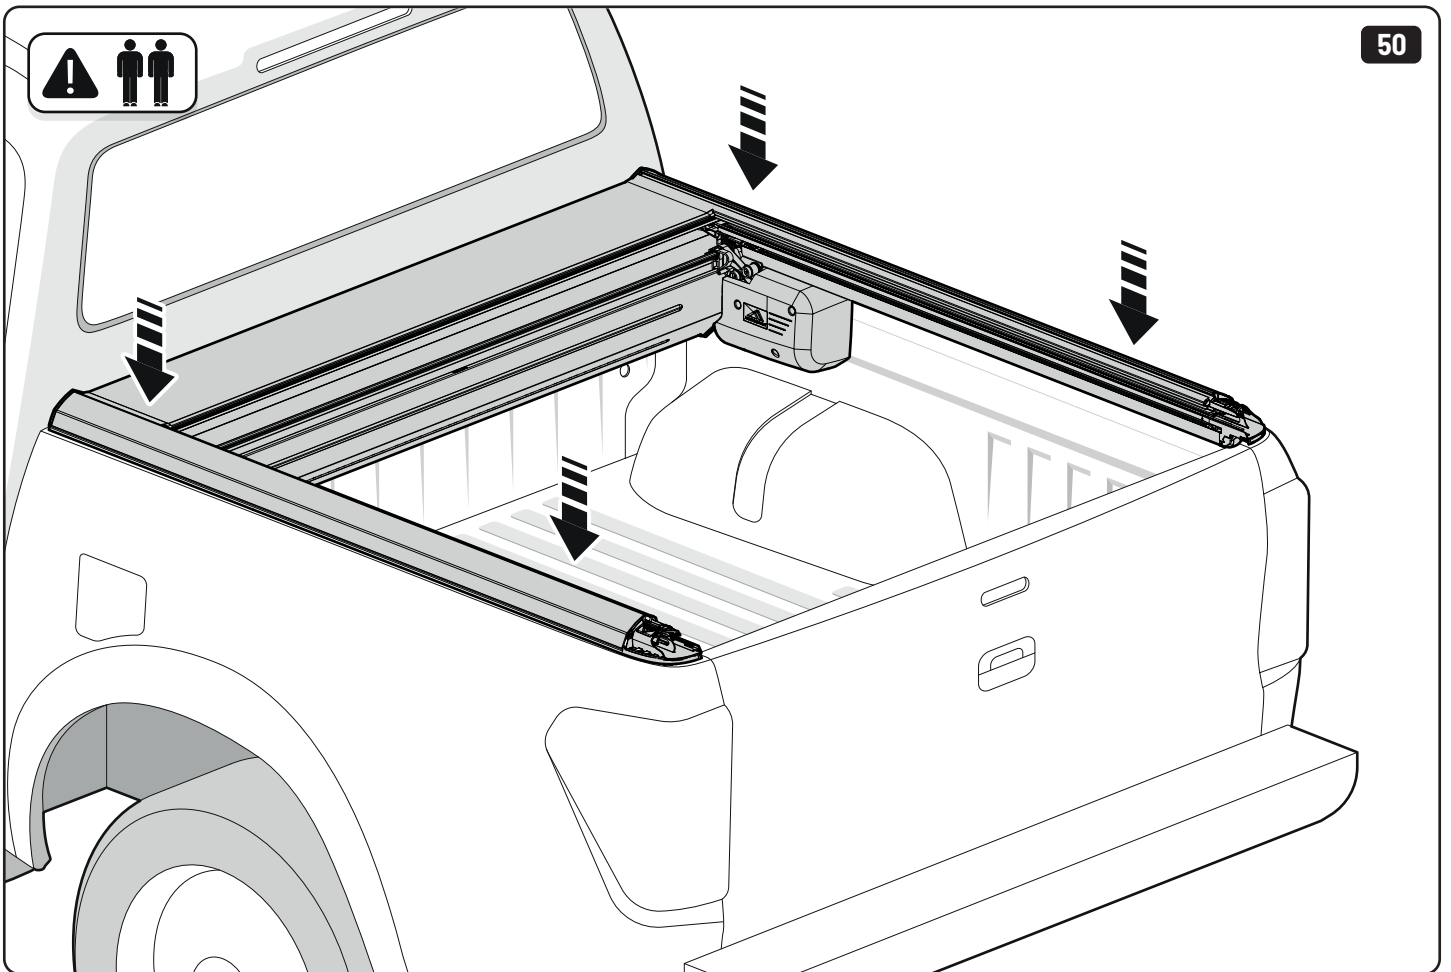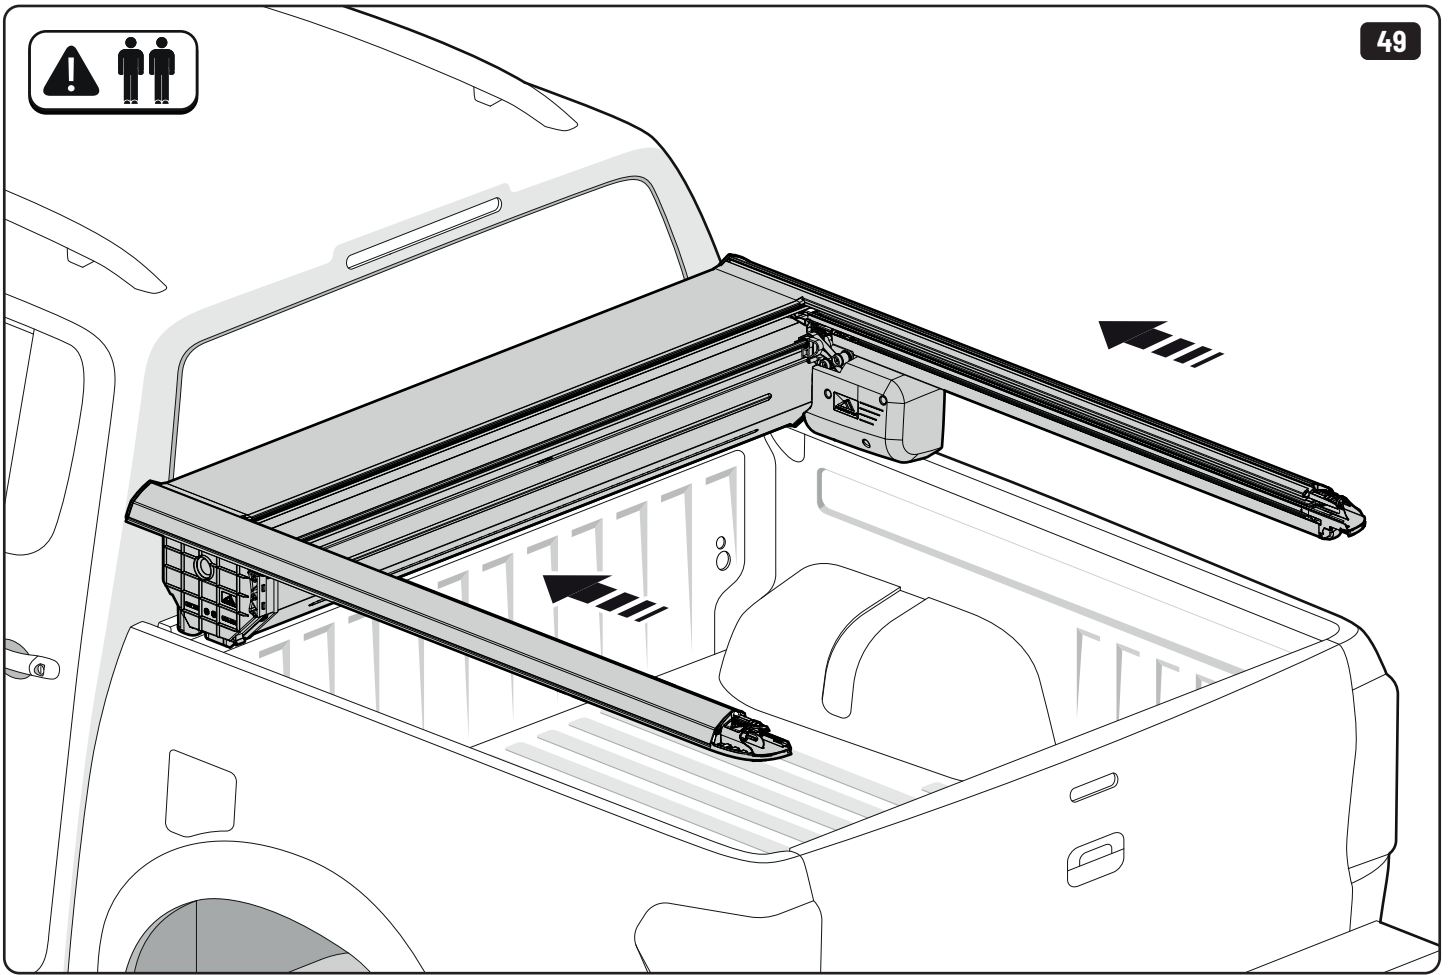

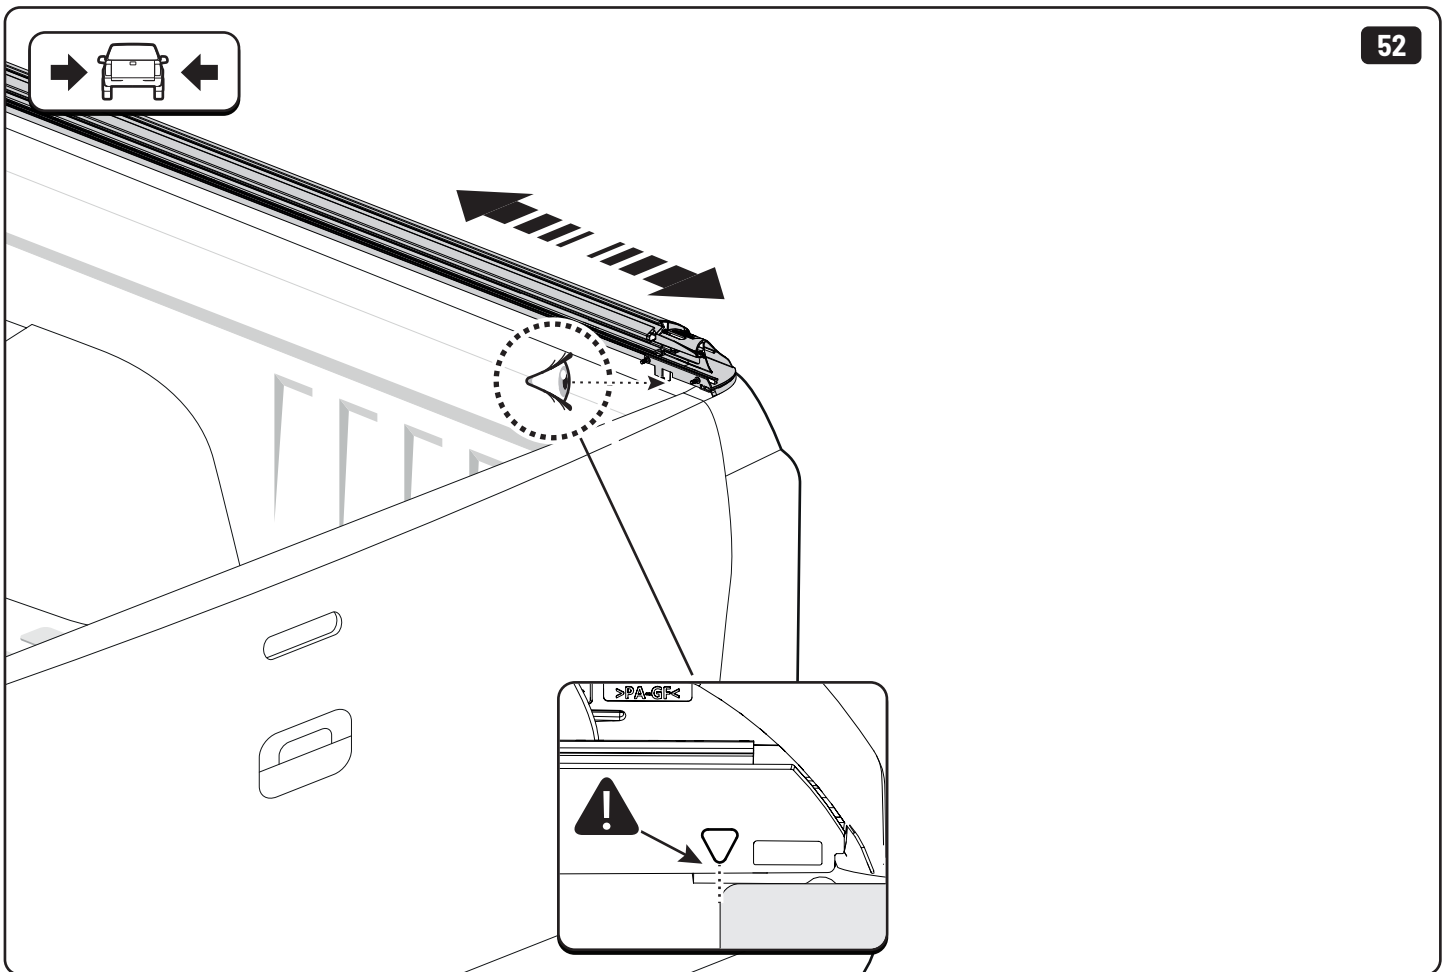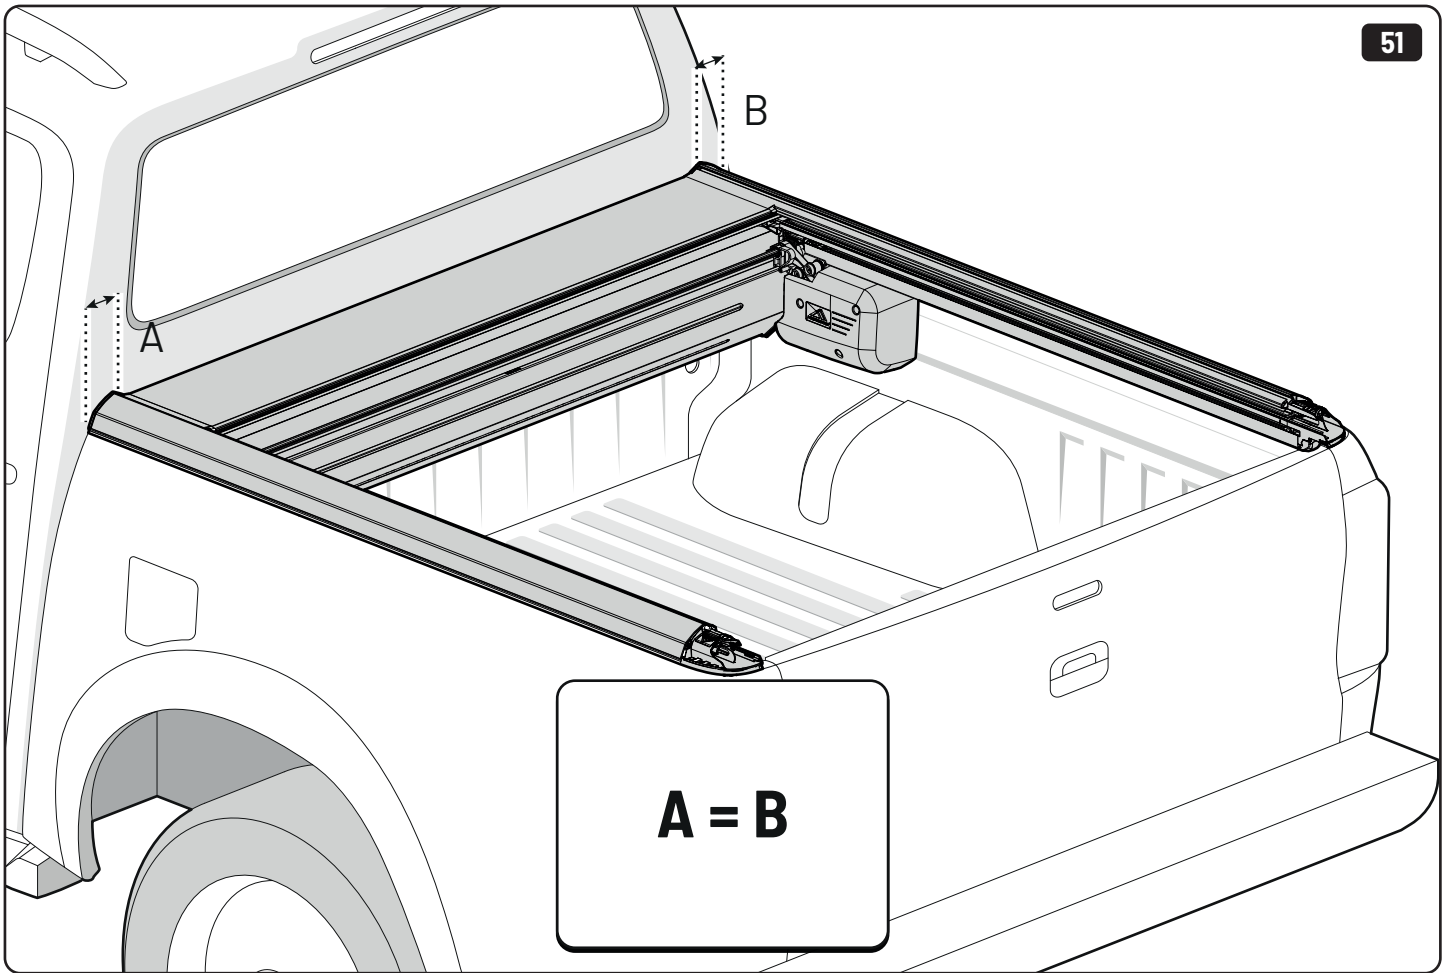

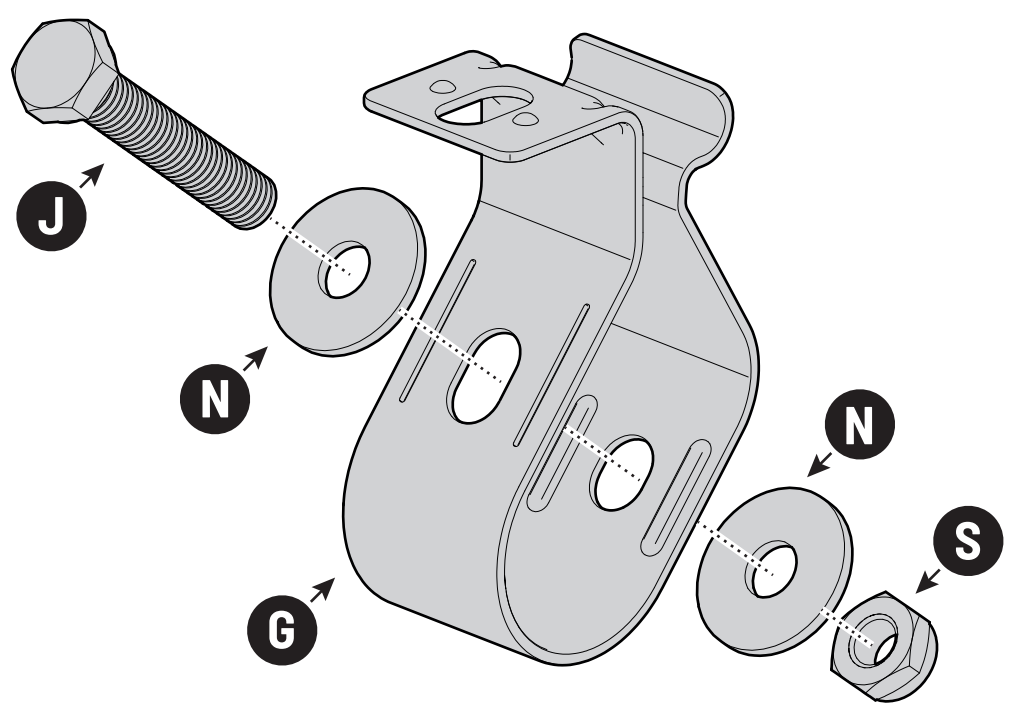


x6

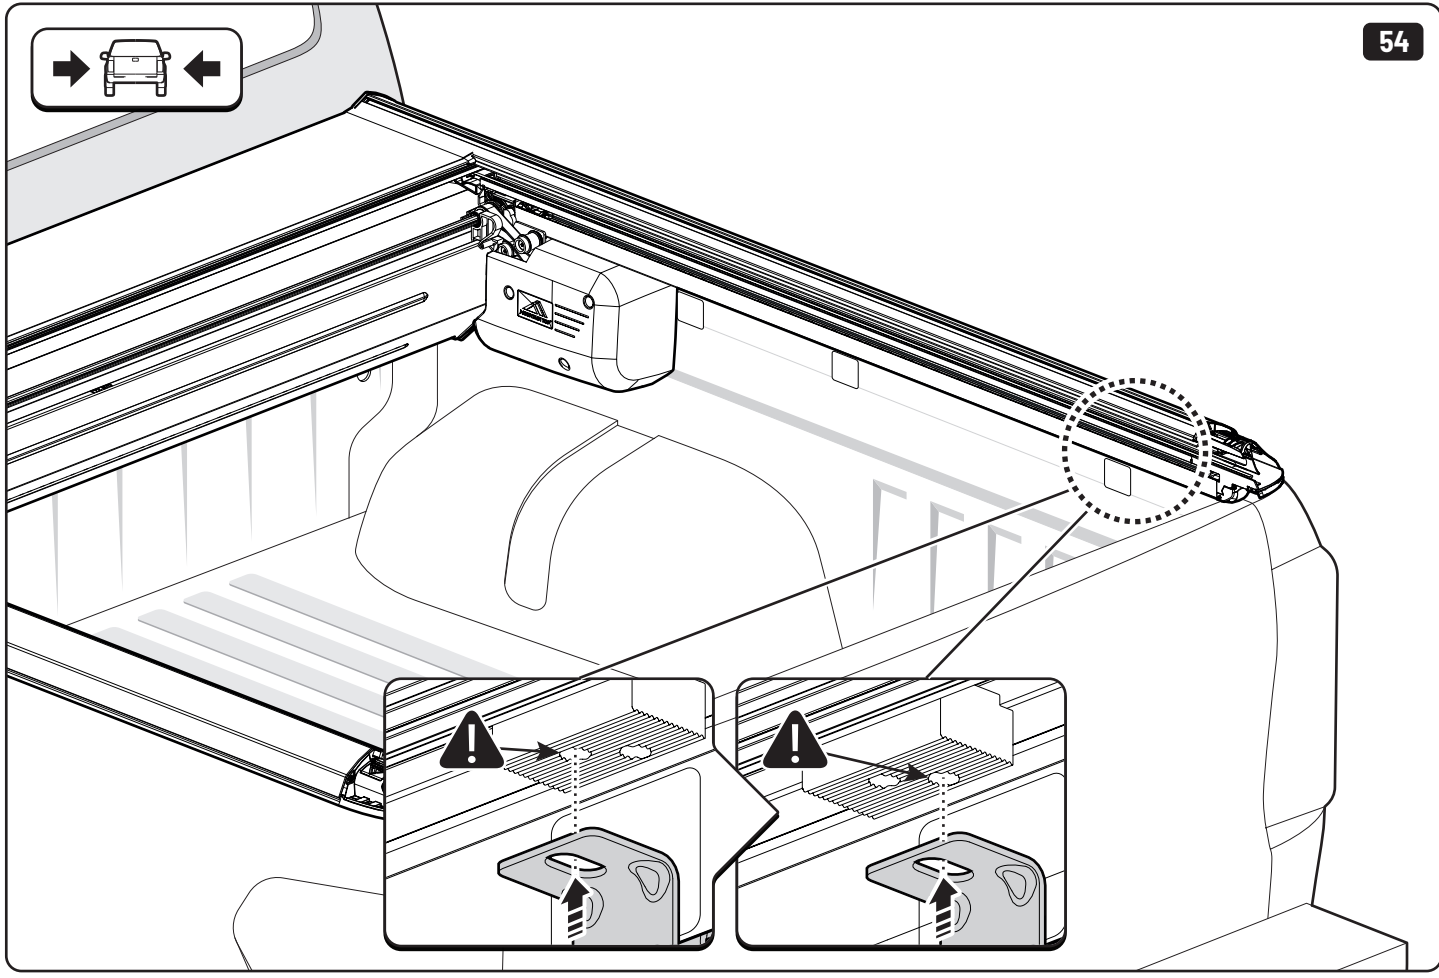









LOCTITE 243

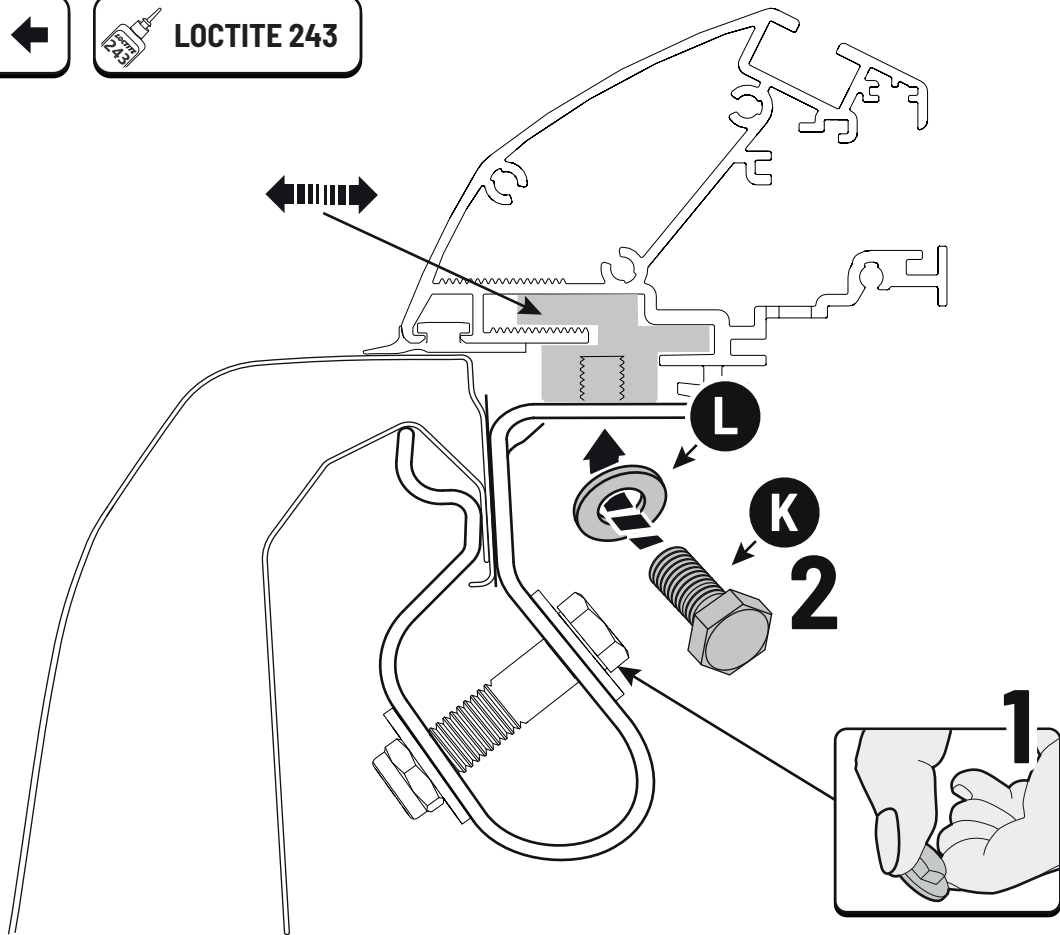


x2

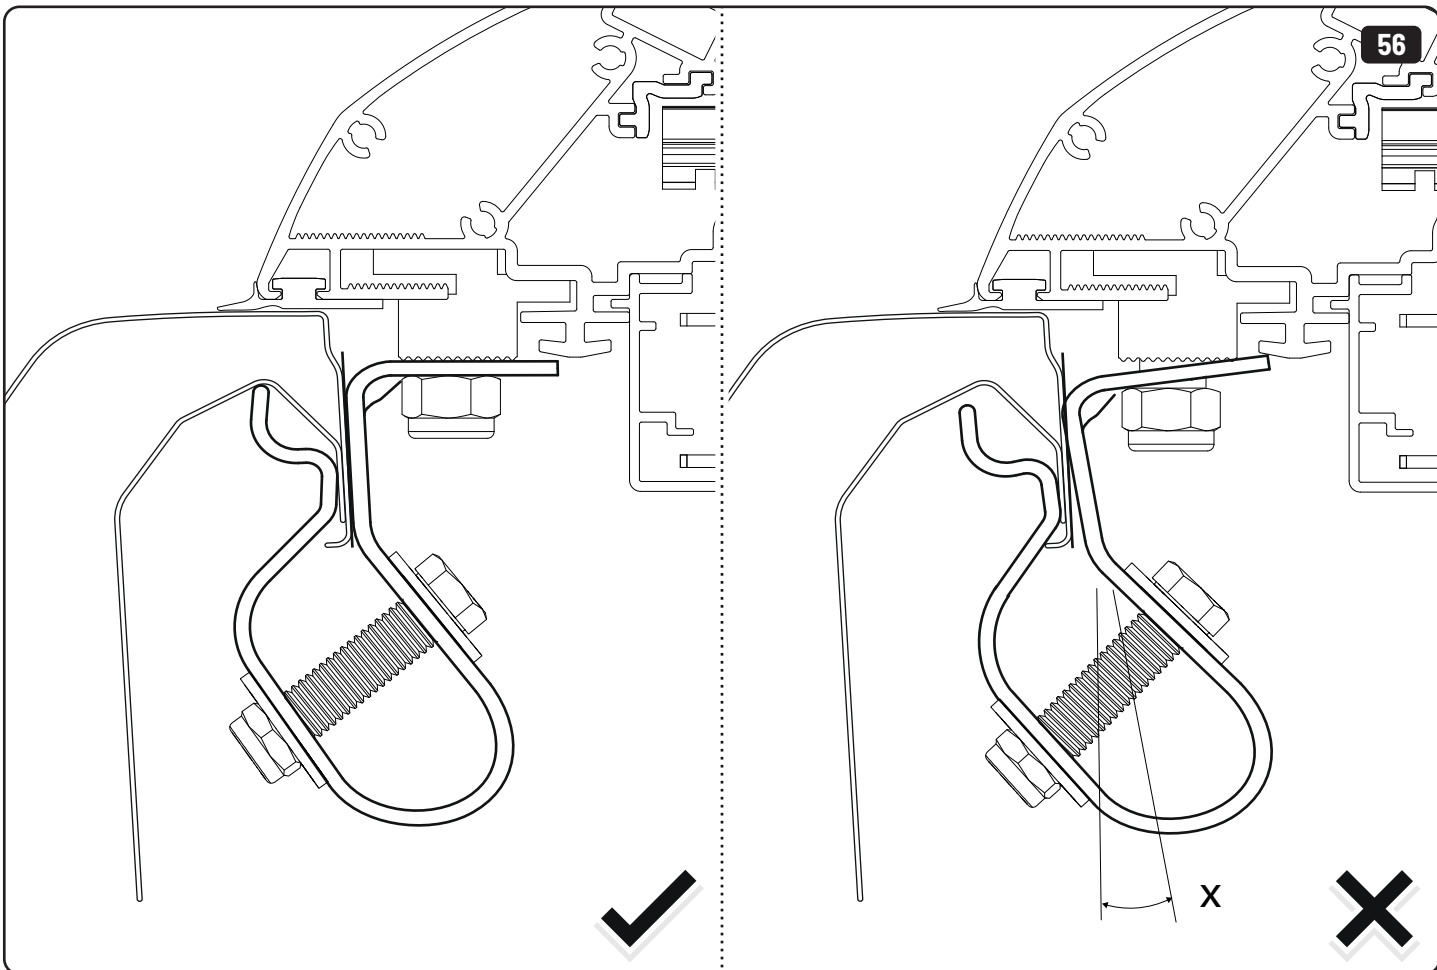

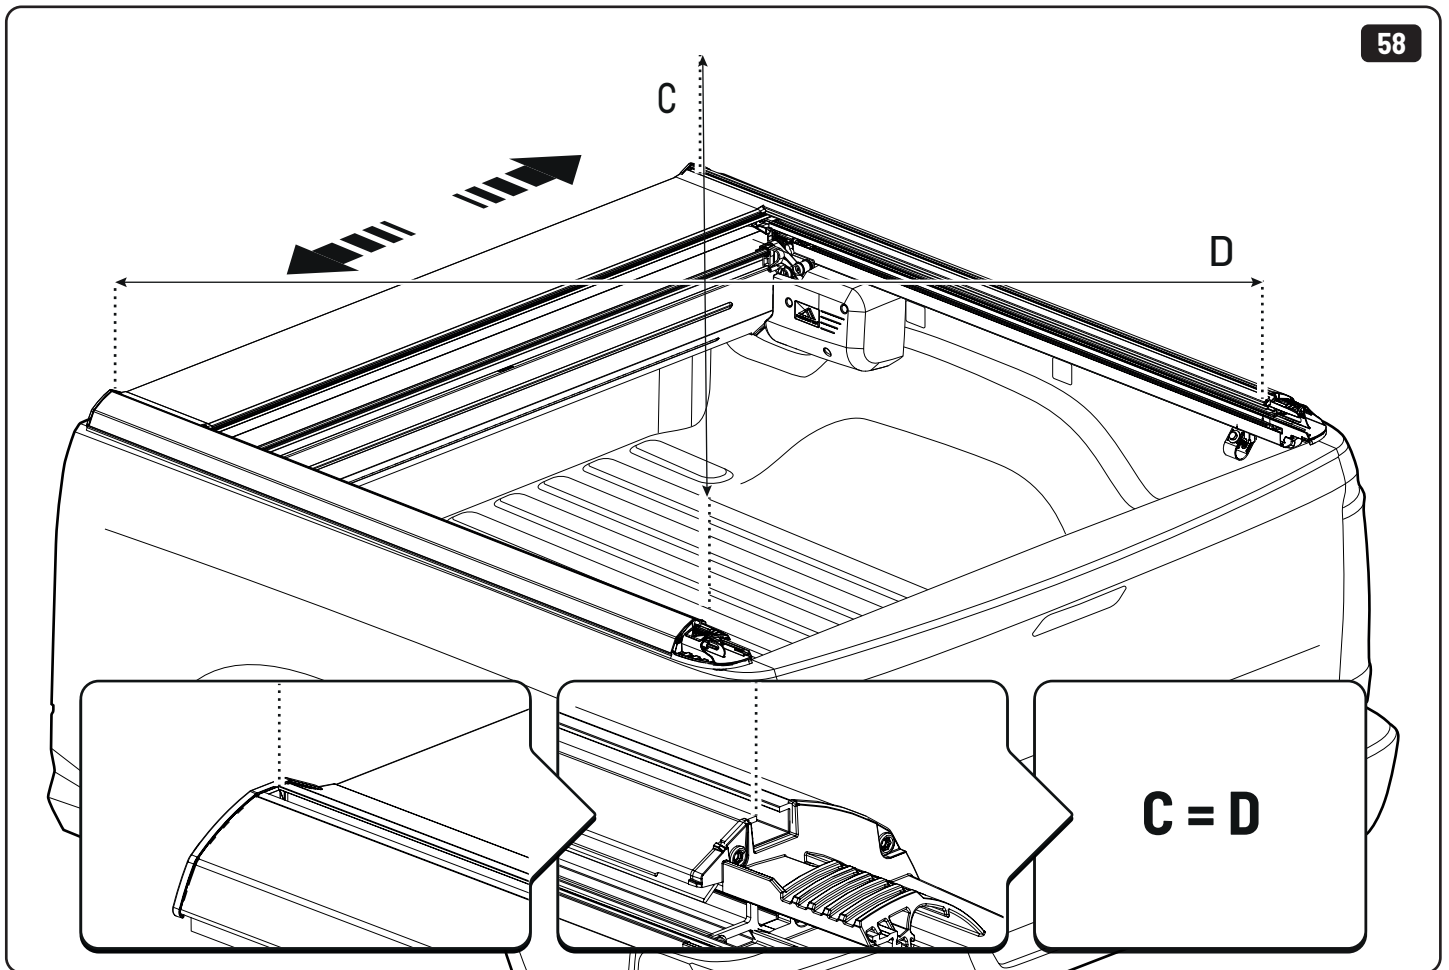
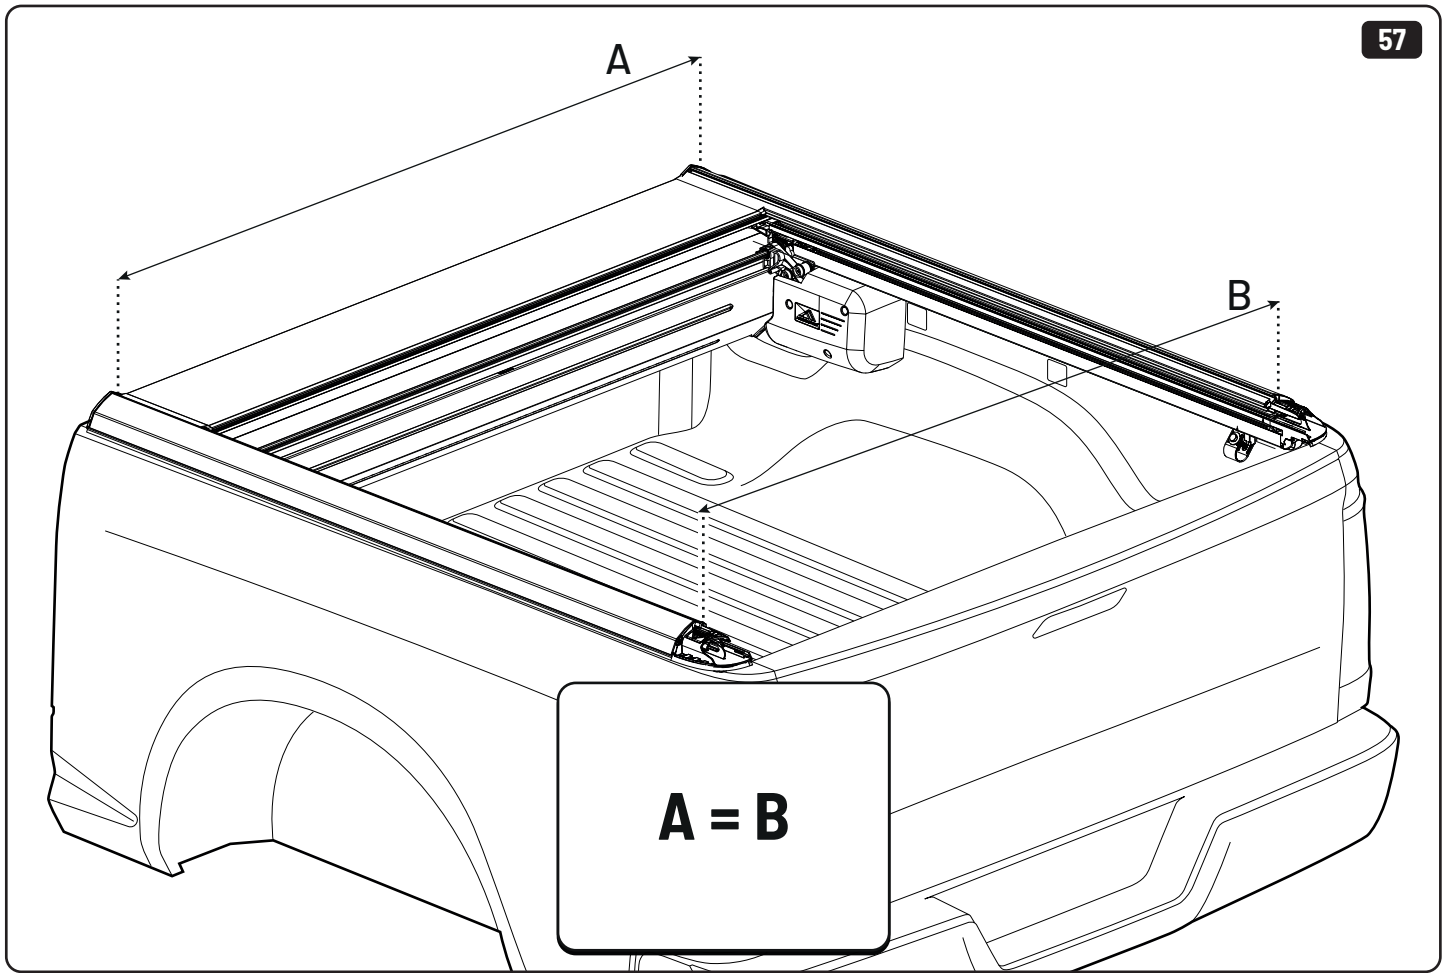


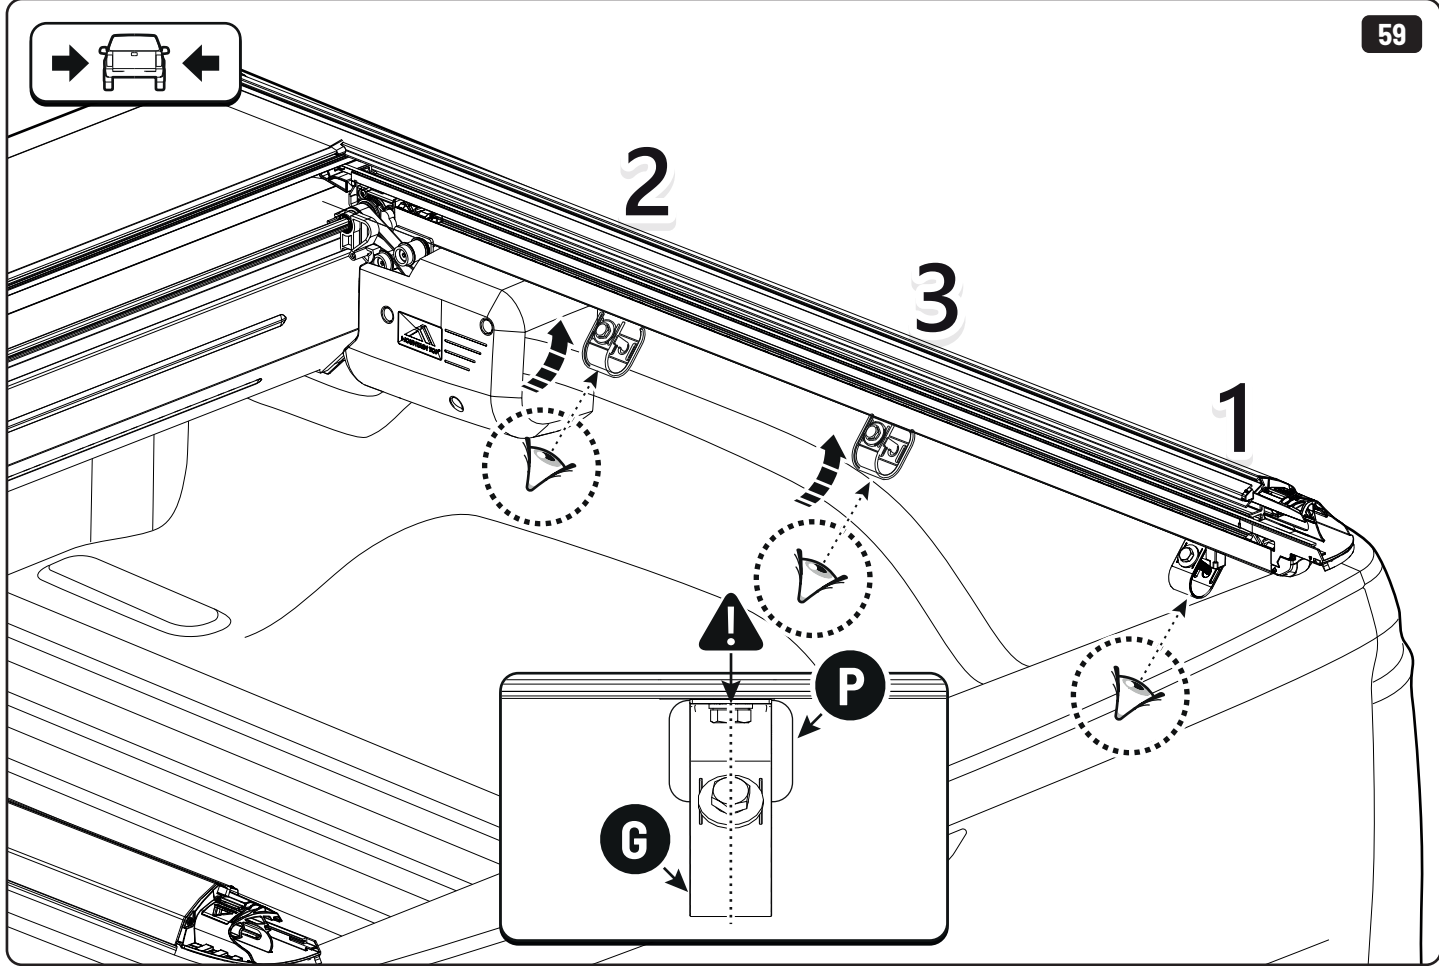





13mm 10Nm


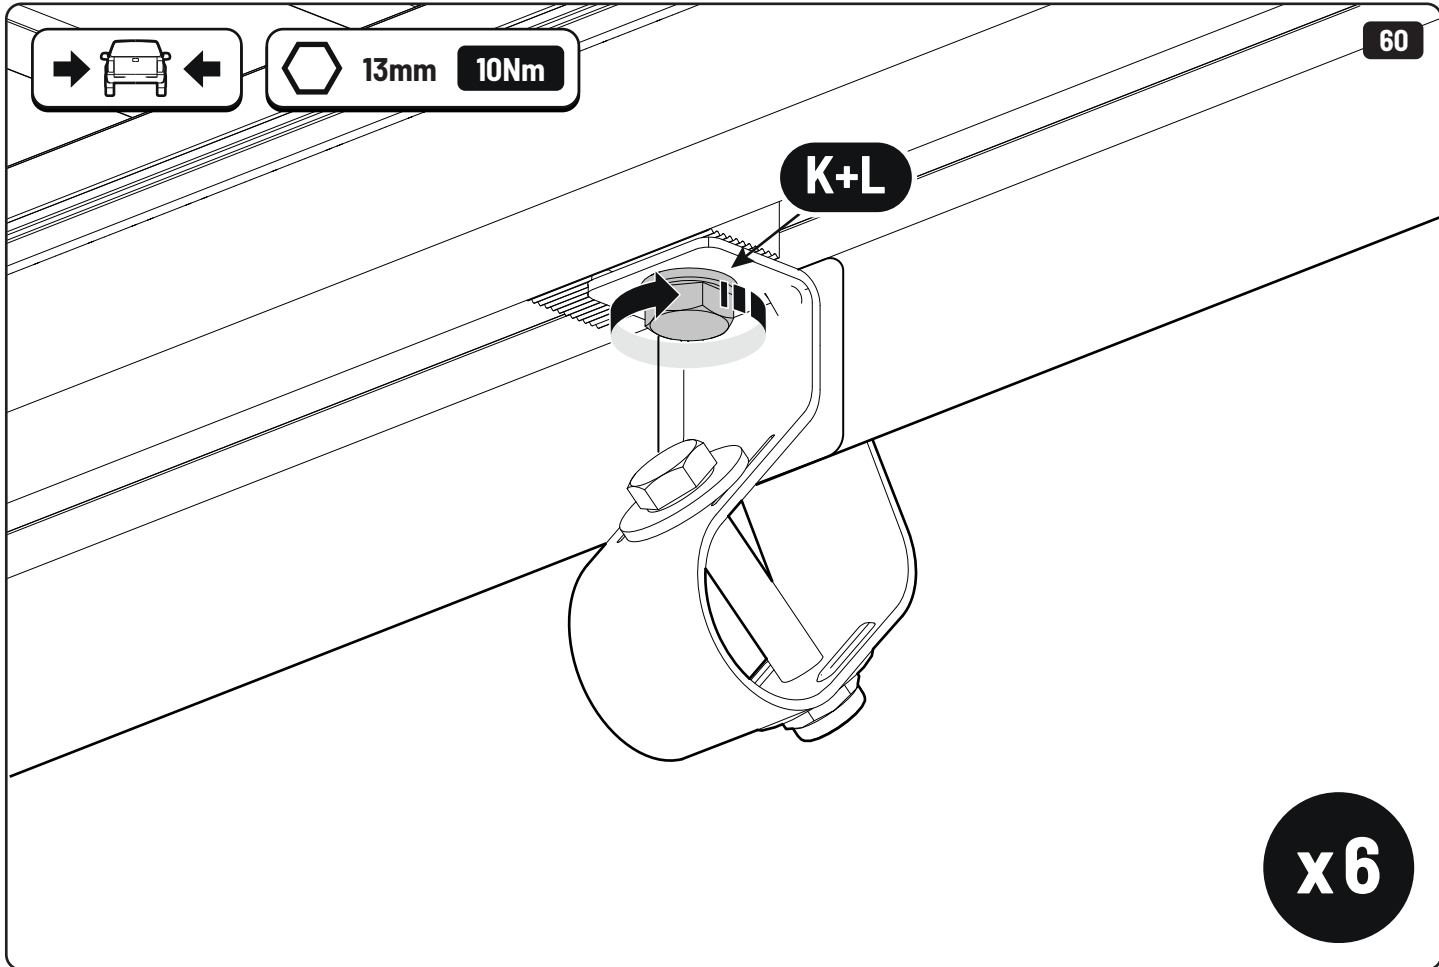




x6

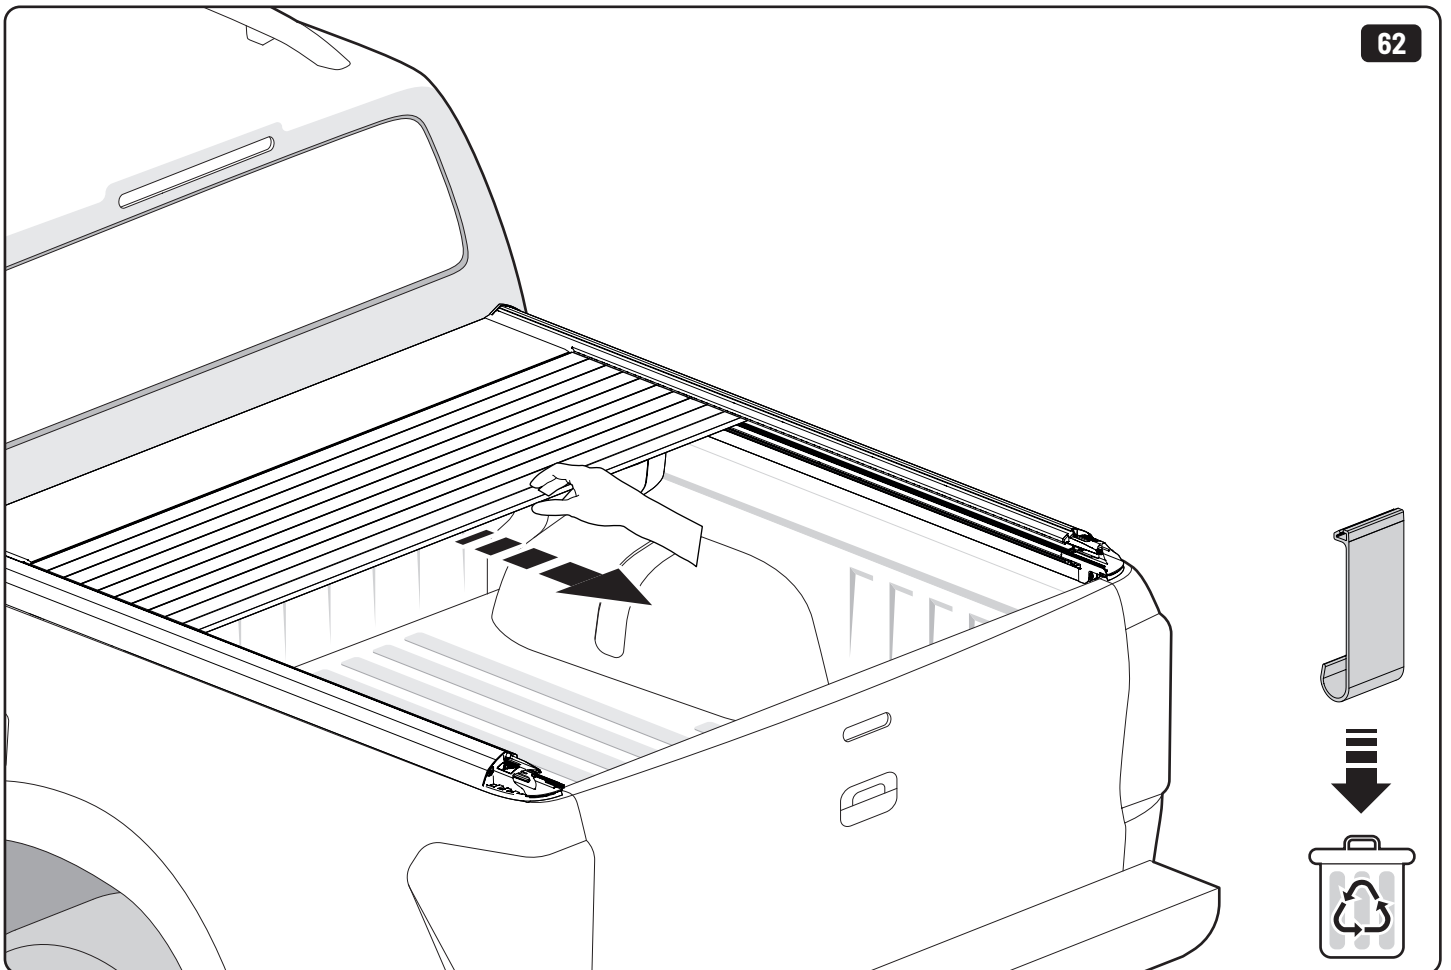
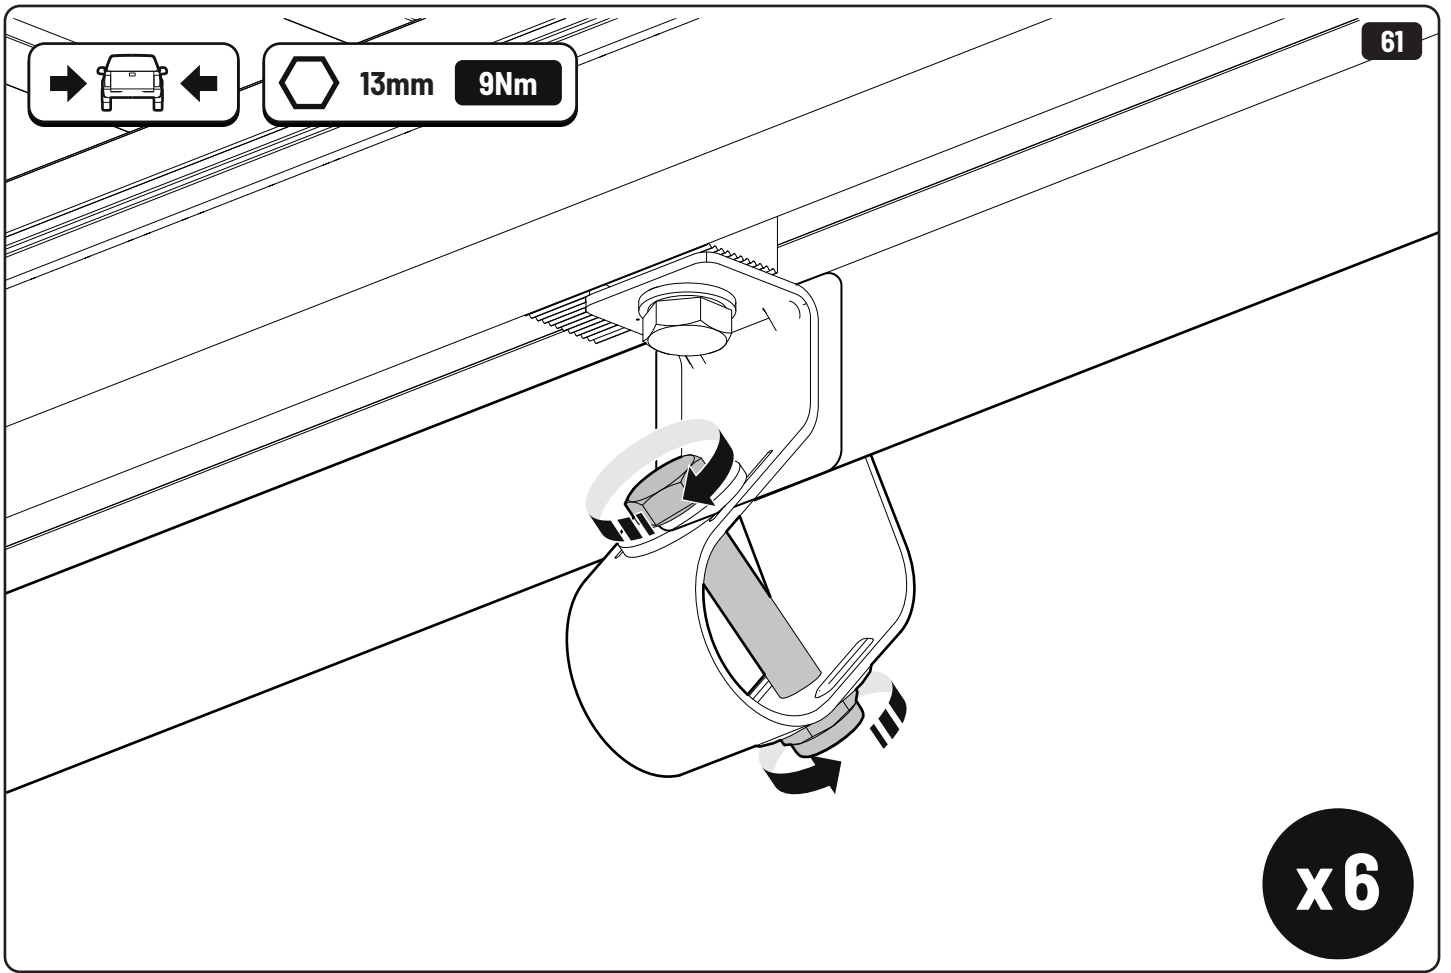


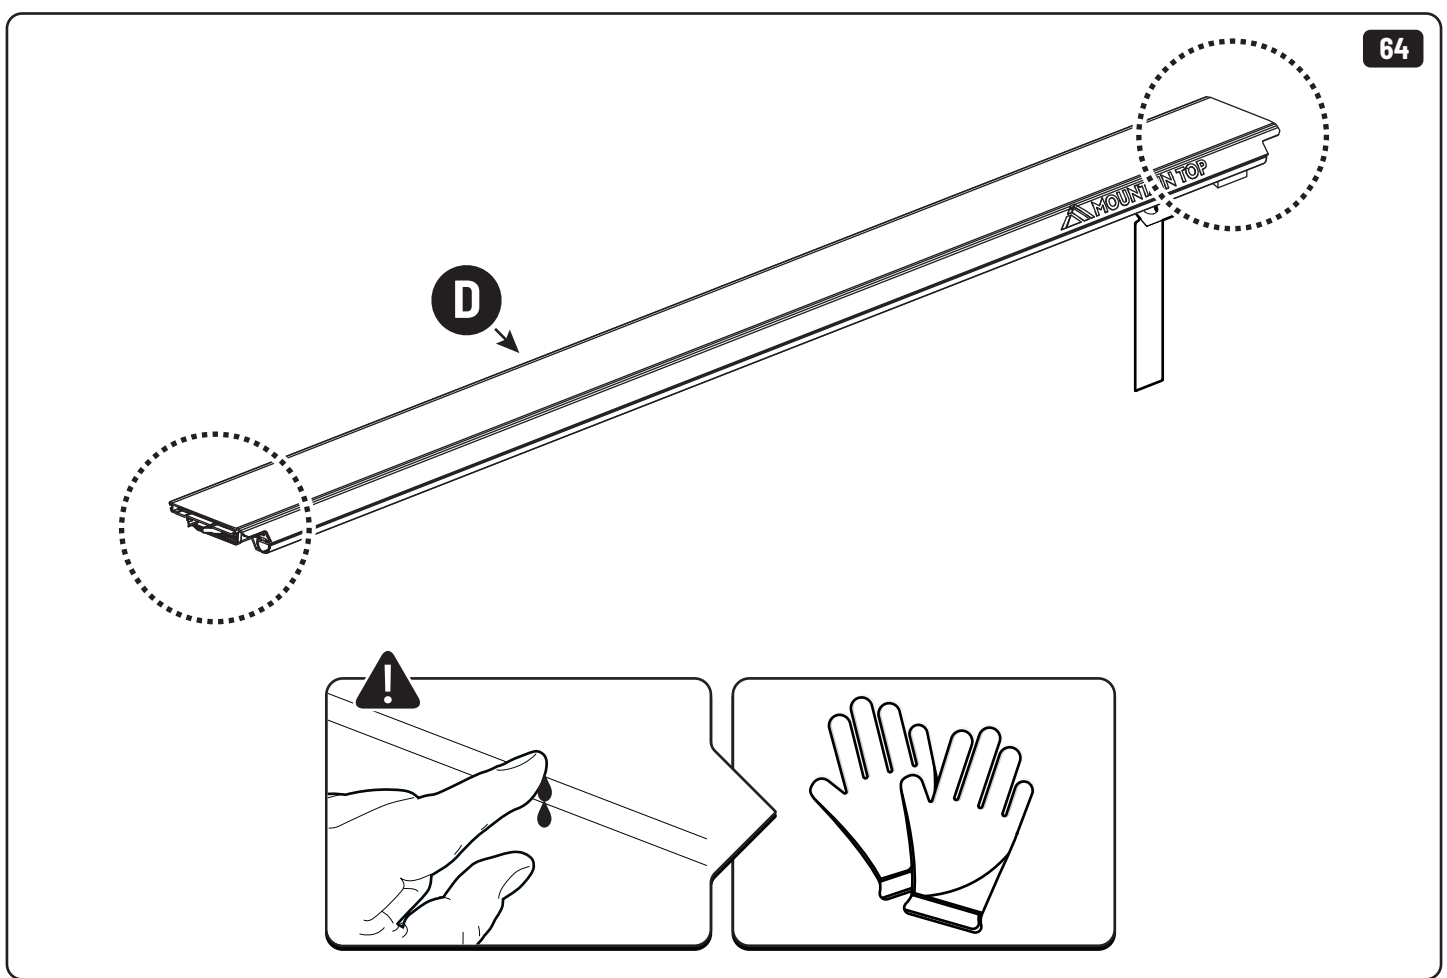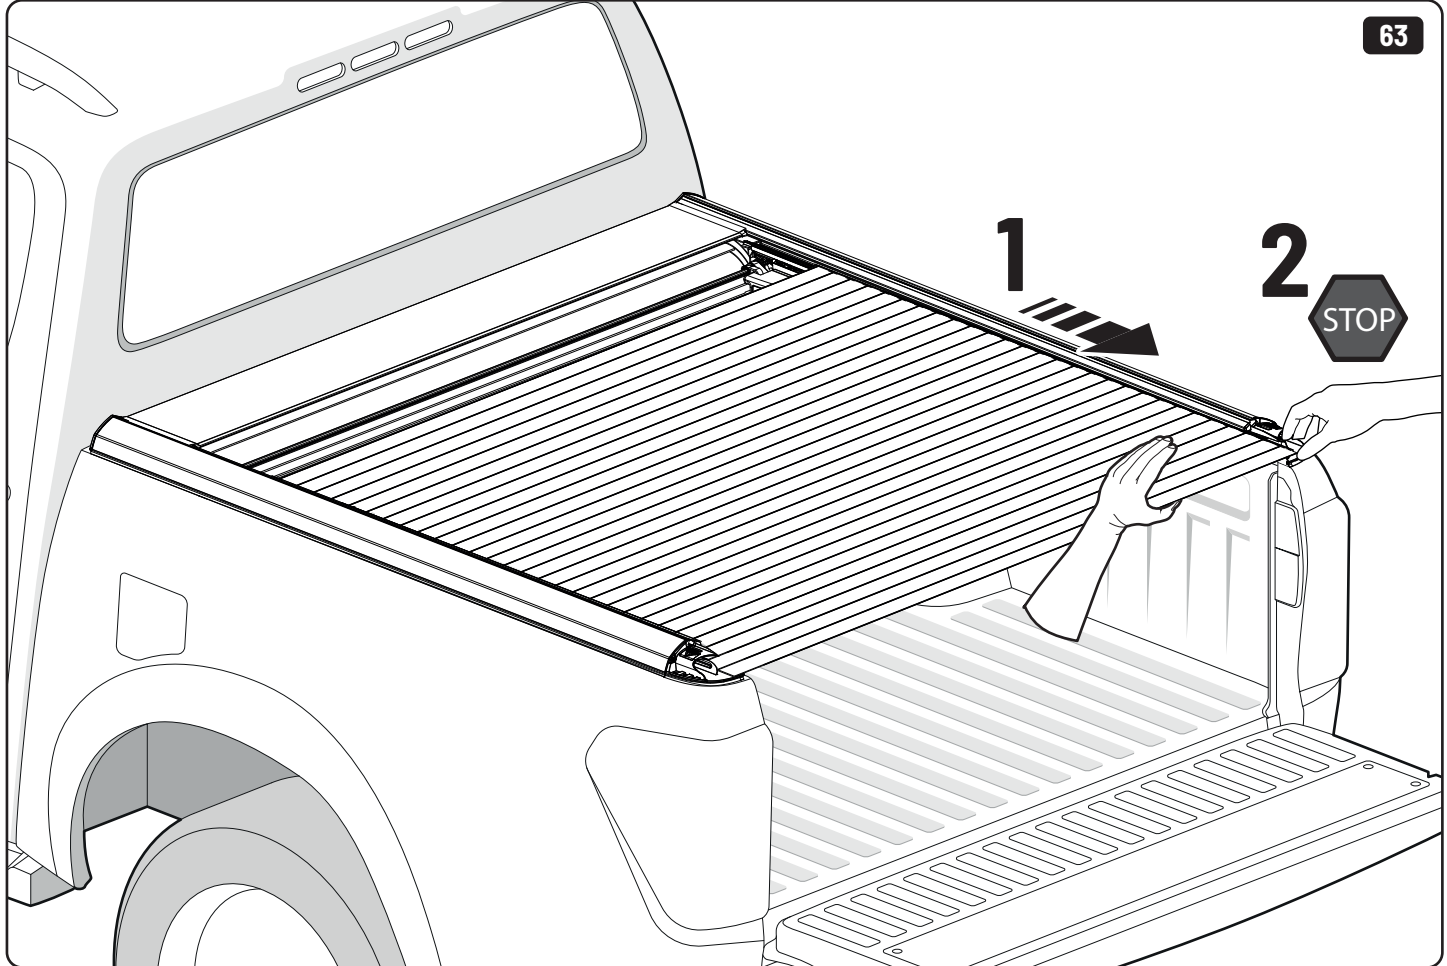

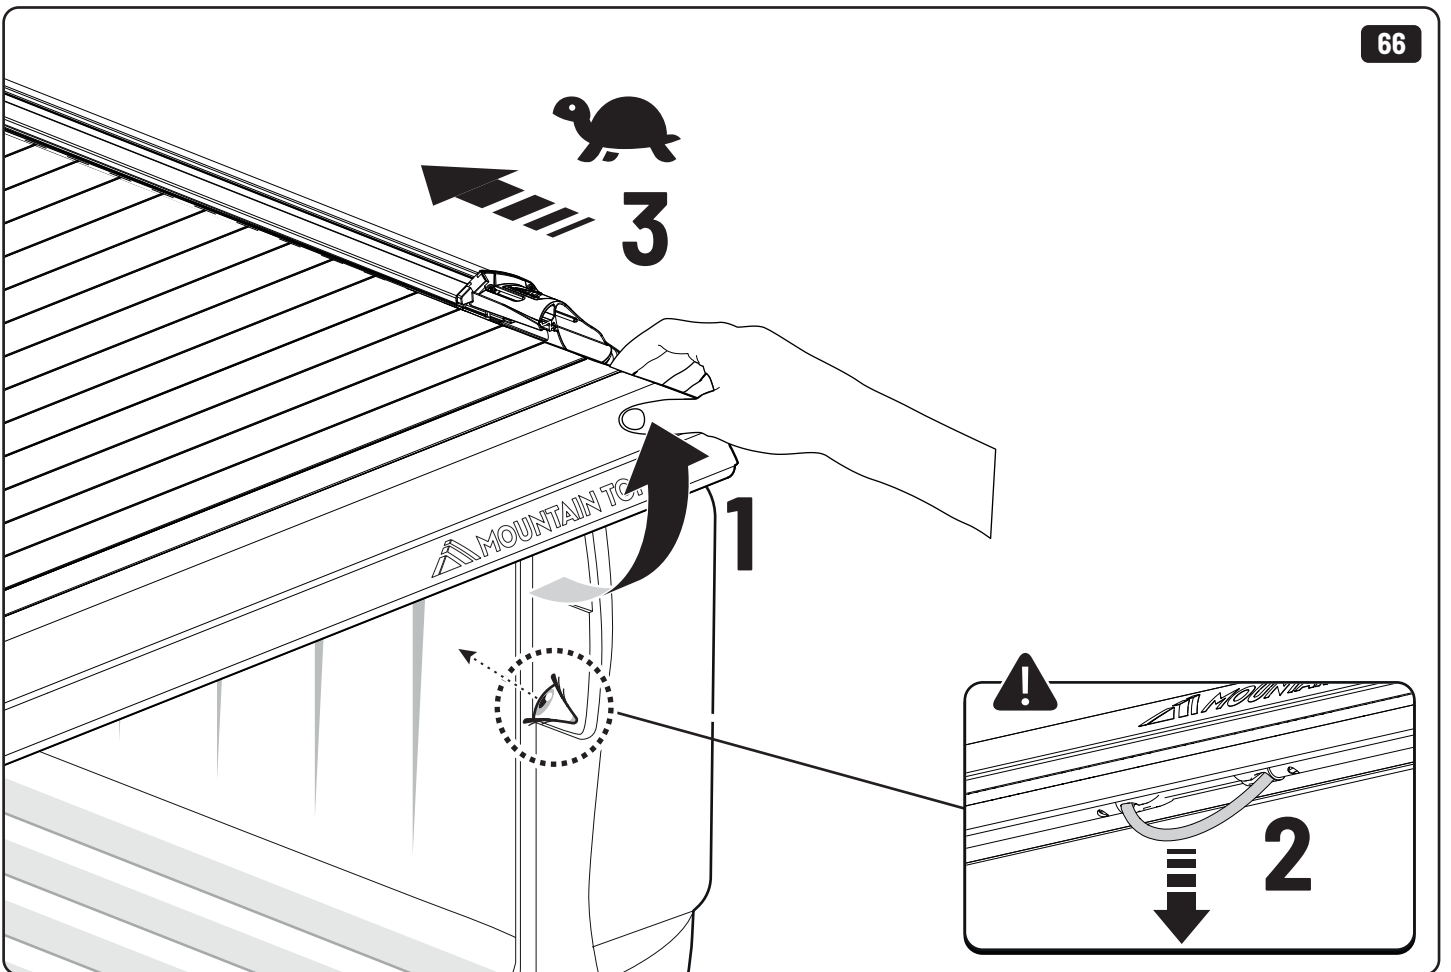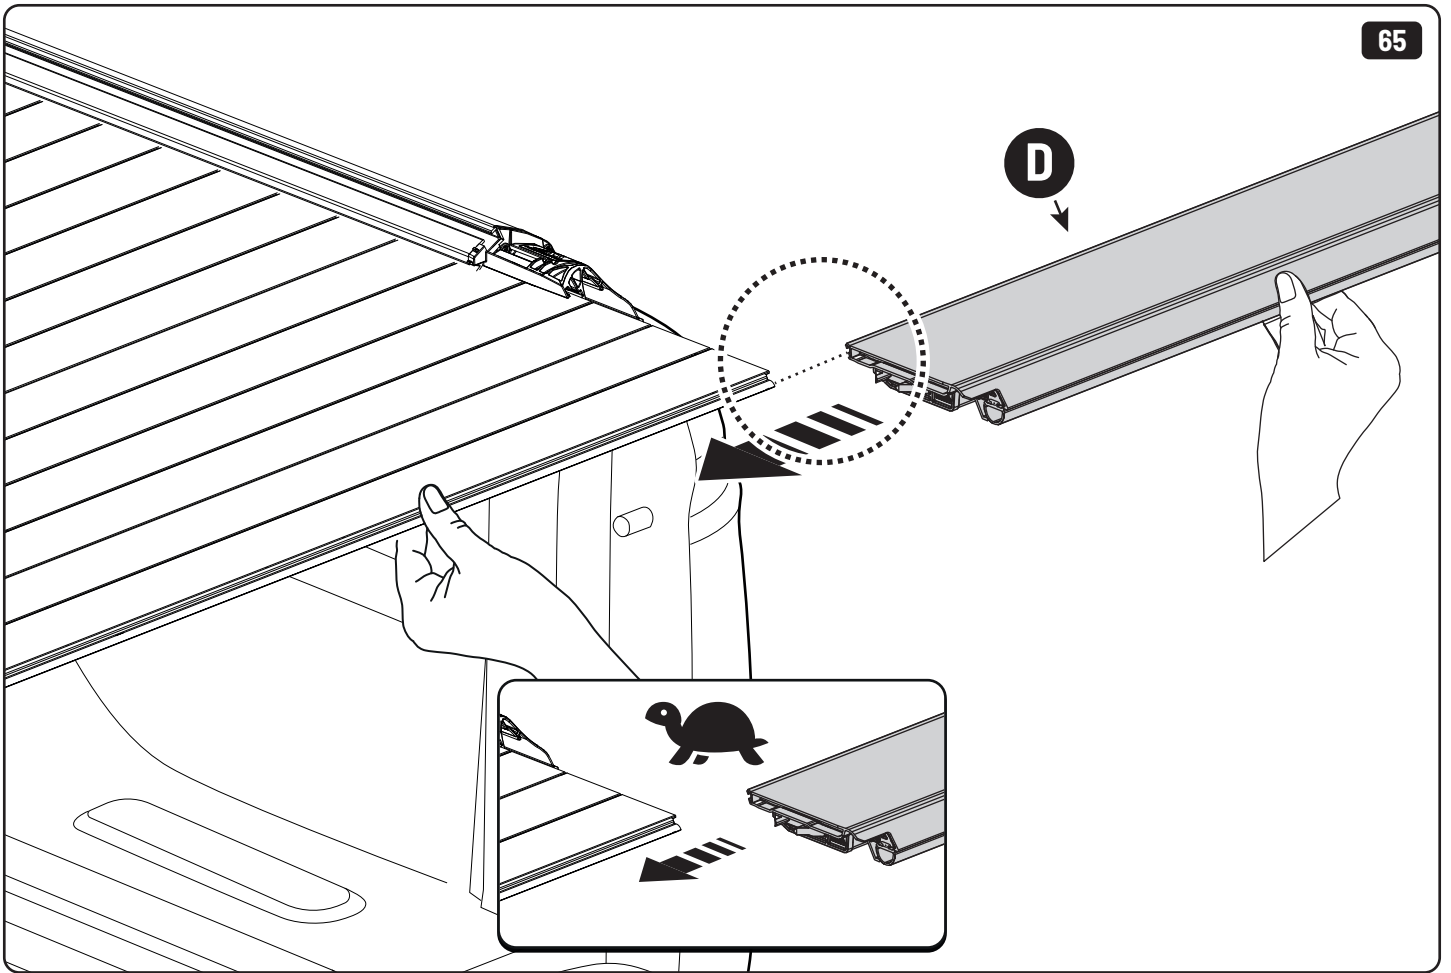

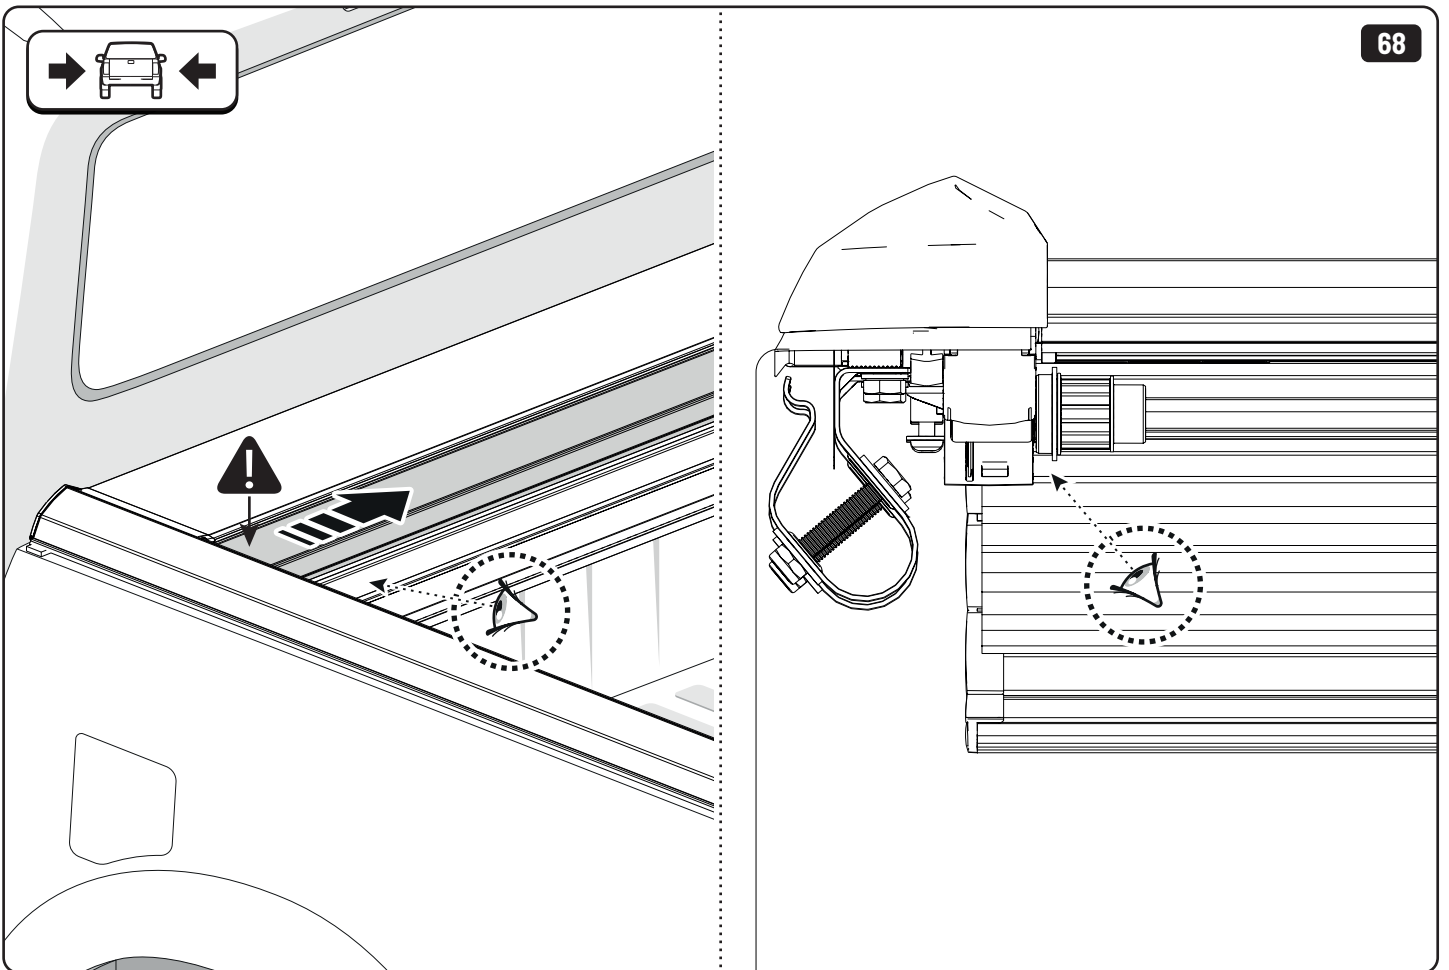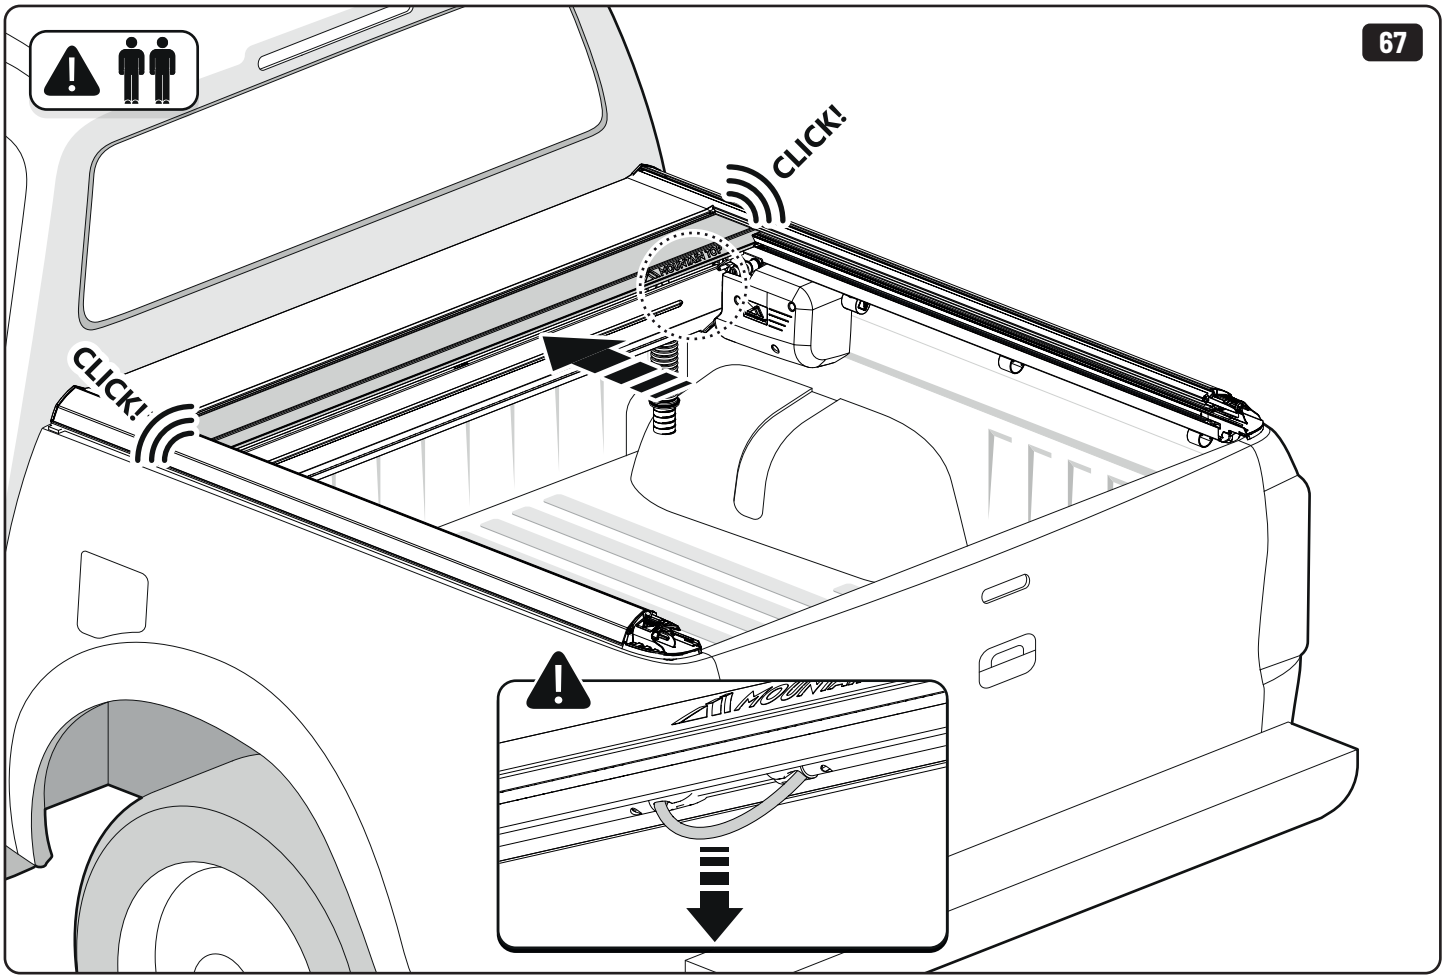


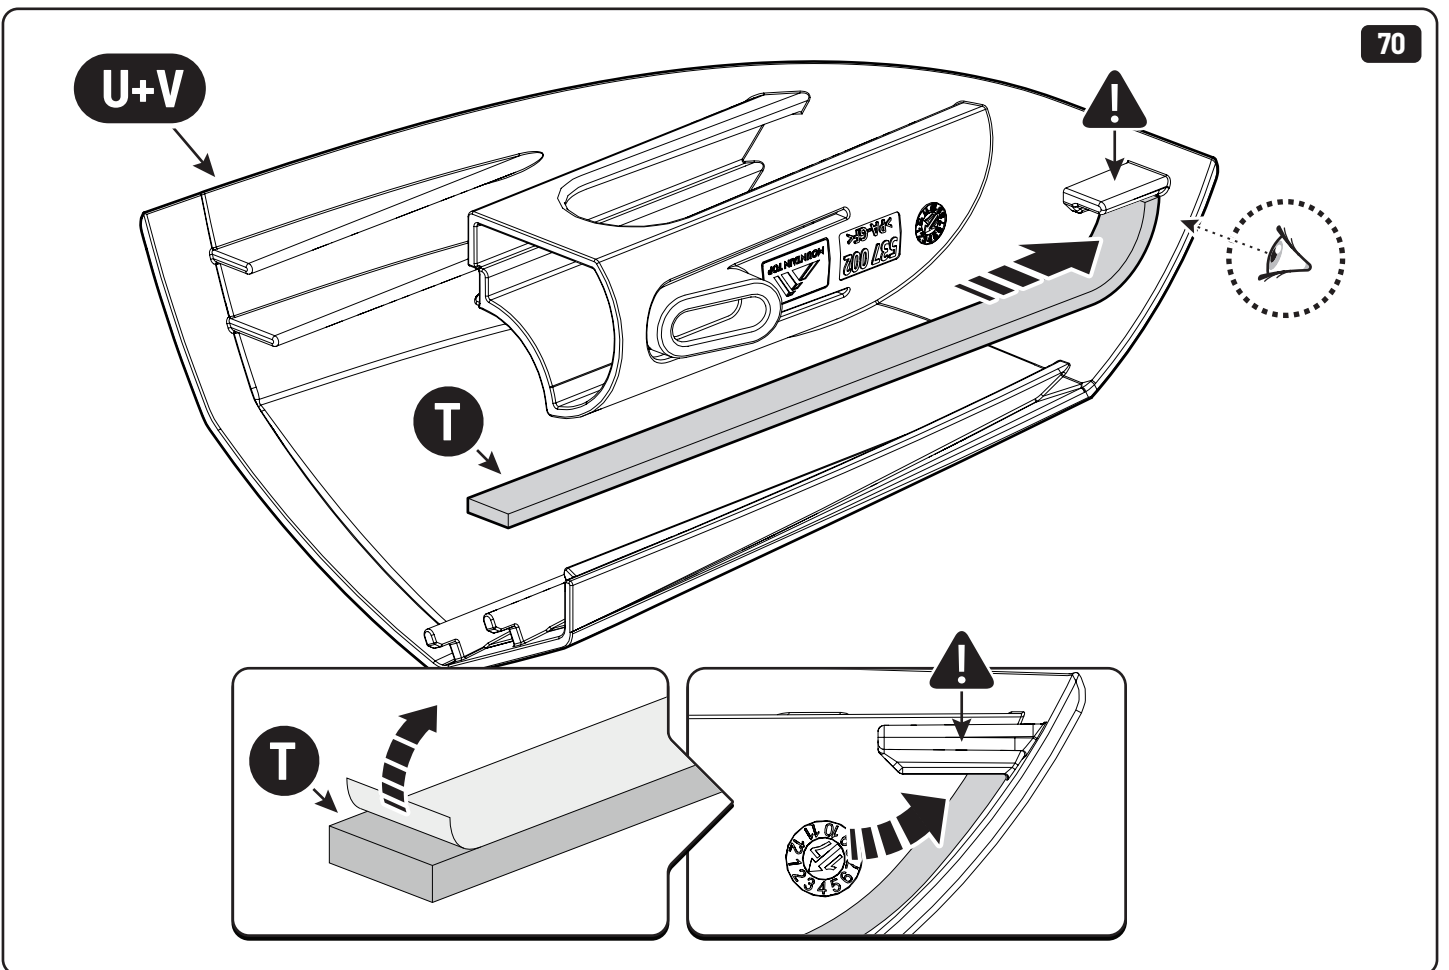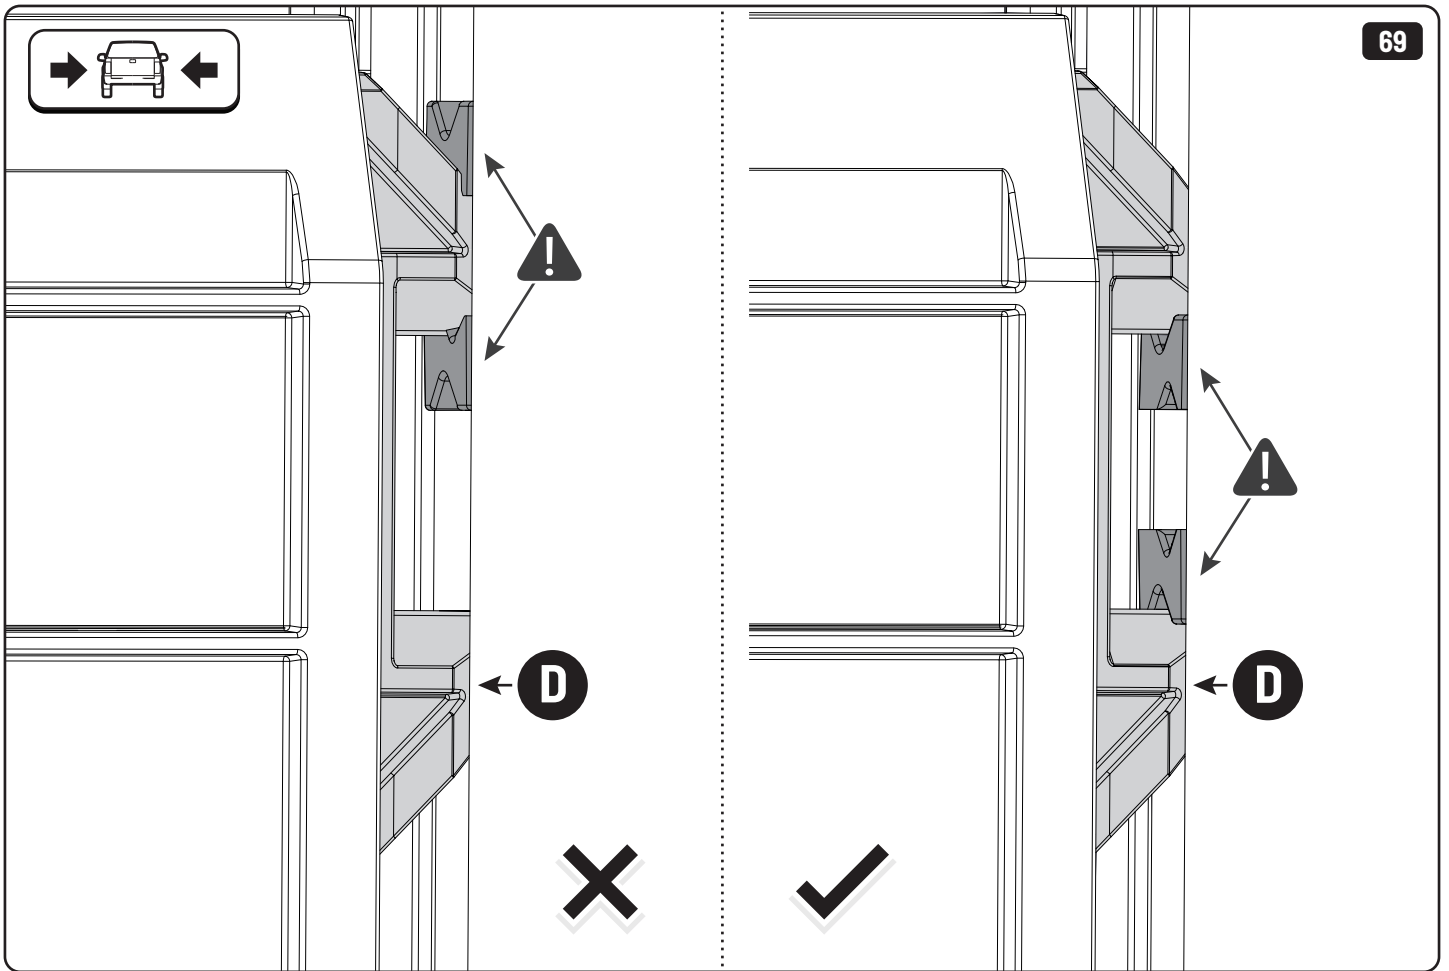

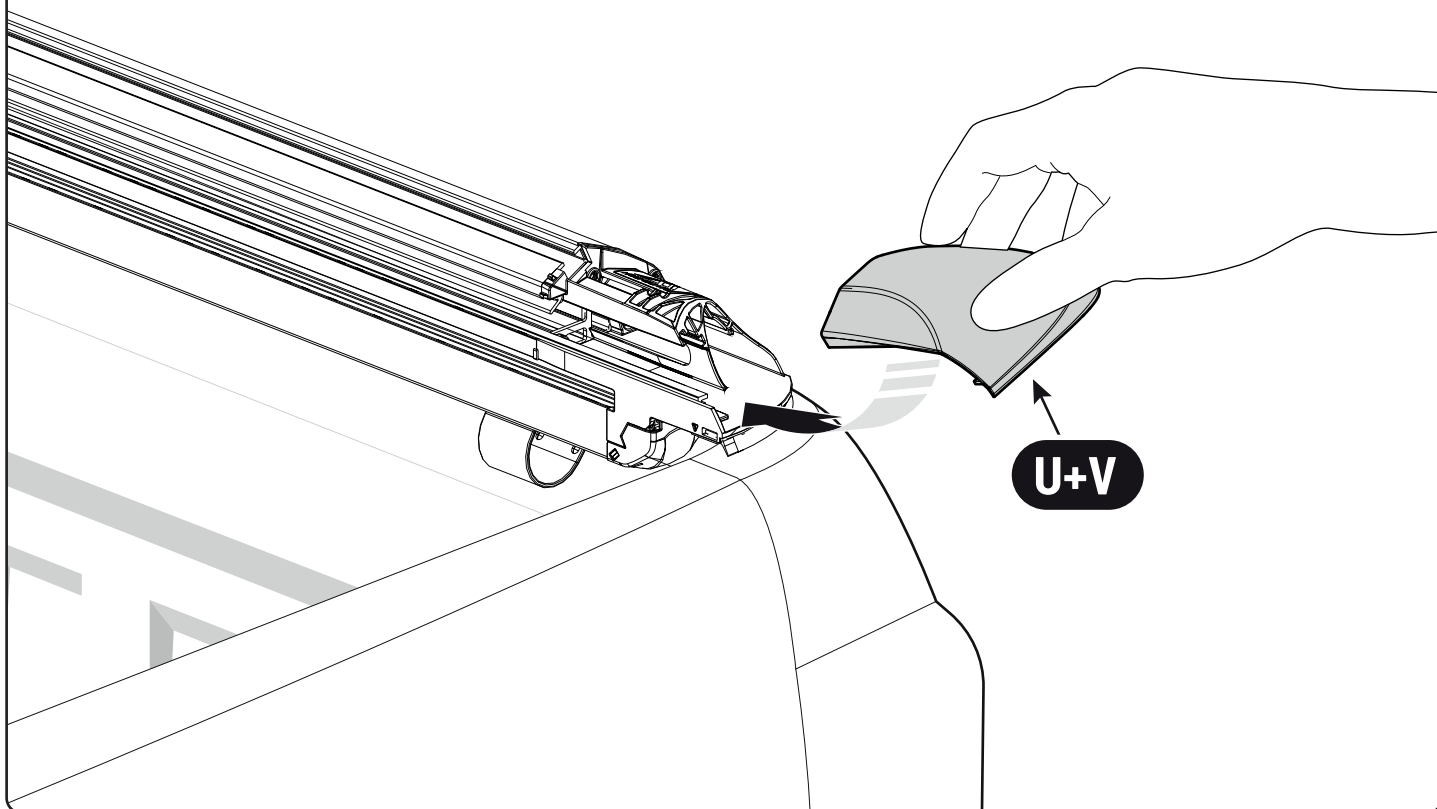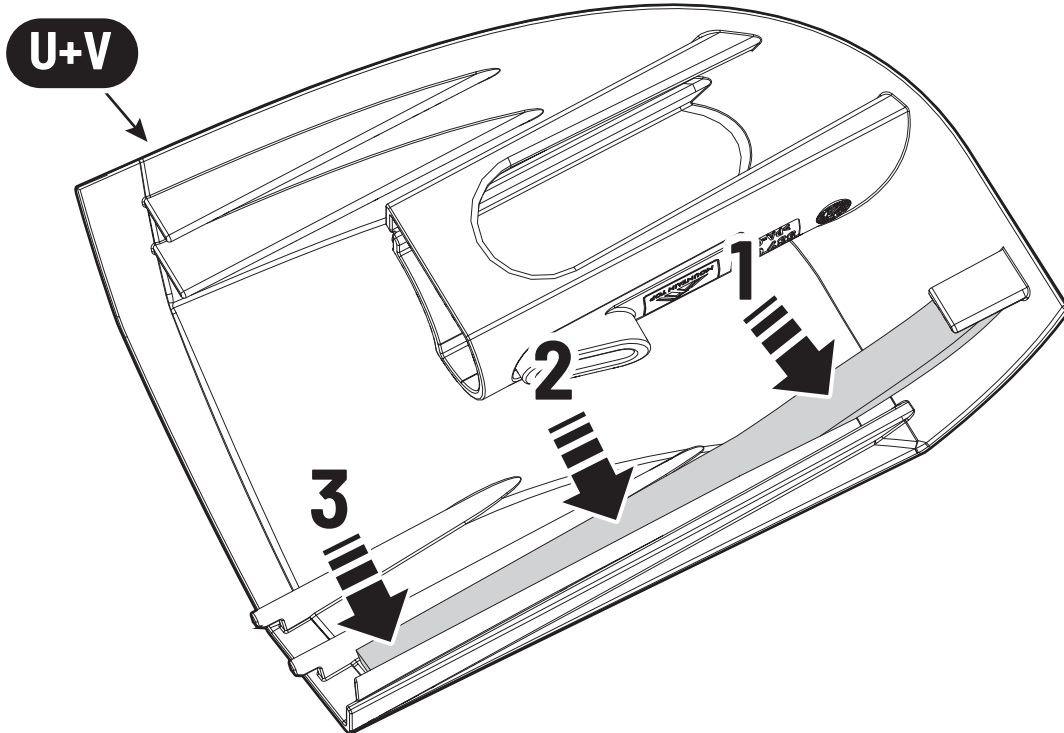





1


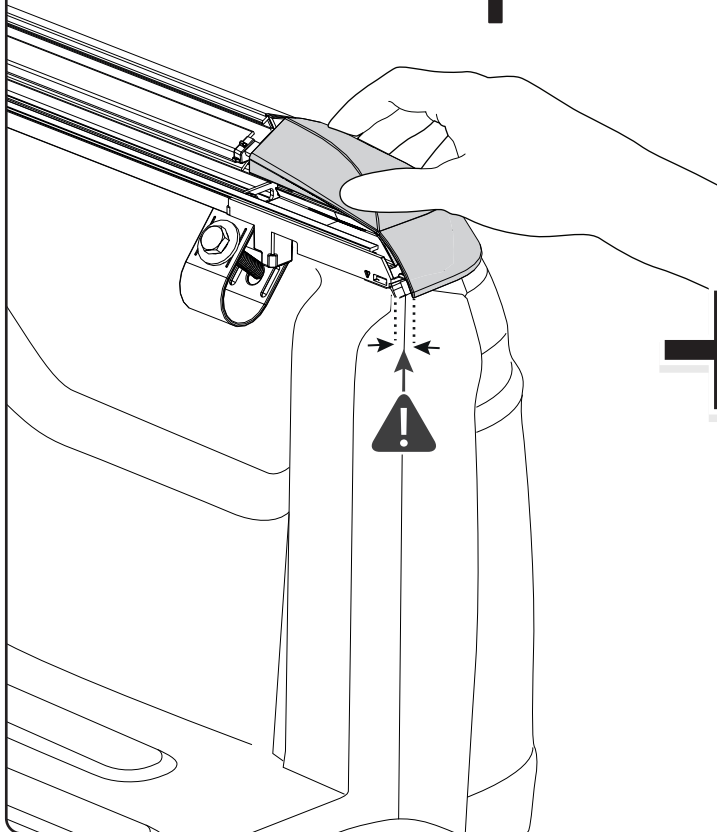




+

2


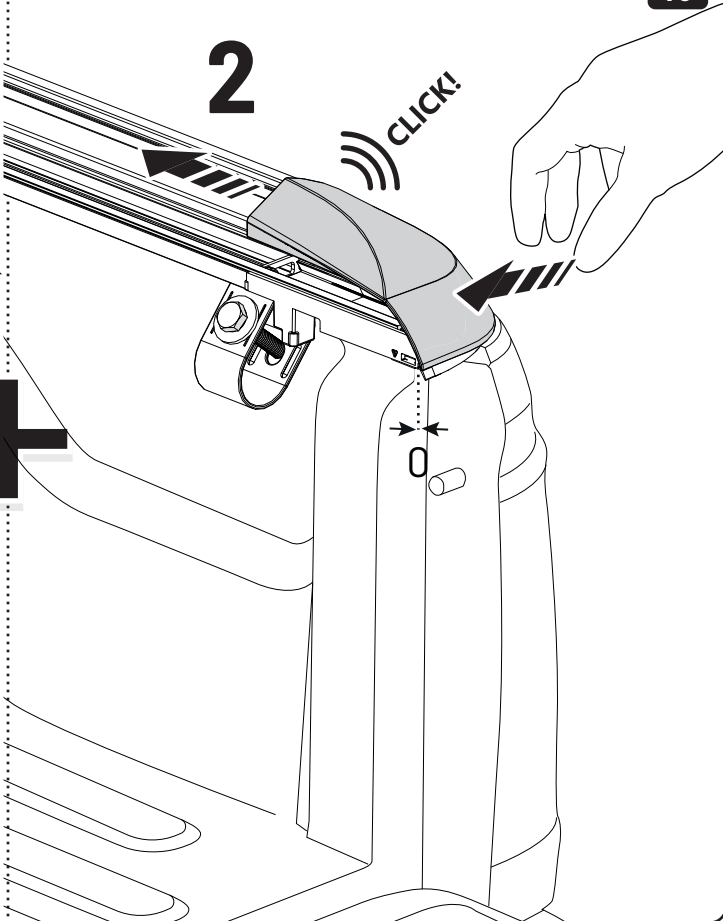


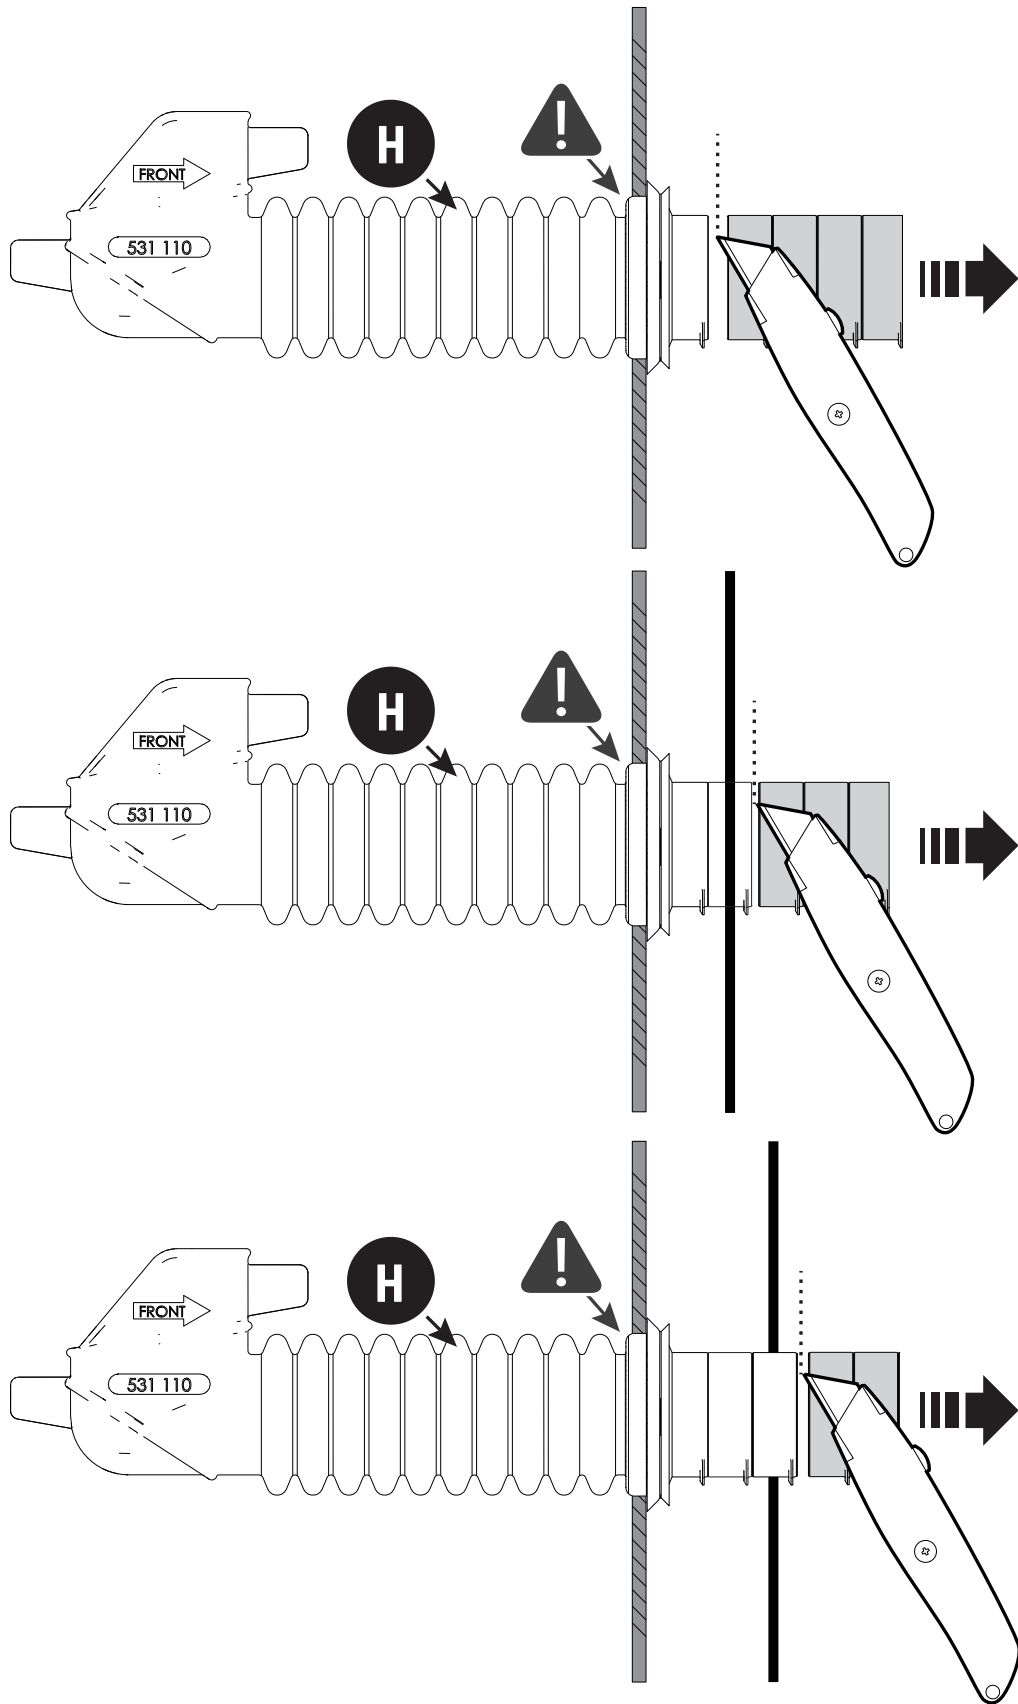

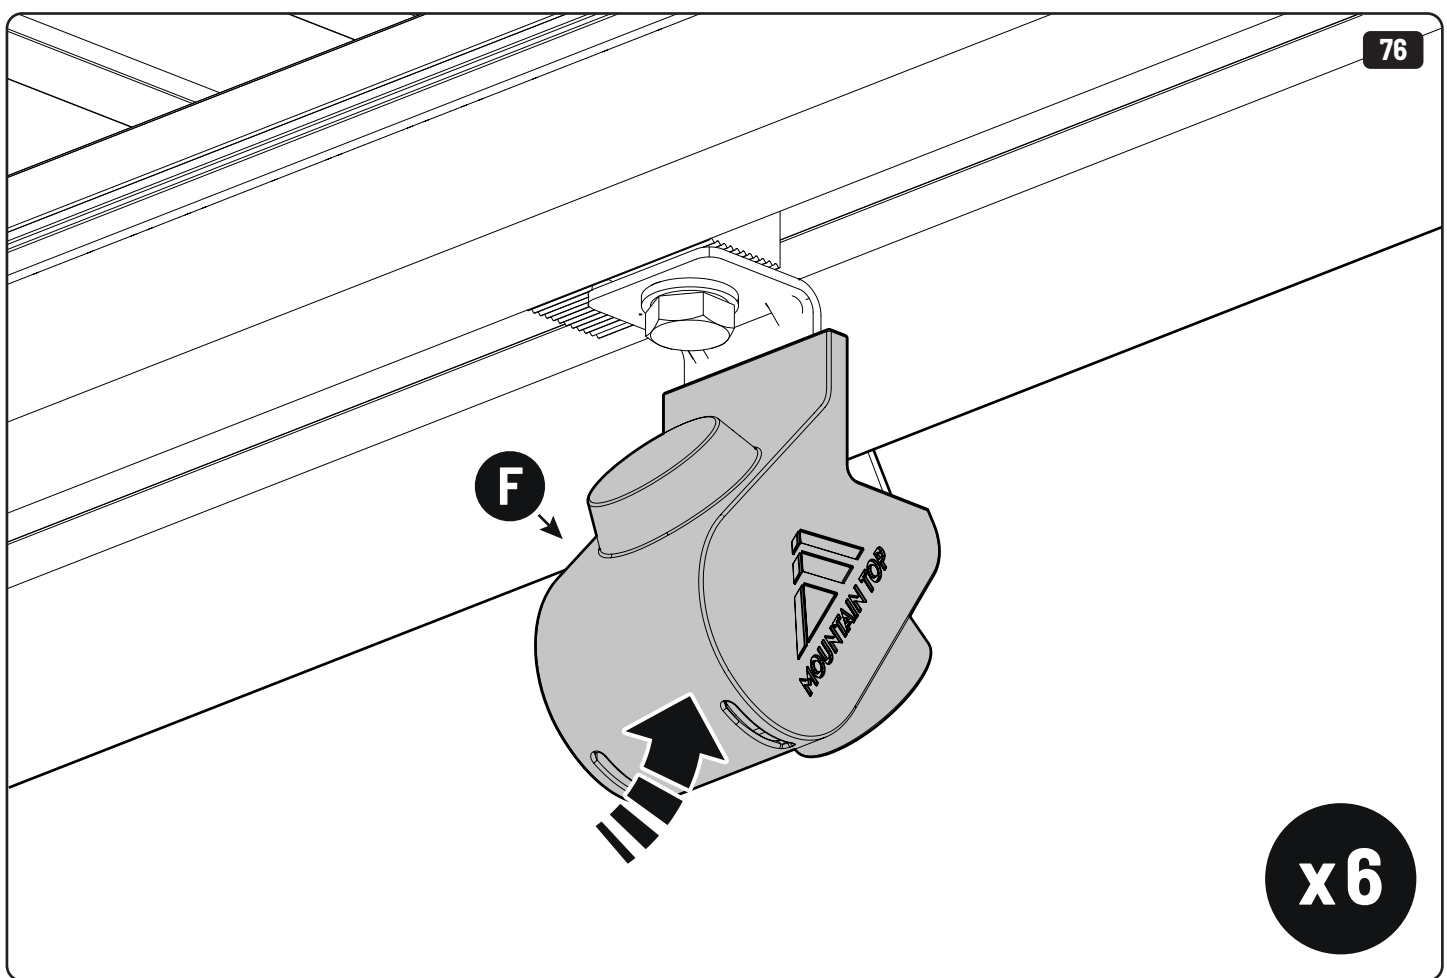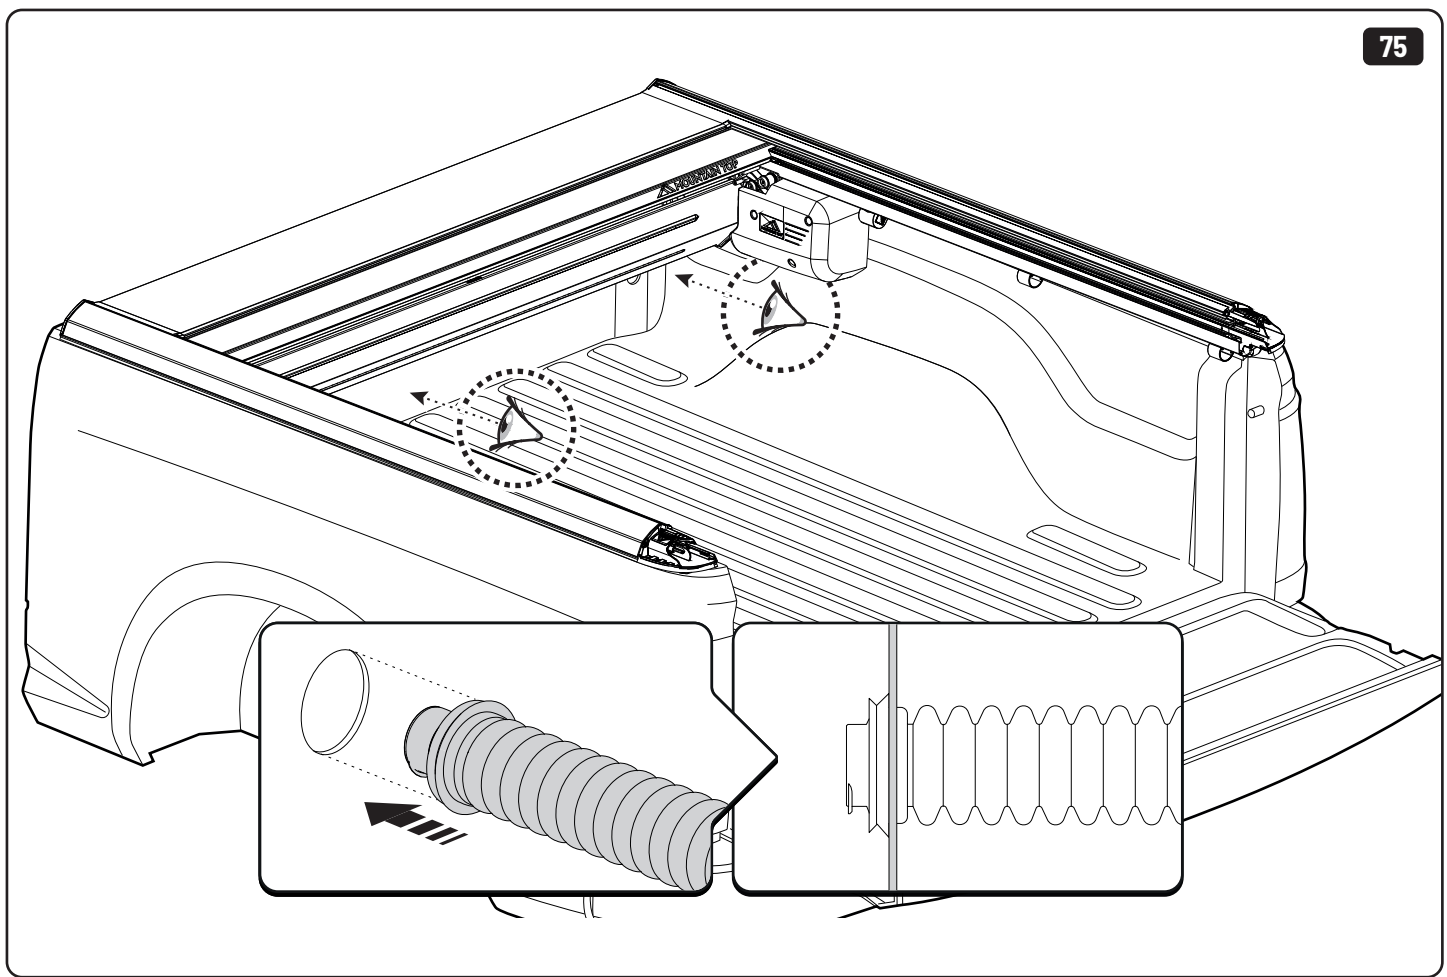

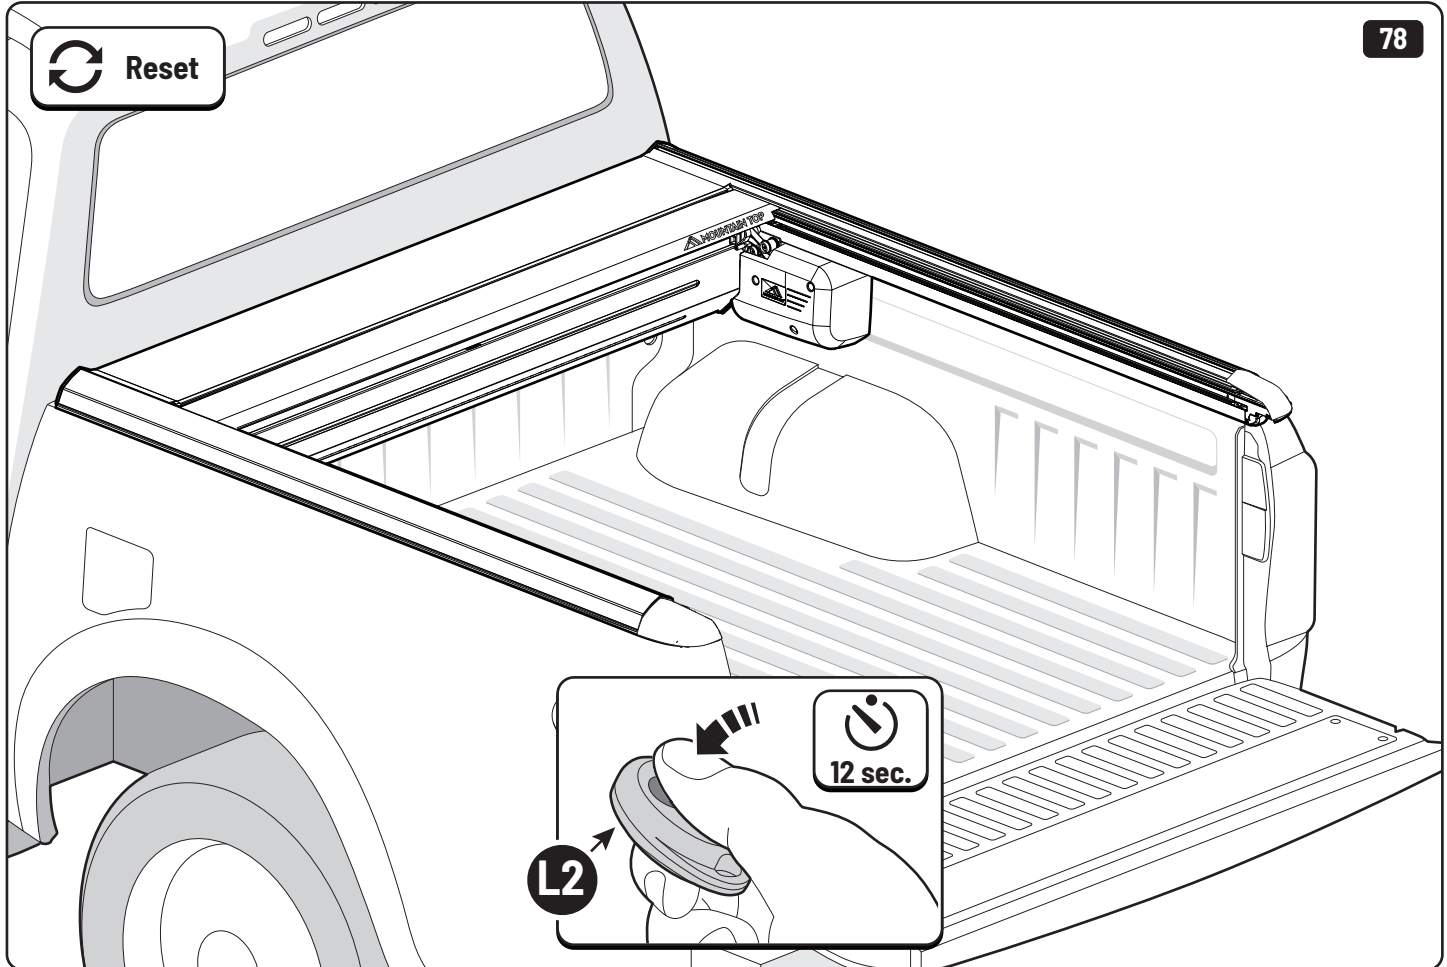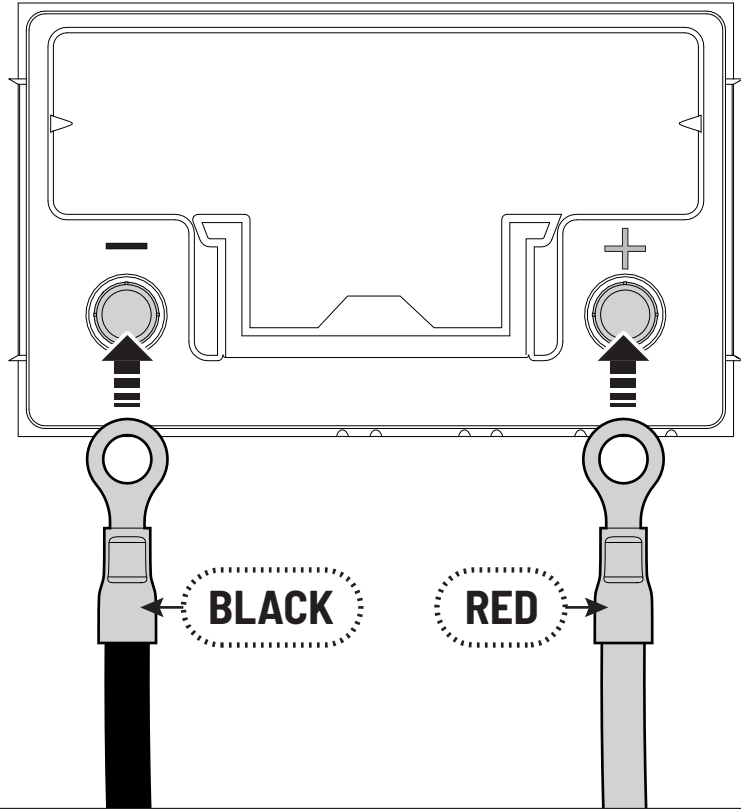

 Reset

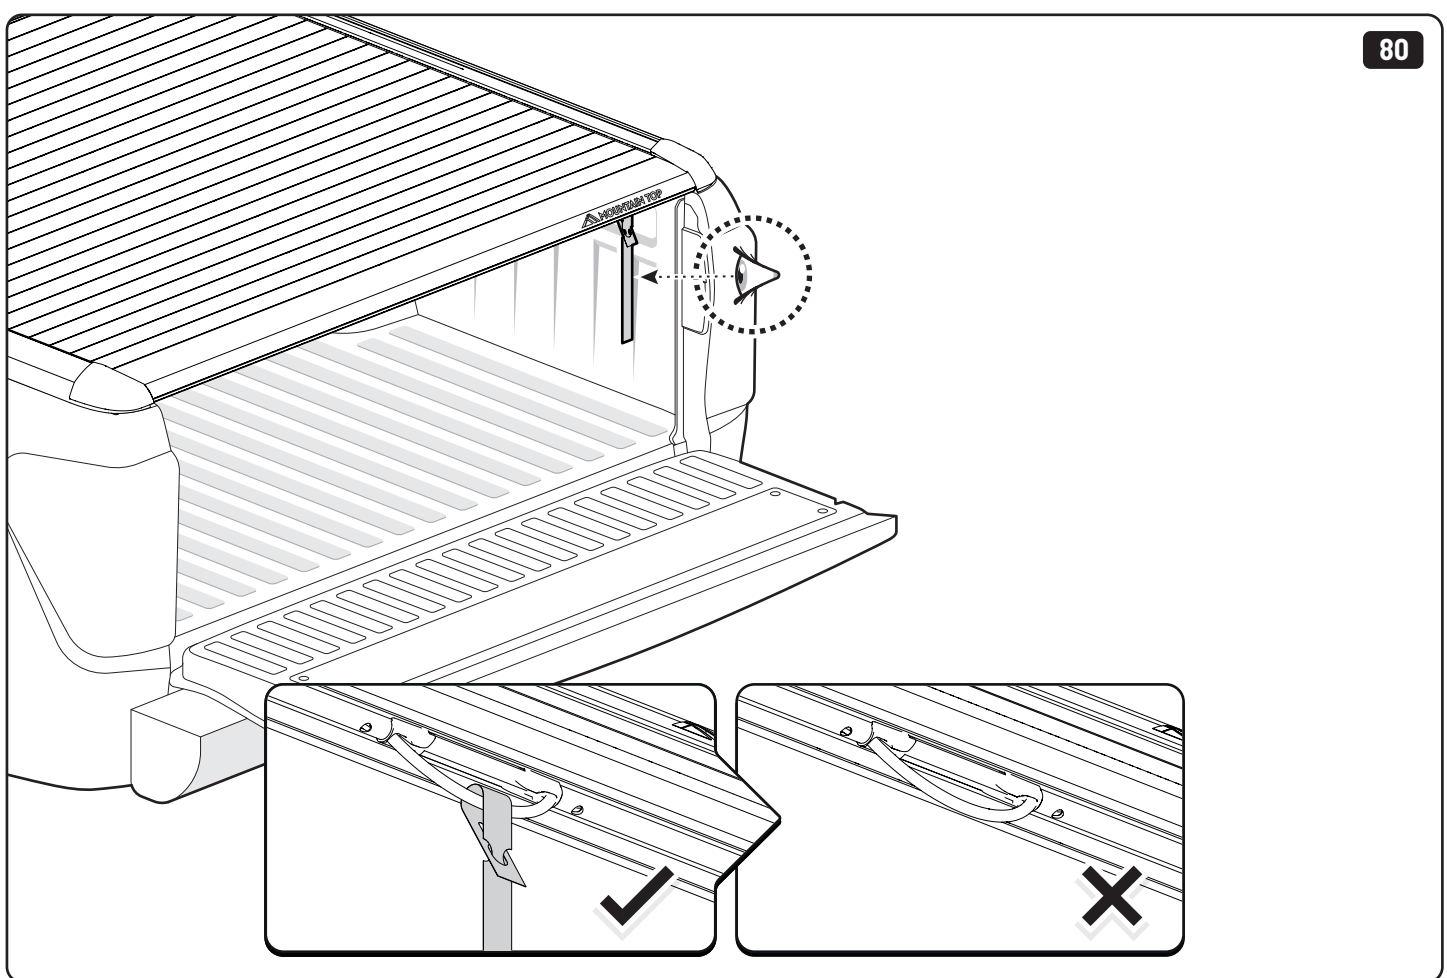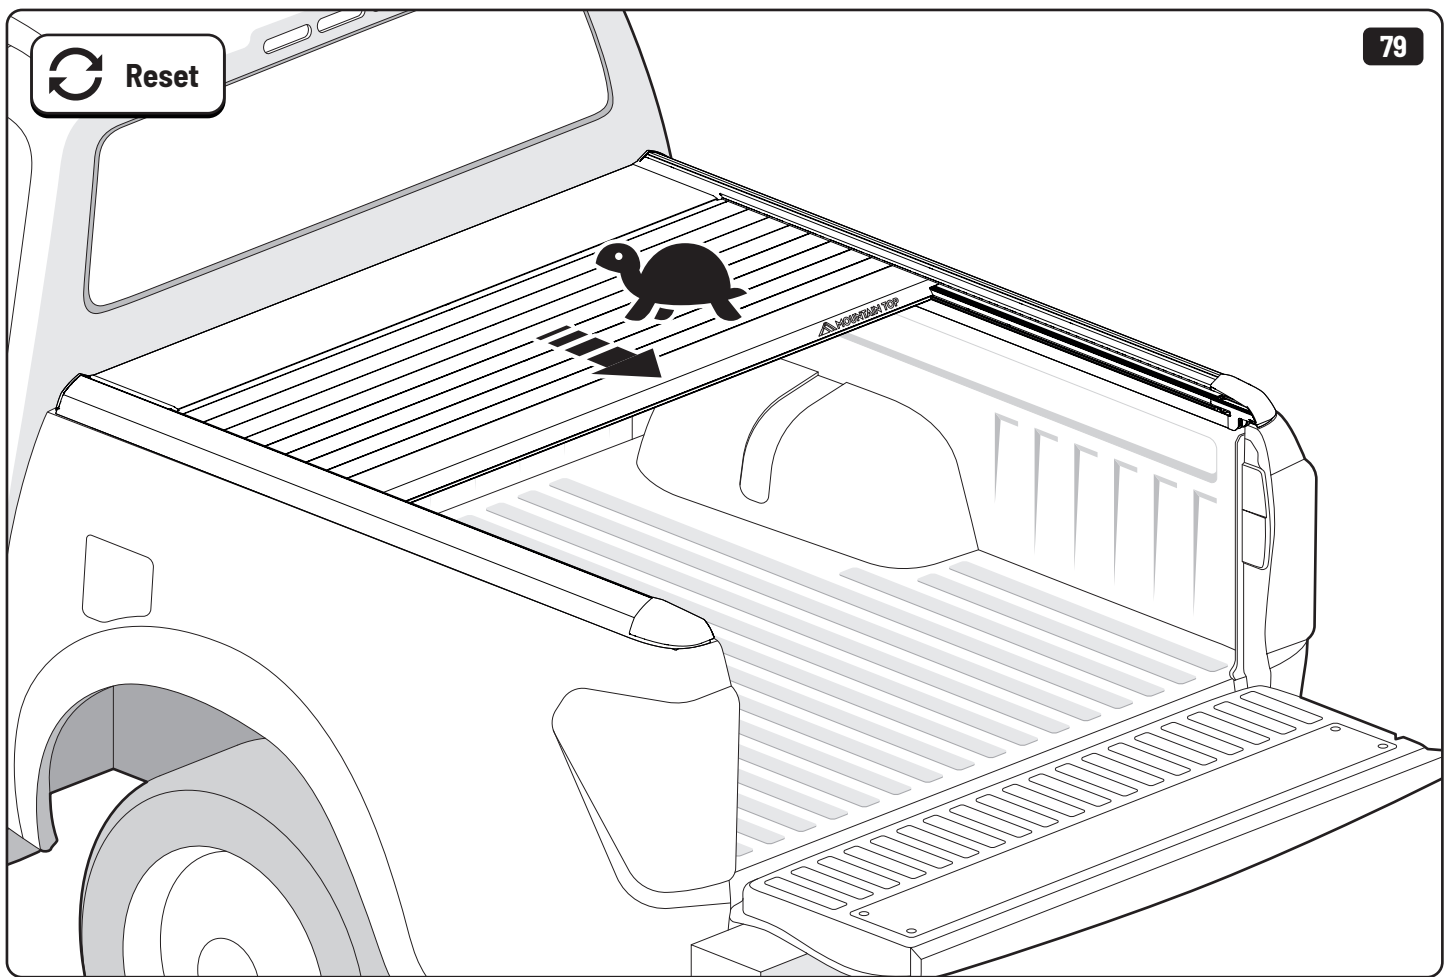



Steps	Page	Done by
Mounting rubber cross	9	
Mounting gliding rail in canister	14-15	
Holes for drain	23-25	
Width + Cross measurement	35	
Tightening the clamp screw	36-37	
Mounting drain	44-45	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EVOe T090 AB01	Hilux / 2016 ->	Double Cab	1 hour (s)	43 kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones di montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni di montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare