







REALTRUCK® MRC-2000

Installation manual




Ford Ranger | 2022 - TD
Volkswagen Amarok | 2022 - TD












Parts

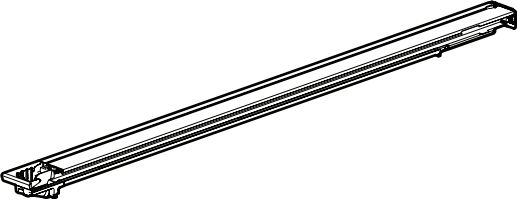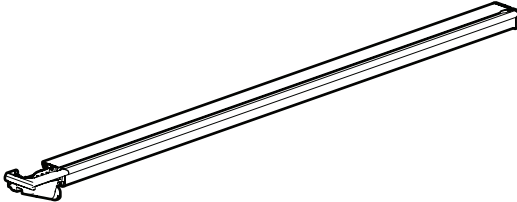
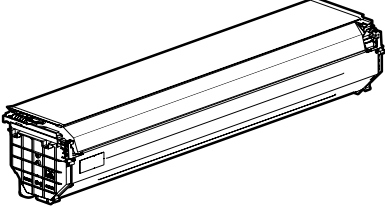
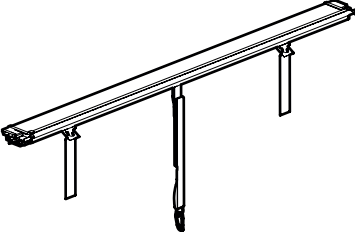
A  LEFT x1	B  RIGHT x1
C  x1	D  x1 02  x1




Kit




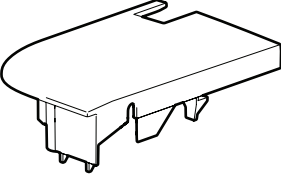
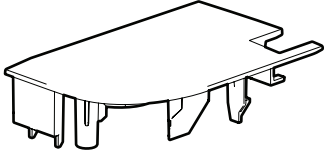

E  LEFT x1	F  RIGHT x1	02  x1
--	---	--

Kit

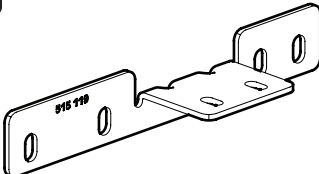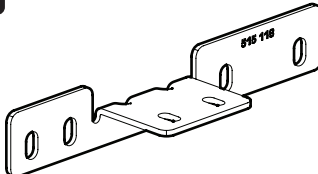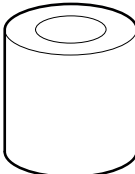
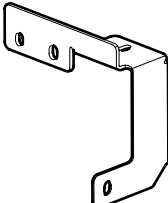
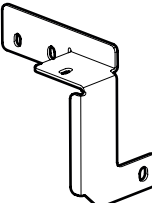
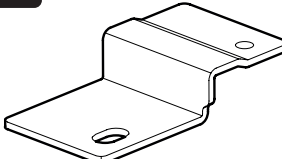
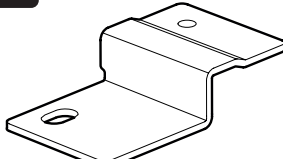


G  LEFT x1	H  RIGHT x1	I  x2		
J  LEFT x1	K  RIGHT x1	L  LEFT x1	M  RIGHT x1	
N  M8x30 BLACK x 6	O  M6x12 x 6	P  M6x20 x 10	Q  M6x12 BLACK x 2	P2  M6x16 x 4

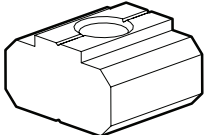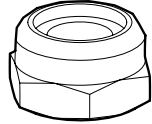Kit			
R  x 2	S  M6 x 10	T  M8 BLACK x 2	U  M6 x 10

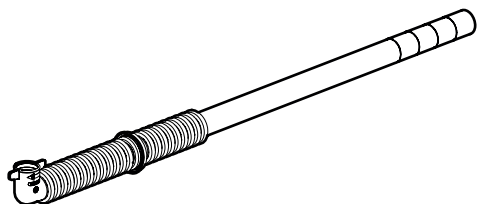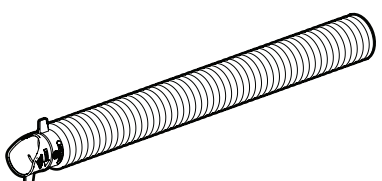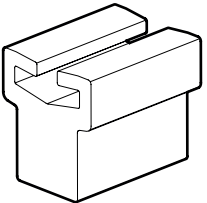
Kit			
V  x 2	W  x 2	X  x 2	Y  x 2
		Z  x 4	

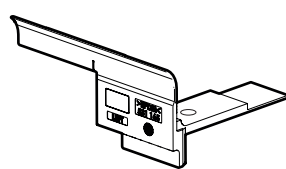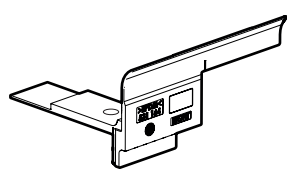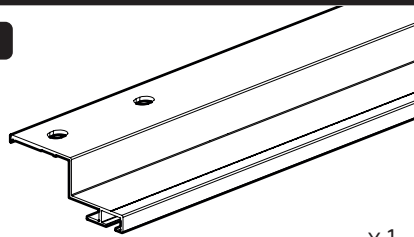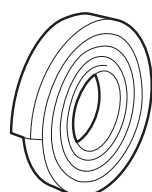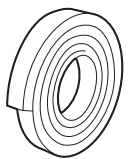Kit			
A2  LEFT x 1	B2  RIGHT x 1	C2  x 1	
D2  6x25mm x 1	E2  6x10mm x 1	F2  Ø5x14 x 2	G2  x 2


Optional WM/Kit Items, refer individual WM/Kits for application



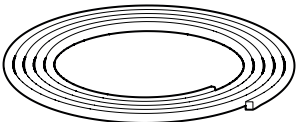
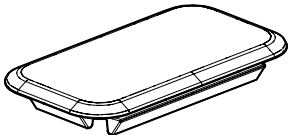
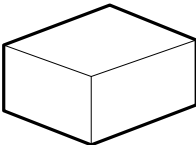
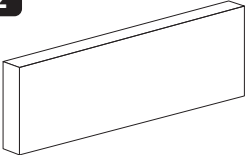
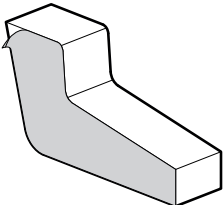
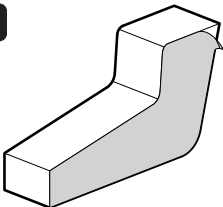
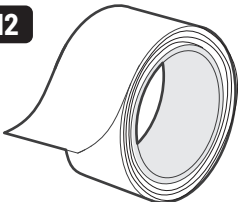
H2  14x14MM x 2	I2  x 6	J2  25x15MM x 2	
K2  94x25x6MM x 1	L2  LEFT x 1	M2  RIGHT x 1	N2  PROTECTIVE TAPE x 2

Manuals





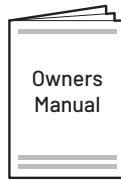
 Manual x 1	 TÜV x 1	 Owners Manual x 1
---	--	--

Applying rust protection

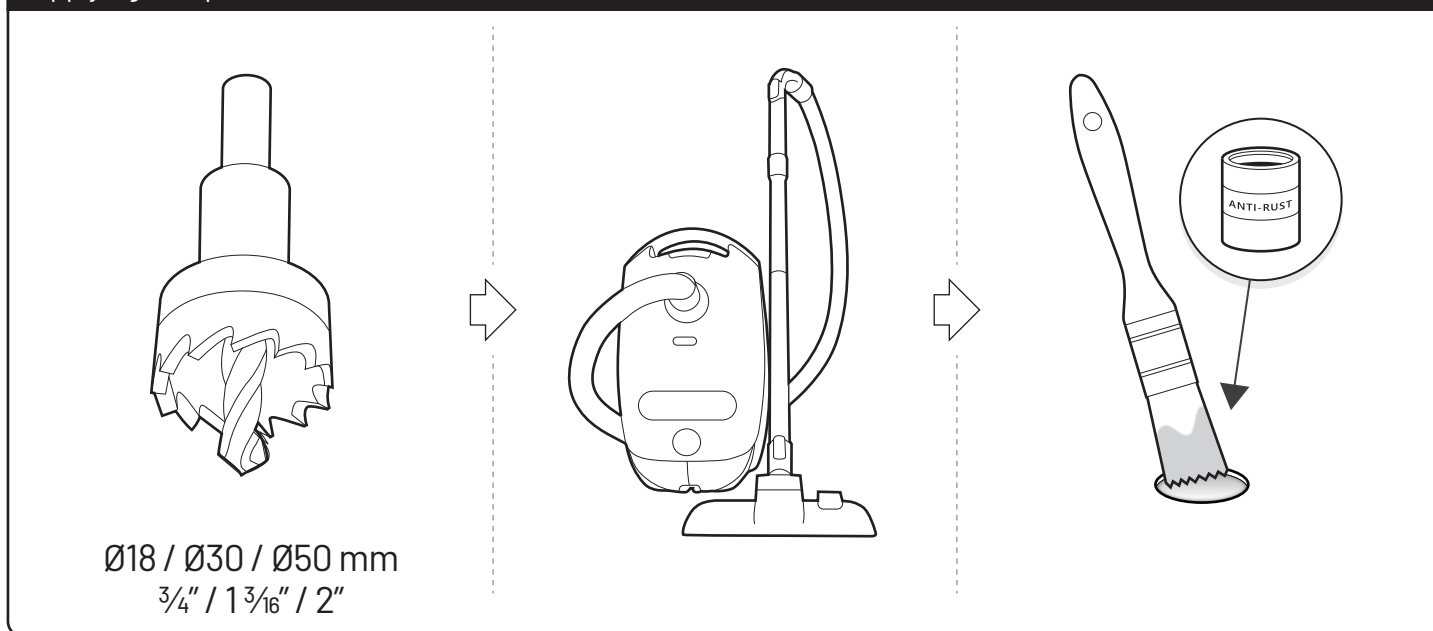

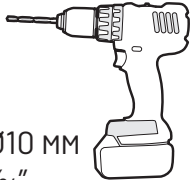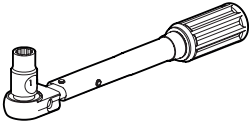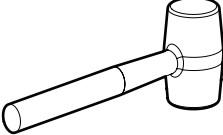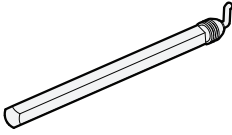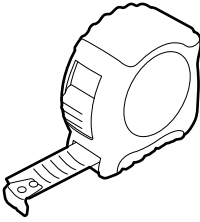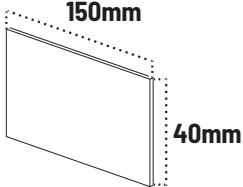Tools needed			
 Ø3.5 + Ø10 MM 9/64" + 25/64"	2 - 15 Nm  ✱ T20, T30, T45	 Rust protection Rostschuttmittel Anti-rouille Anti roest	 Masking/box tape
		 Silicone (RTV)	
			
 SUPER GLUE (CA)	 LOCTITE 243	 H₂O	 150mm 40mm WOOD / PLASTIC BOARD

WATER MANAGEMENT KIT VEHICLE COMPATIBILITY

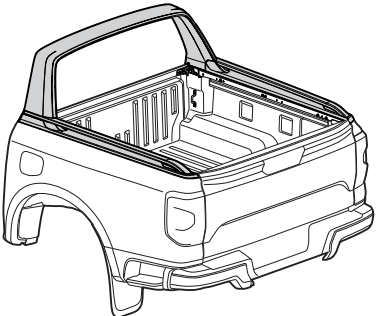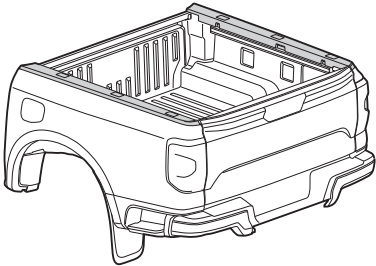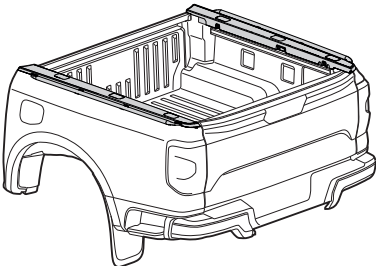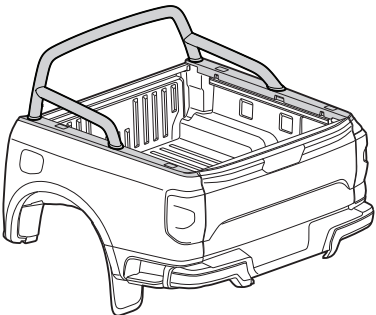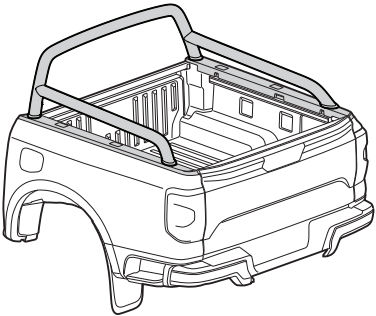
ILLUSTRATION	PART NUMBER	VEHICLE CONFIGURATION DESCRIPTION
	EVO AC F010 HB02 Kit weight: 0,21 kg	HIGH SERIES WITH FIXED SPORTS HOOP / HIGH SERIES WITH ADJUSTABLE SPORTS HOOP
	EVO AC F010 HB01 Kit weight: 0,48 kg	FORD LOW SERIES / AMAROK LIFE/STYLE / AMAROK PANAMERICANA
		LOW SERIES WITH EXTERIOR TIE RAILS
	EVO AC F010 HB03 Kit weight: 0,63 kg	LOW SERIES WITH SHORT LEG SPORTS BAR
	EVO AC F010 HB04 Kit weight: 0,64 kg	LOW SERIES WITH LONG LEG SPORTS BAR




**If sheet metal is scratched during installation,
apply rust protection to damaged areas**











**Remove mass damper on tub
headboard prior to installing
Rollershutter (only applicable to
RAP CAB Variants)**

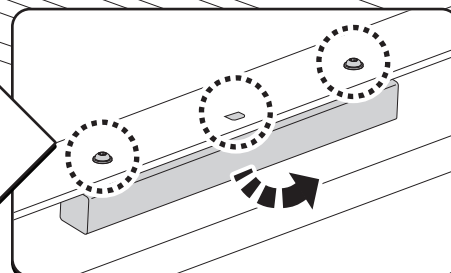

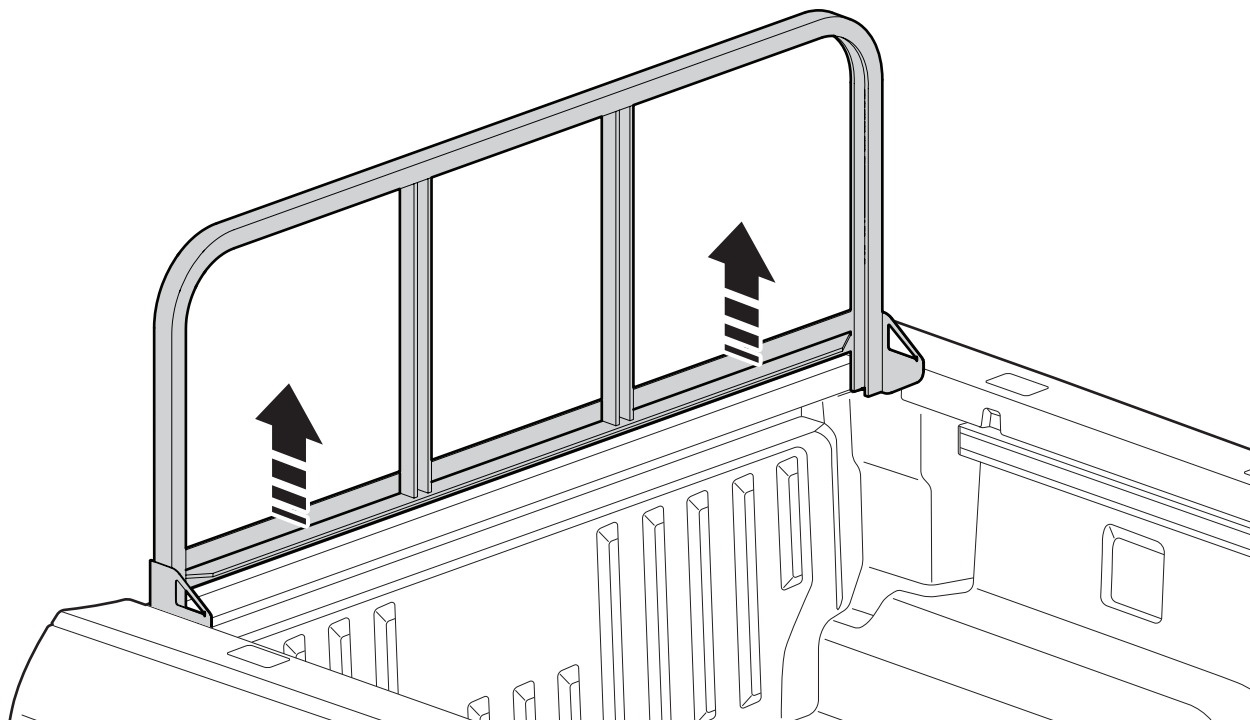


Rollershutter not compatible with load rest bar - part cannot be re-installed once Rollershutter have been installed (store parts)

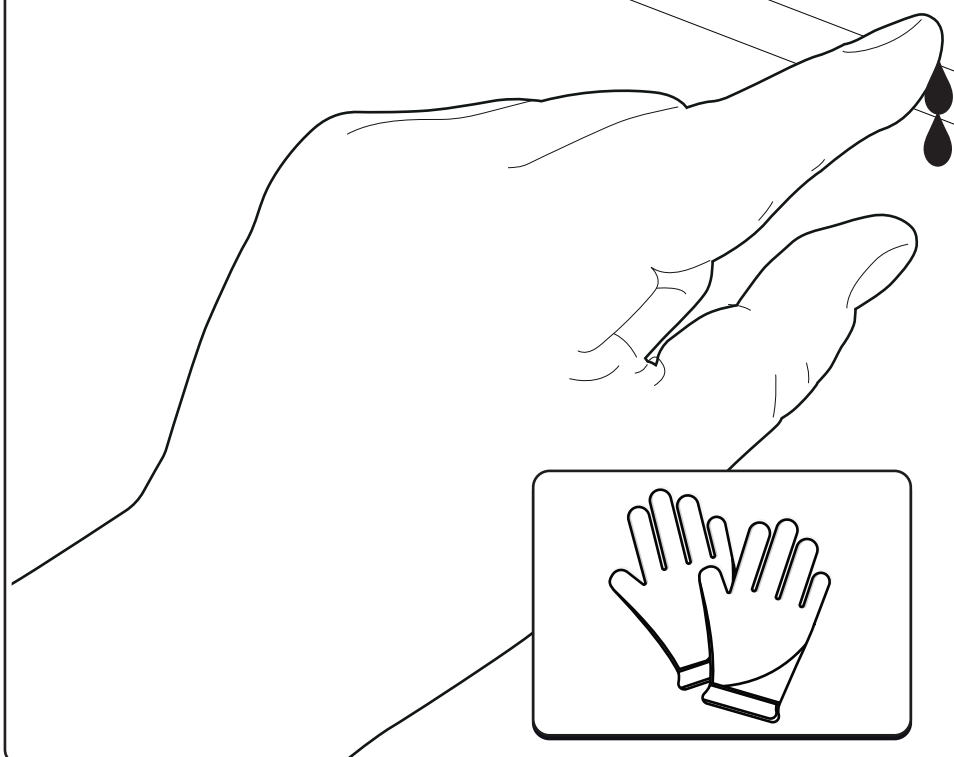

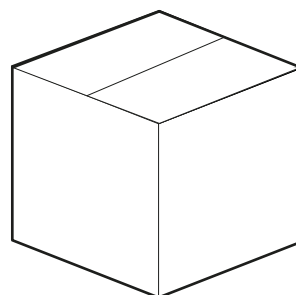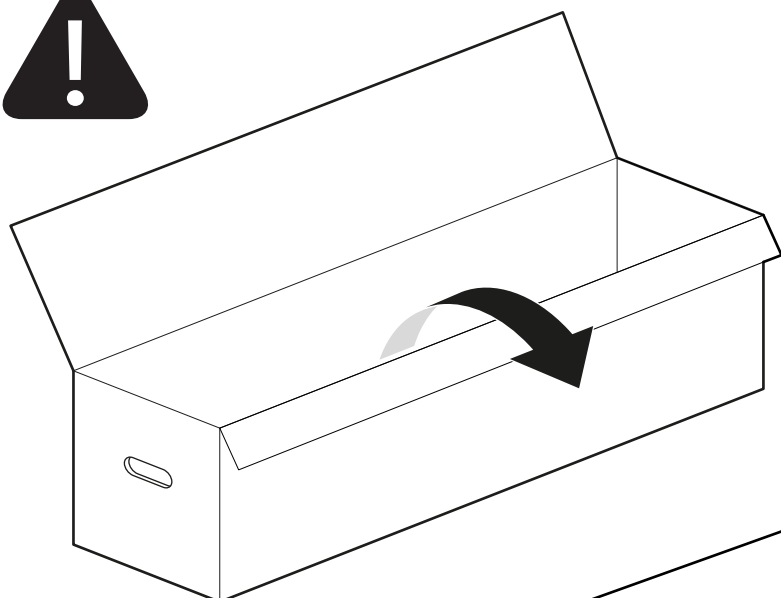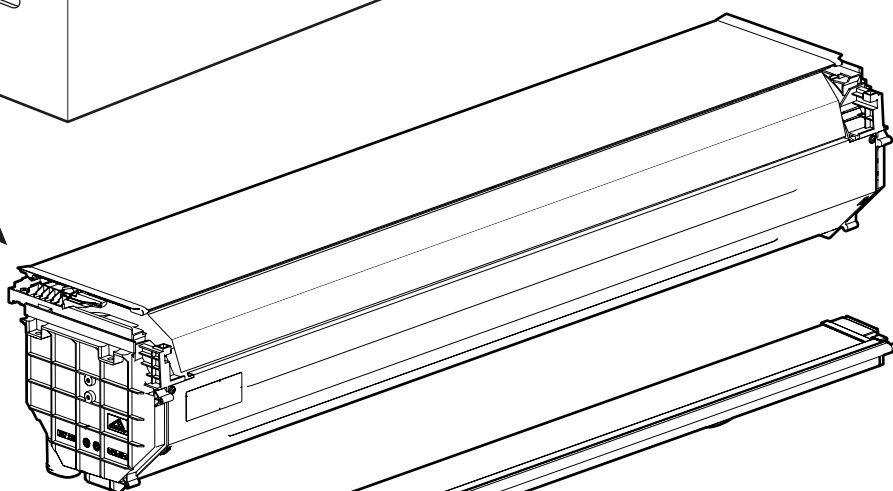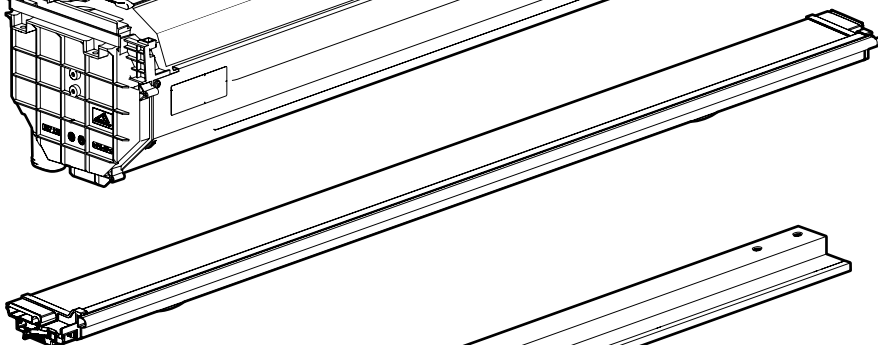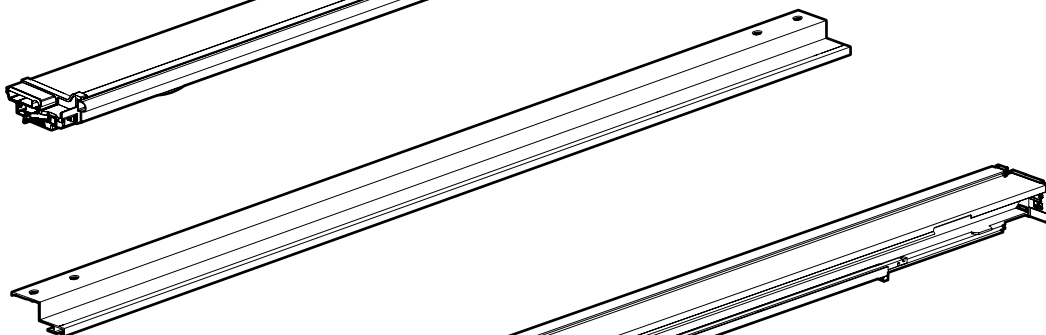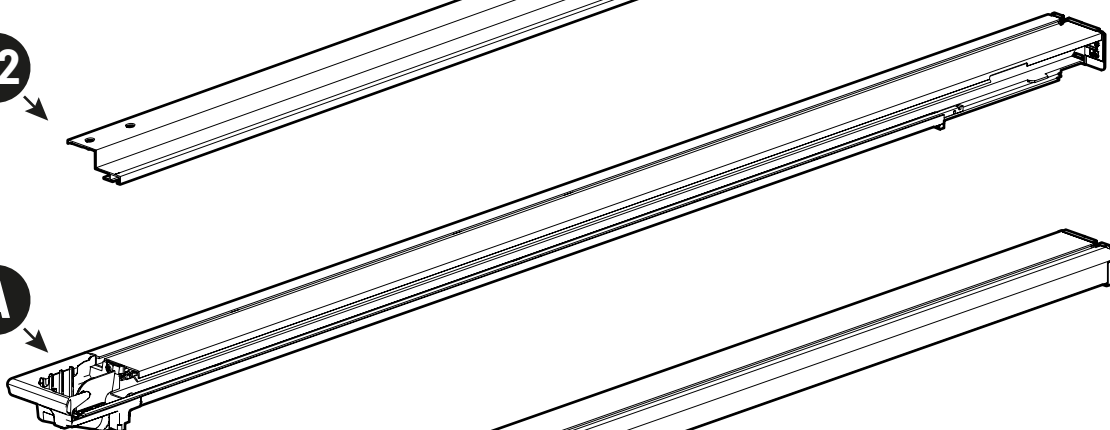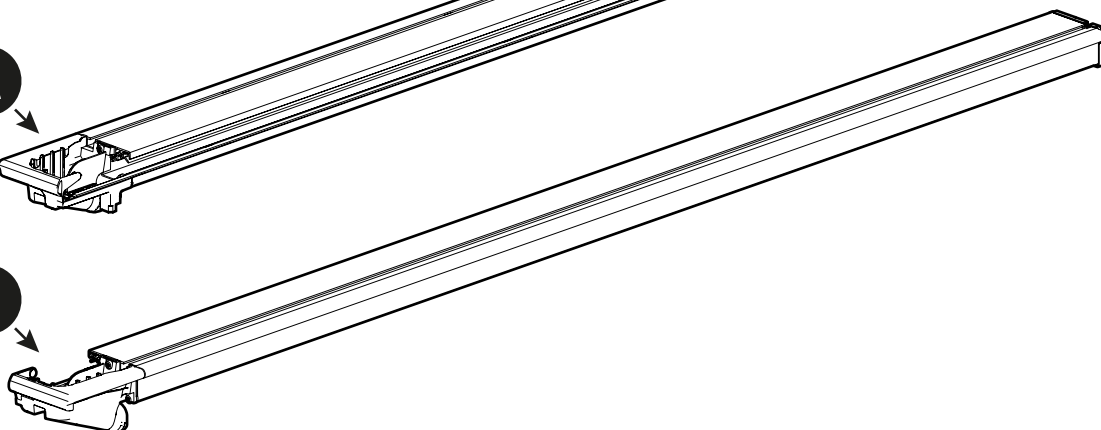
**C****D****C2****A****B**




Water & sponge





2

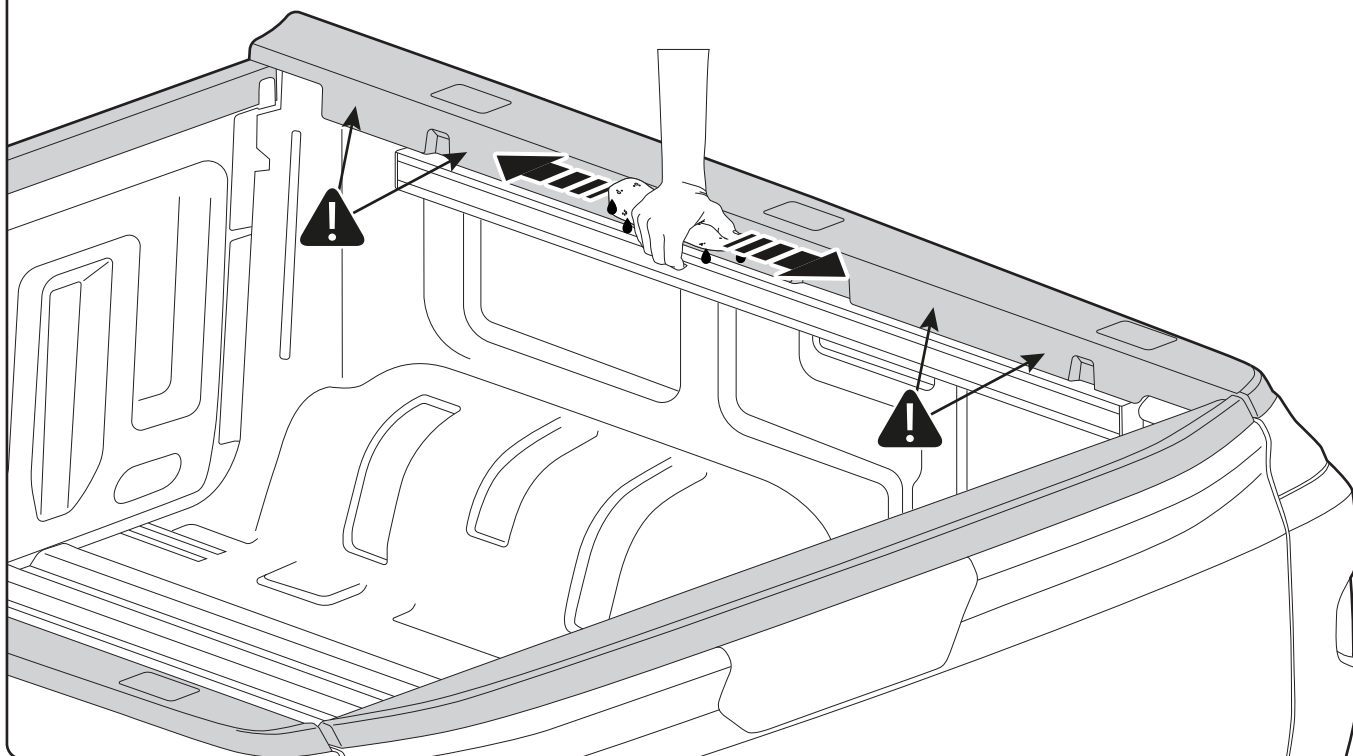

3

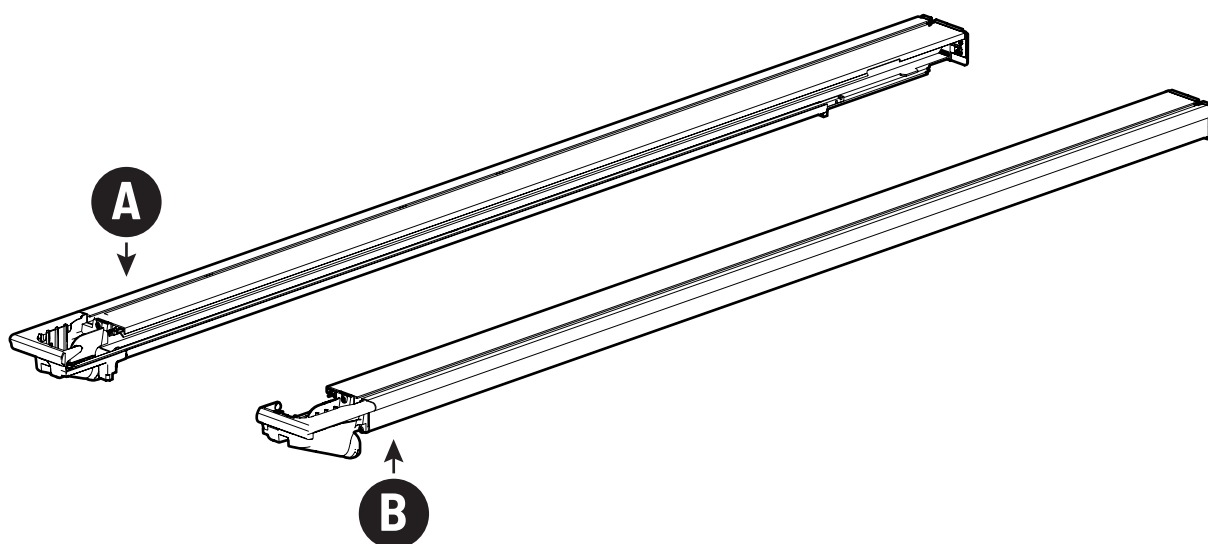


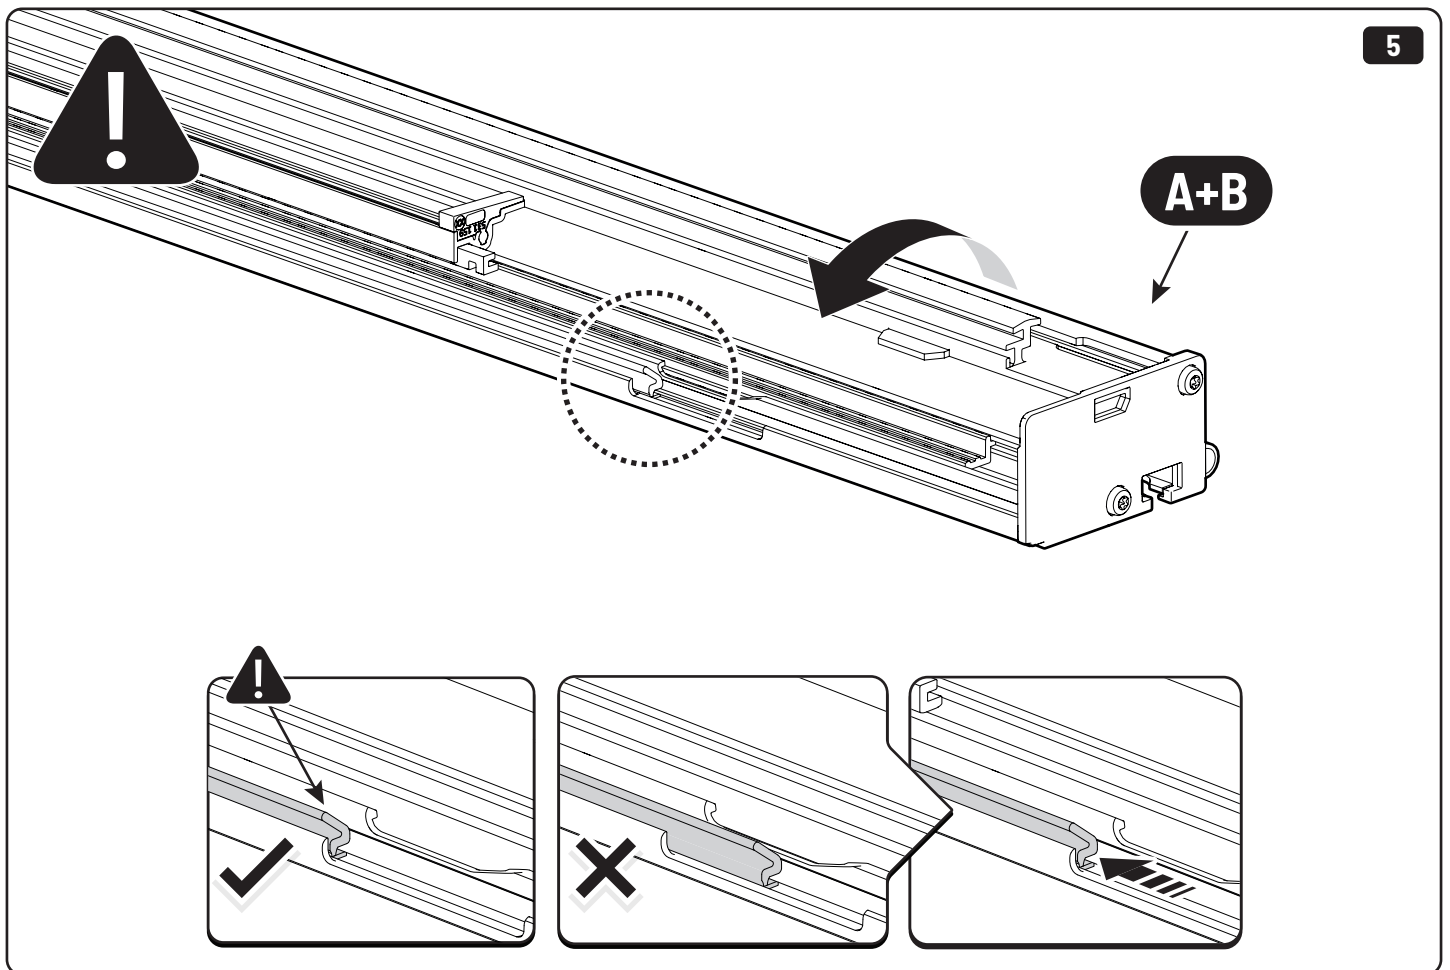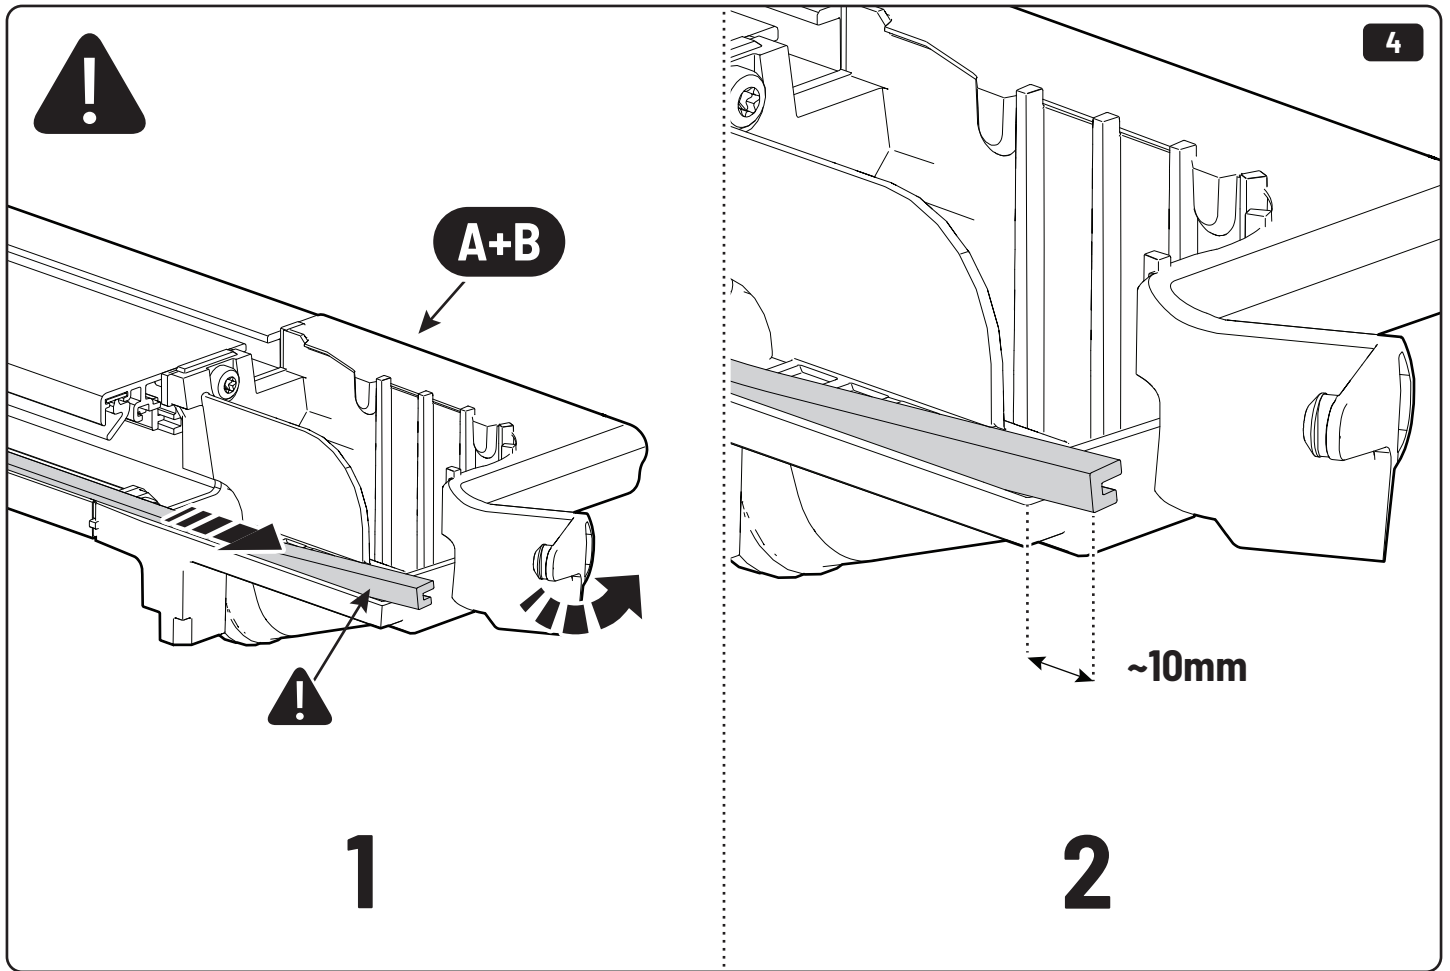







Double Cab $X > 37\text{mm}$ | Rap Cab $X > 115\text{mm}$



6


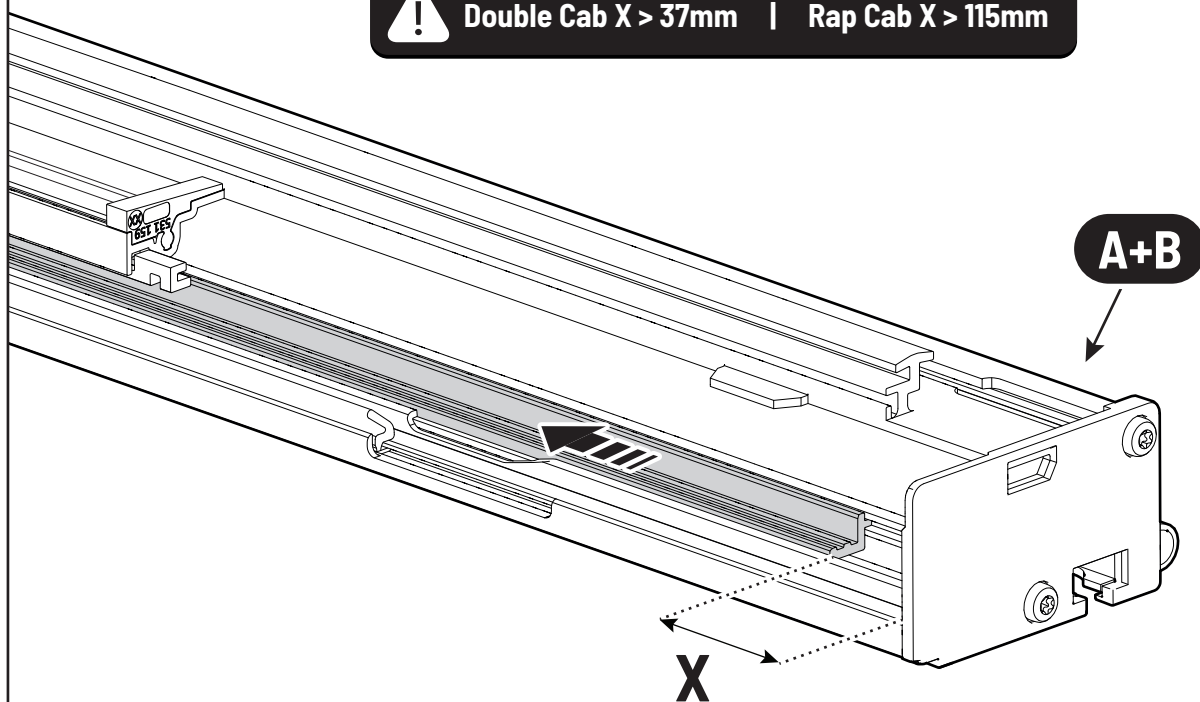




7


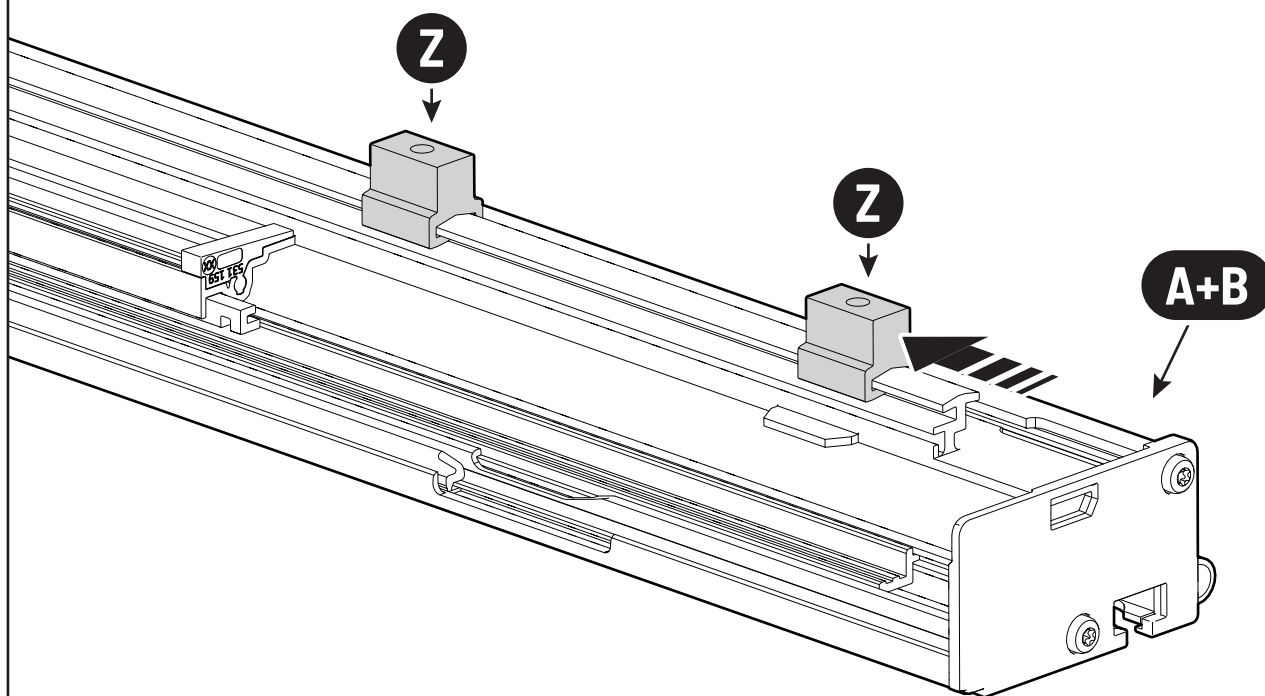


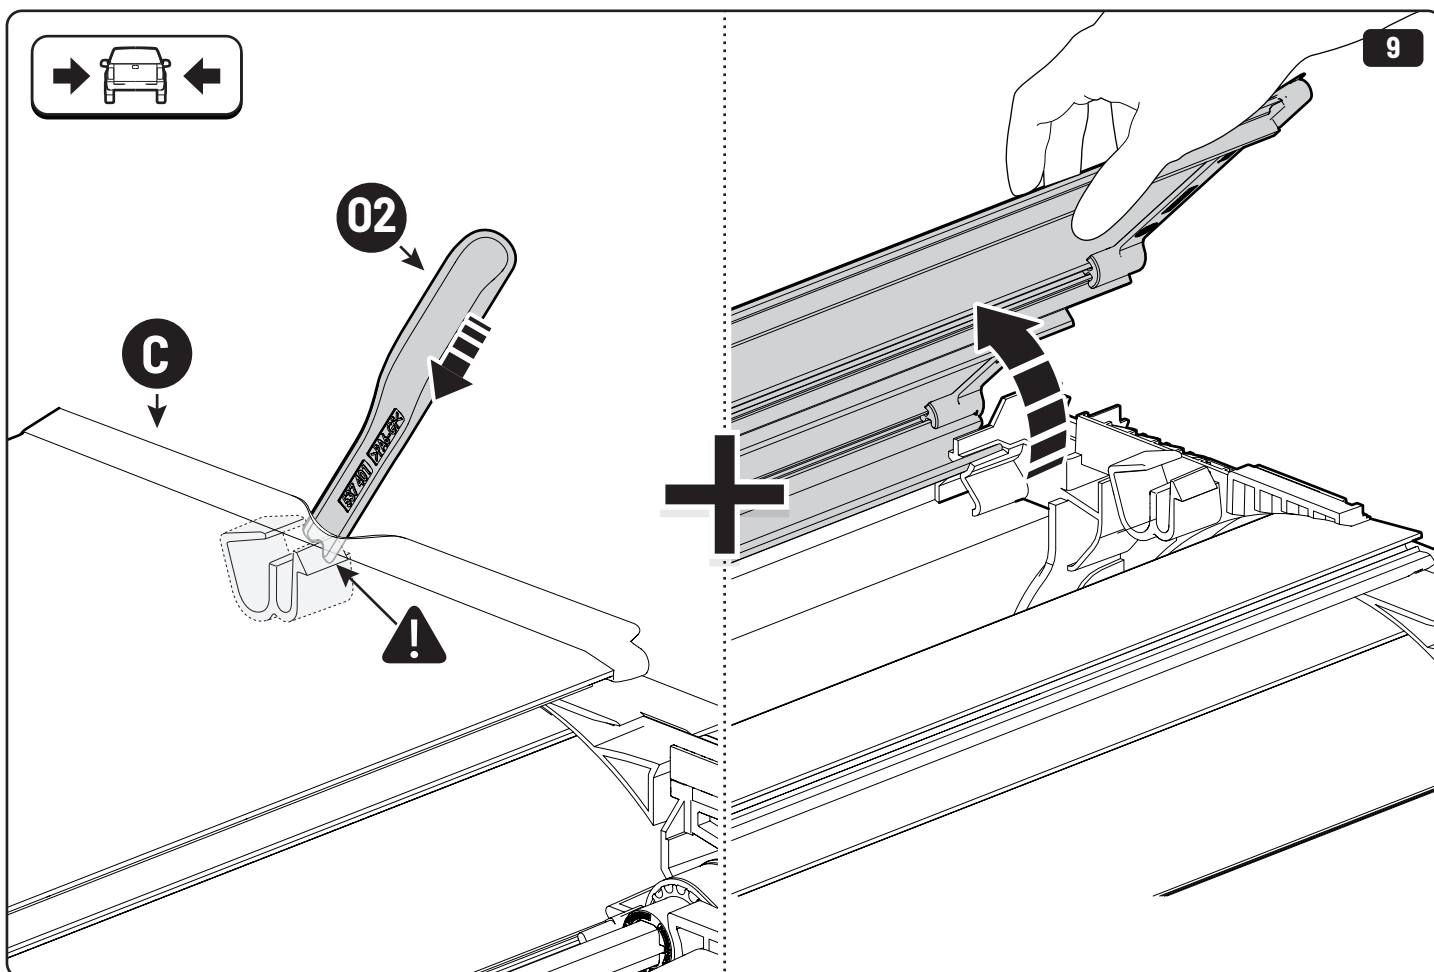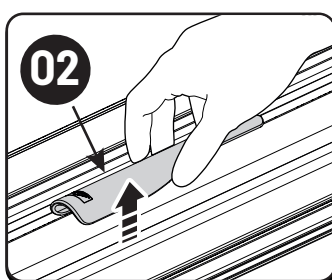
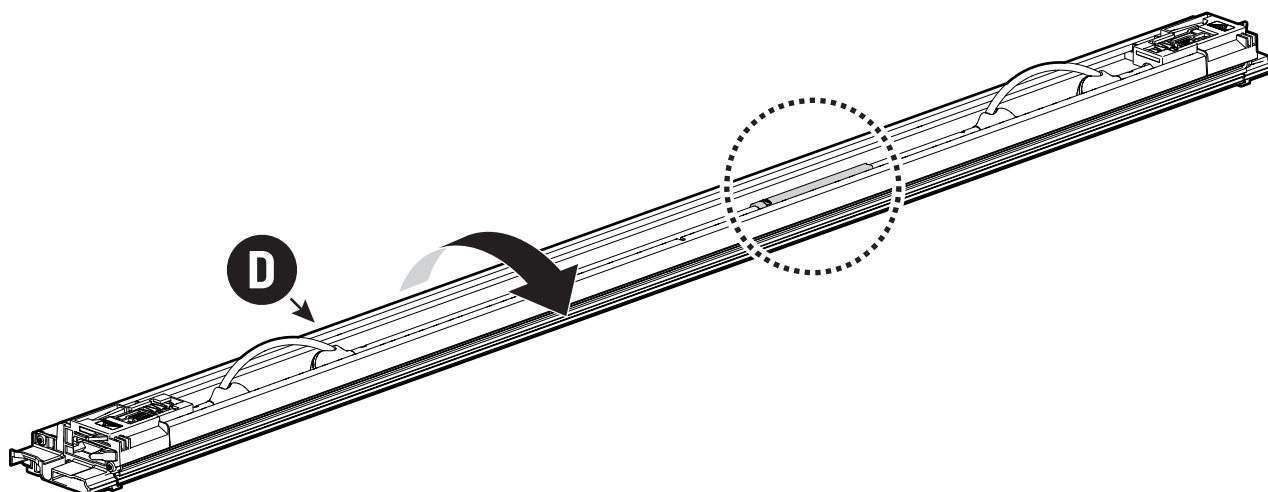


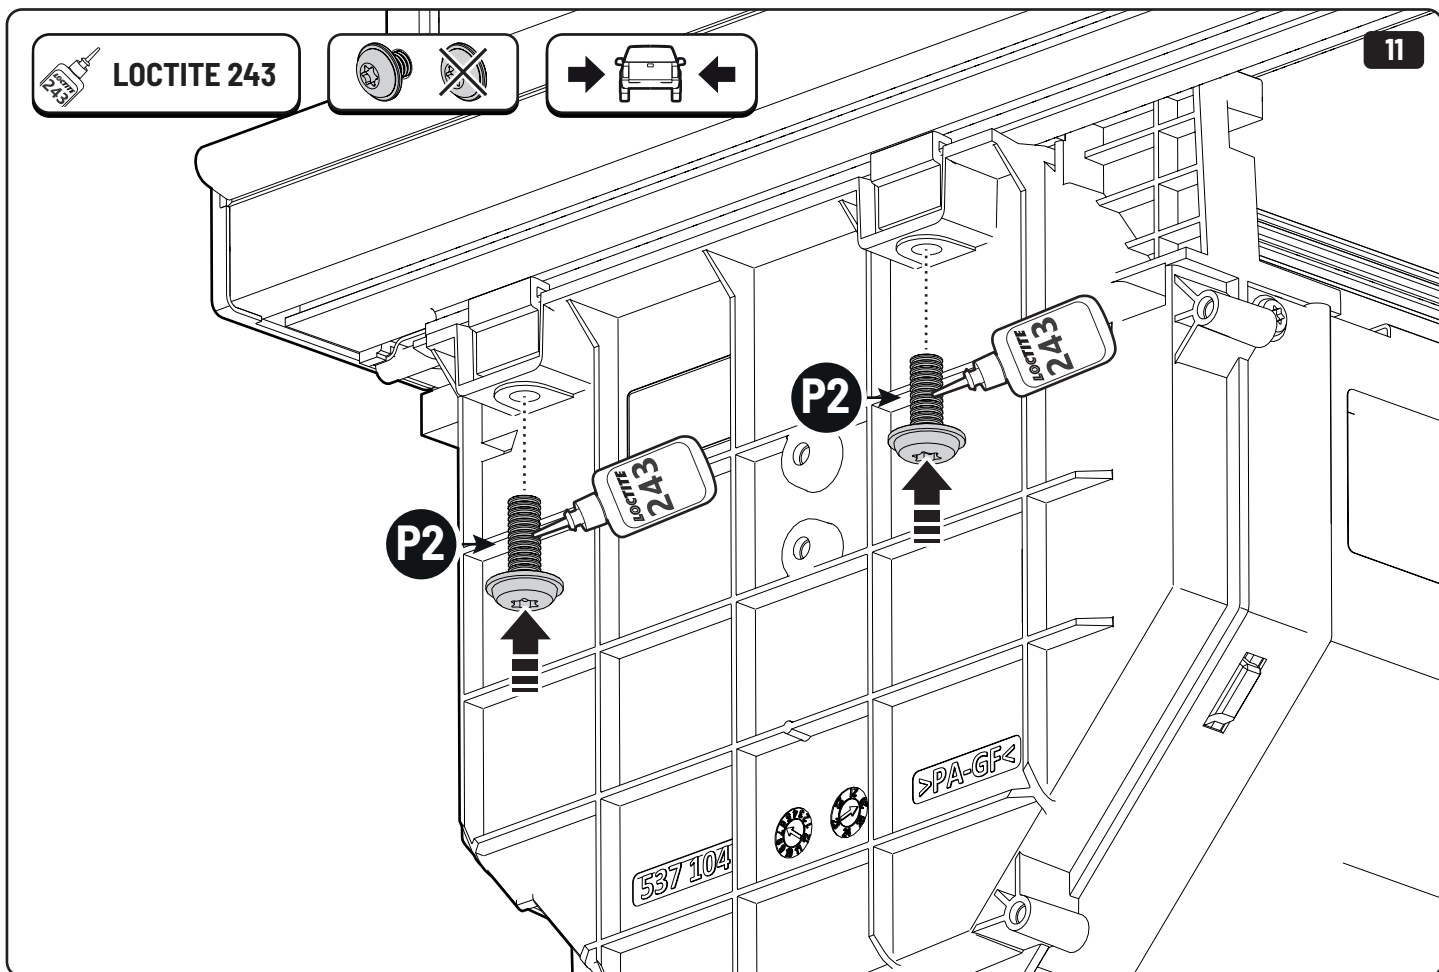
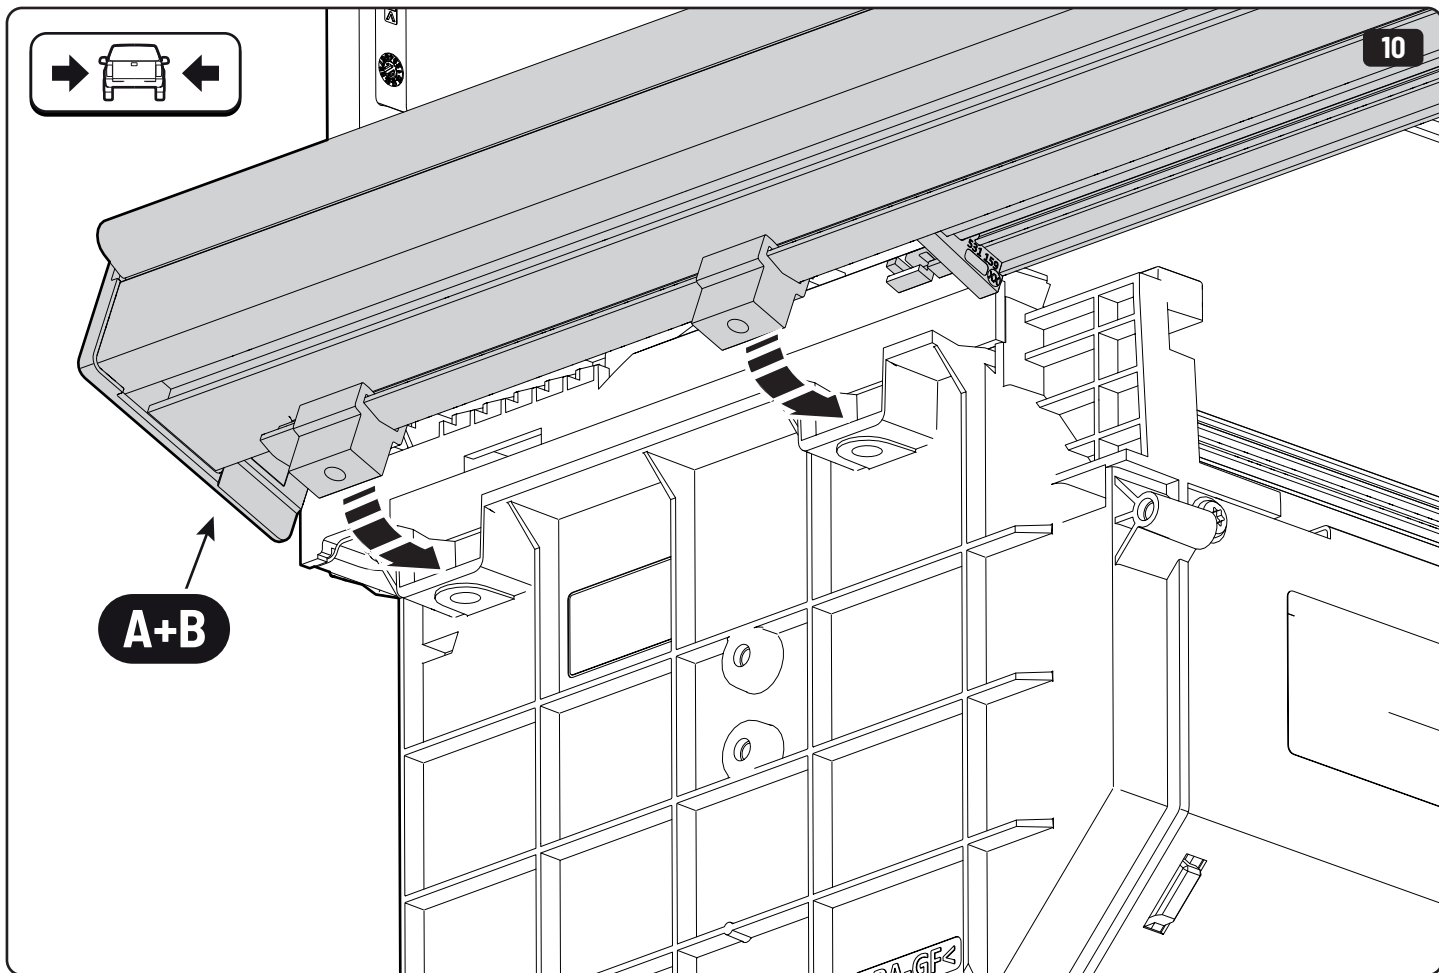


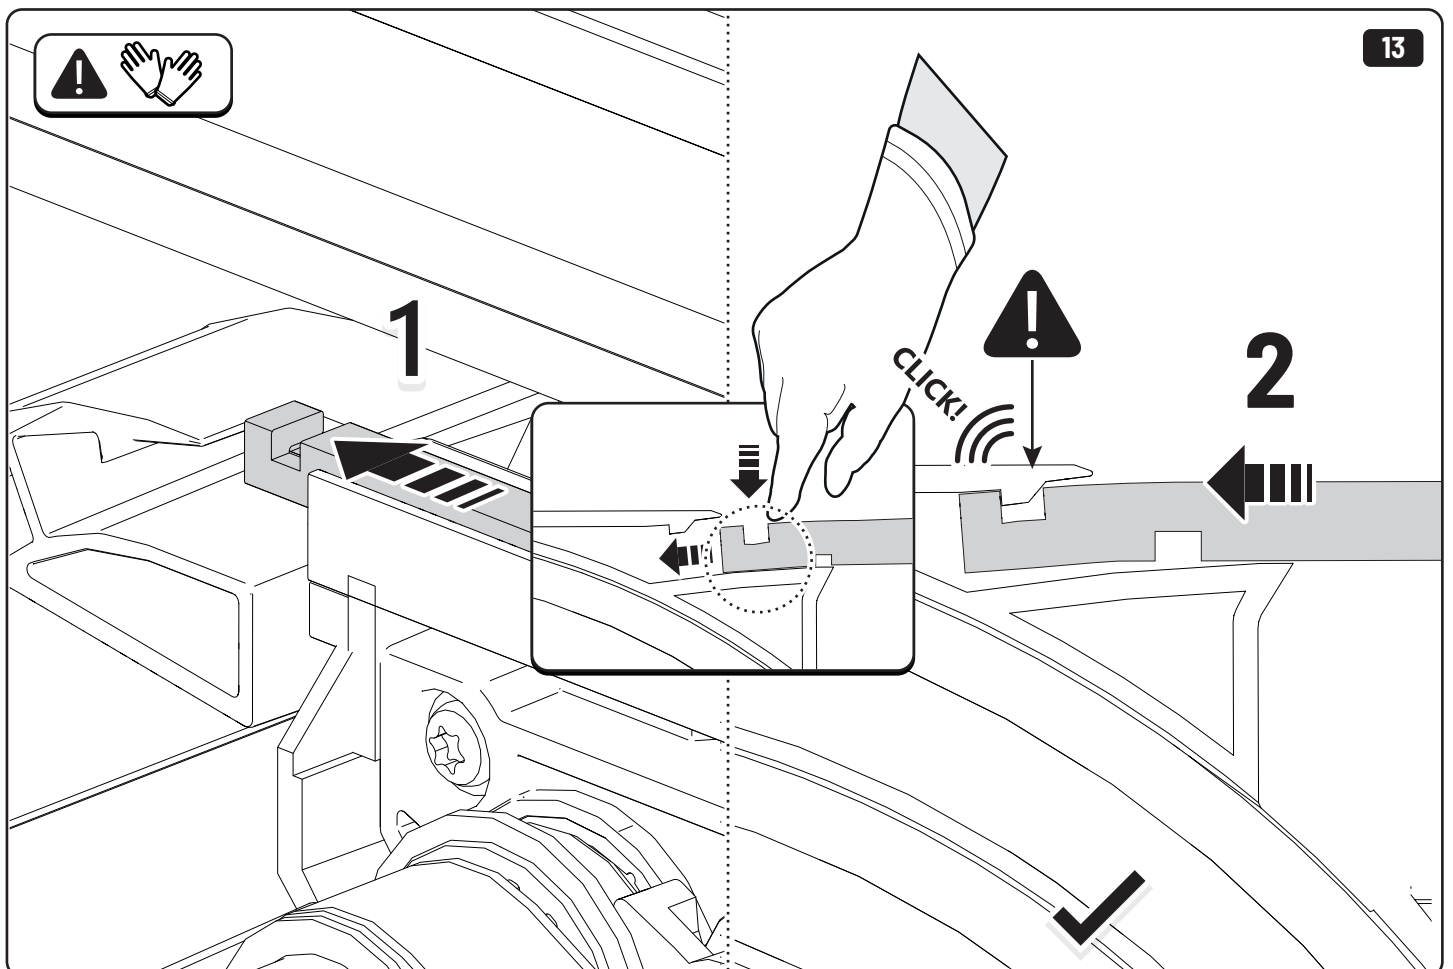
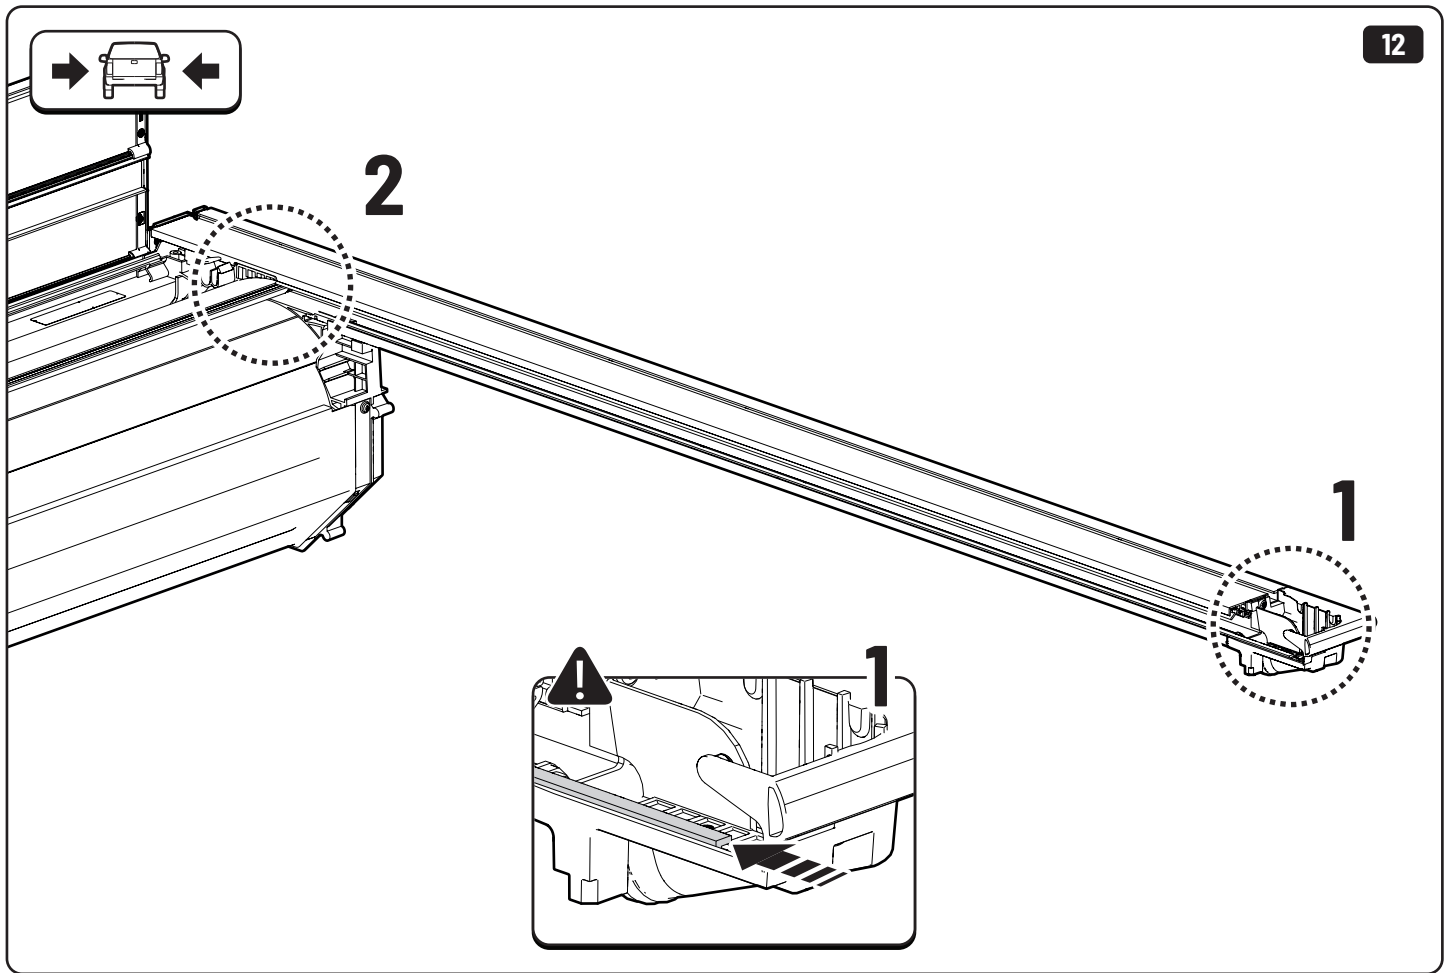


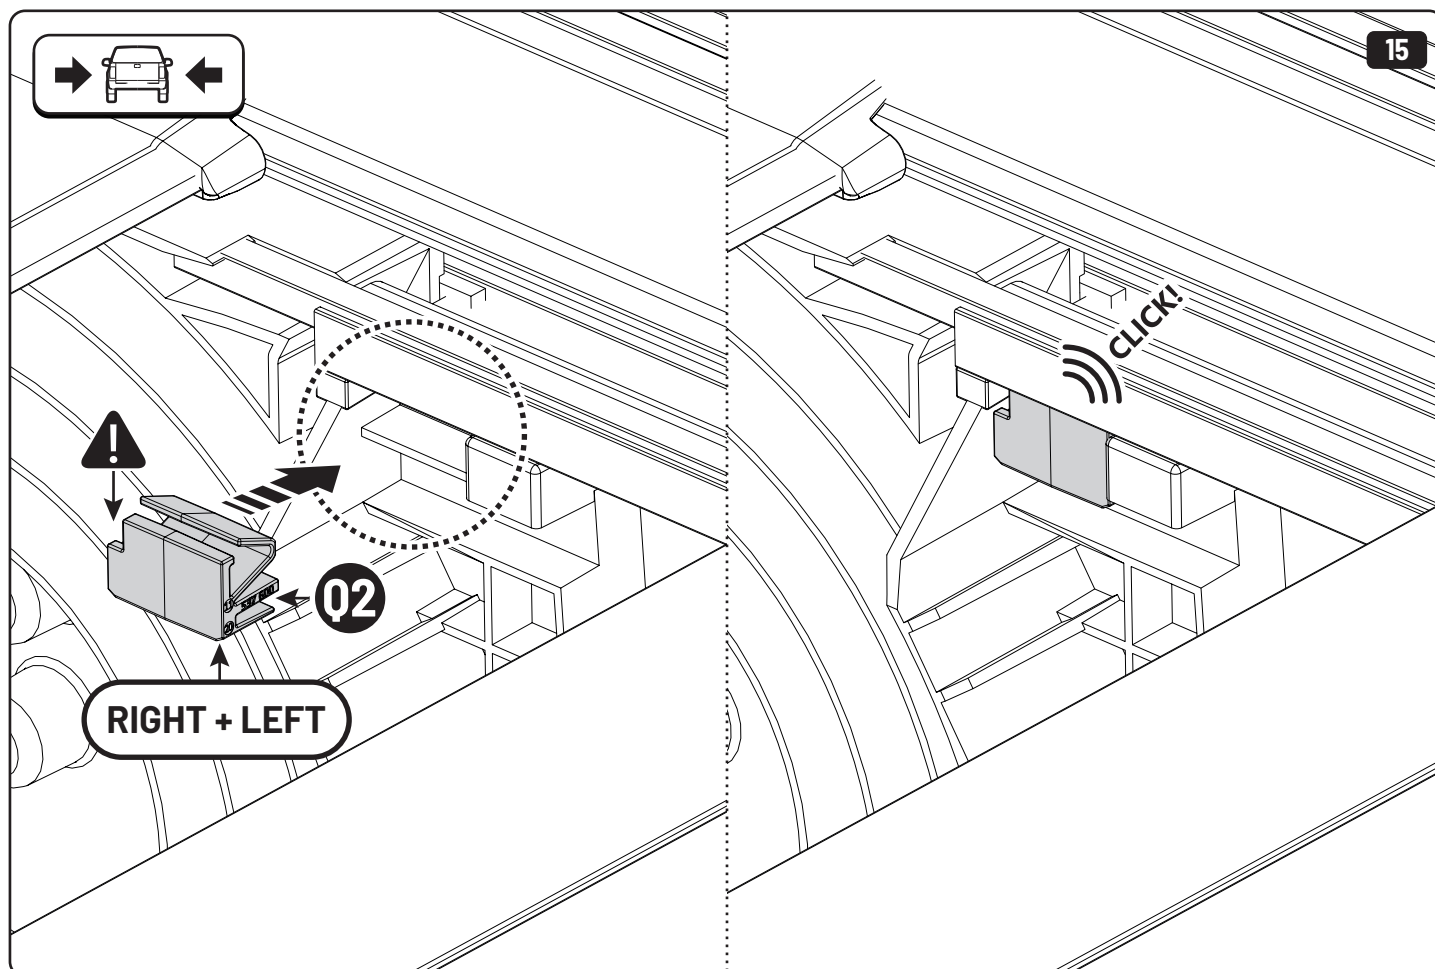
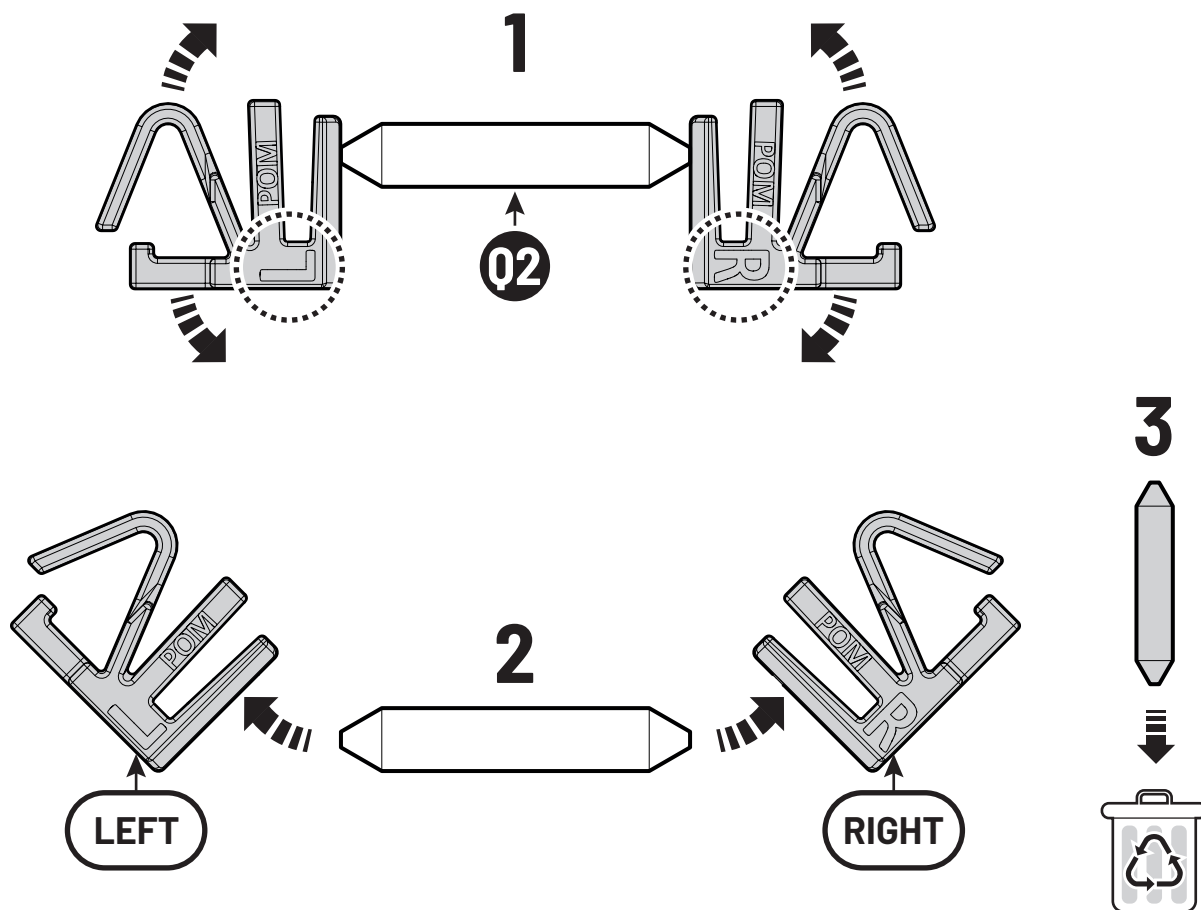


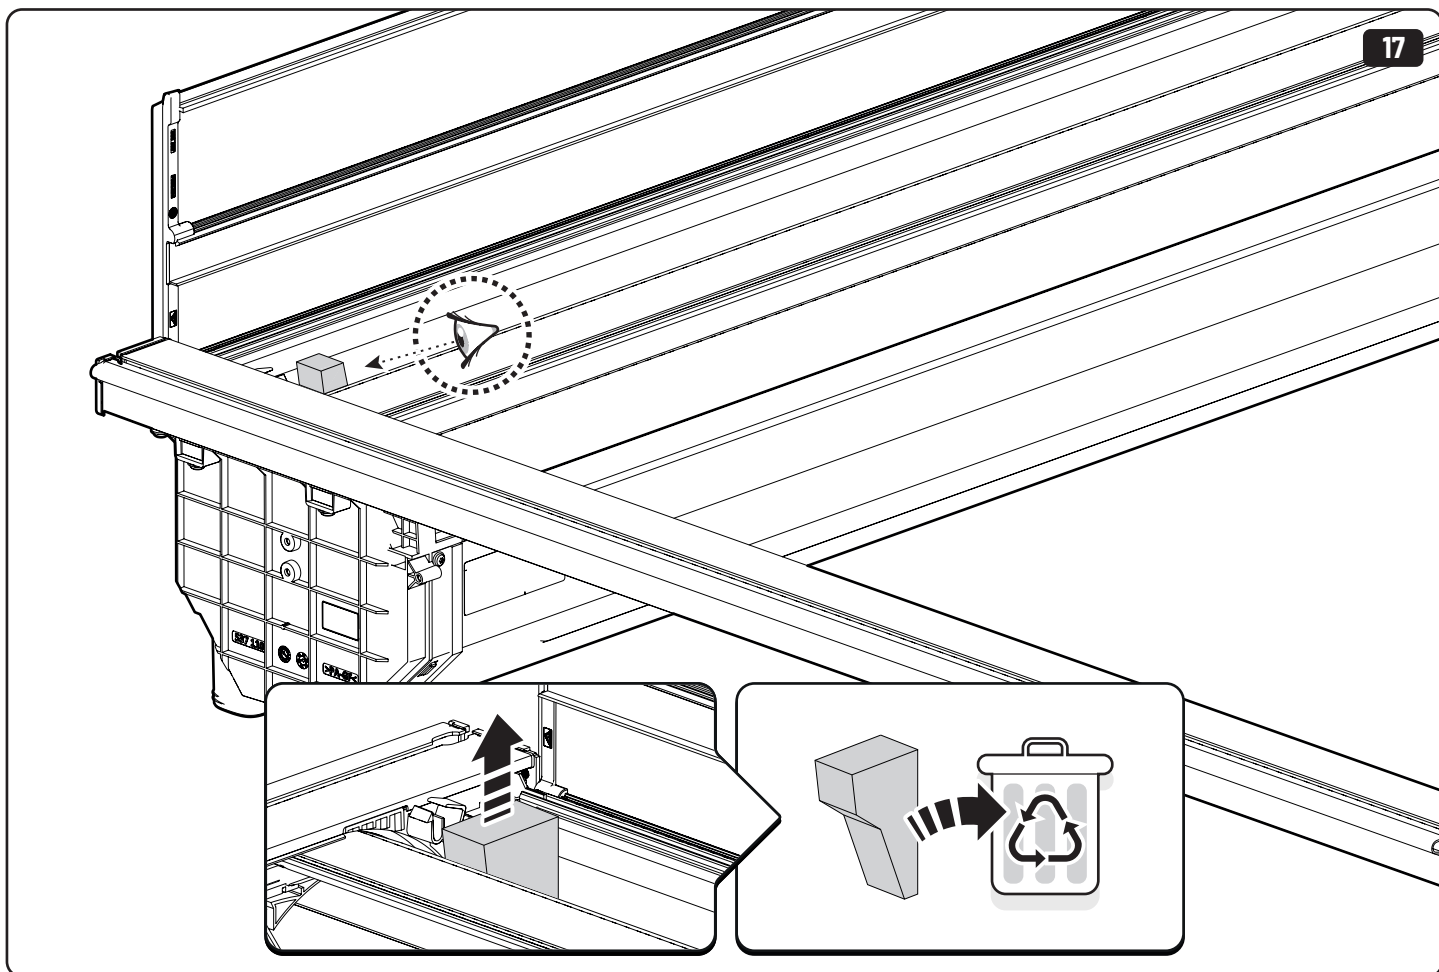
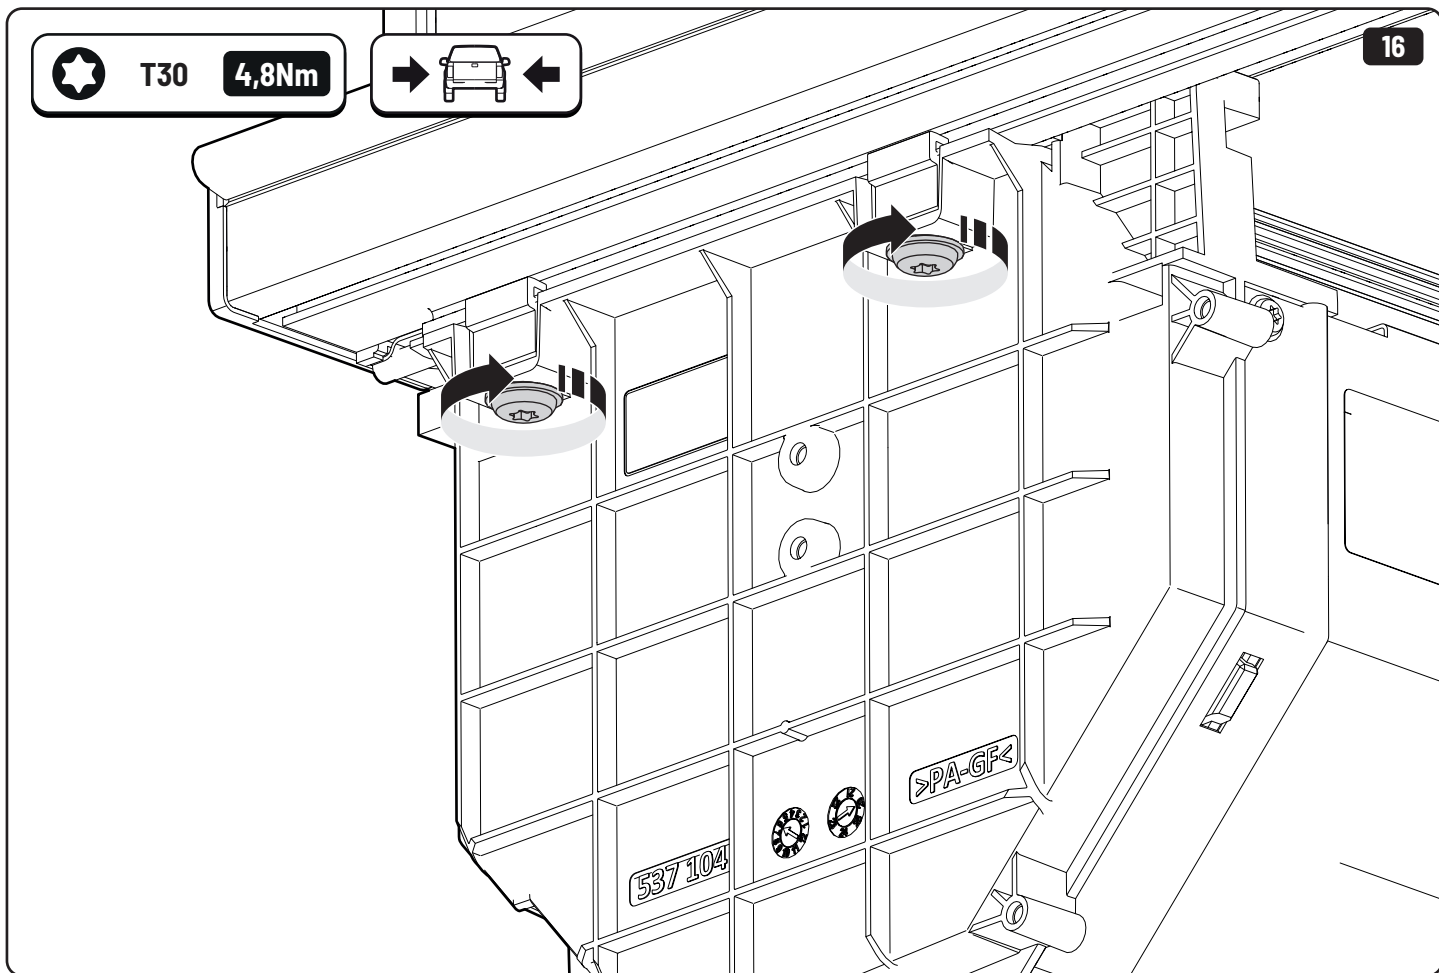


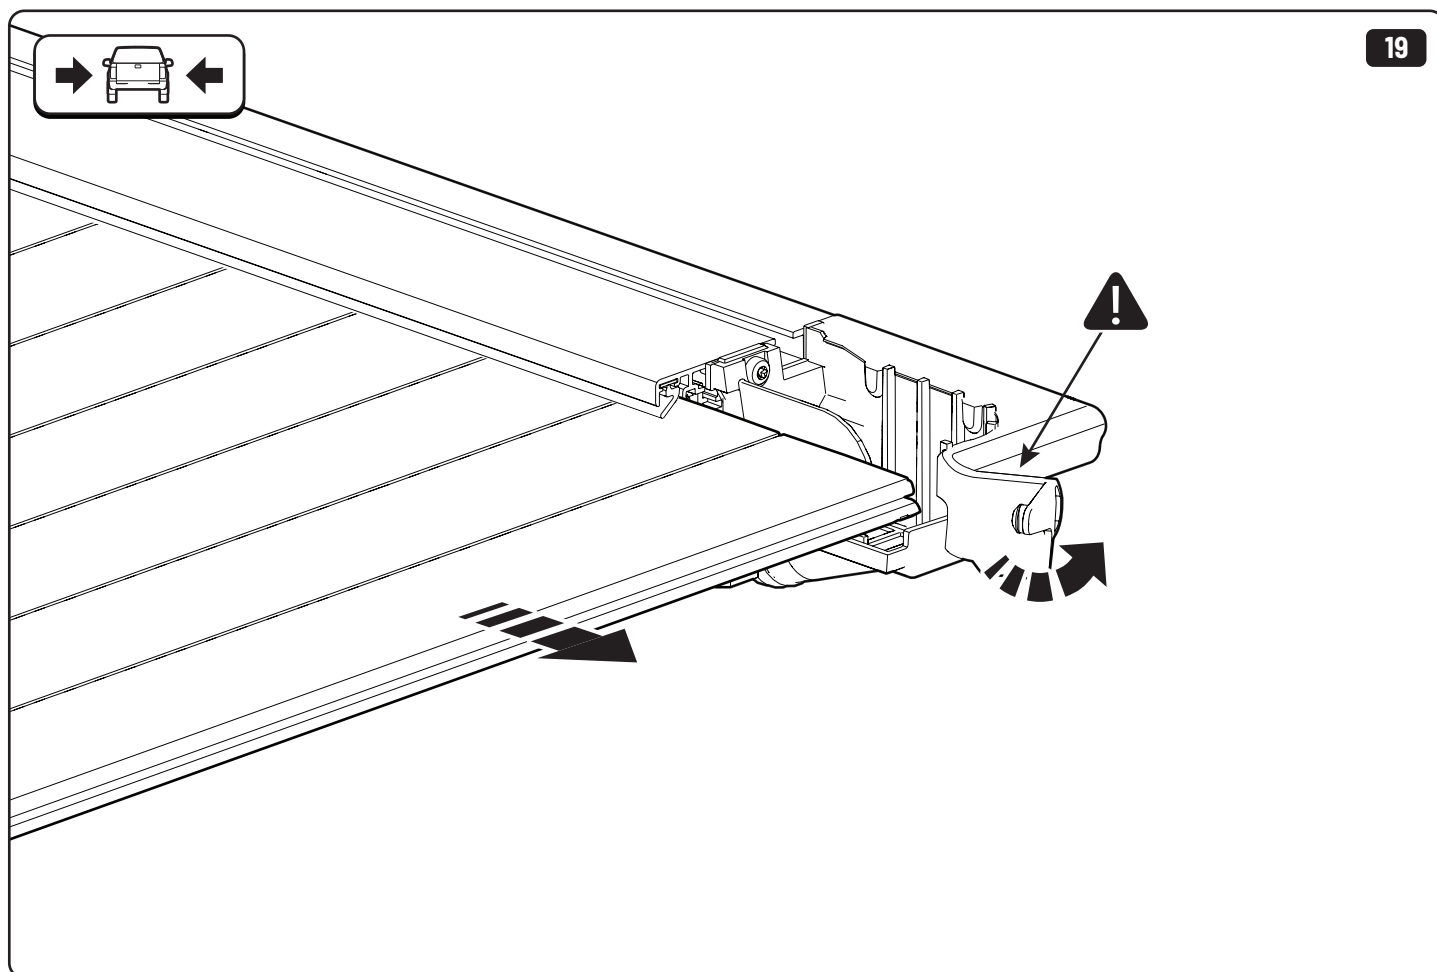
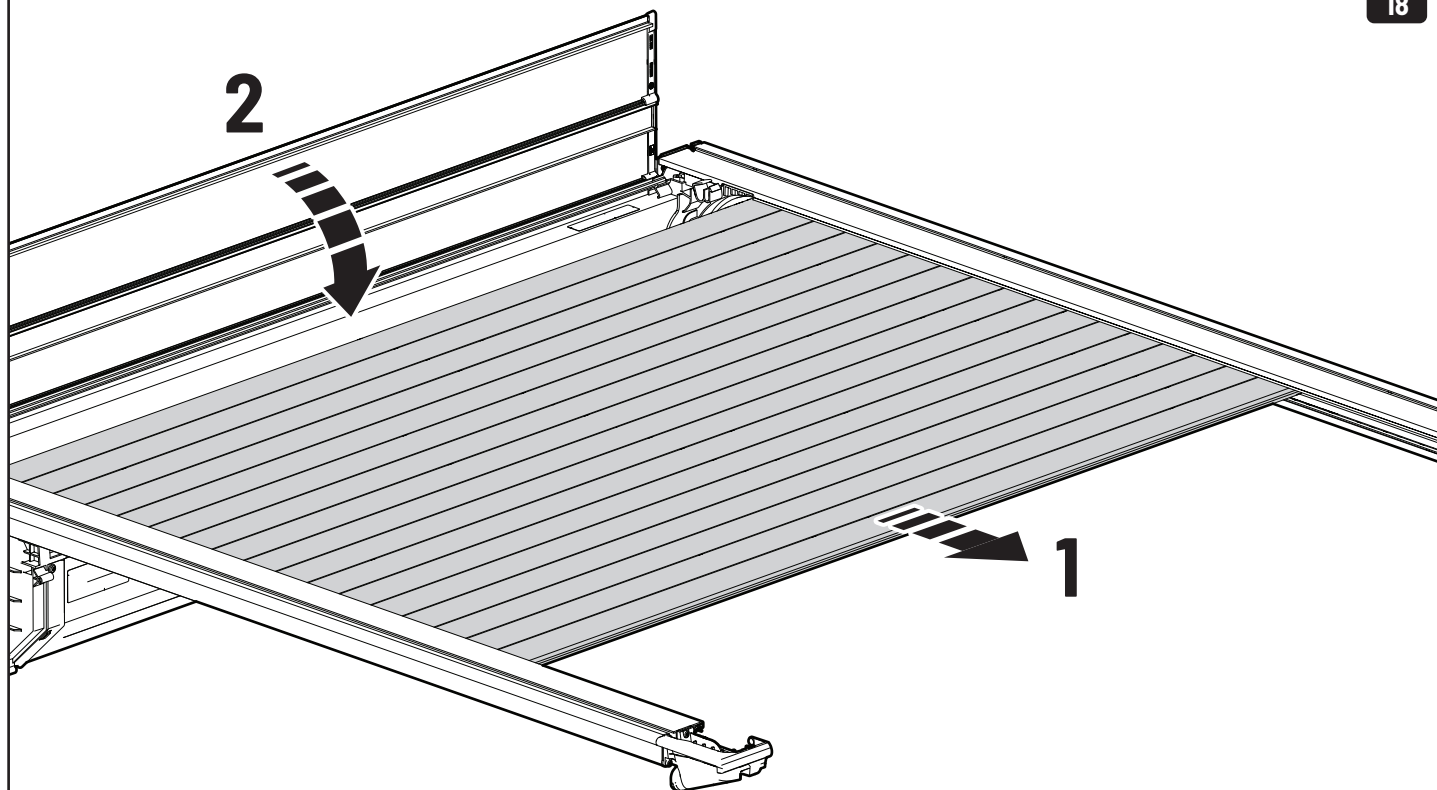


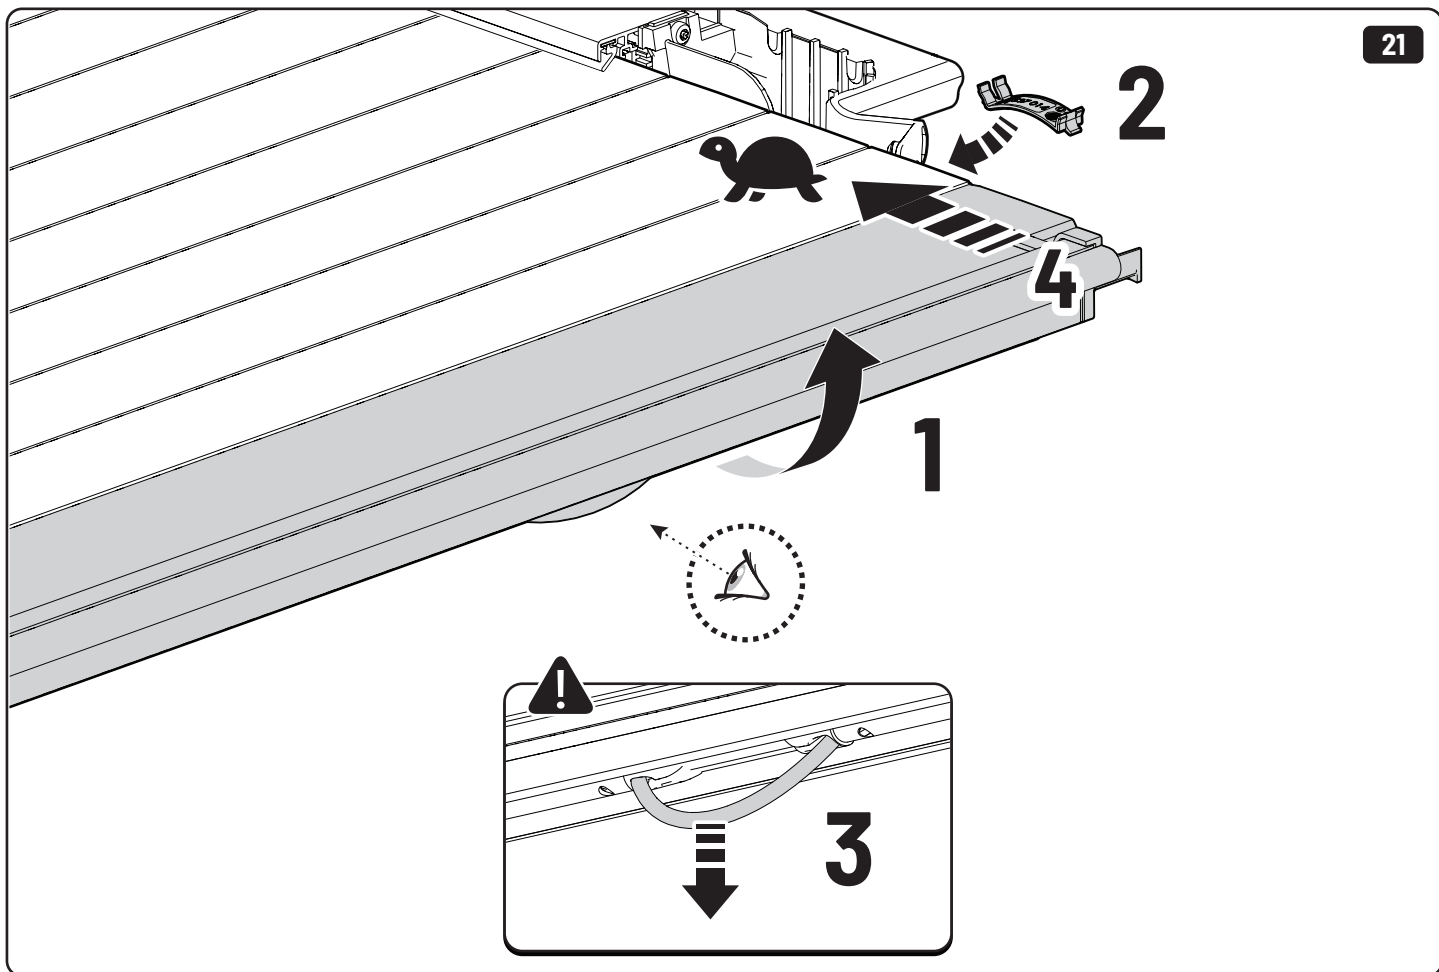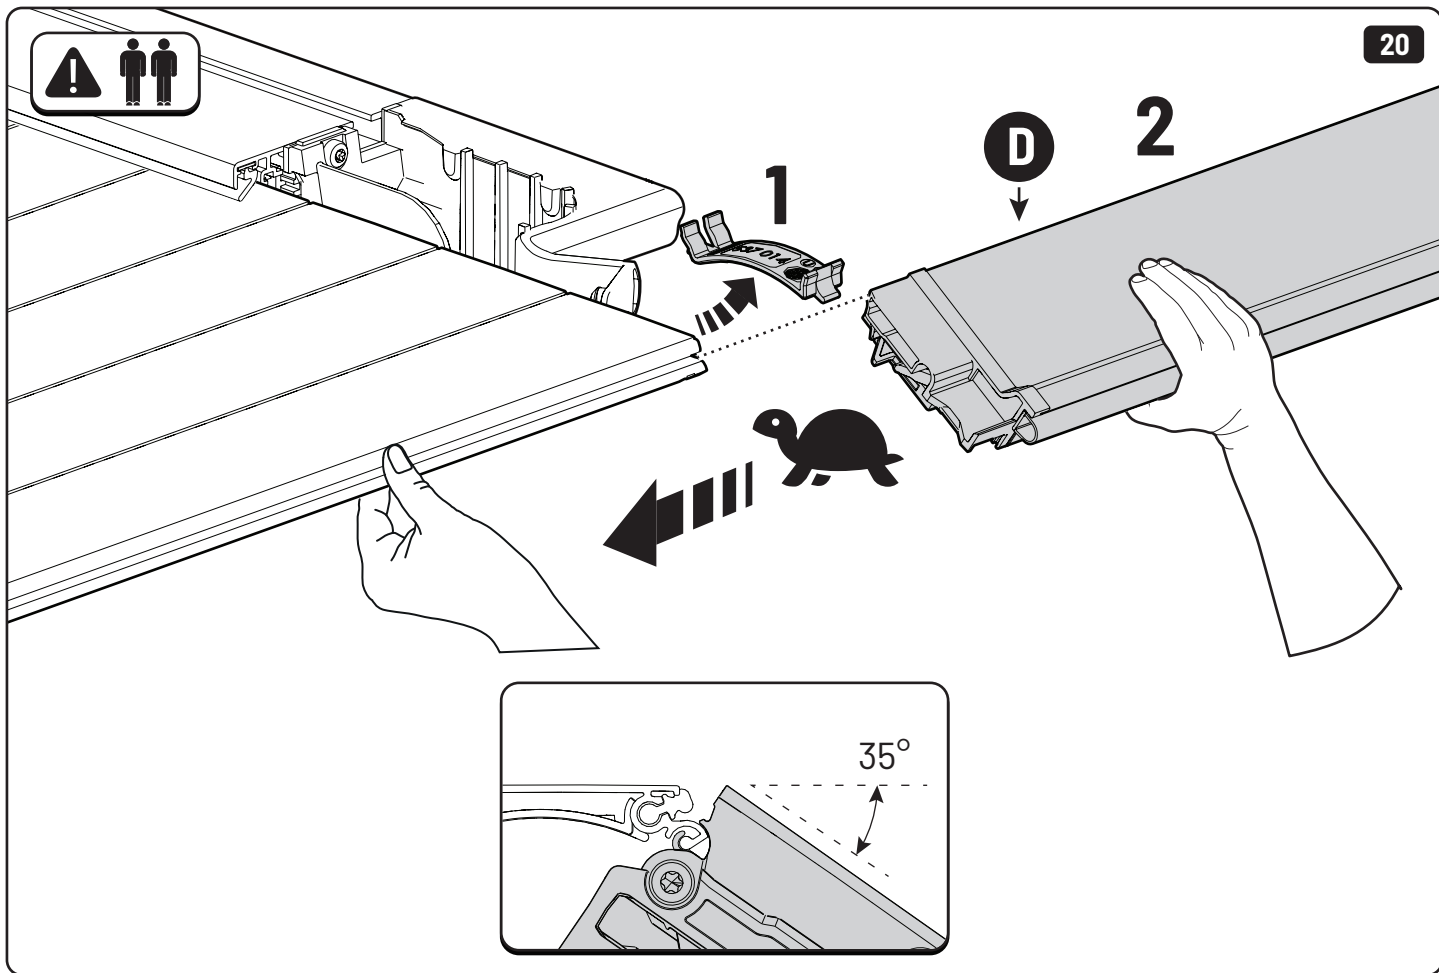

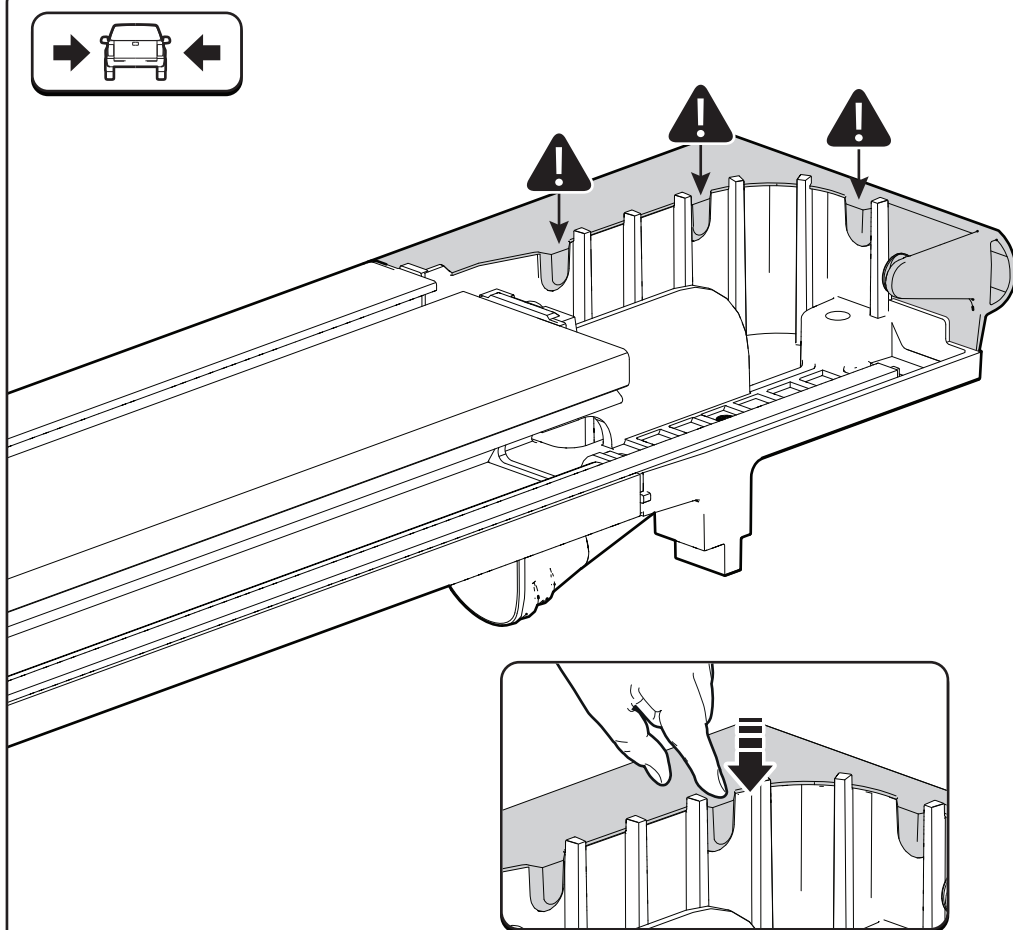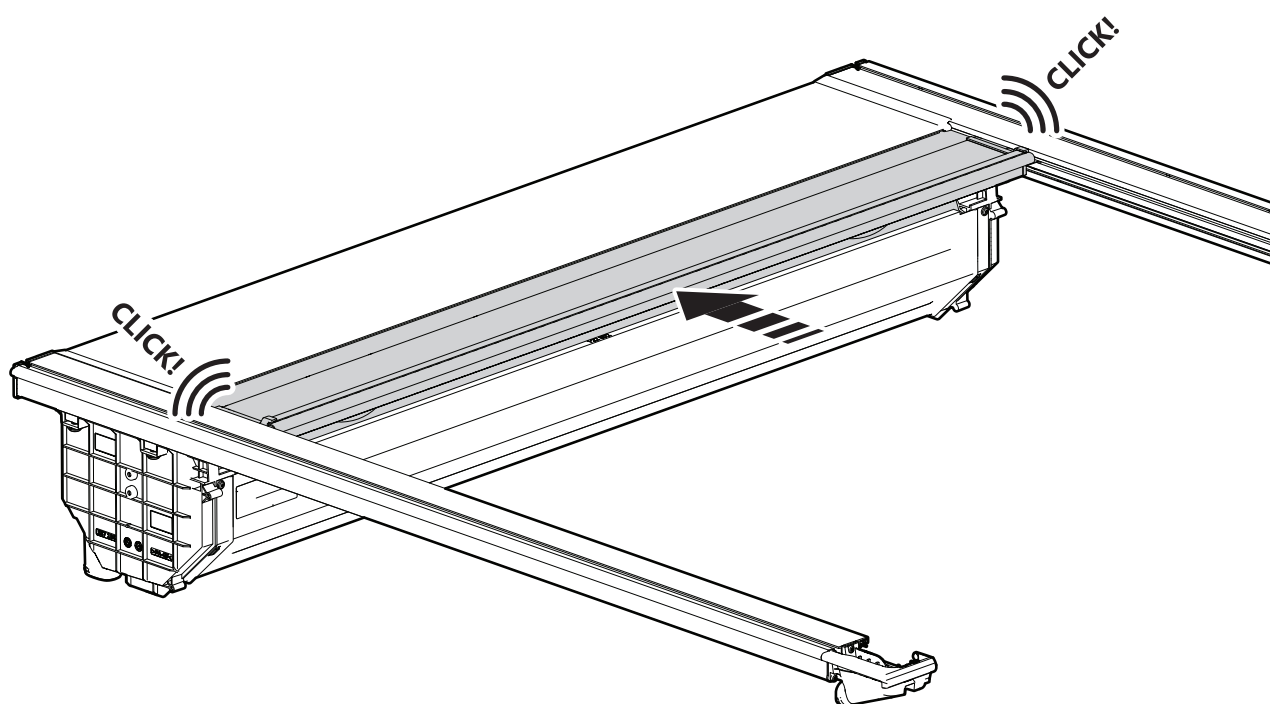

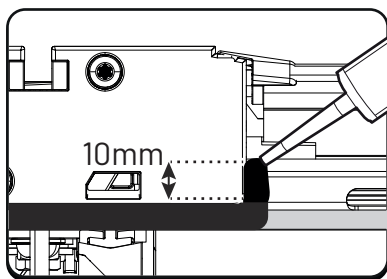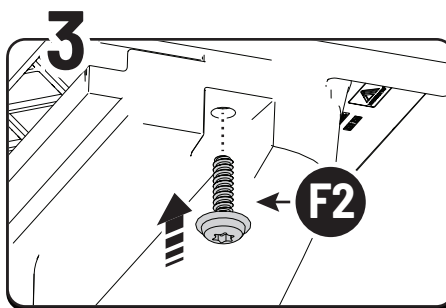

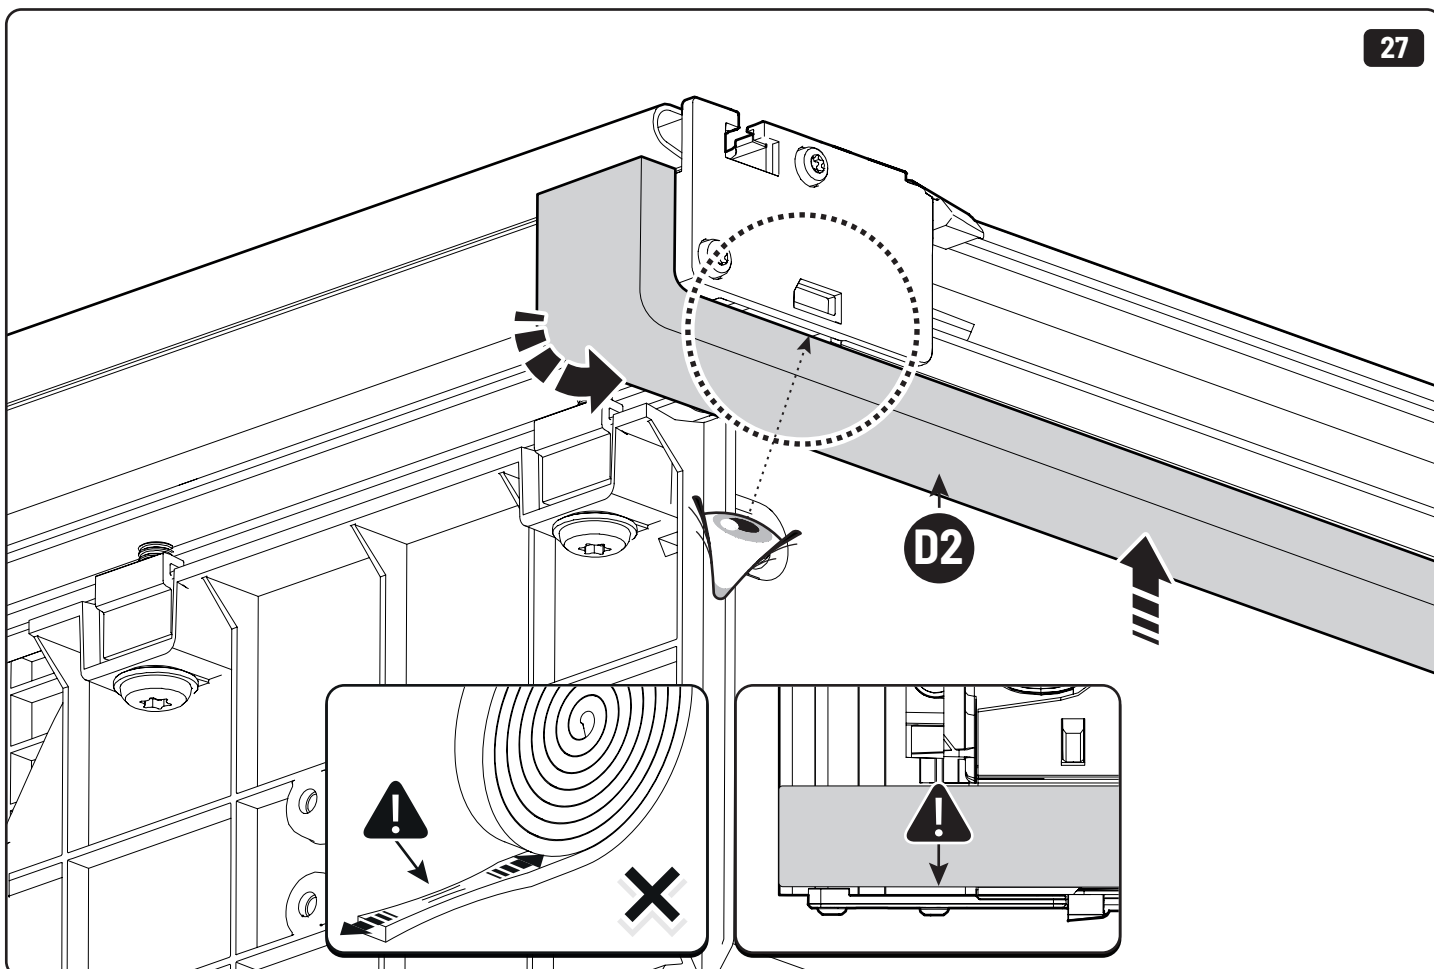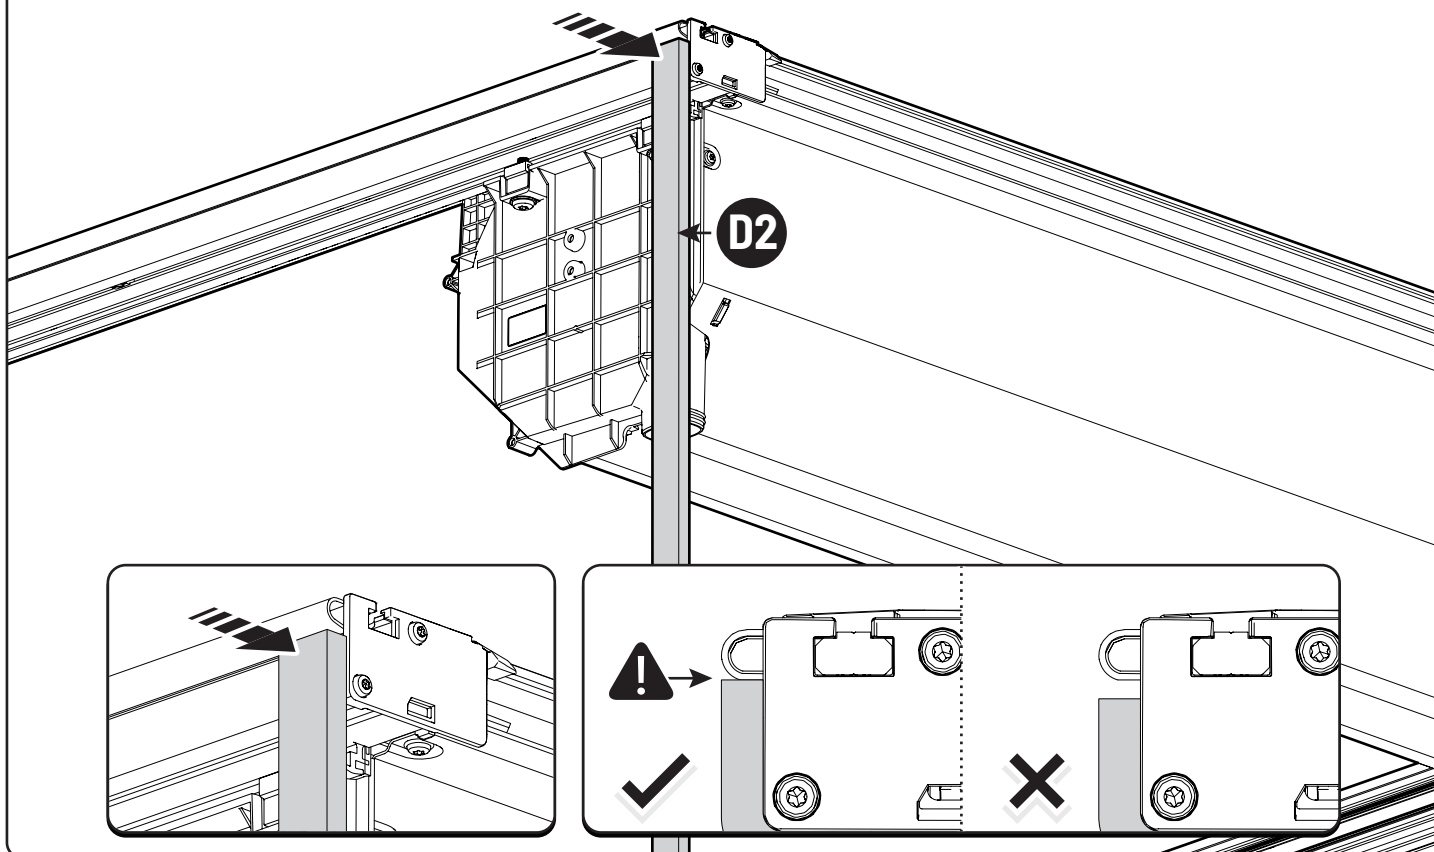


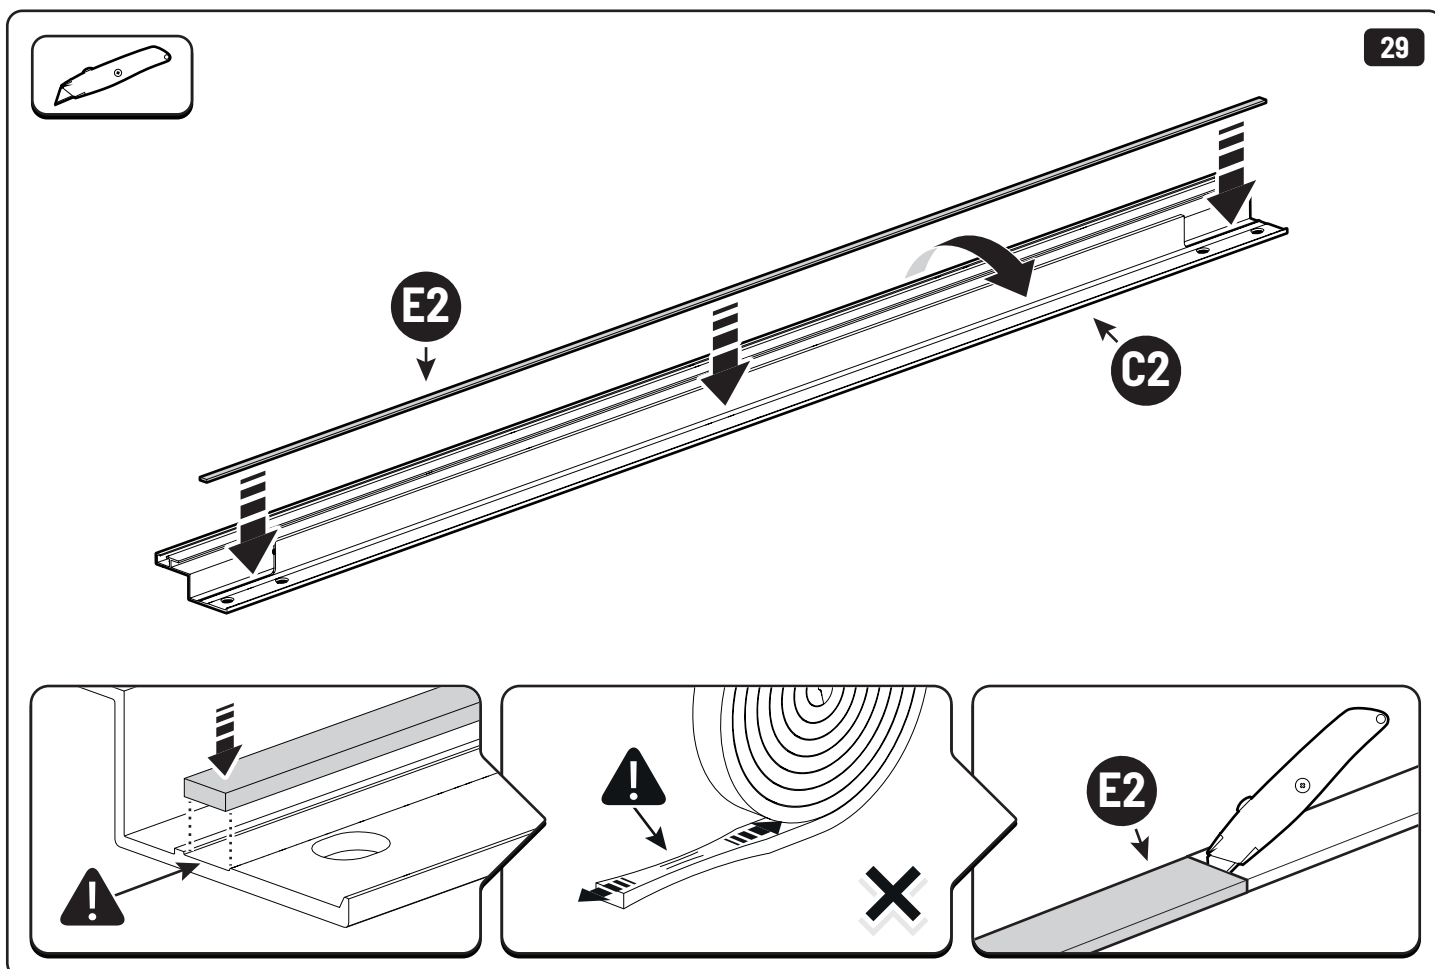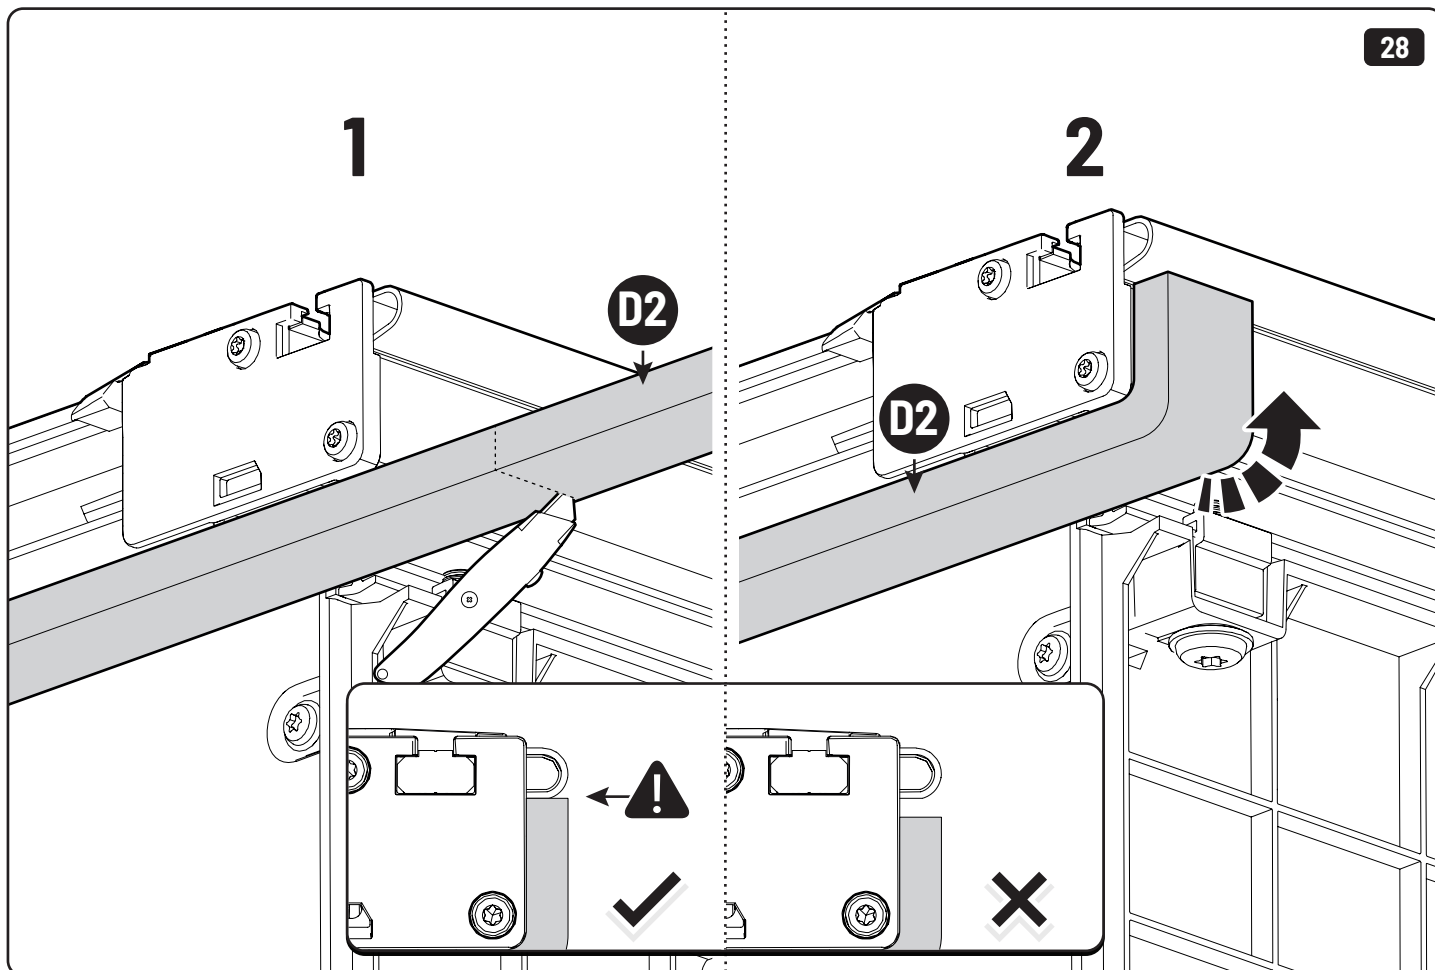




Super Glue (CA)

30

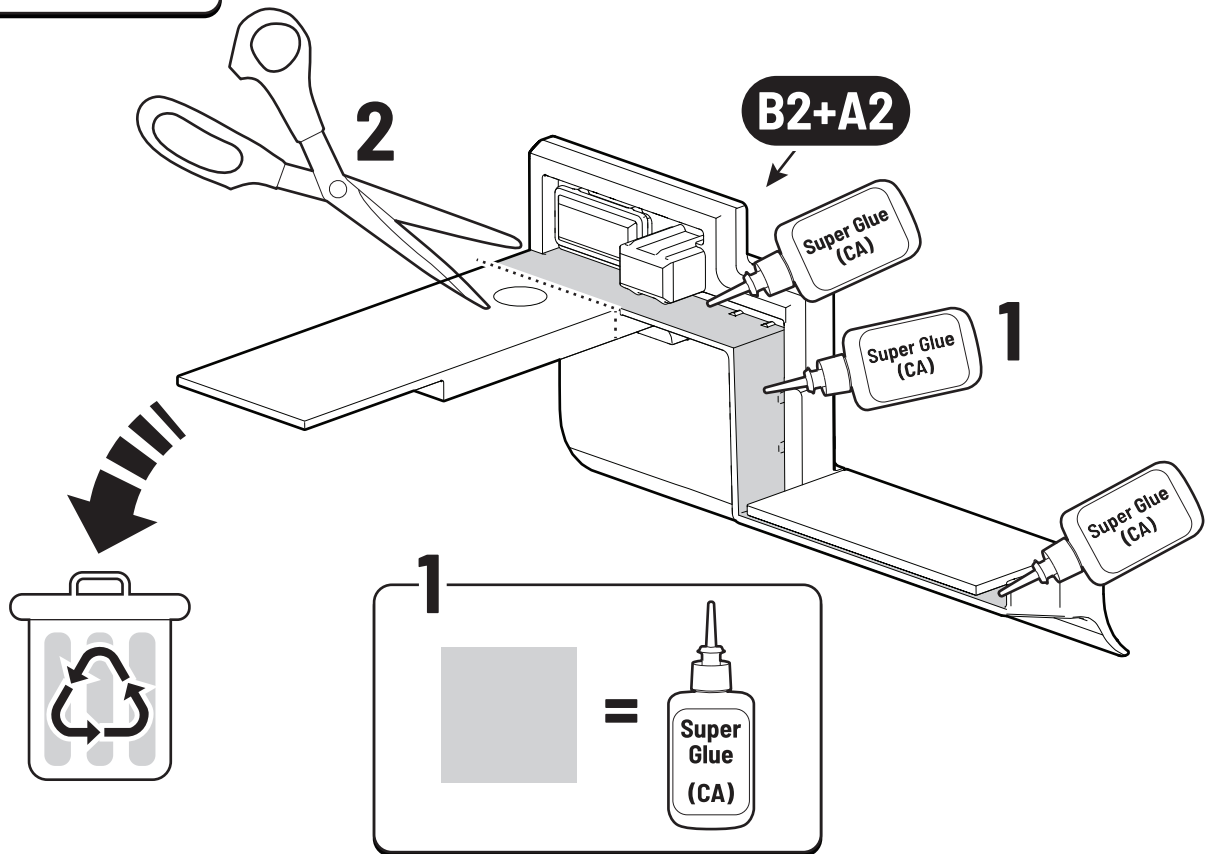

Super Glue (CA)


31

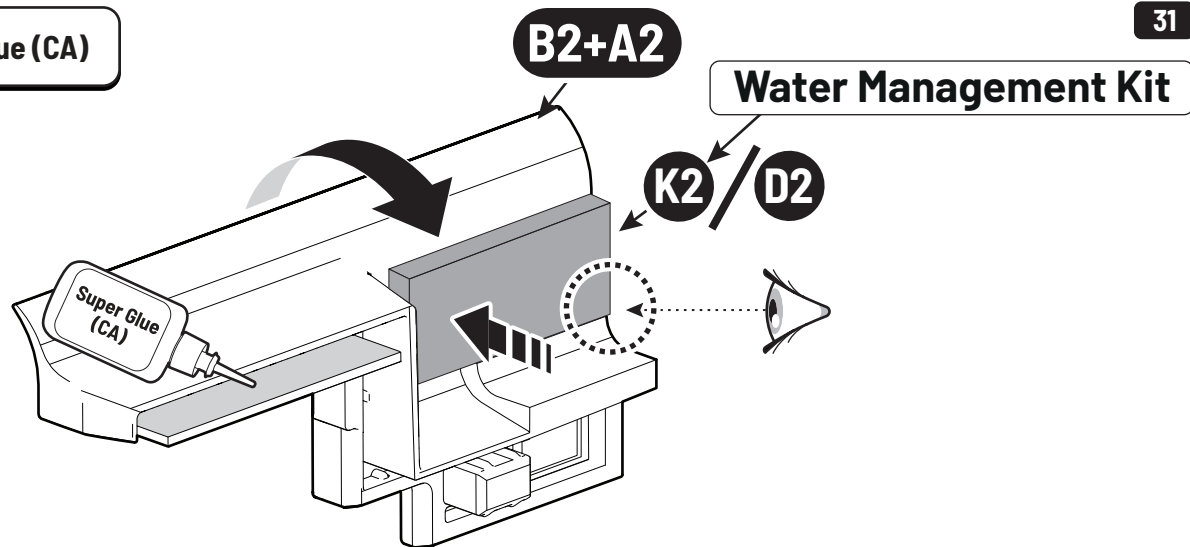


=






35mm

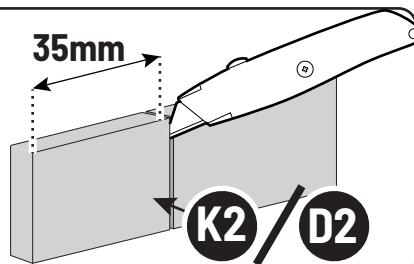


K2/D2


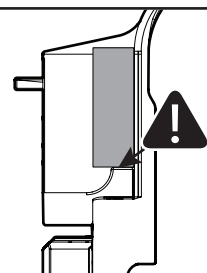


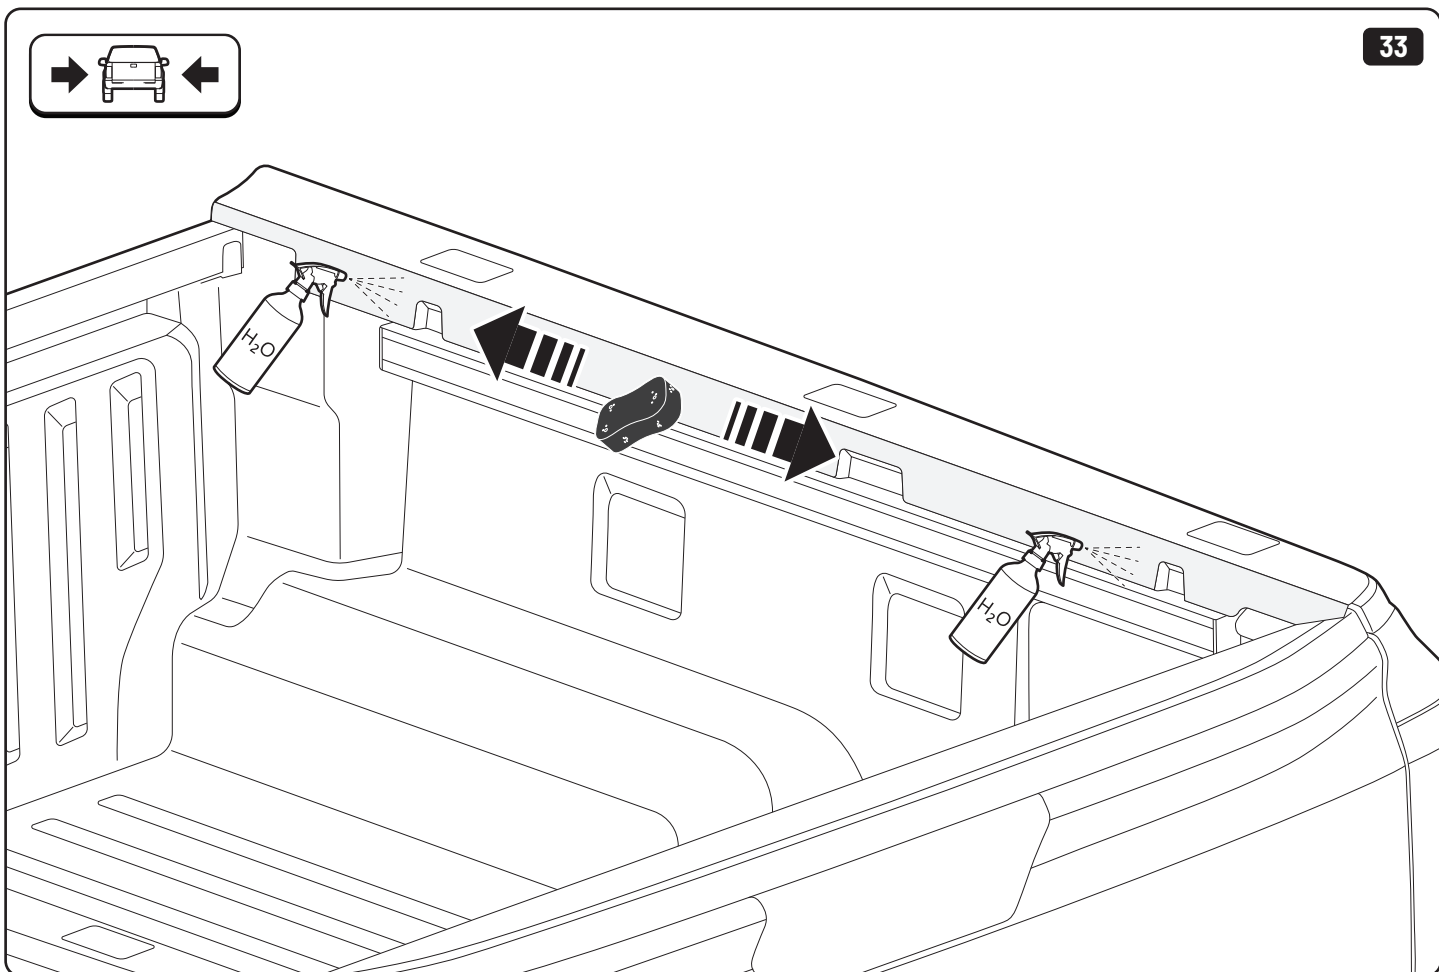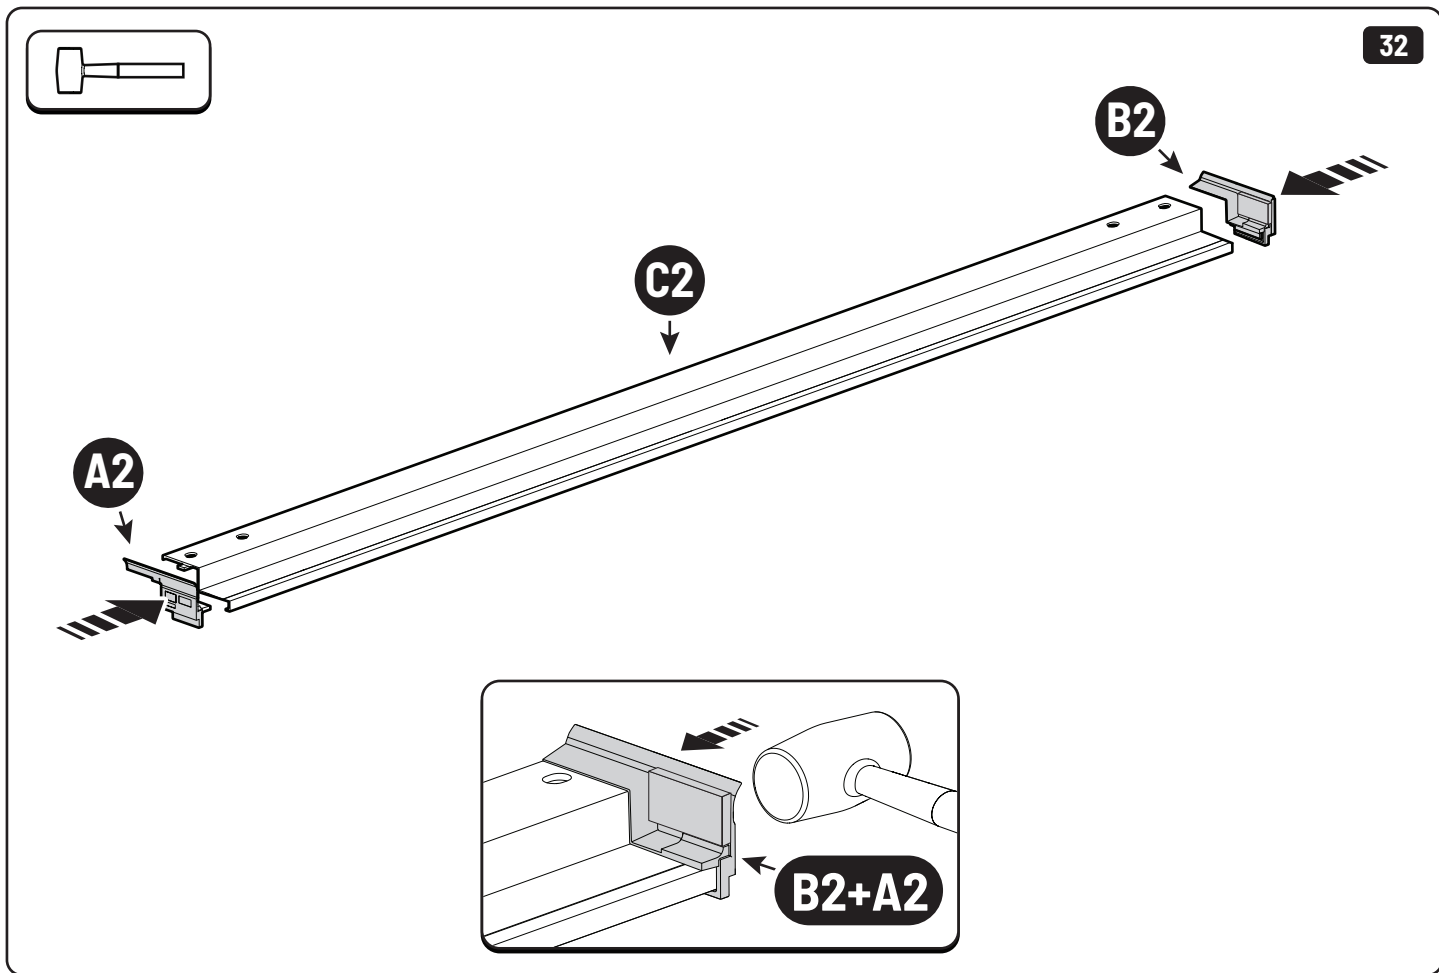

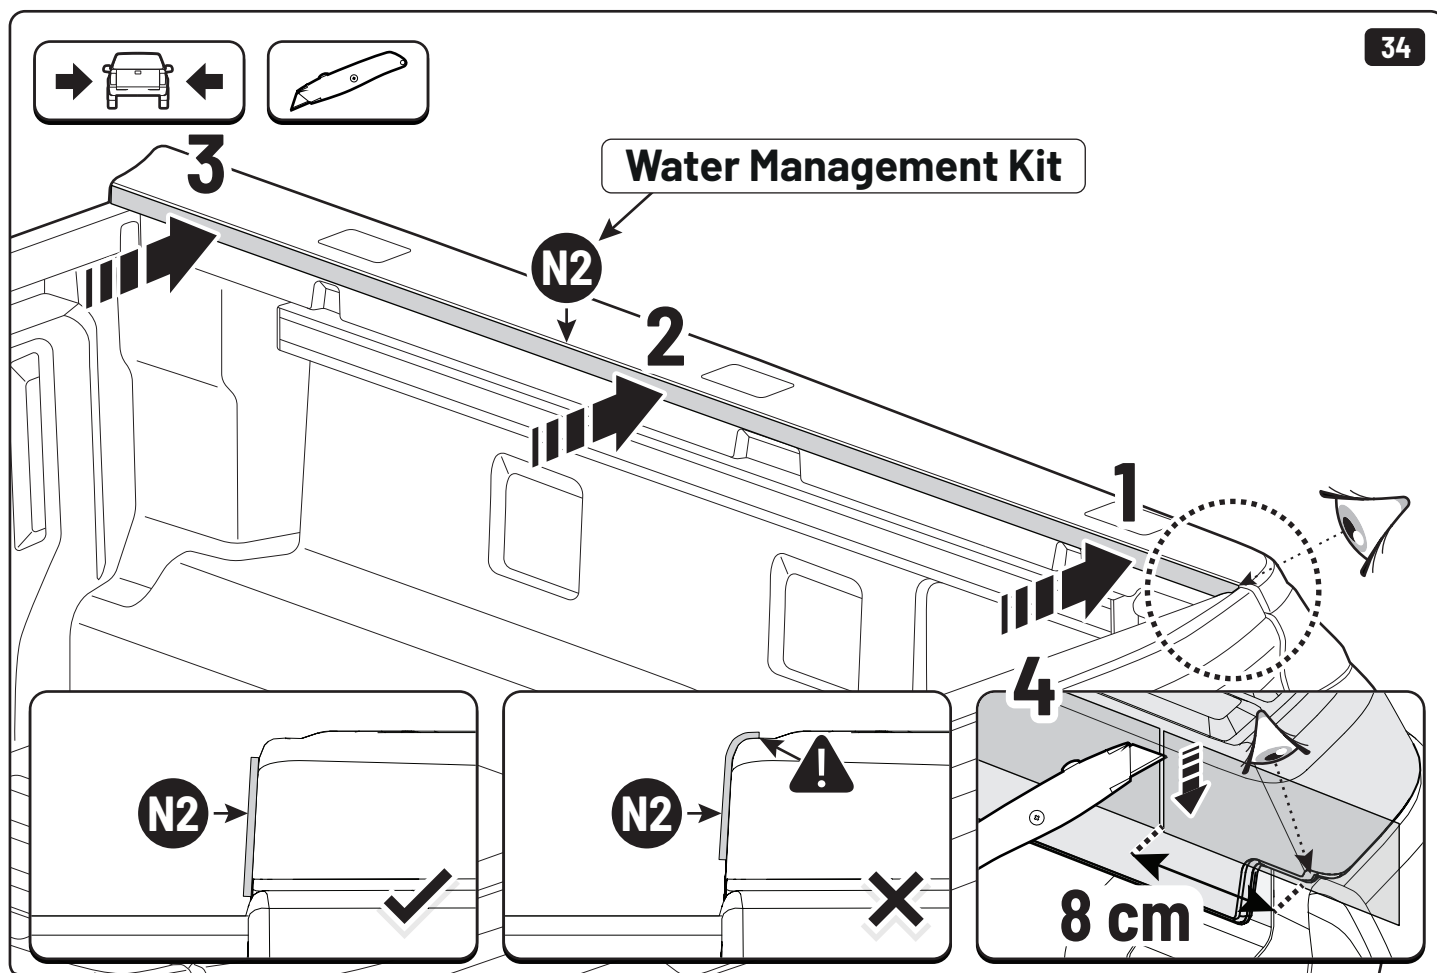


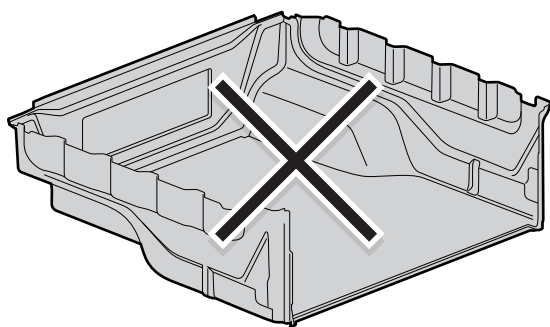


**SPRAY-IN
BEDLINER**

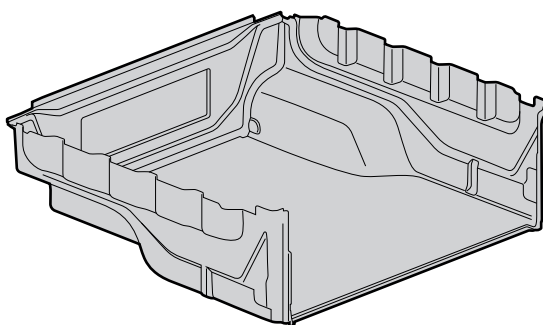
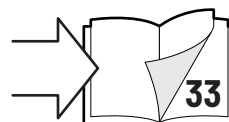


ONLY WITH LINER




35

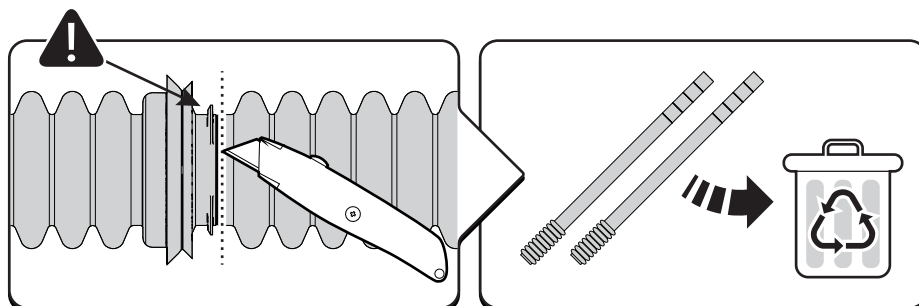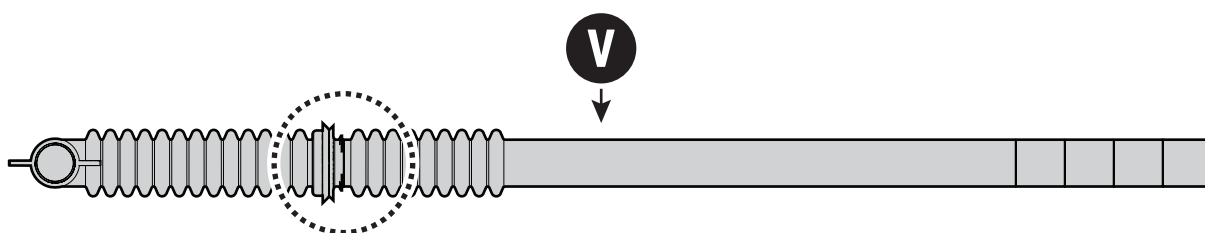




! ONLY WITH LINER

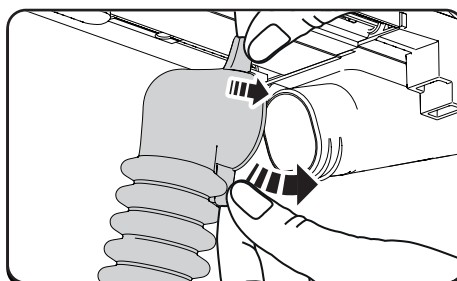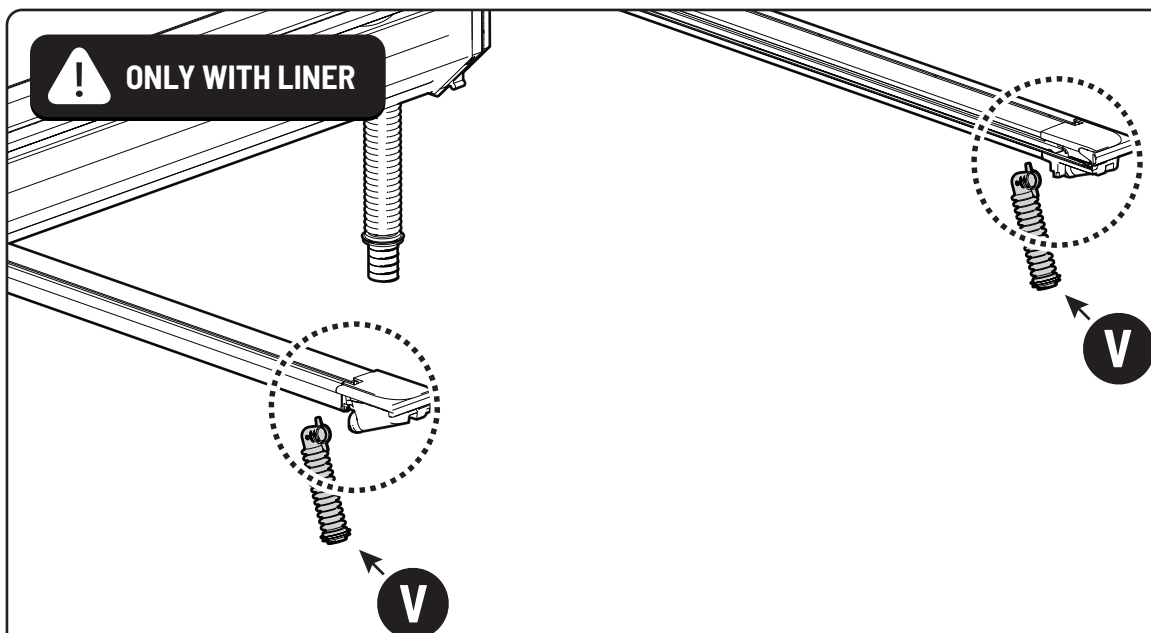






! ONLY WITH LINER

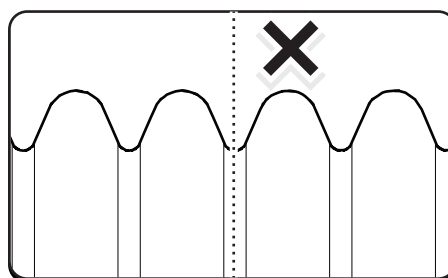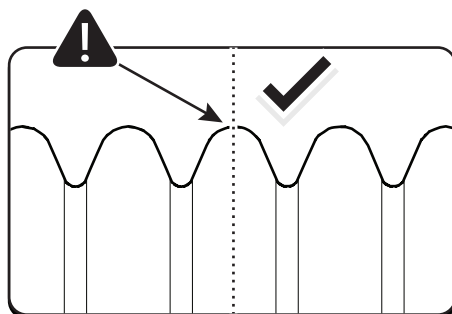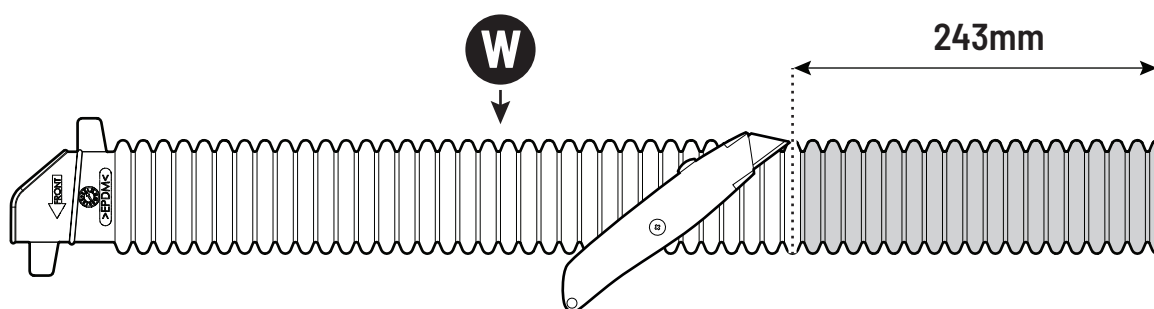

! ONLY WITH LINER

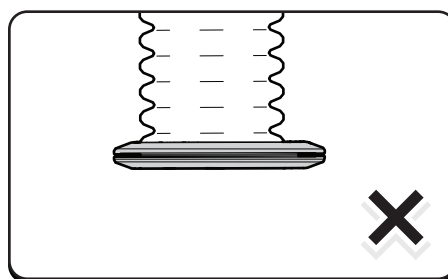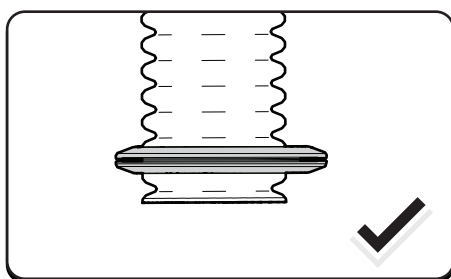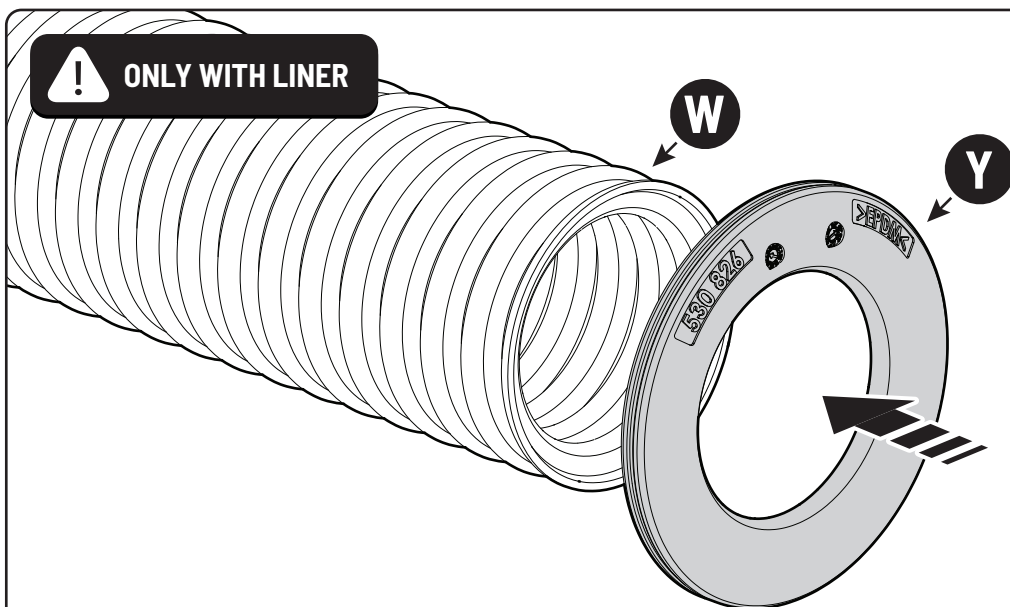

! ONLY WITH LINER

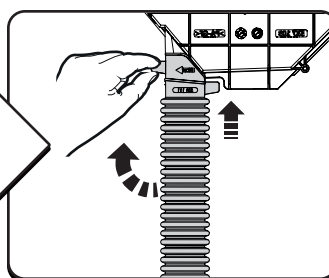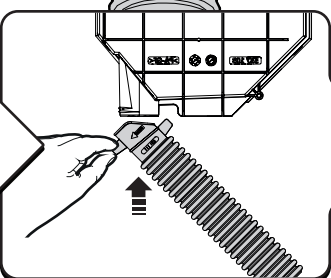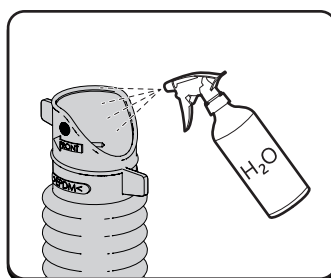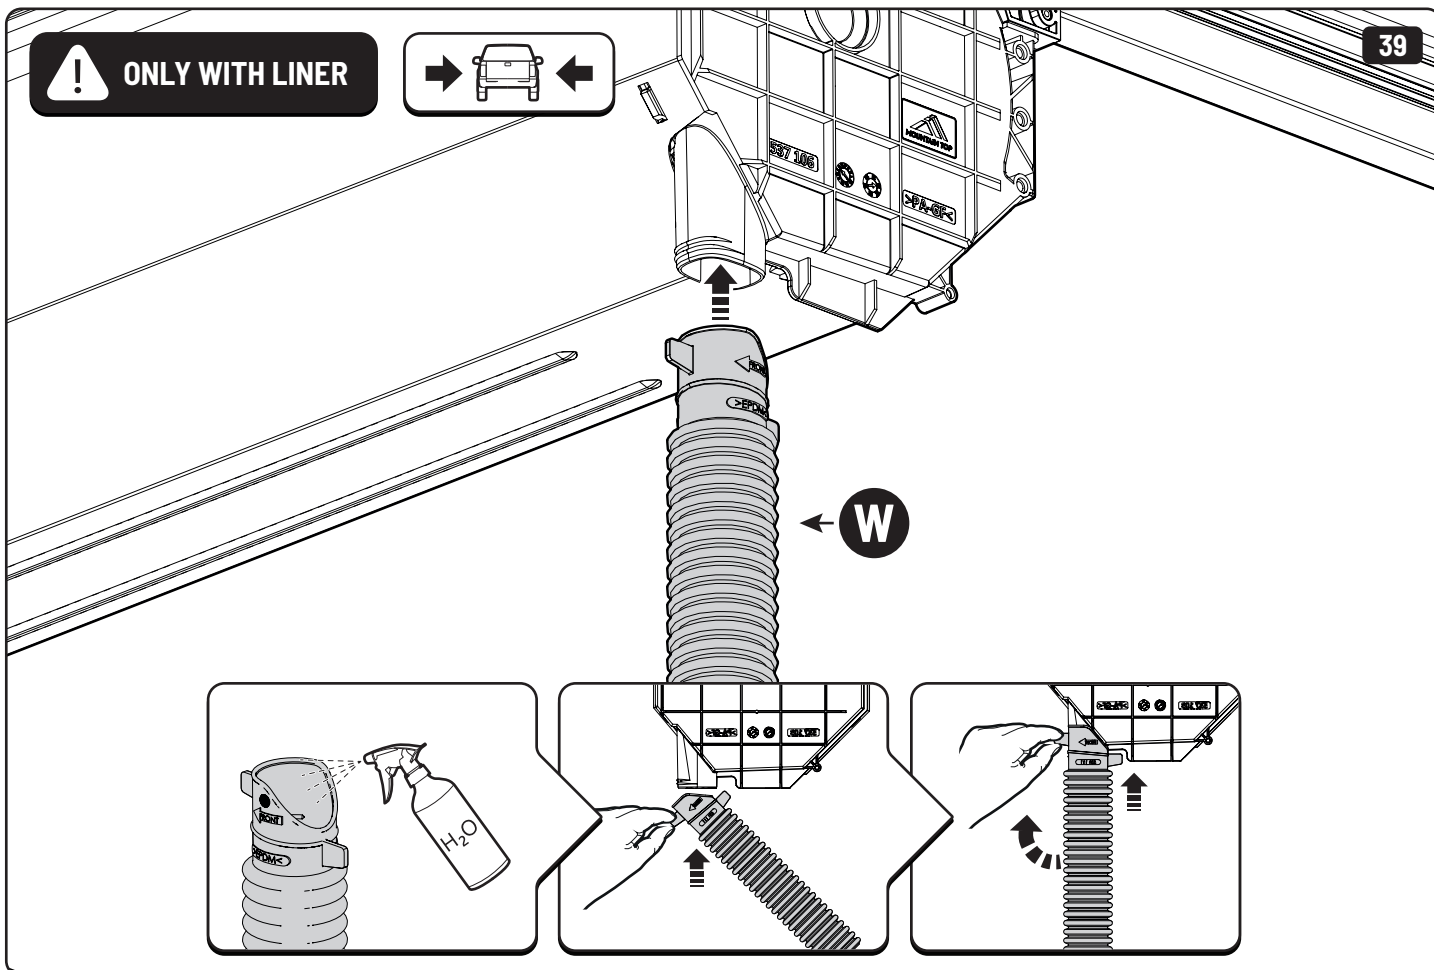




ONLY WITH LINER



EUROPEAN MODEL

X: 650 mm Y: 290 mm

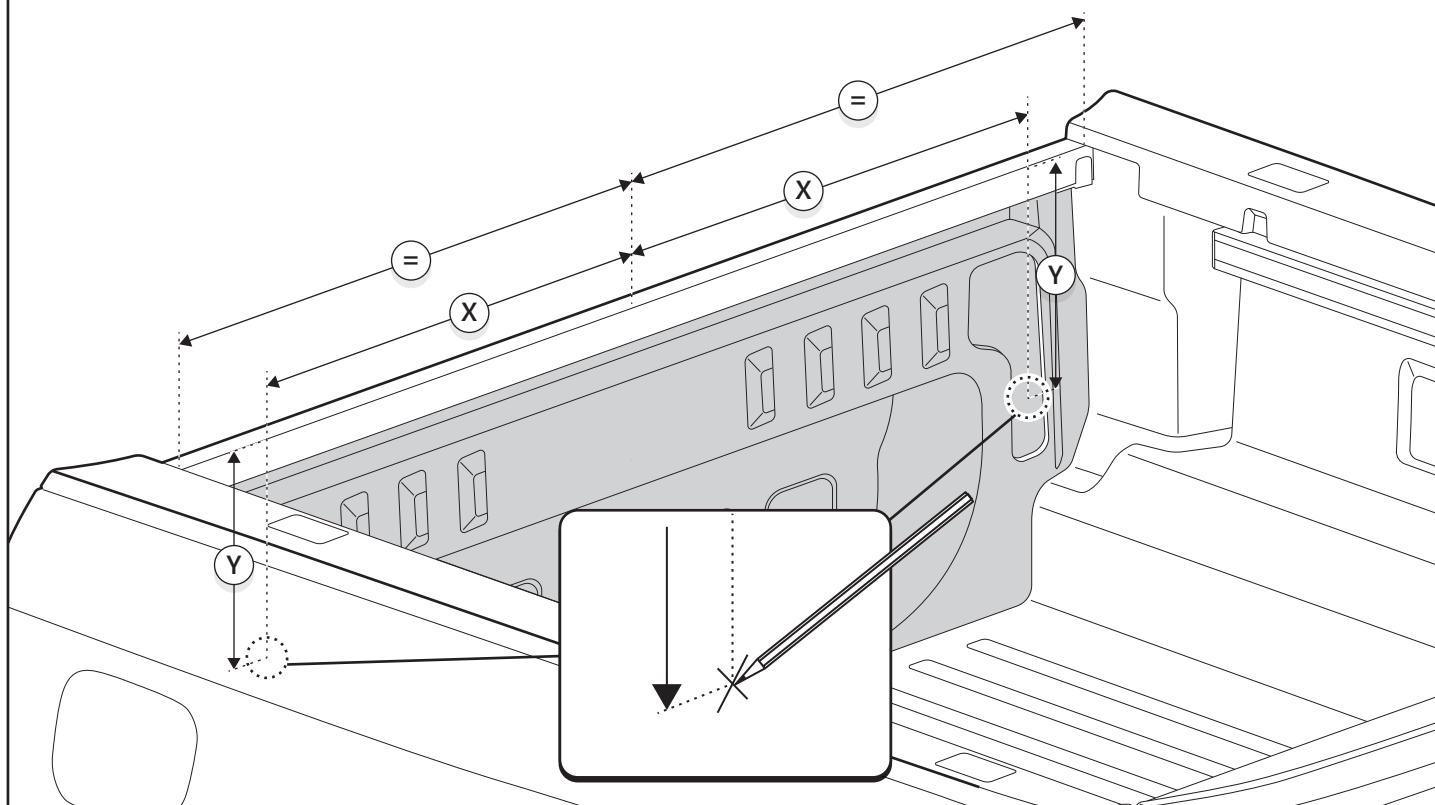




ONLY WITH LINER



OTHER MODELS

X: 635 mm Y: 330 mm

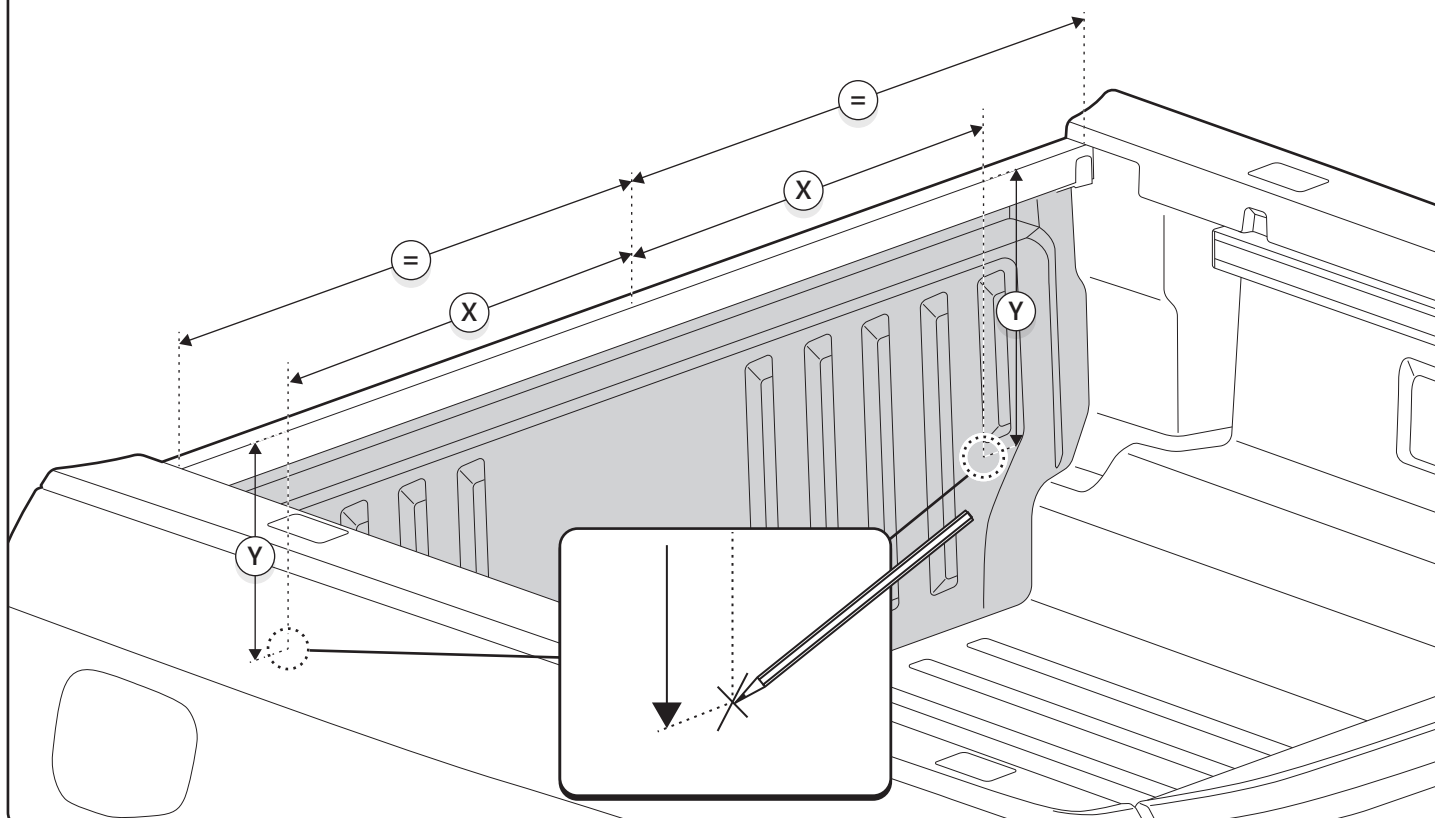

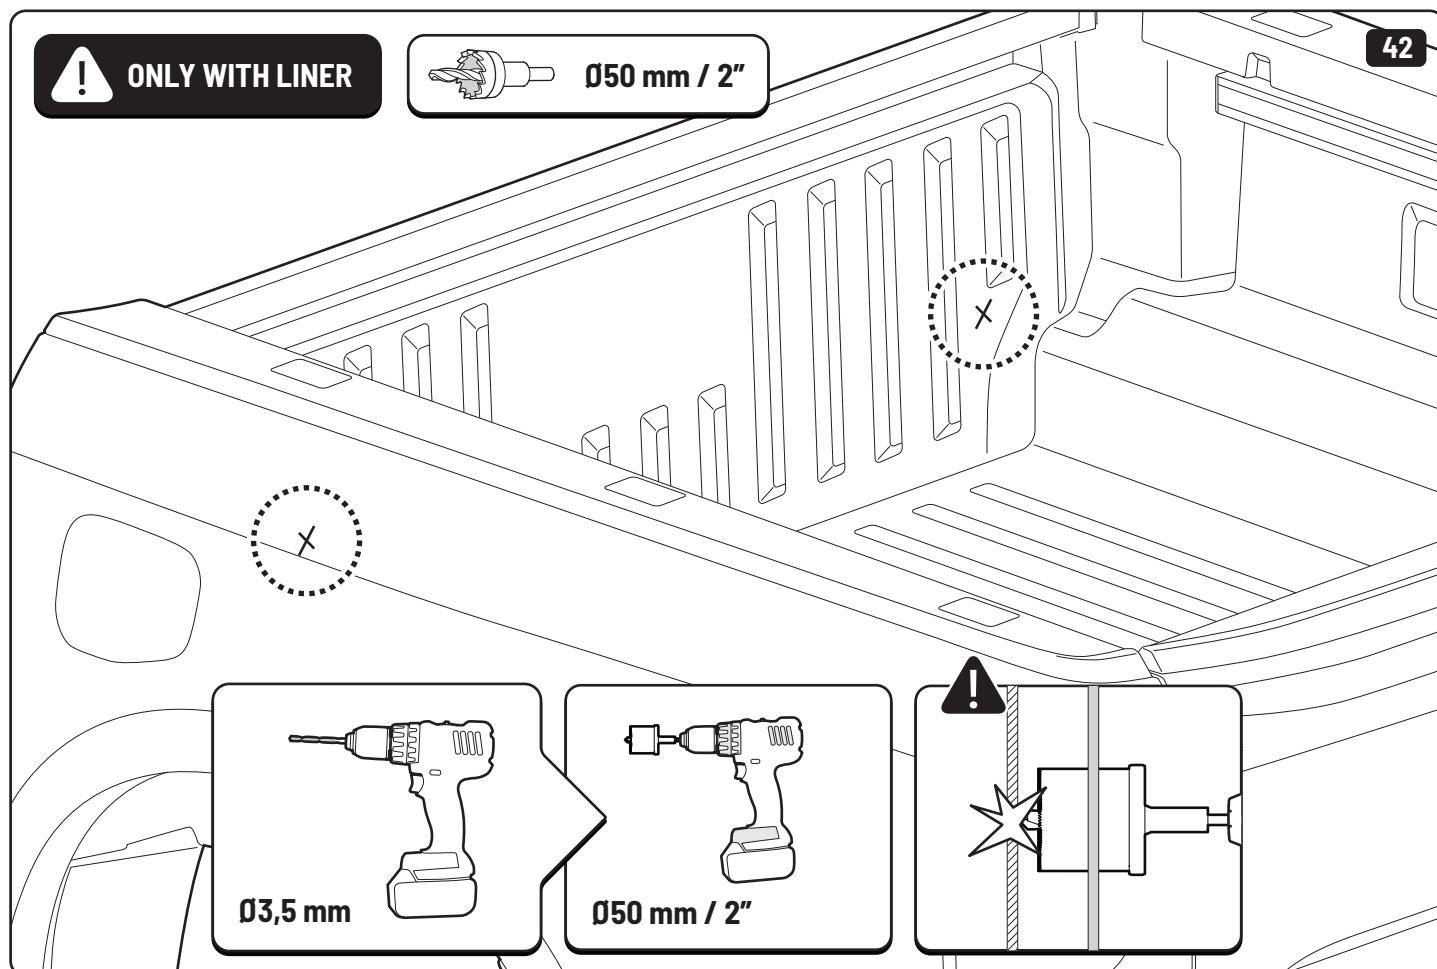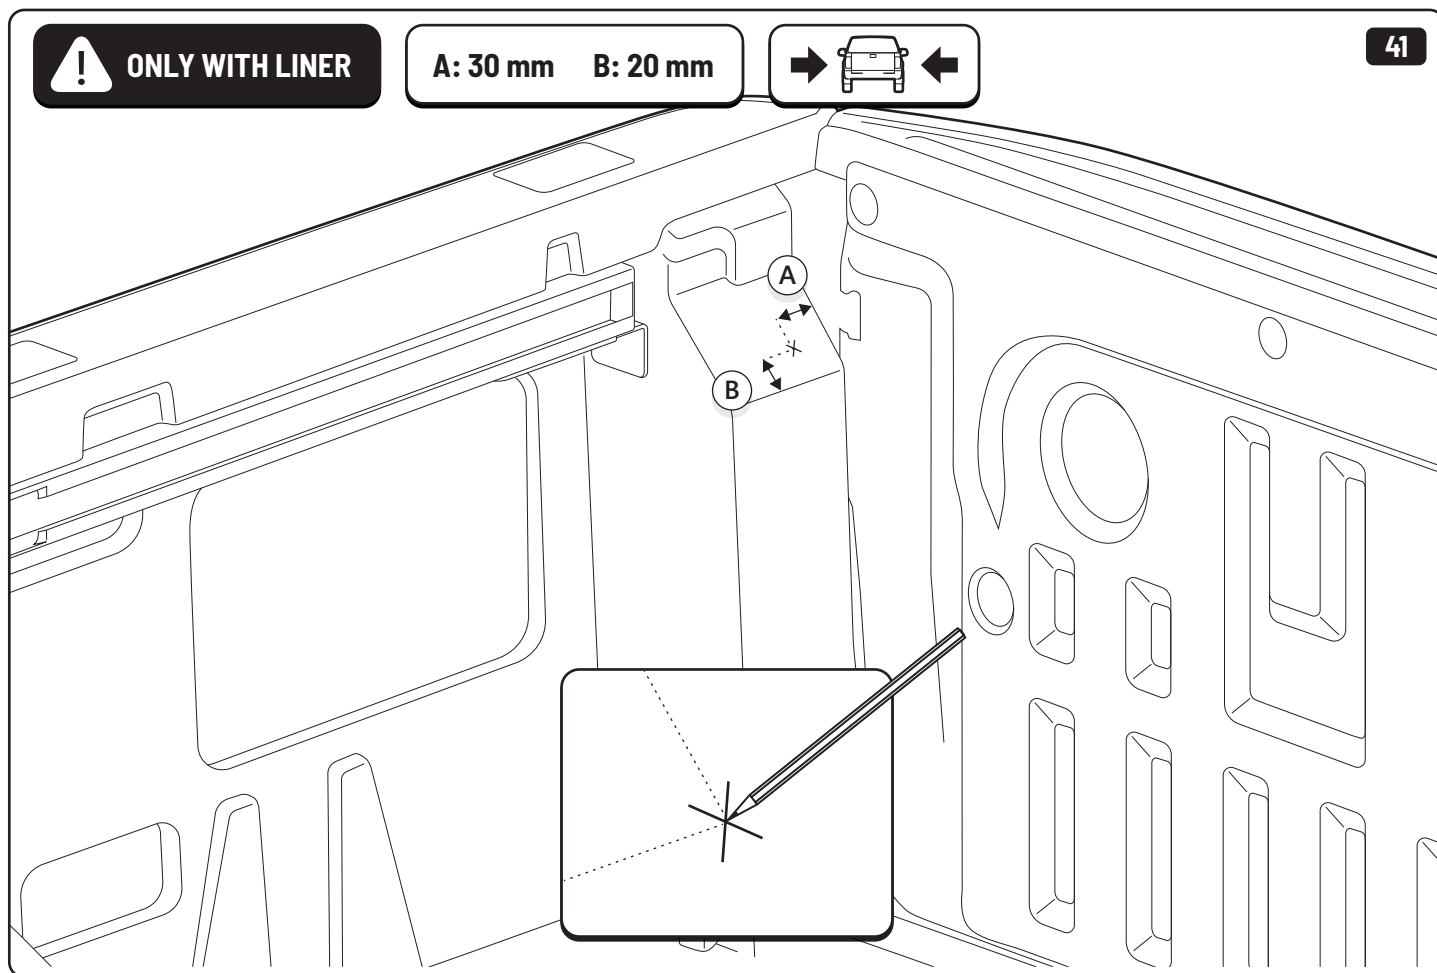



ONLY WITH LINER





Ø 3,5mm




Ø30 mm / 1.2"





43

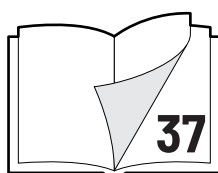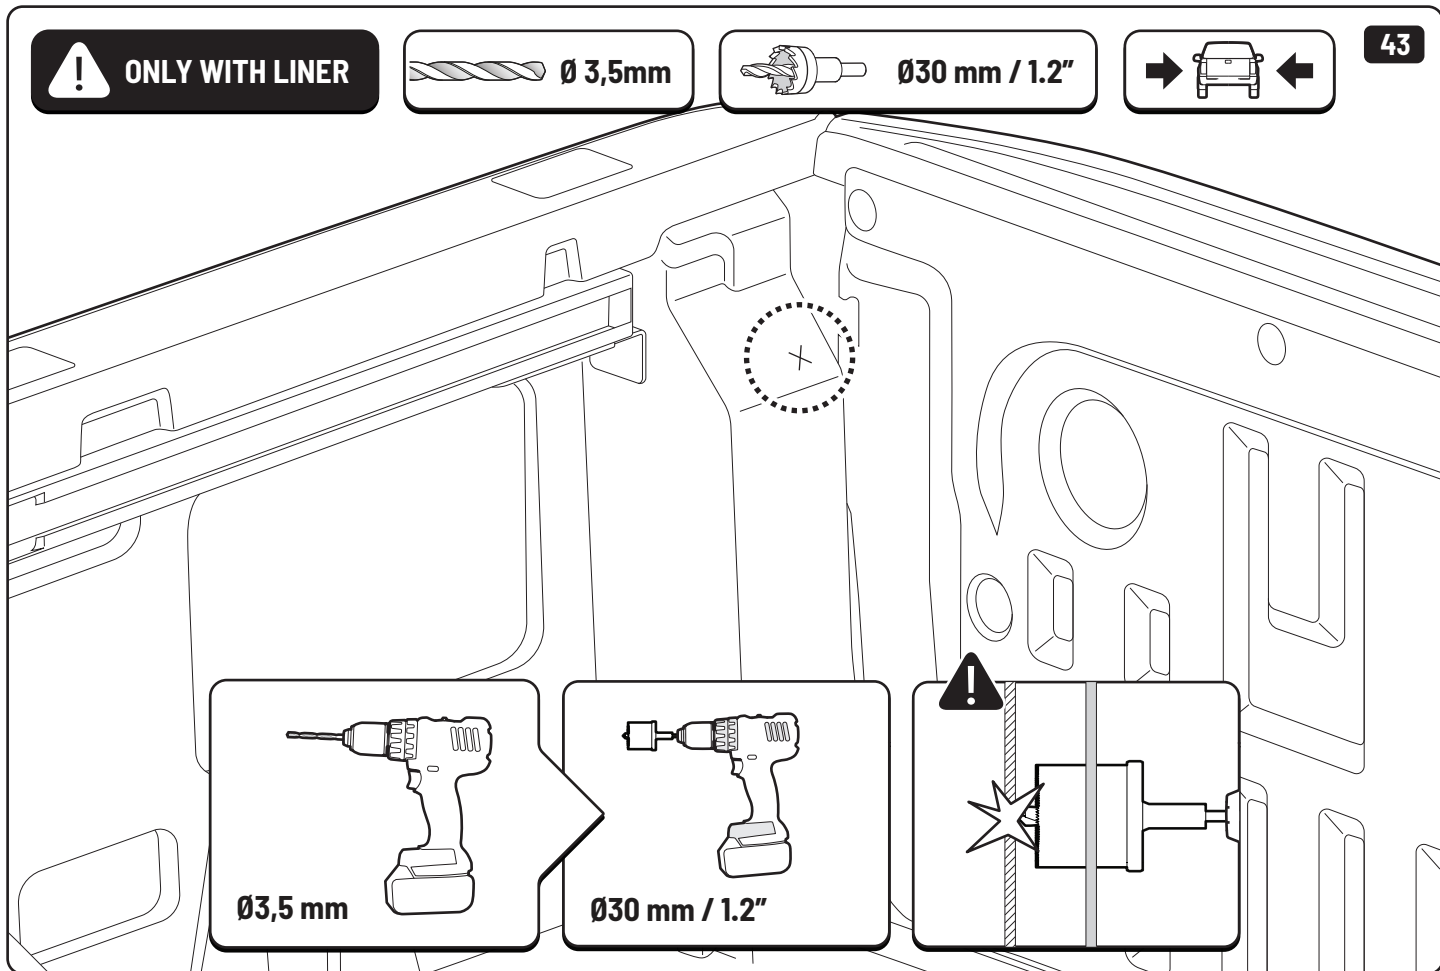



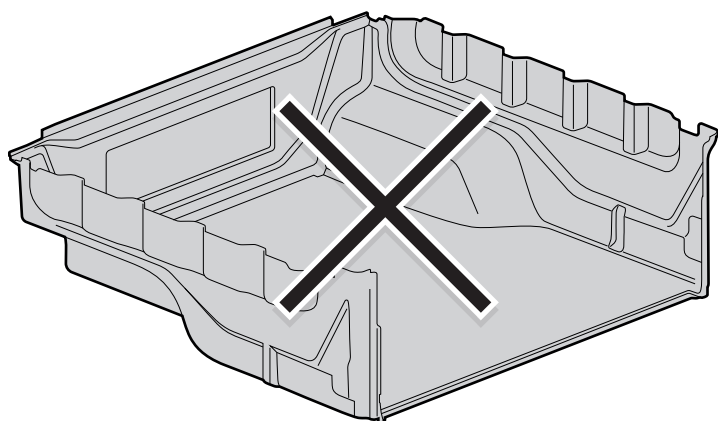


+ **SPRAY-IN
BEDLINER**


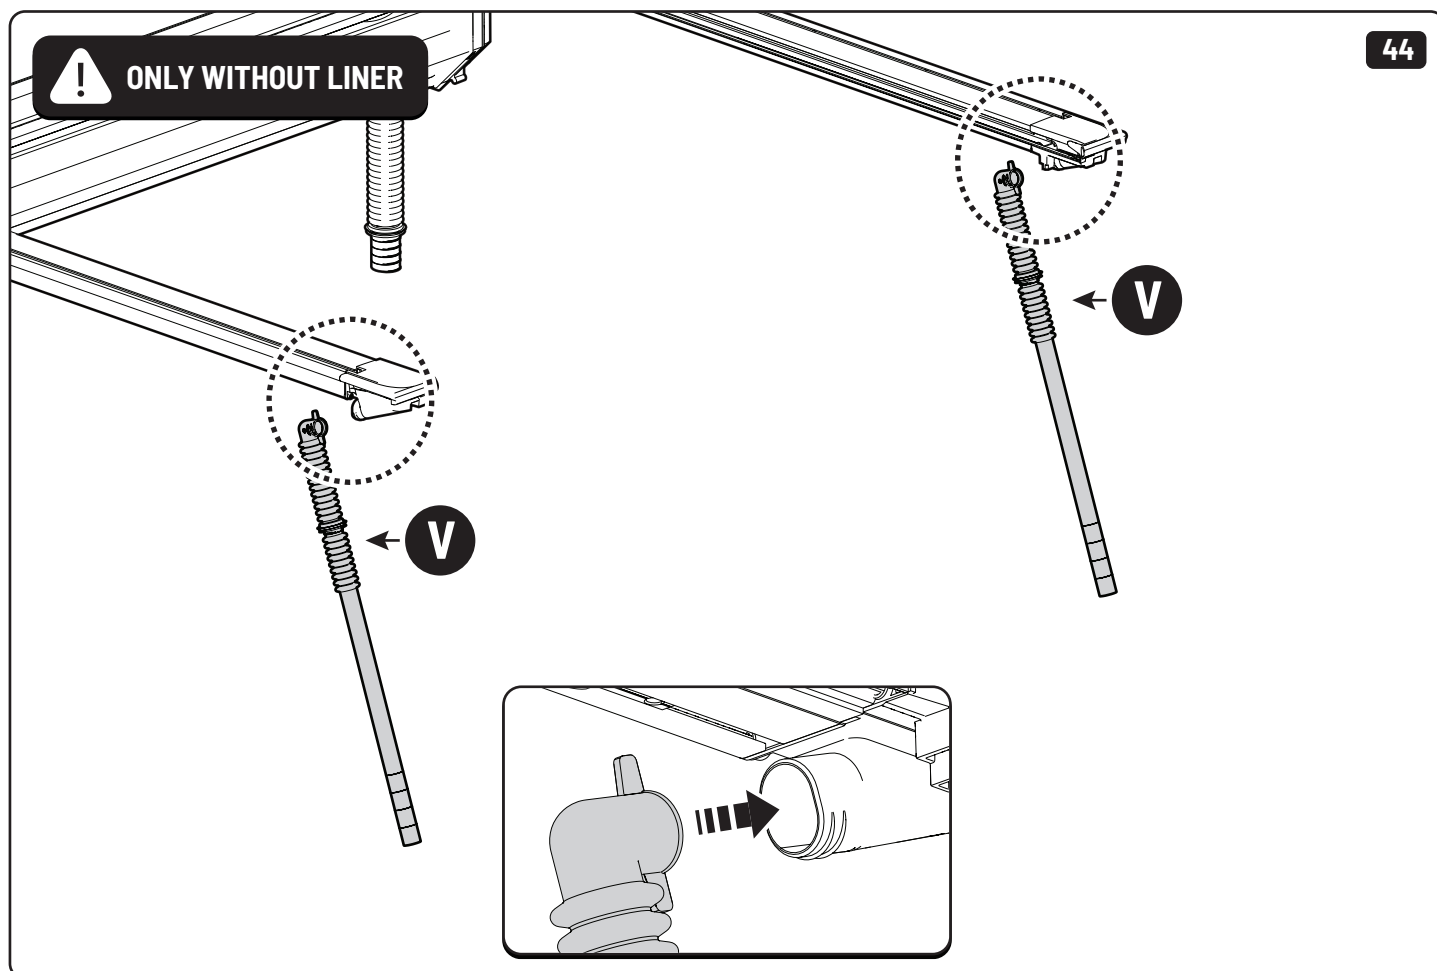








ONLY WITHOUT LINER

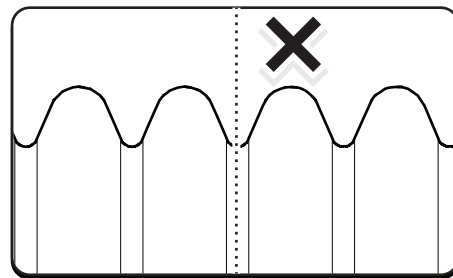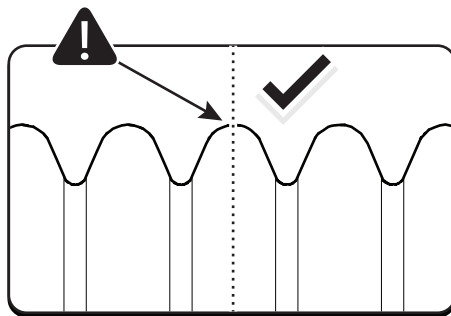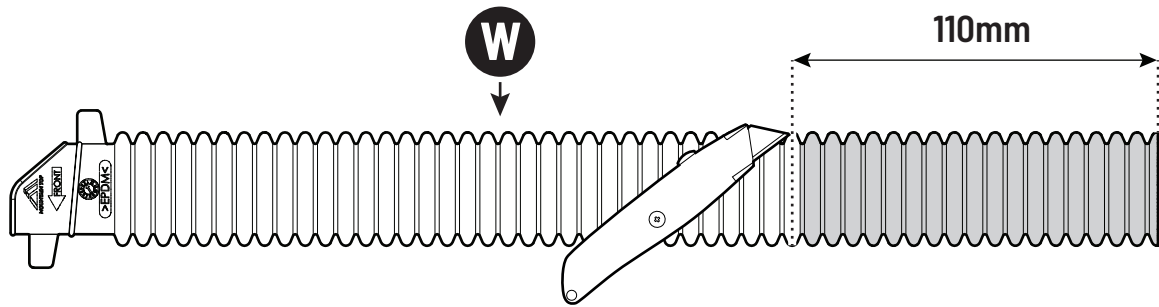

ONLY WITHOUT LINER

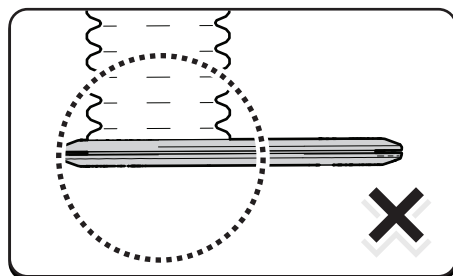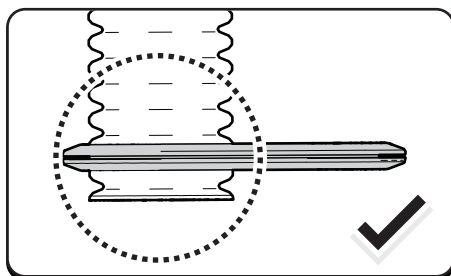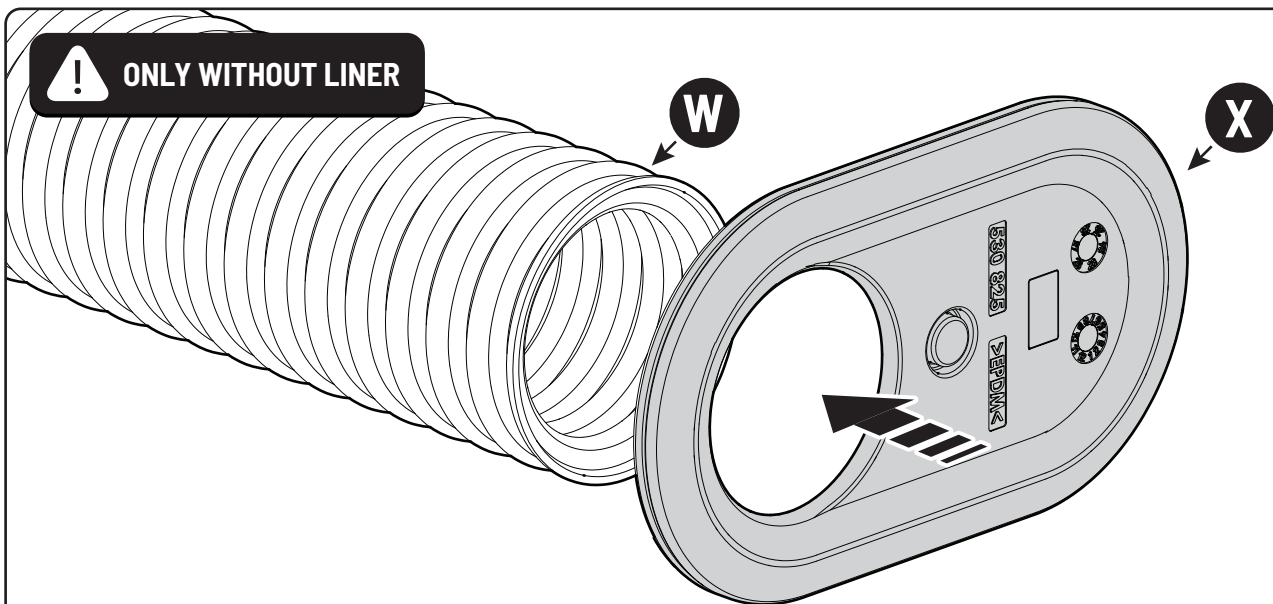

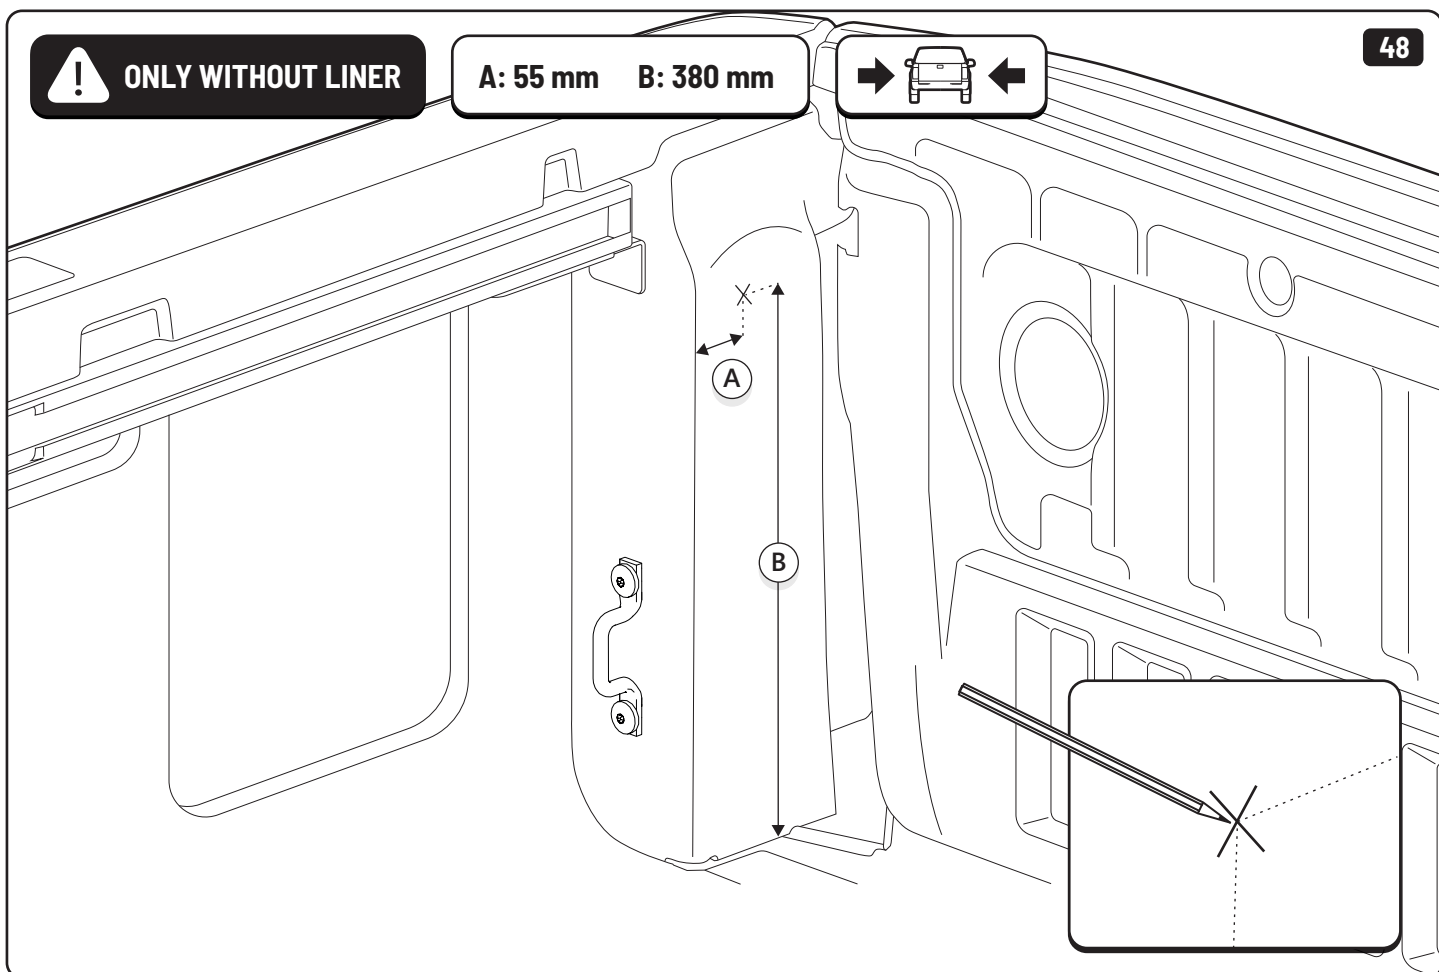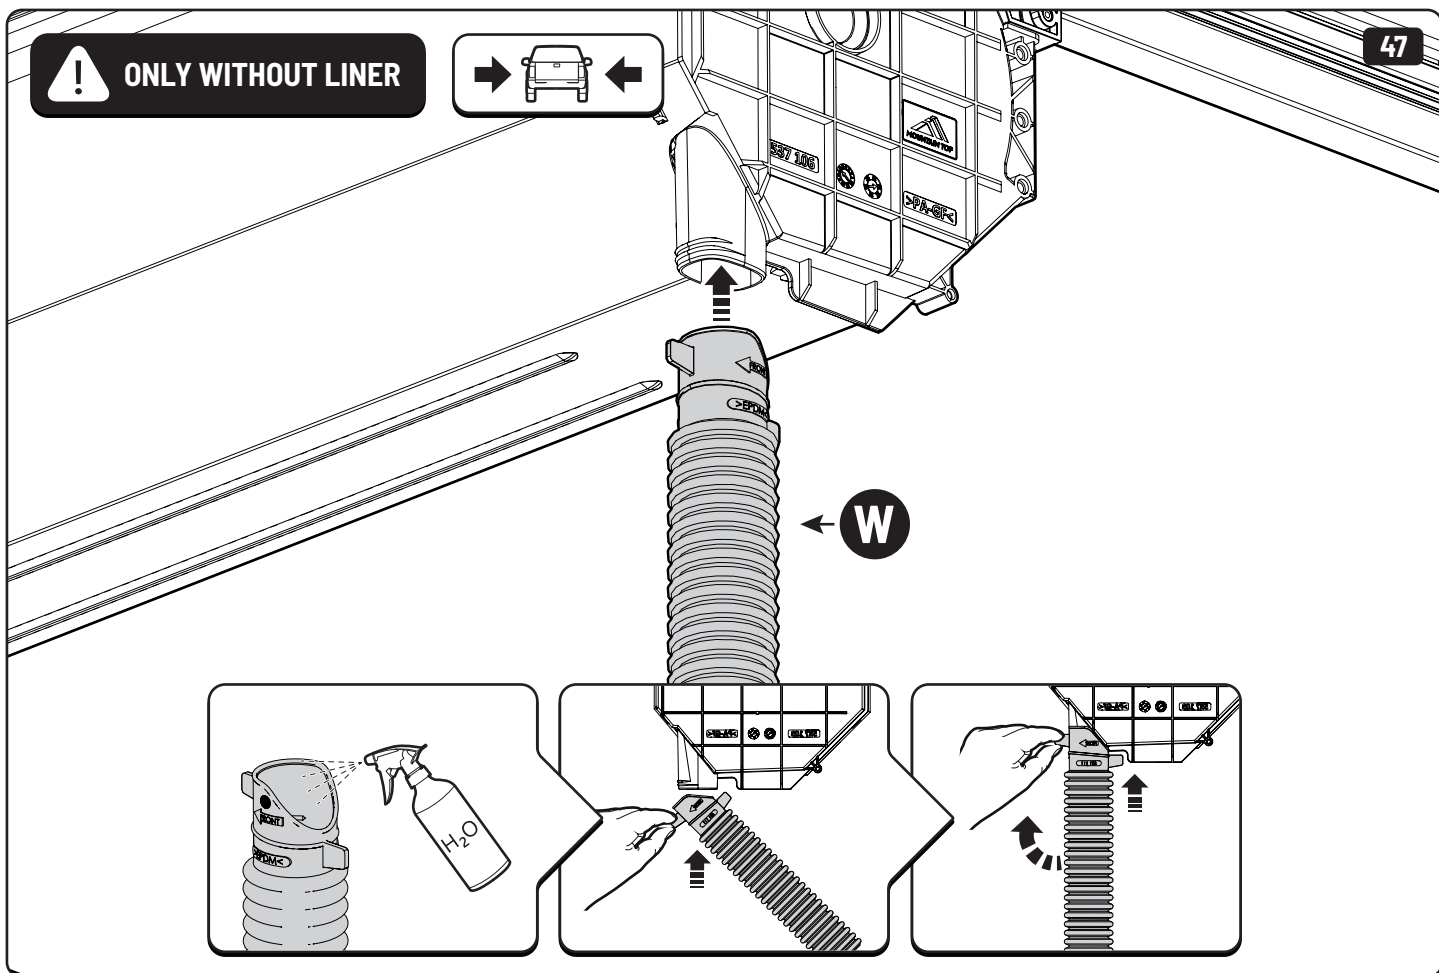




Ø30 mm / 1.2"




Rust Protection





ONLY WITHOUT LINER

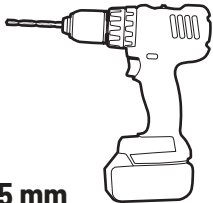

Ø3,5 mm


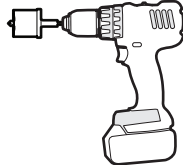


Ø30 mm / 1.2"

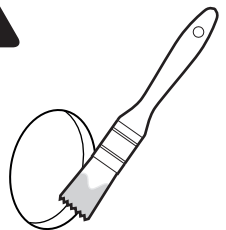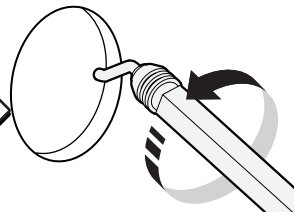

Water Management Kit


H2

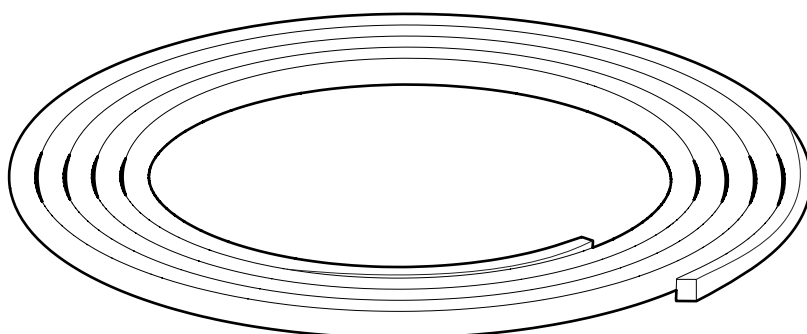

METHOD 1 (RECOMMENDED)




50



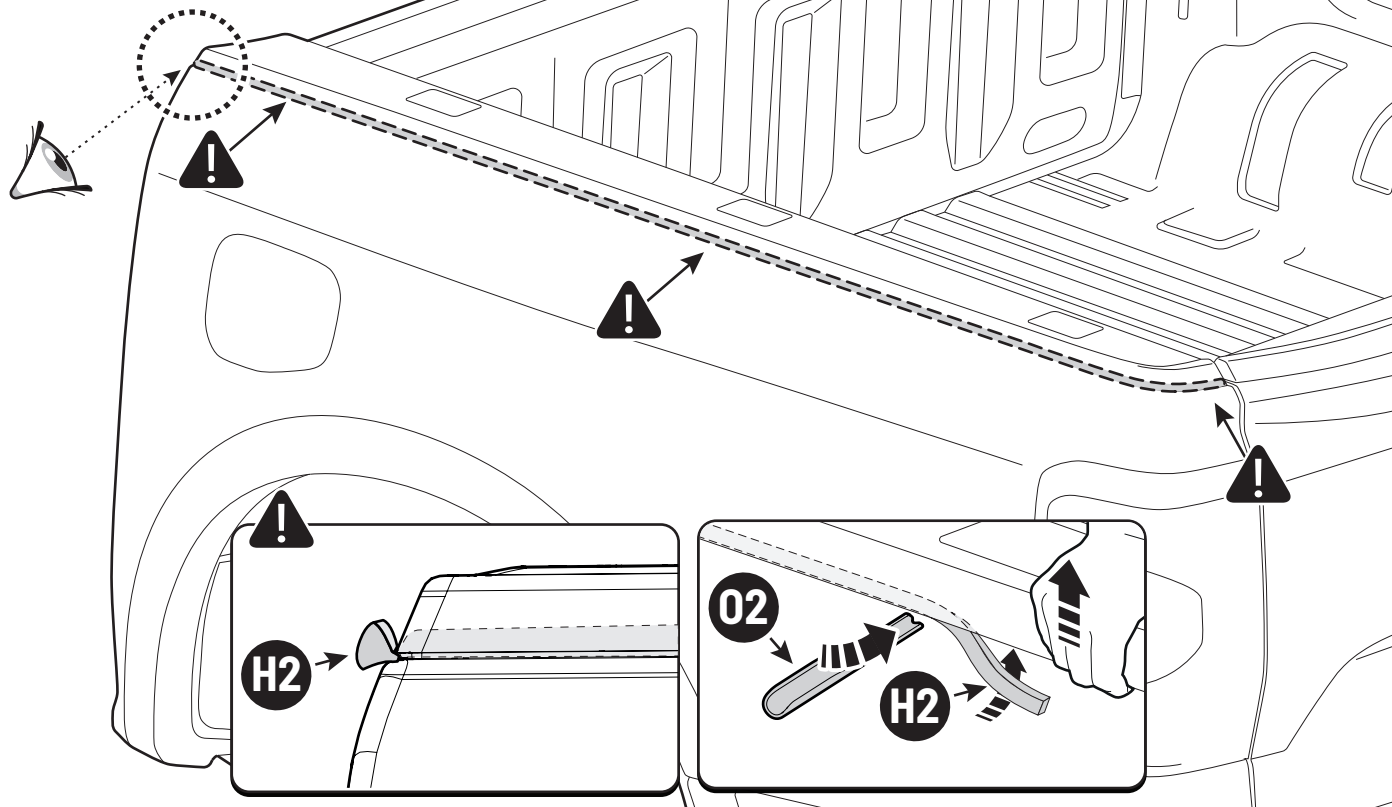





METHOD 2



51

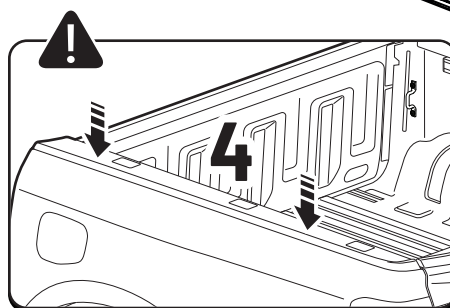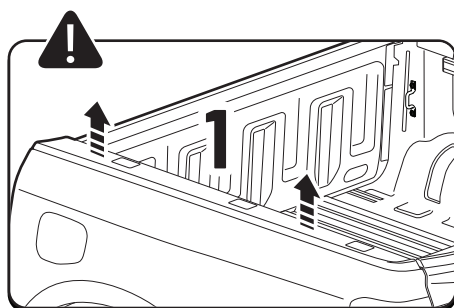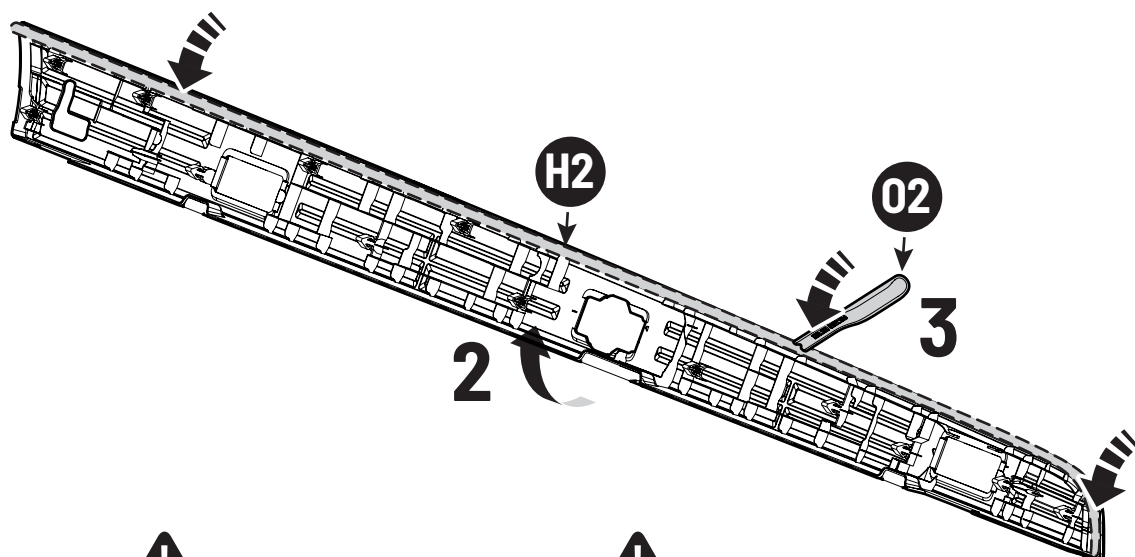

52

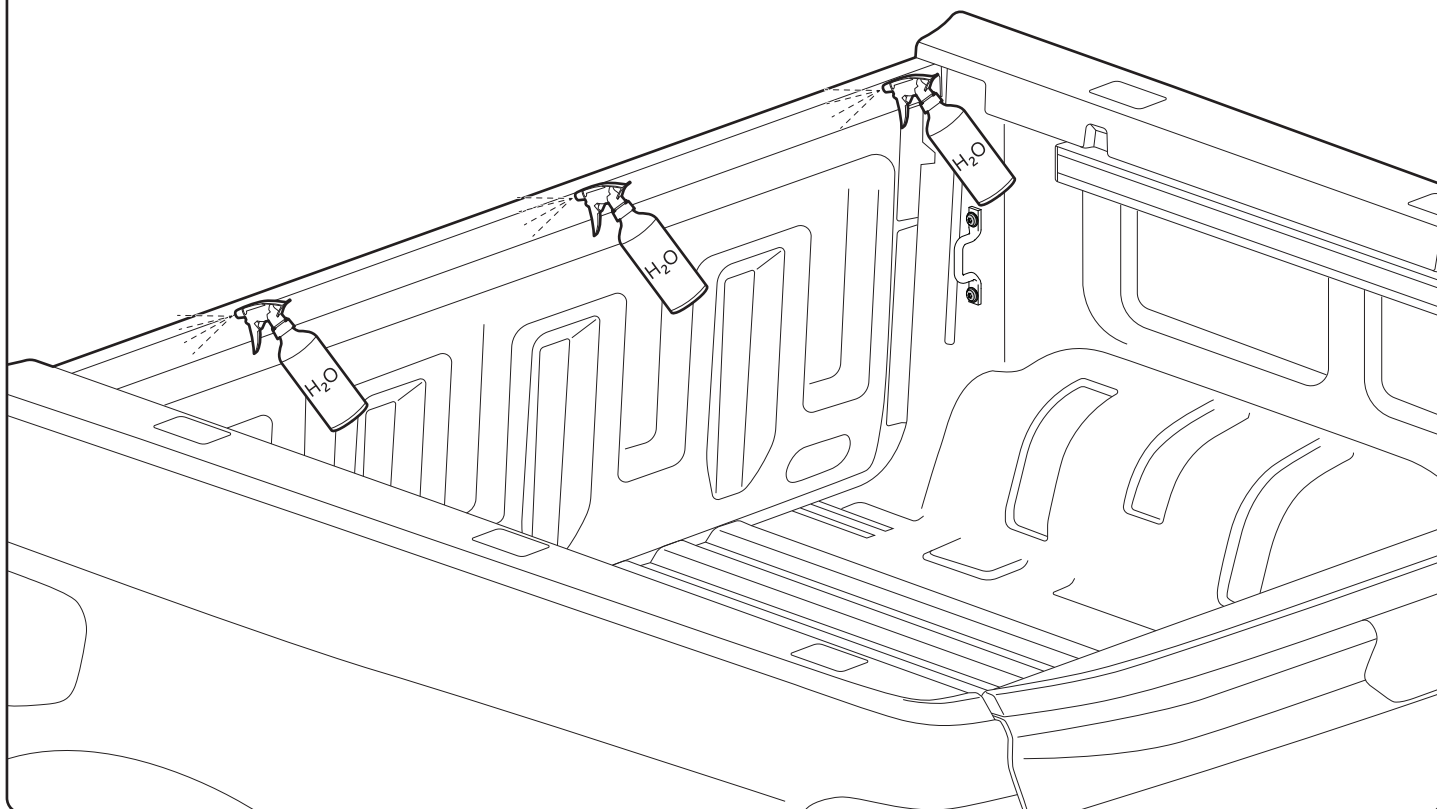




LOCTITE 243




T45






53

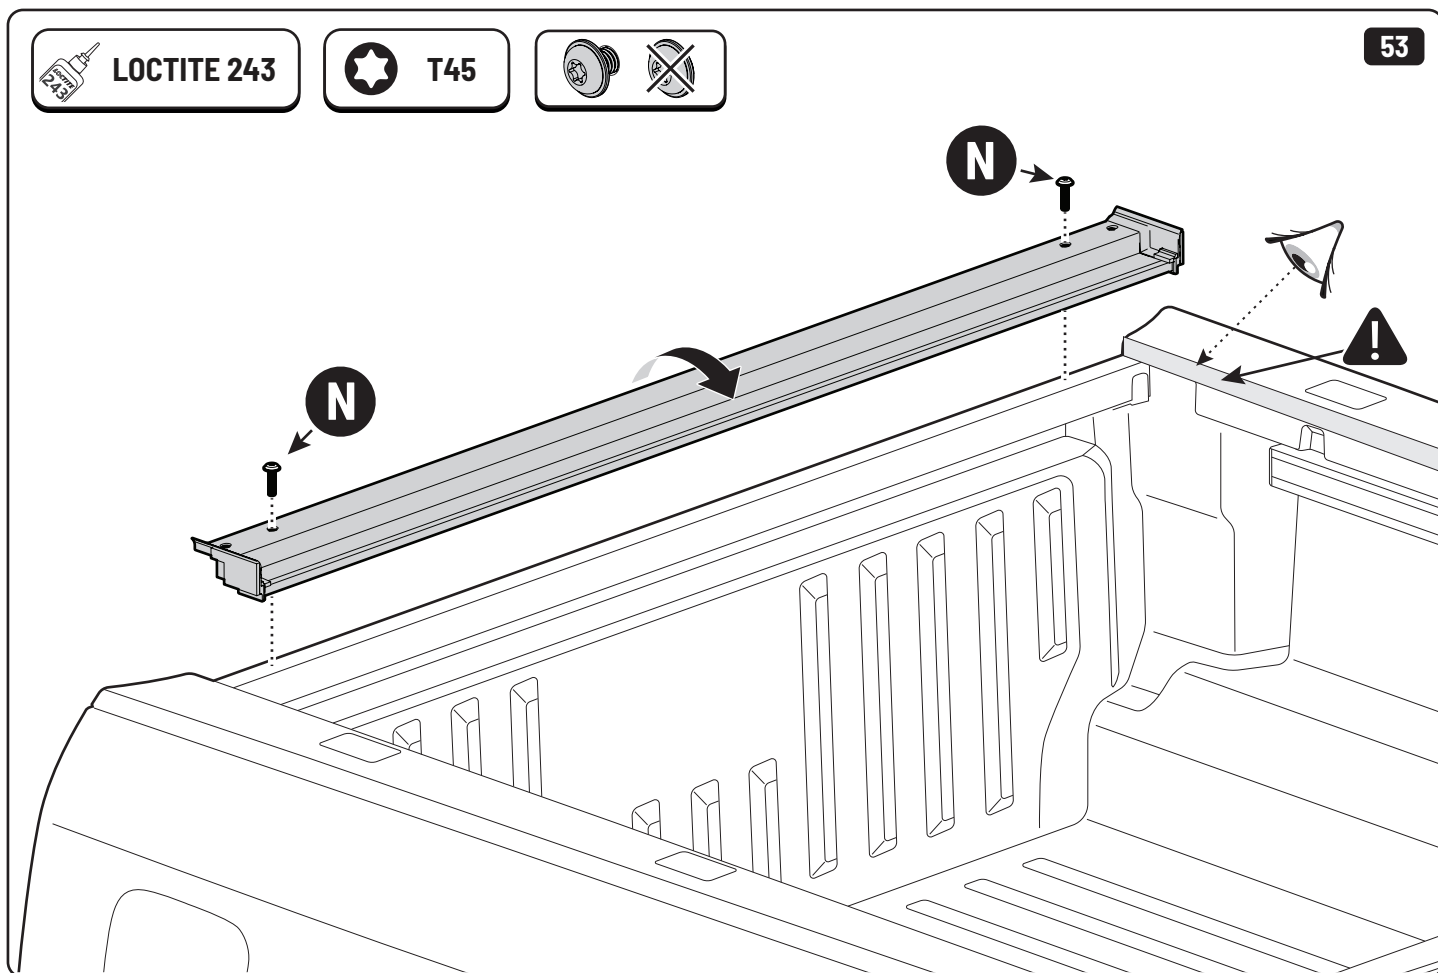

54


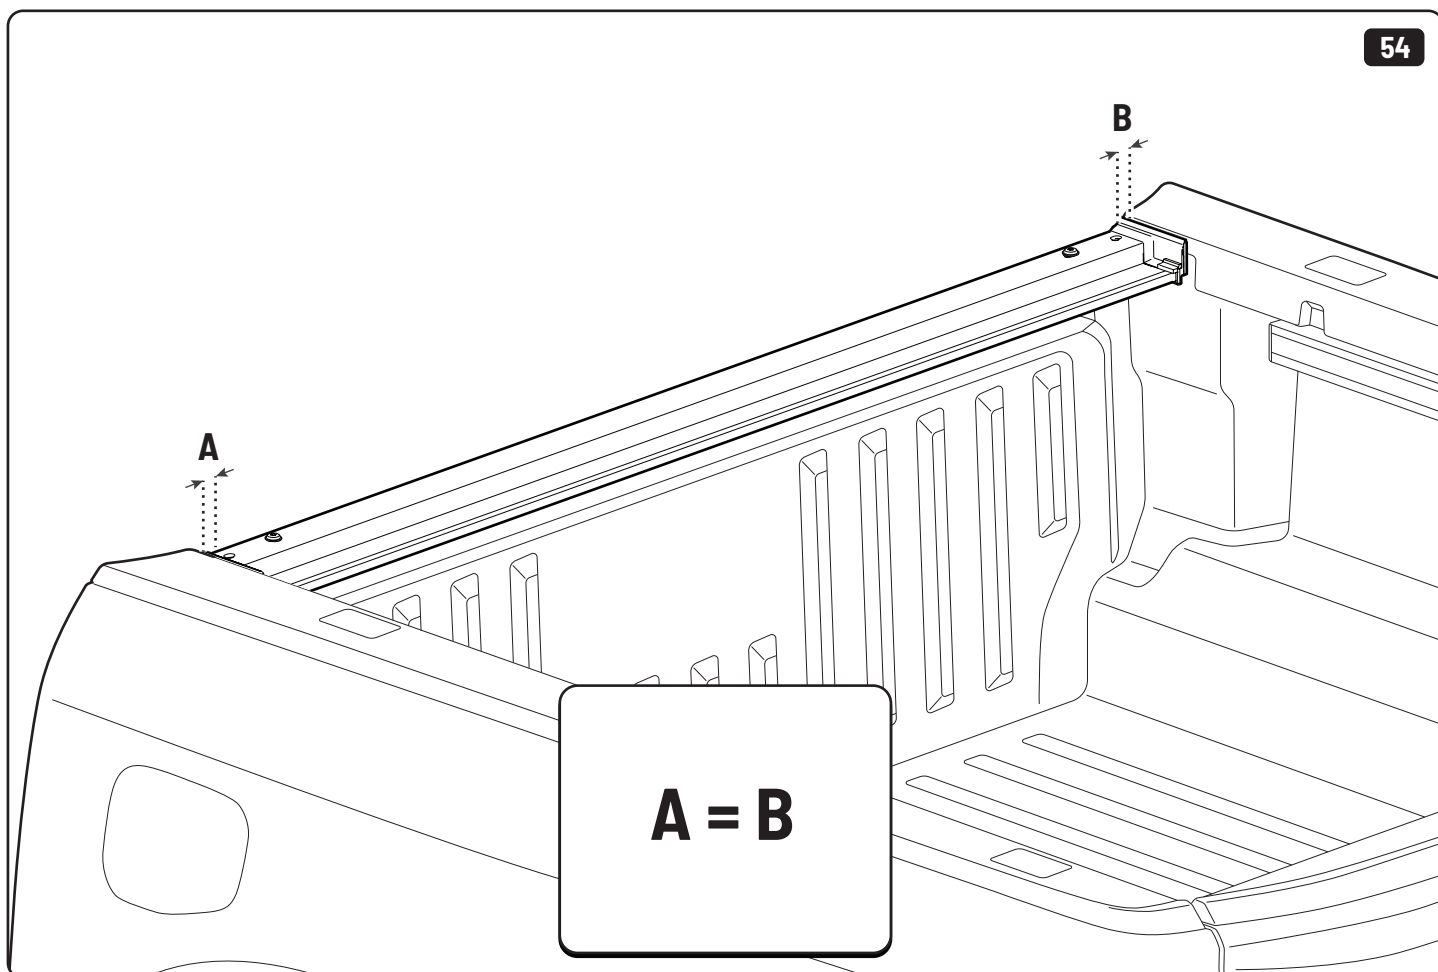



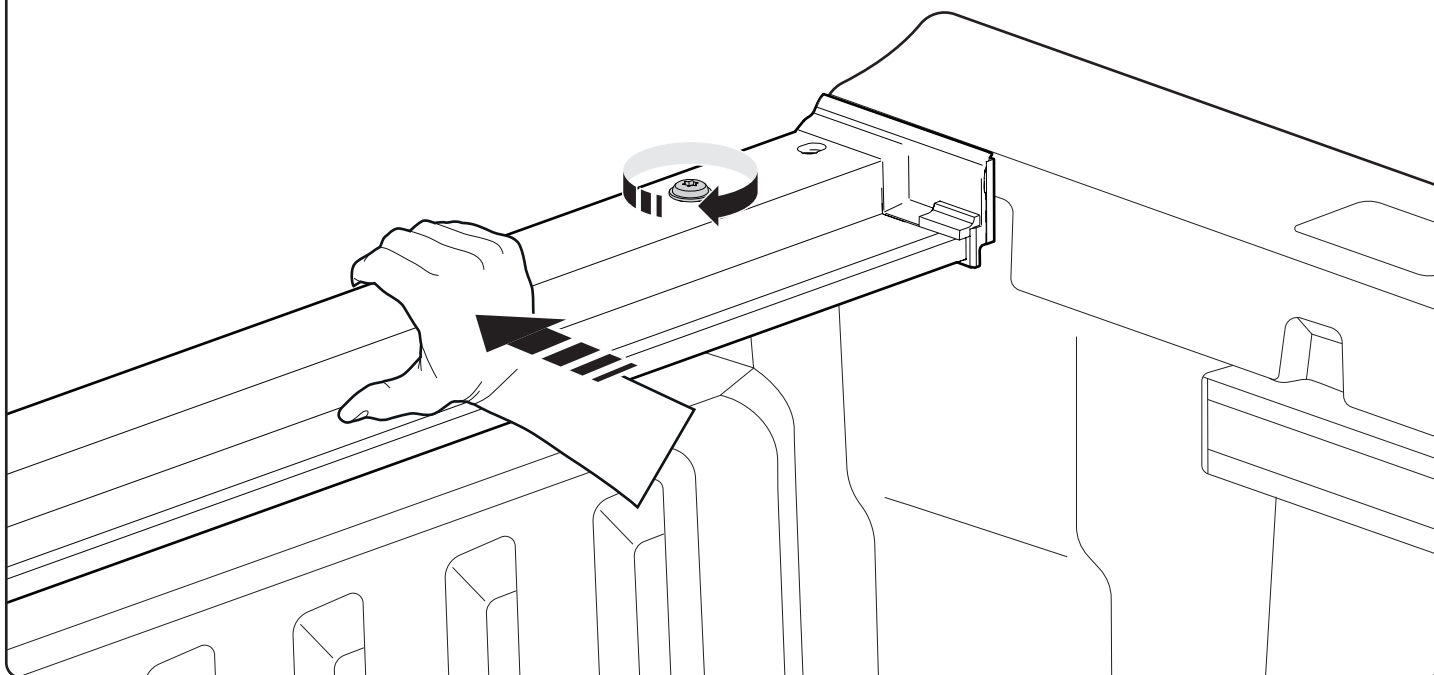


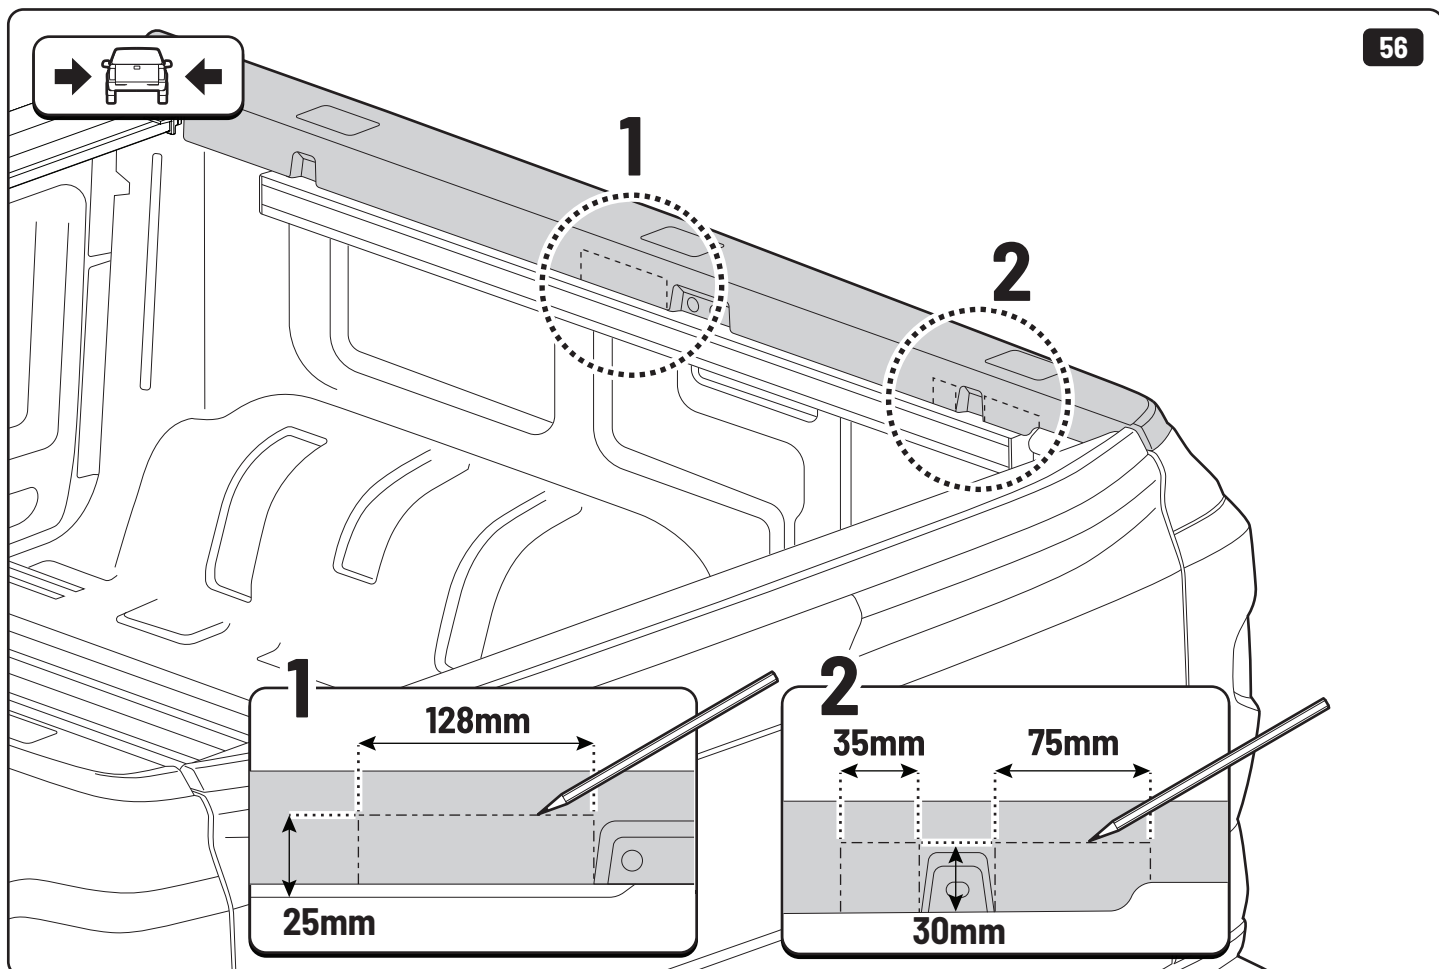
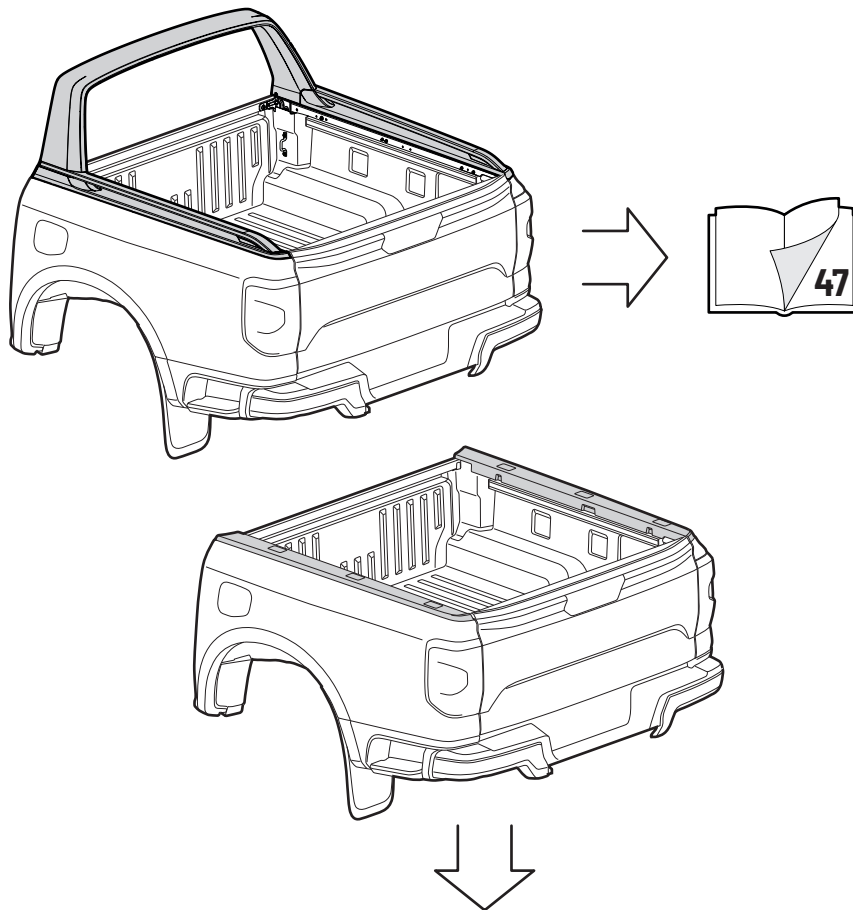






! USE PROTECTIVE WOOD / PLASTIC BOARD

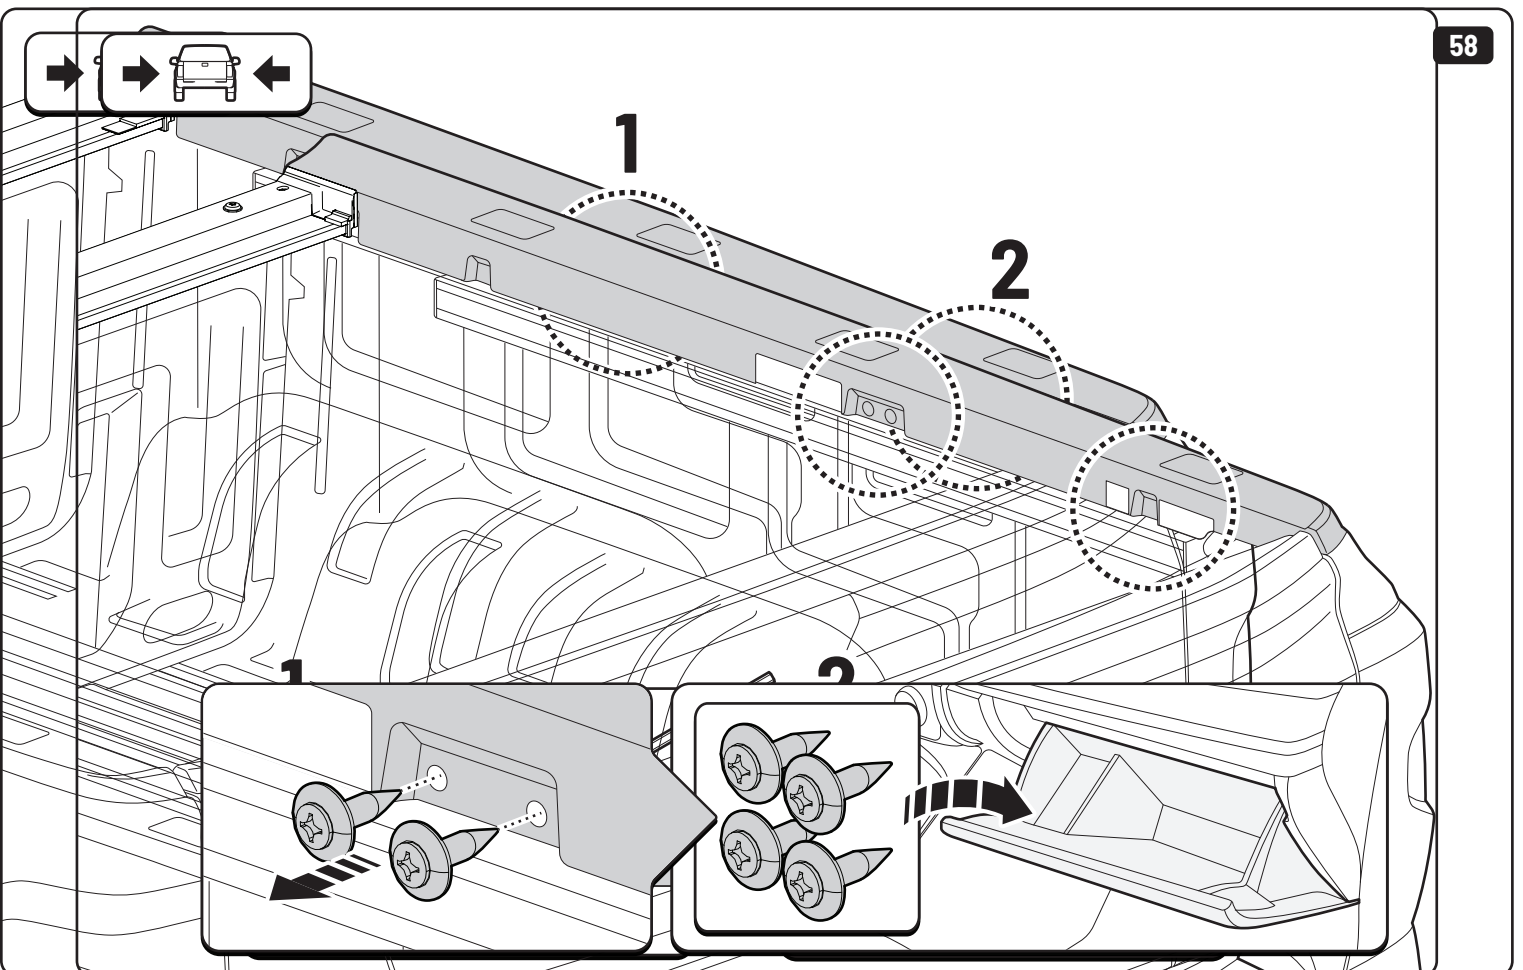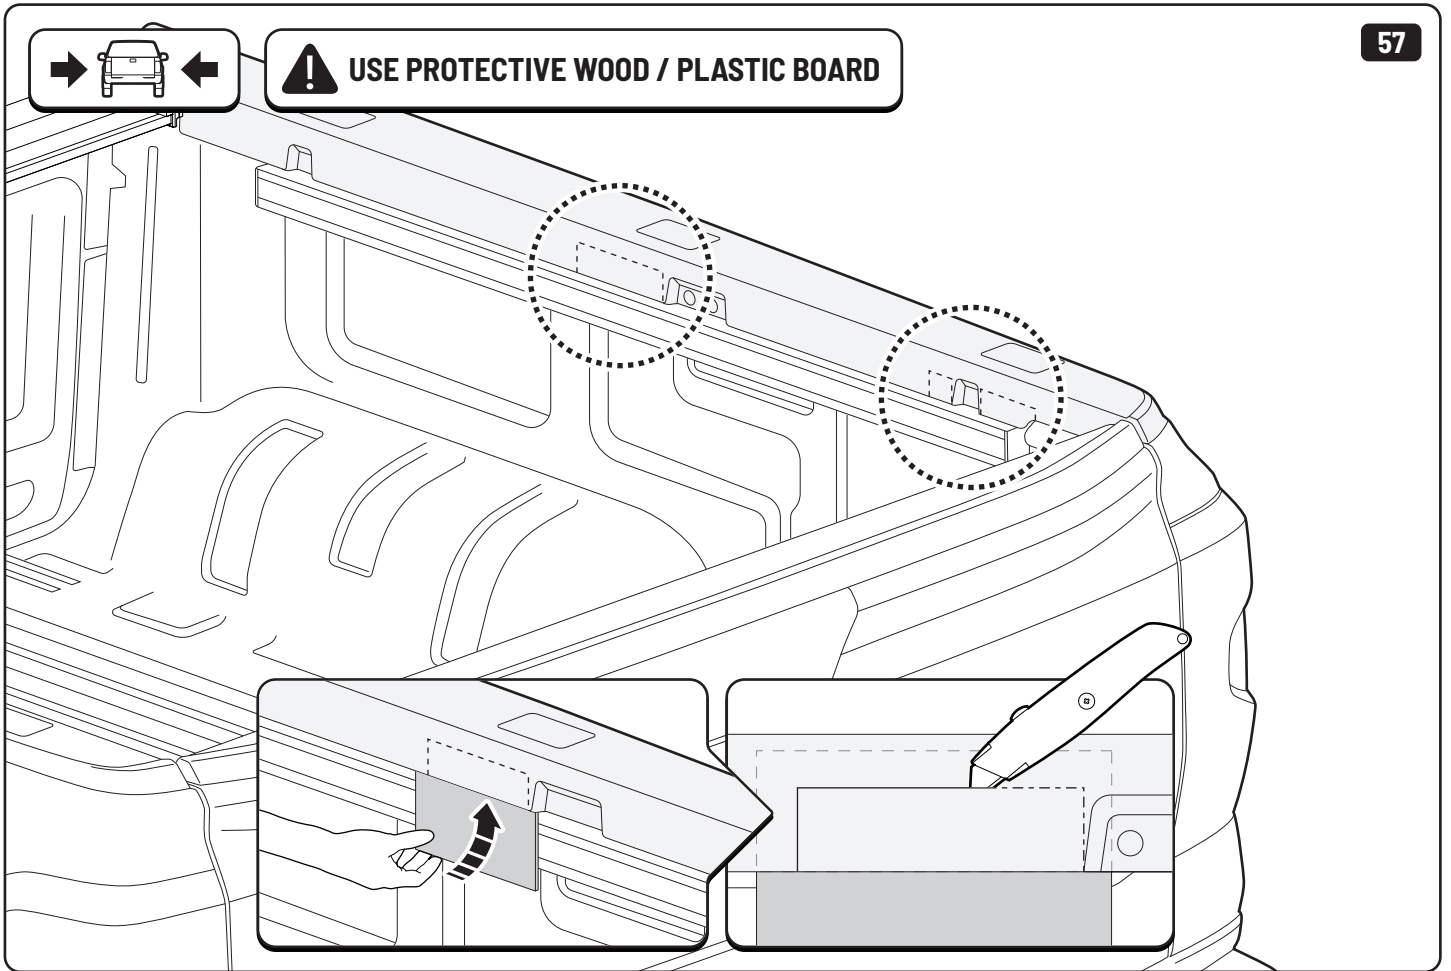



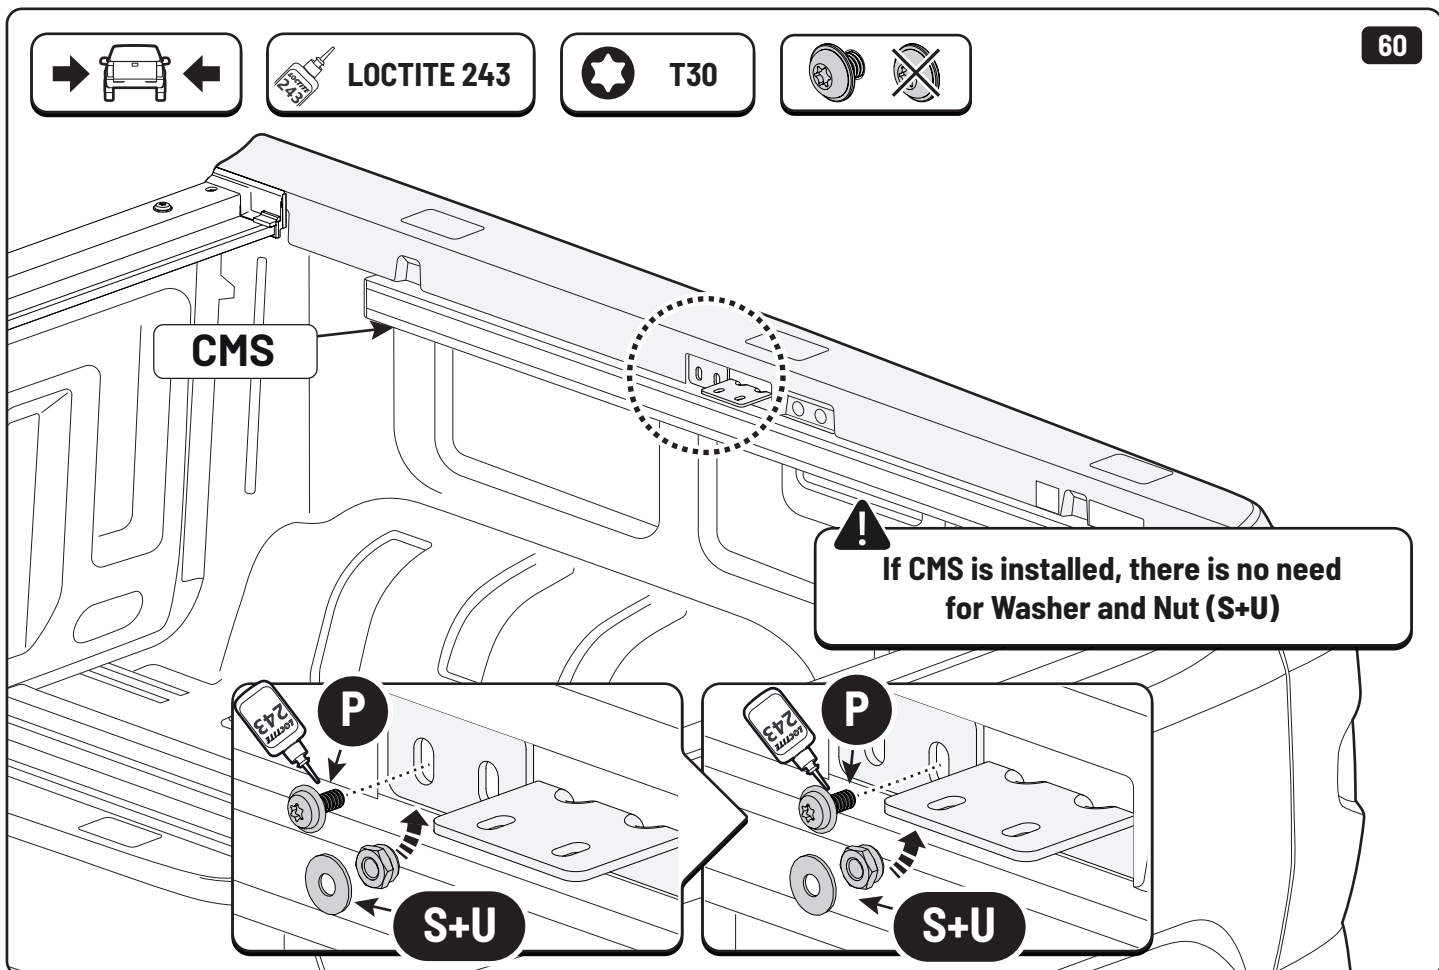
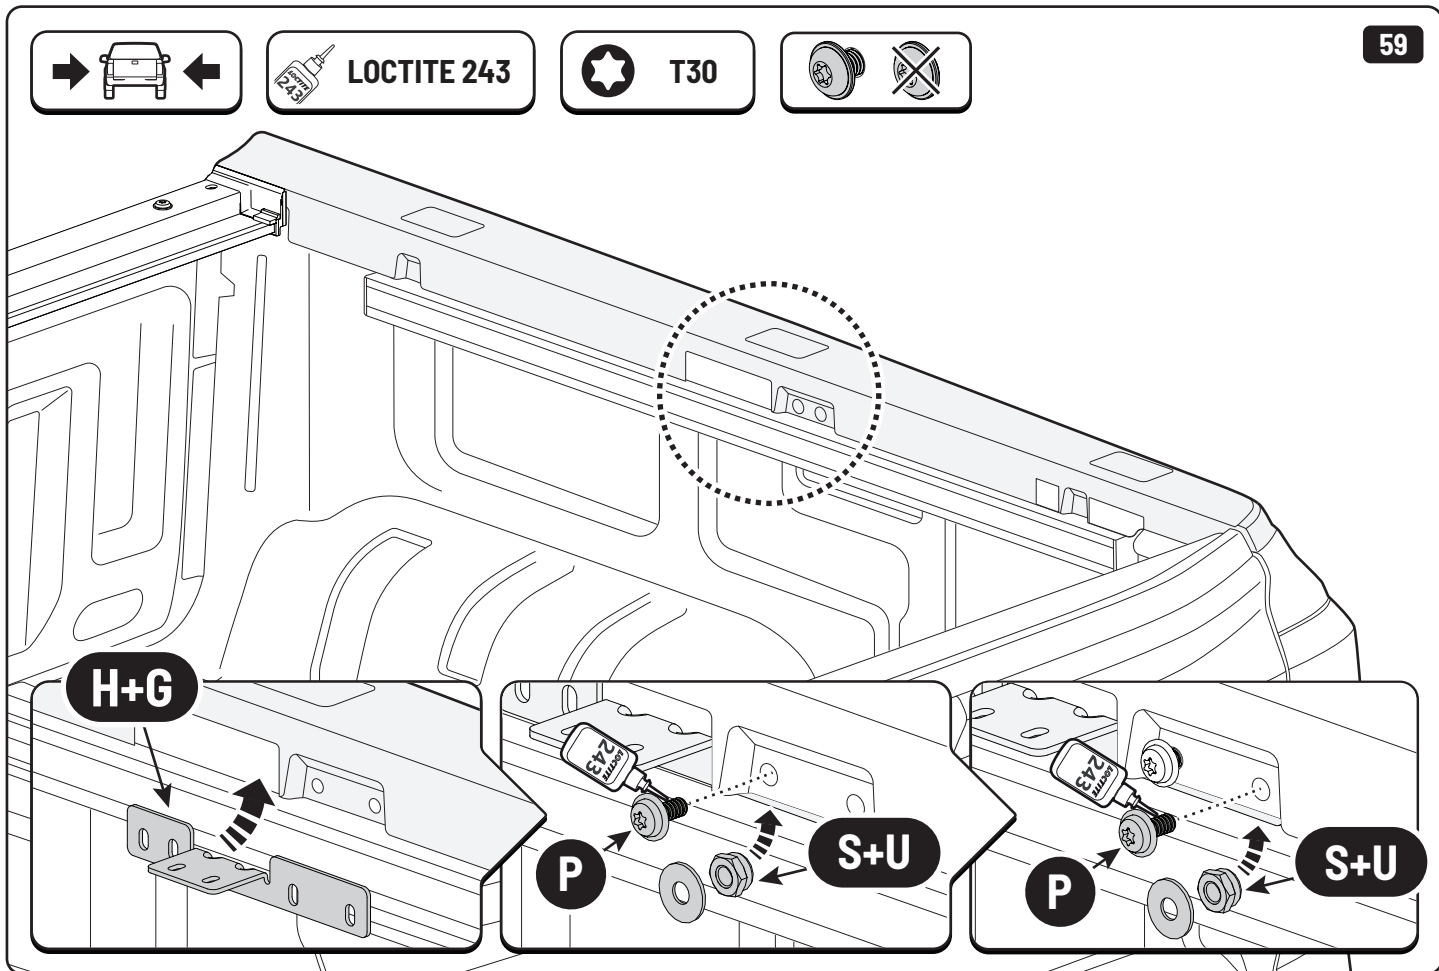


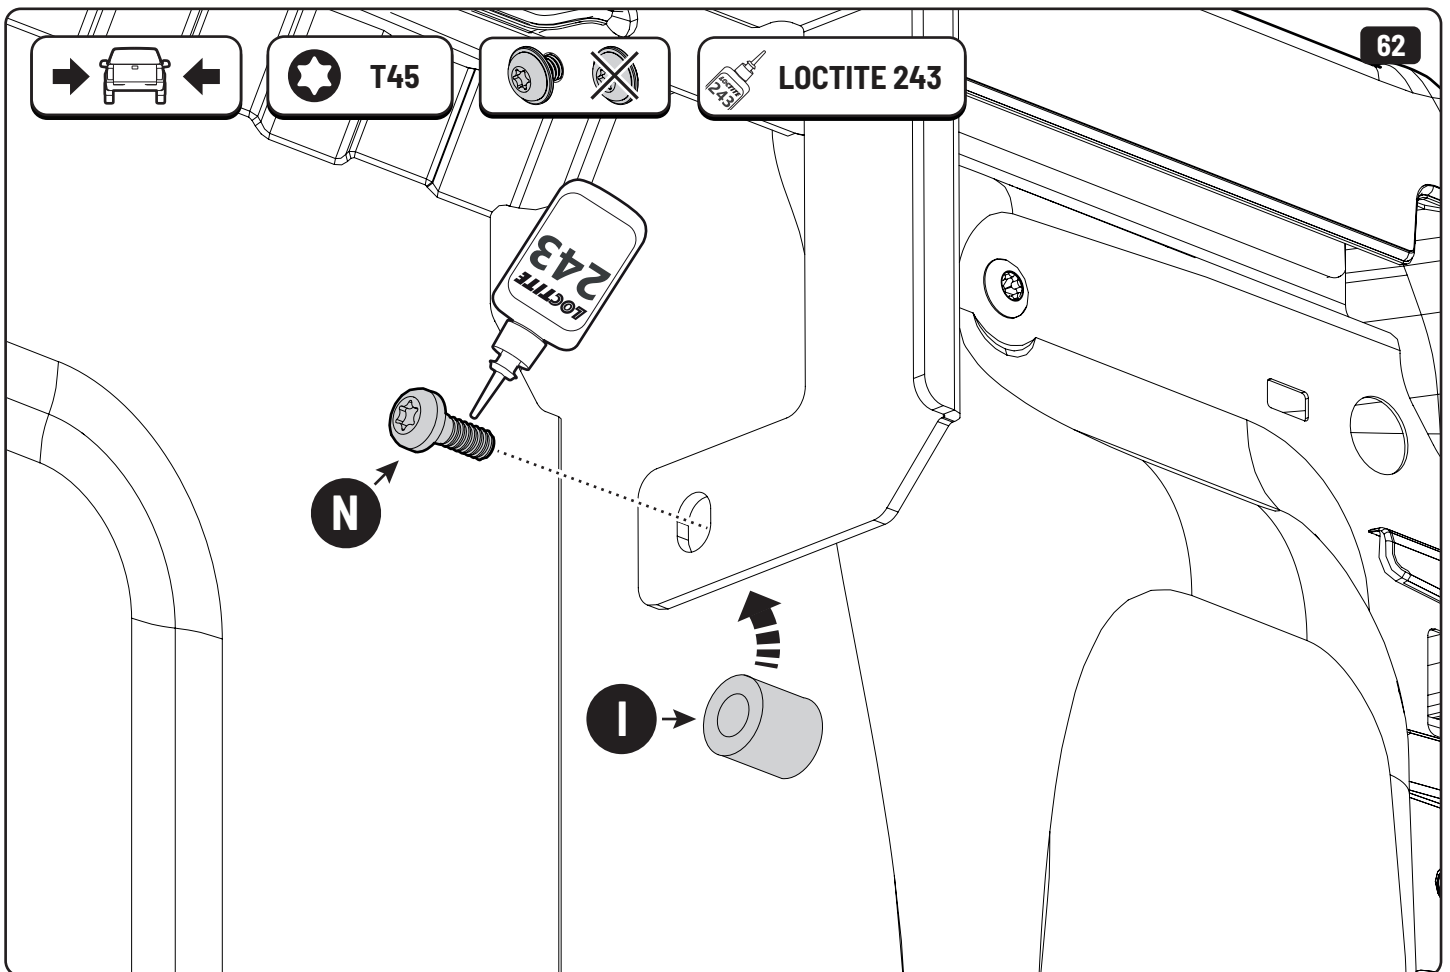
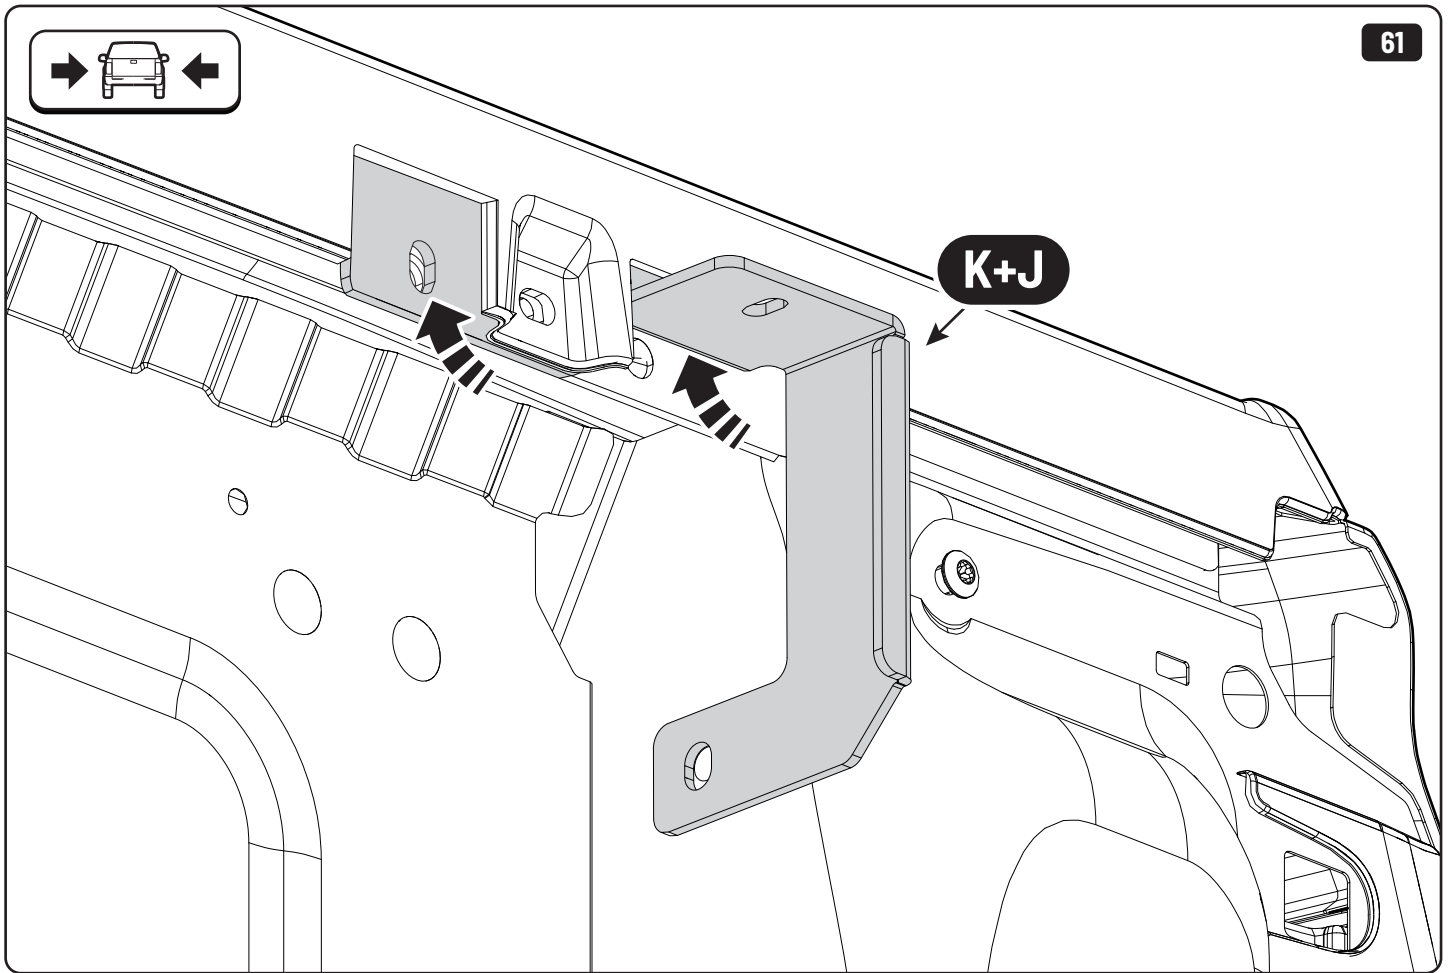


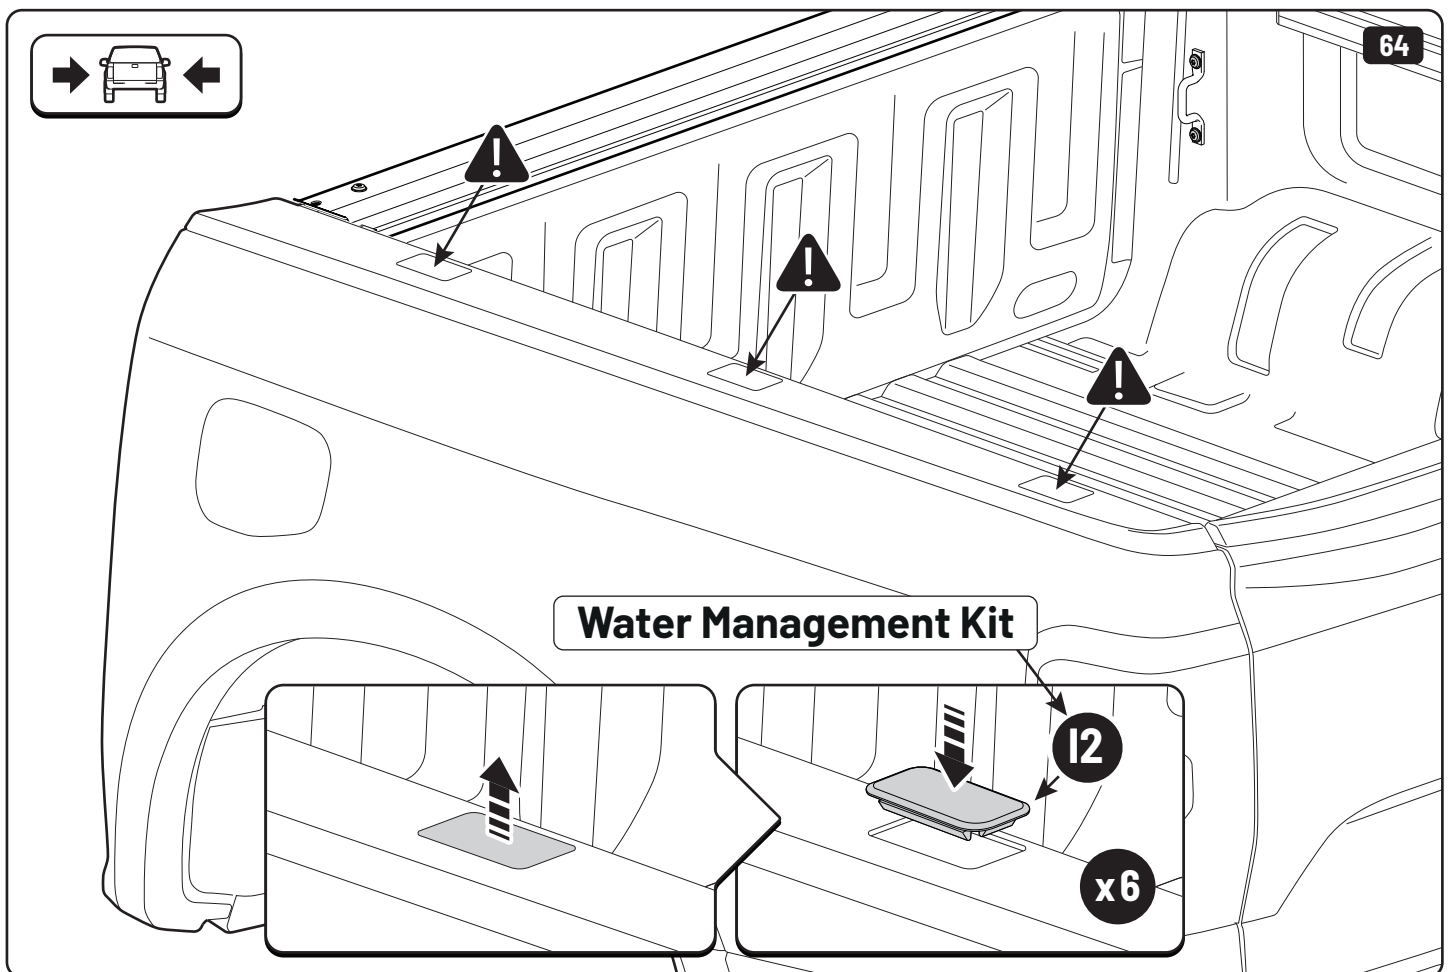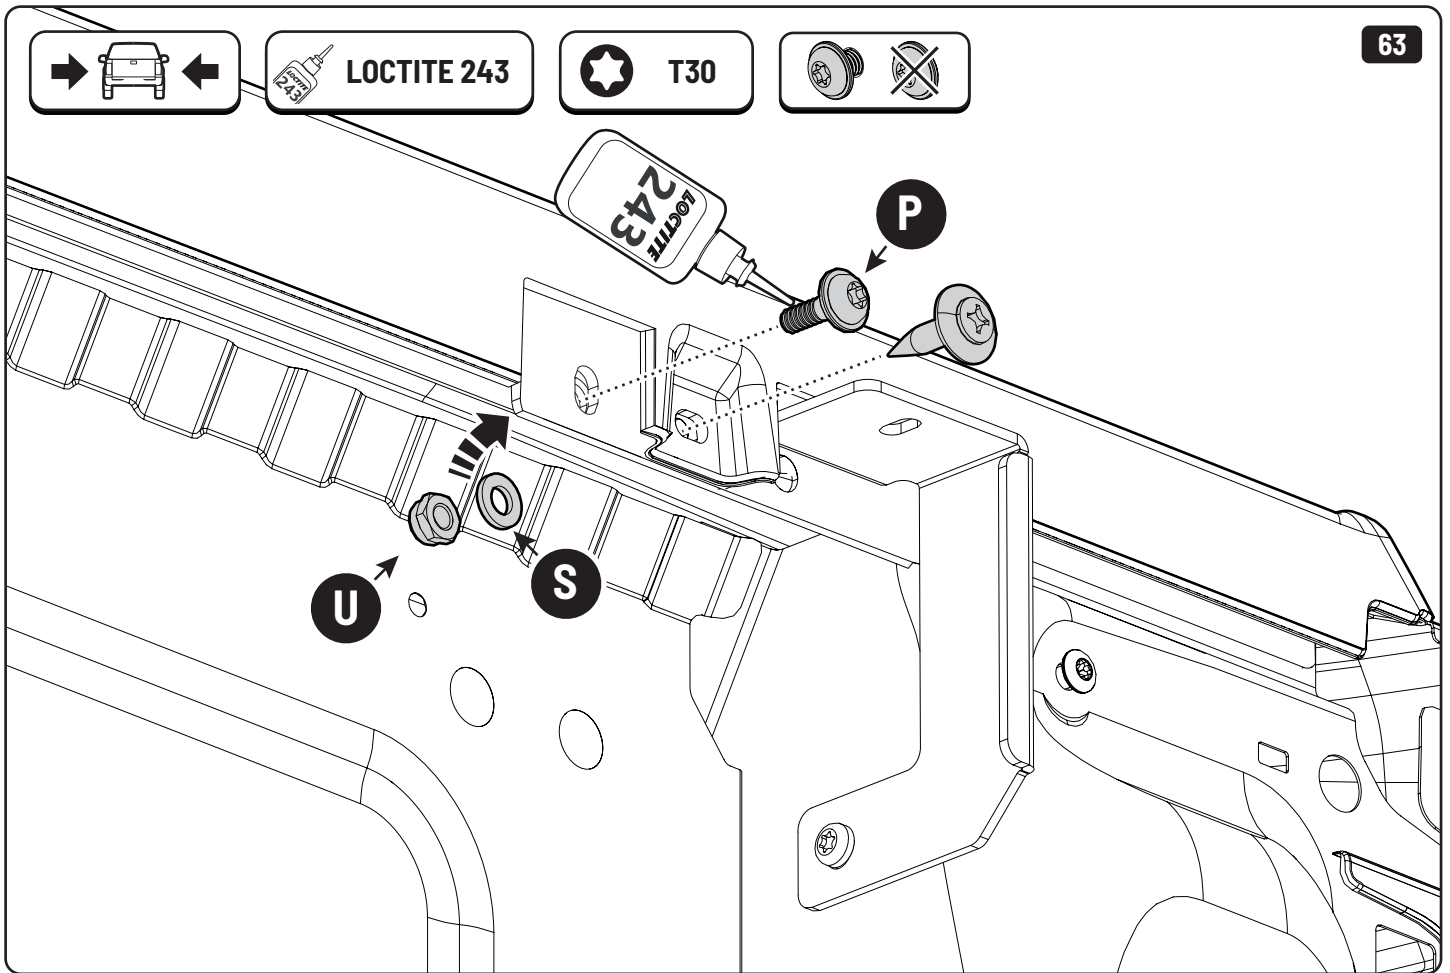


Install Water Management Funnel
Refer to water management kit installation
manual for installation steps

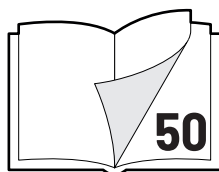


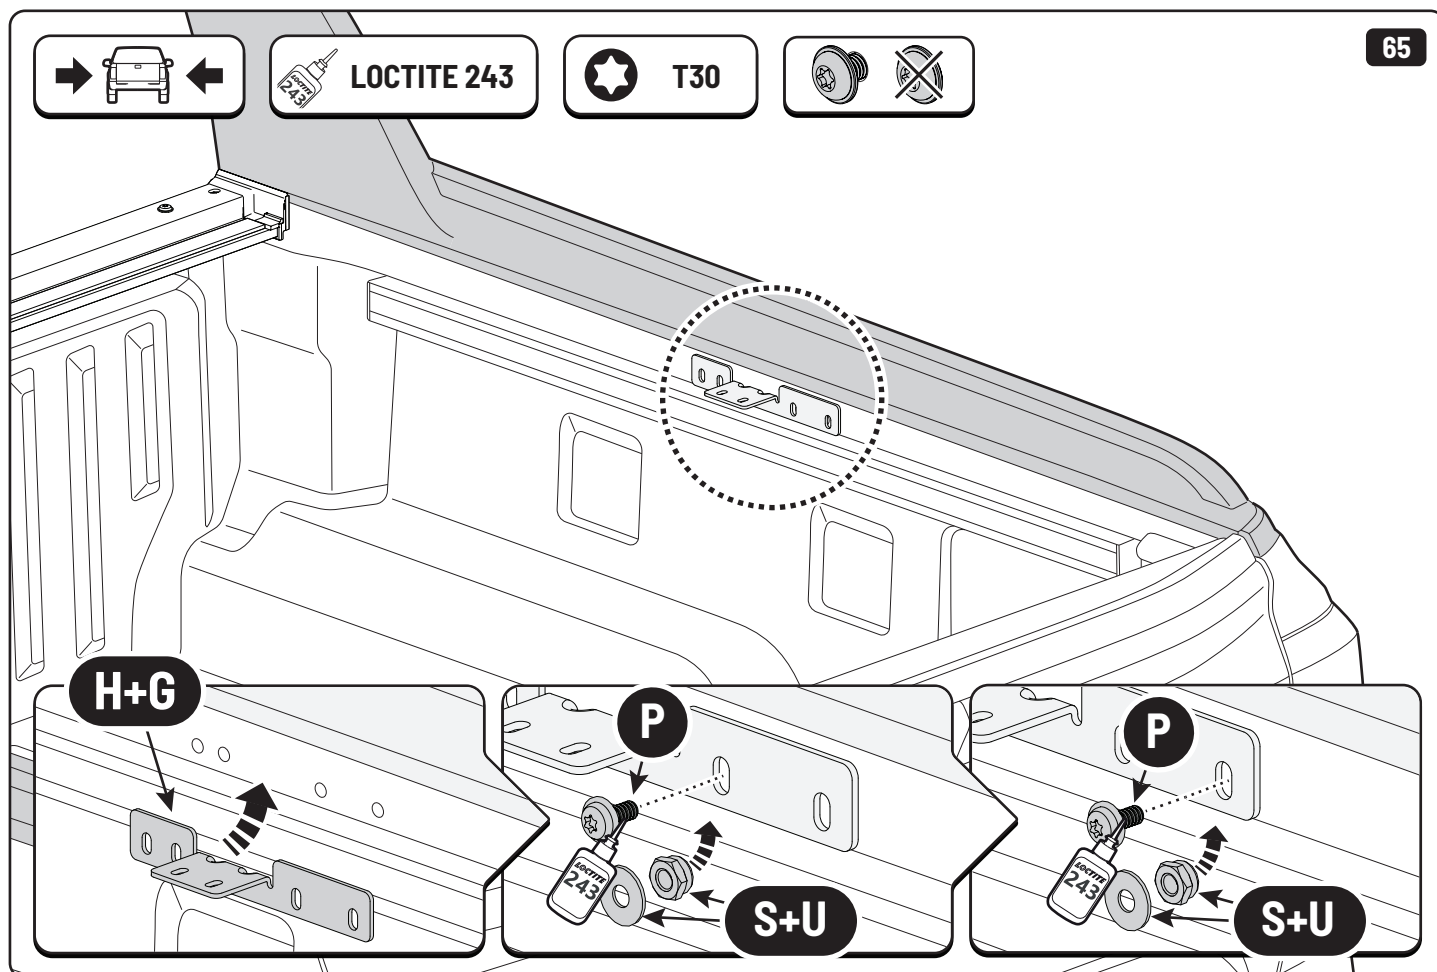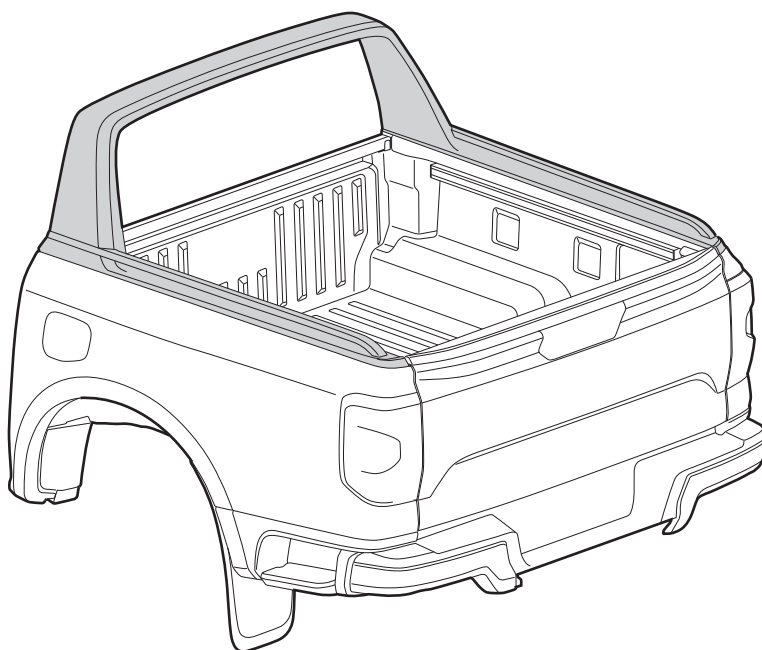

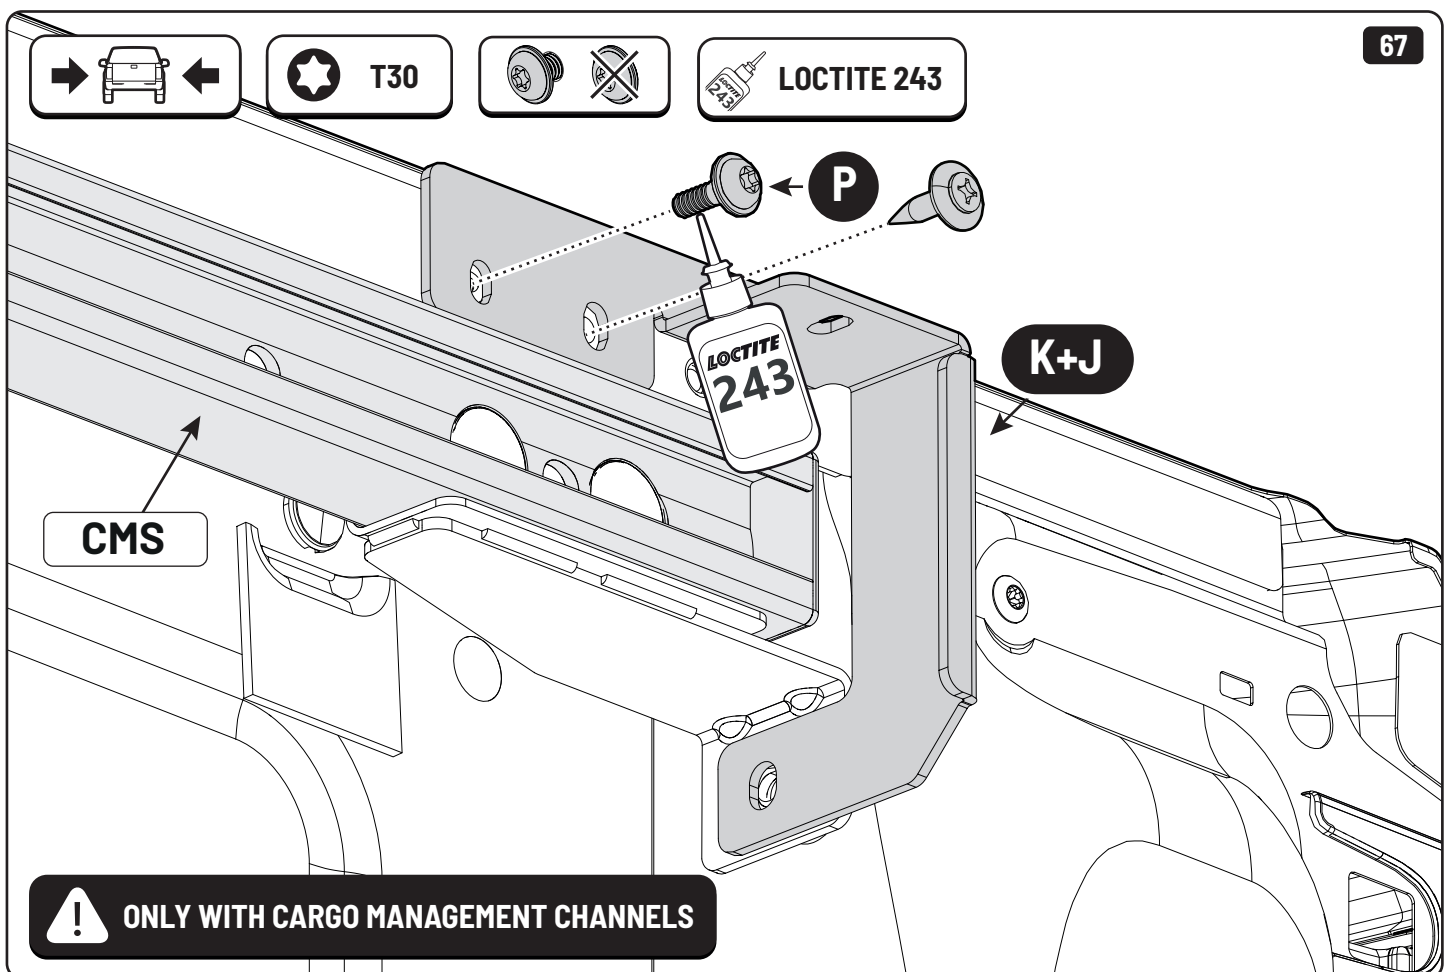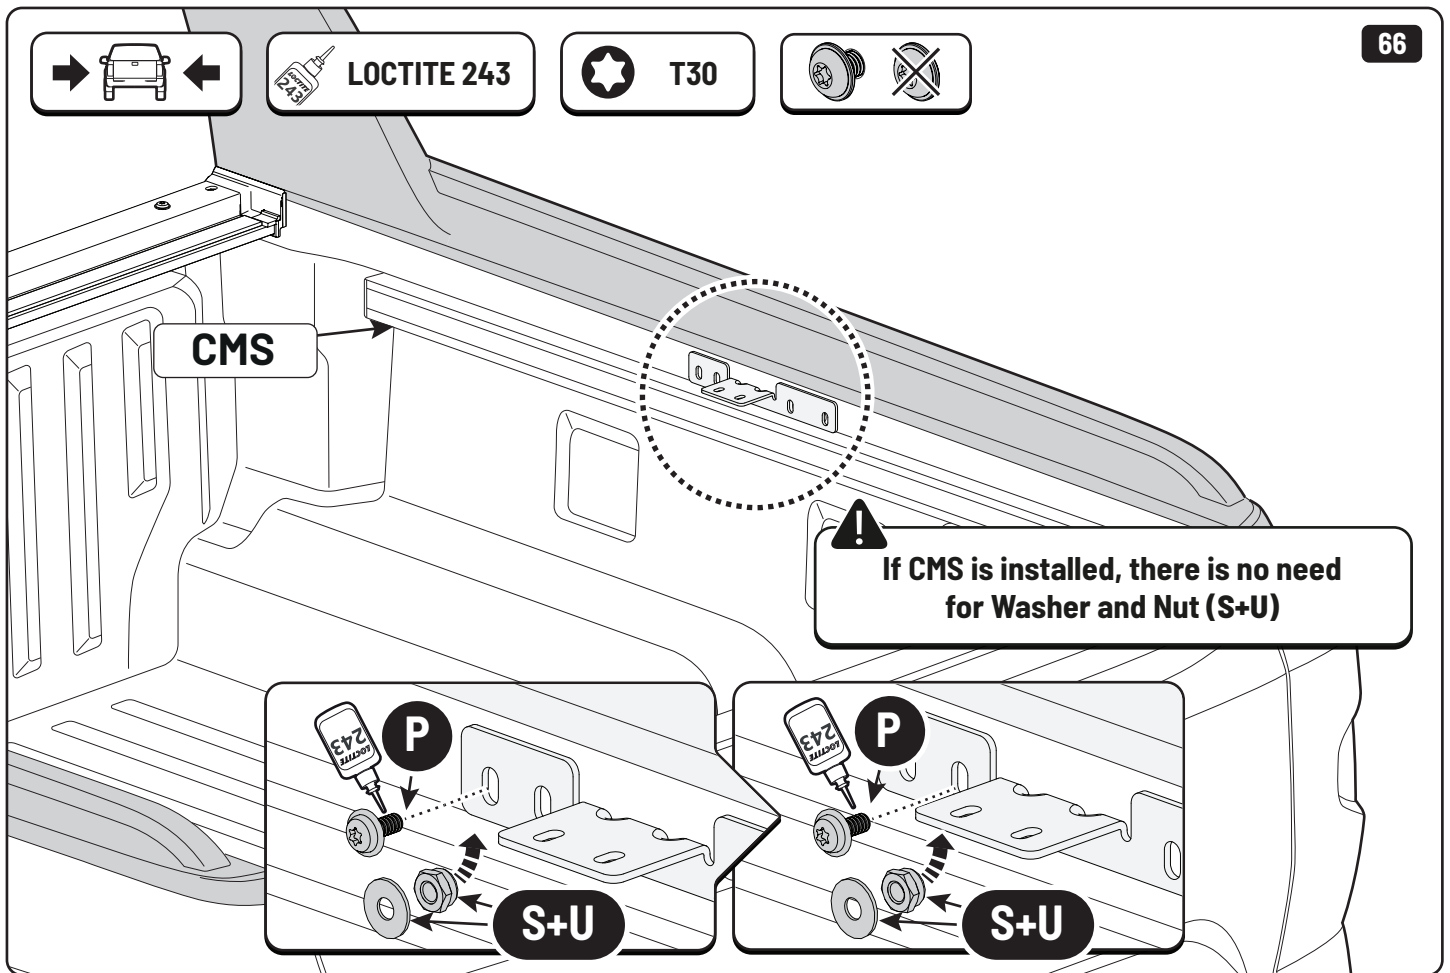

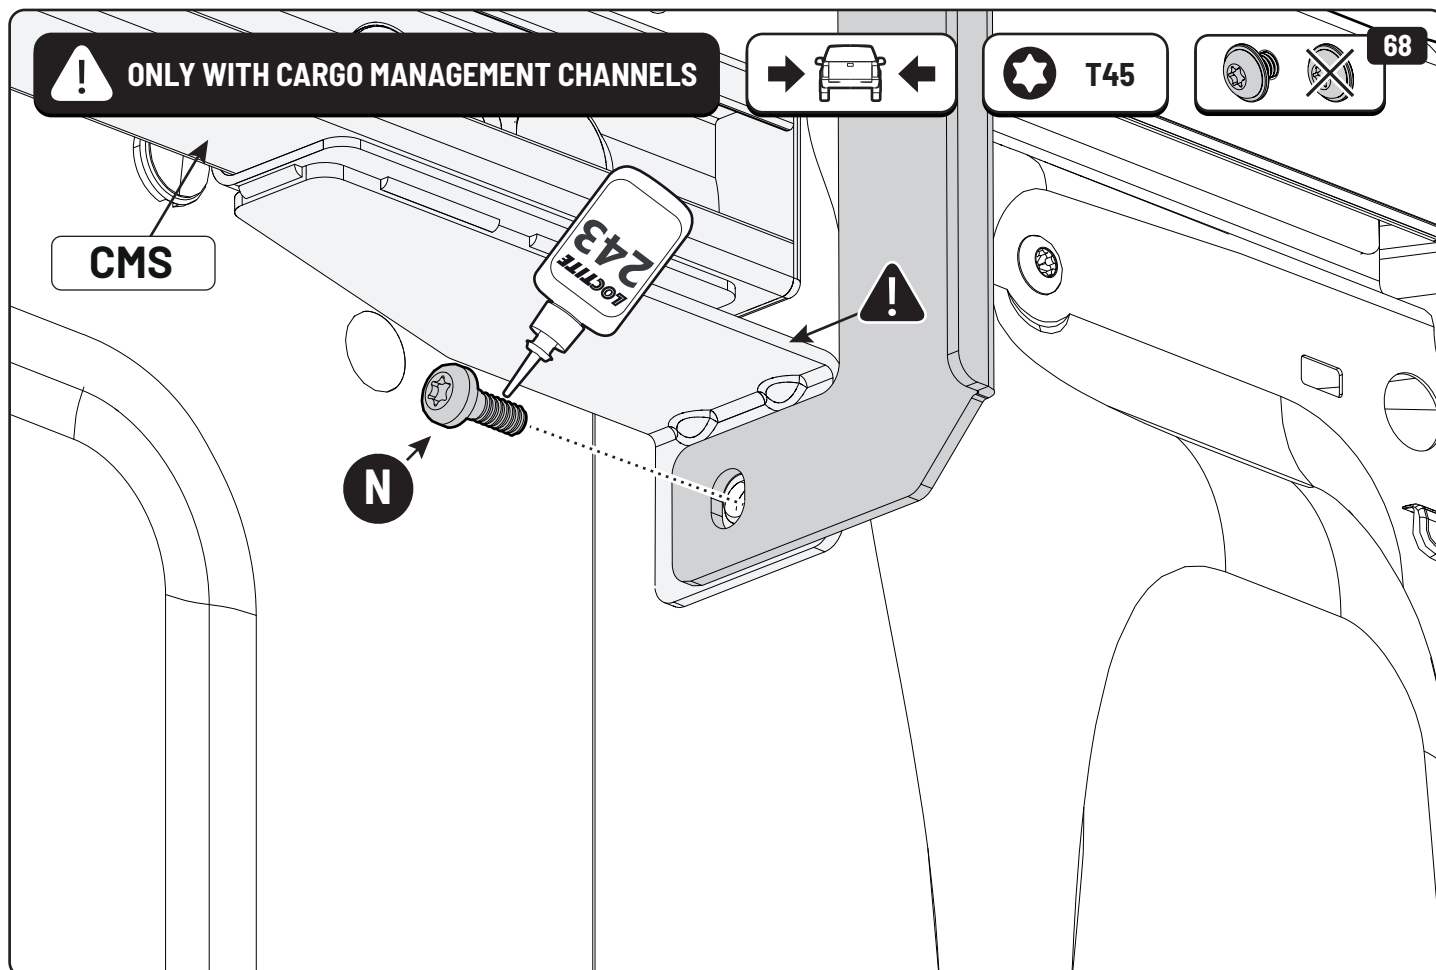


Install Water Management Funnel
Refer to water management kit installation
manual for installation steps

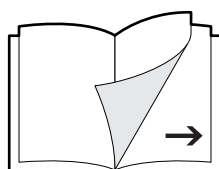







69




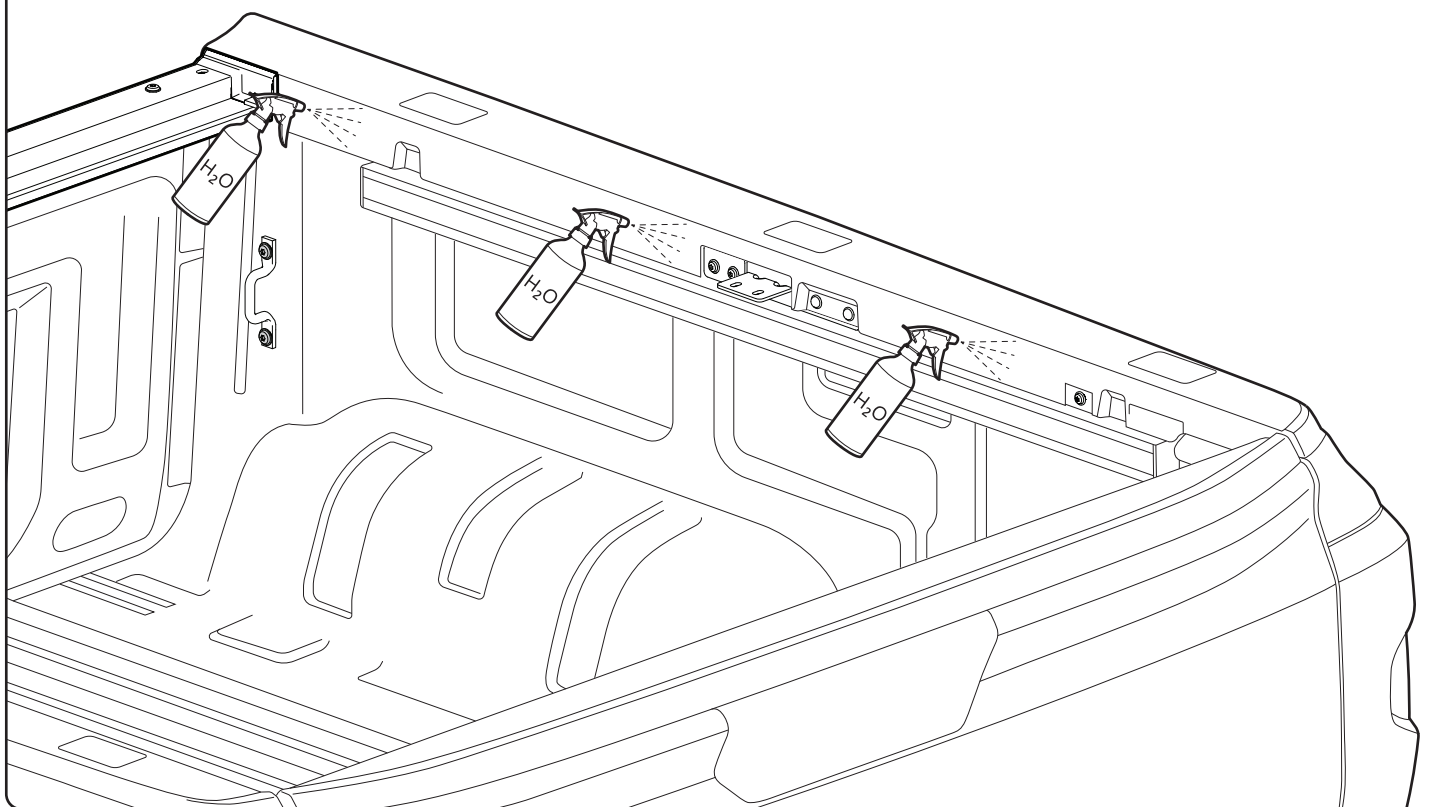




70


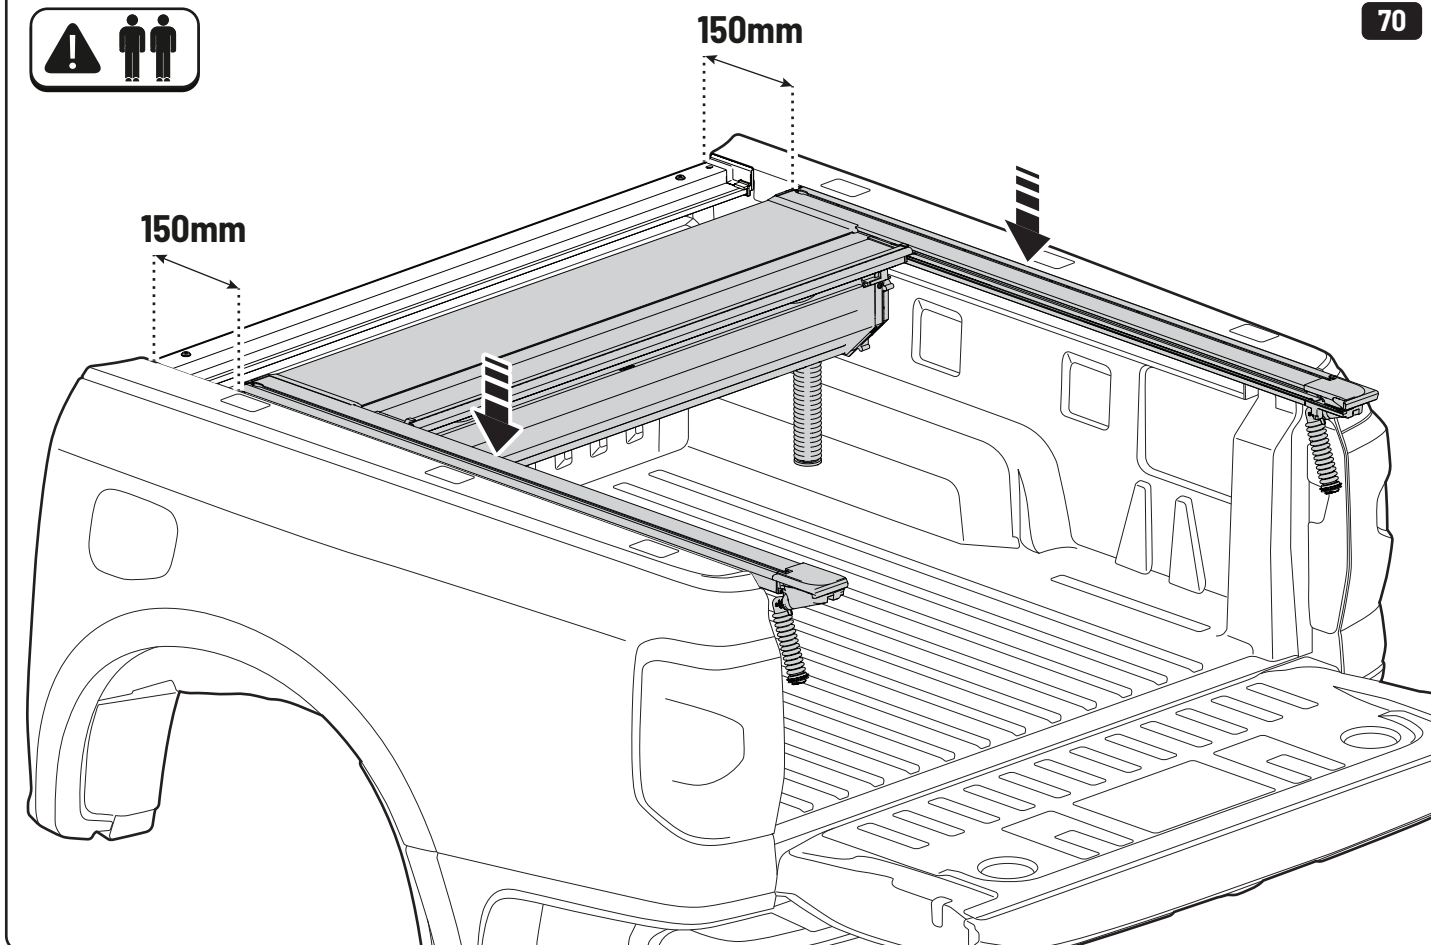



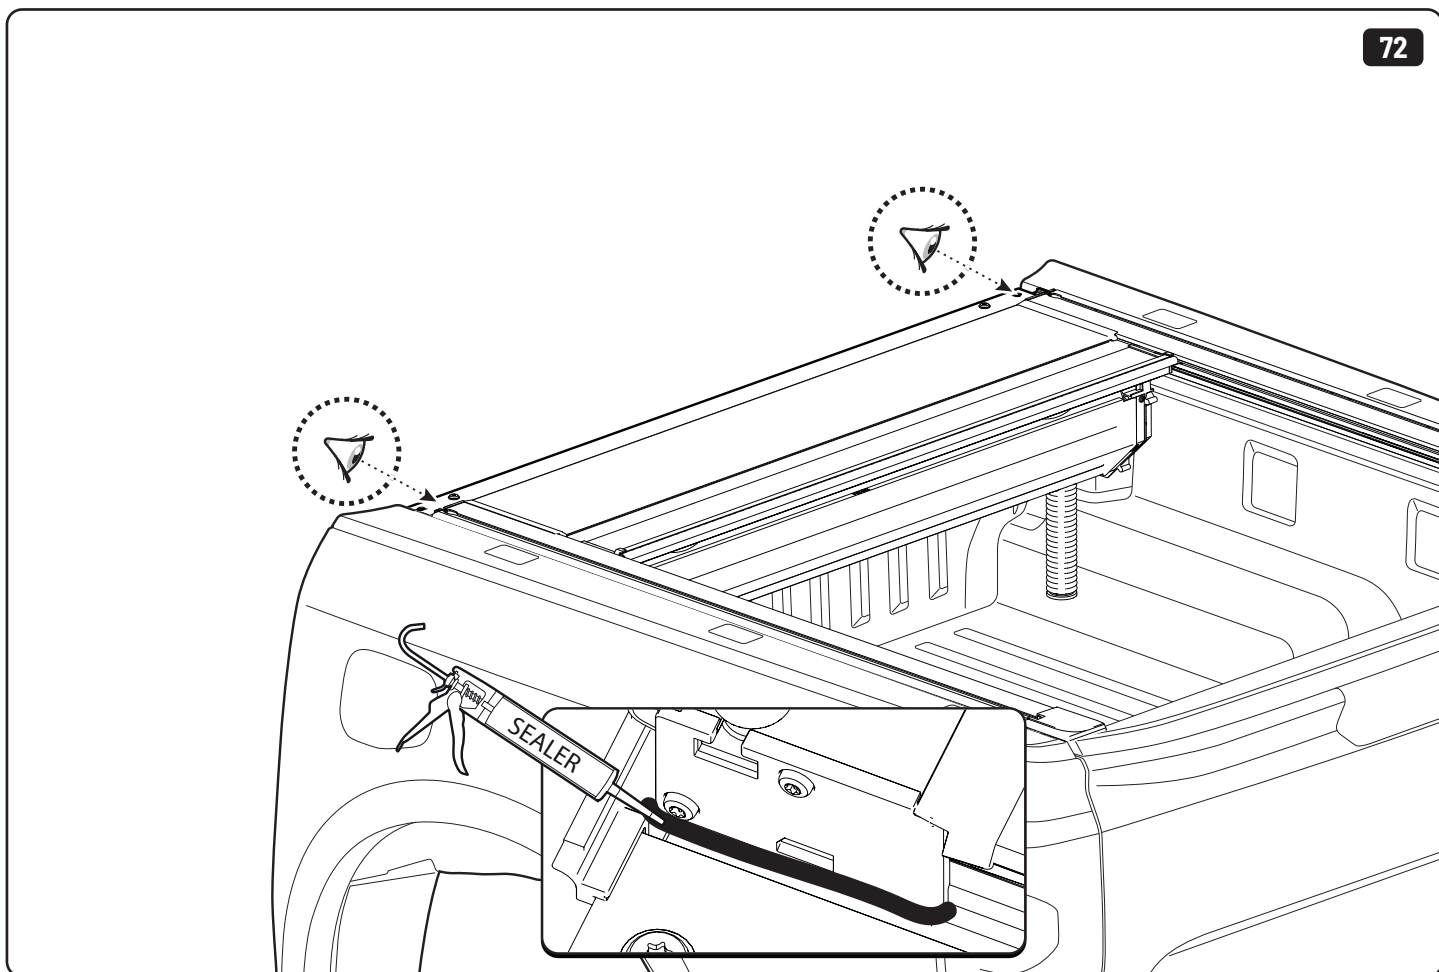
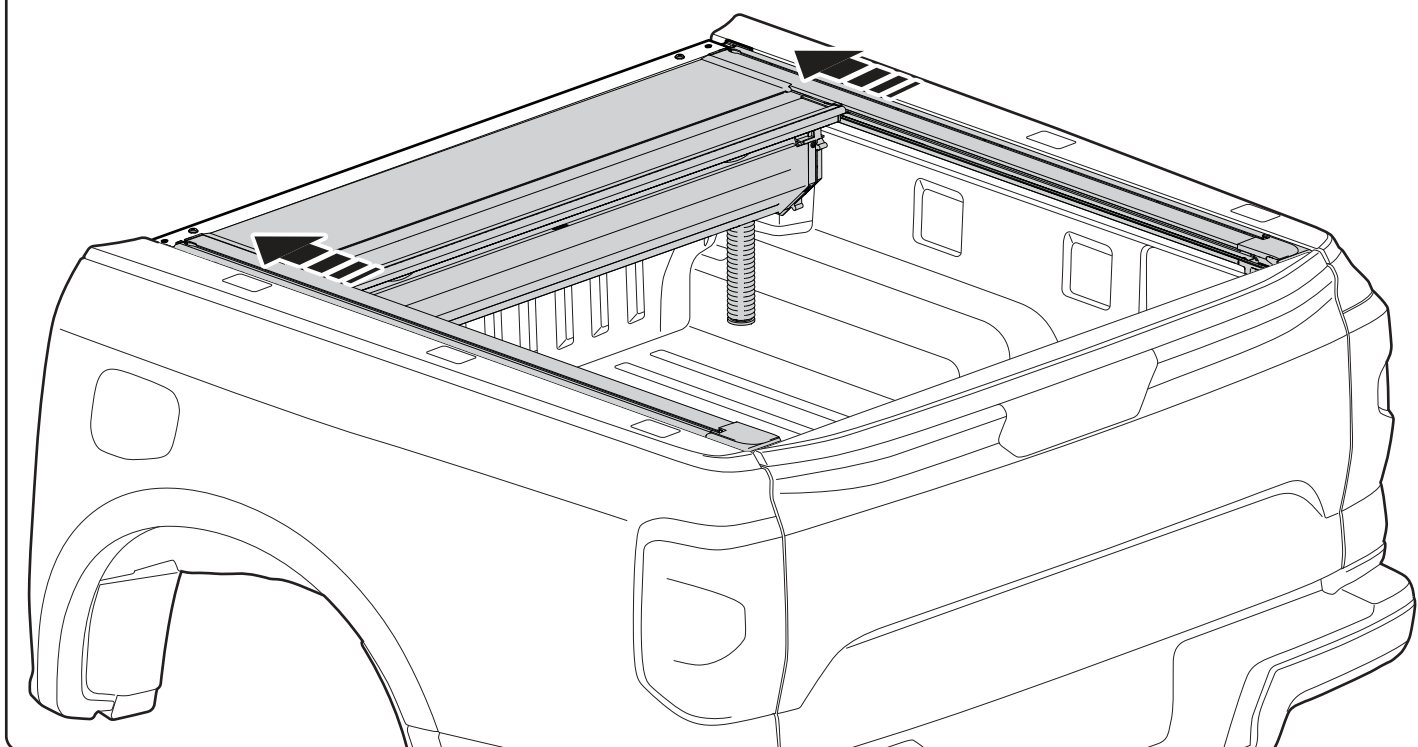



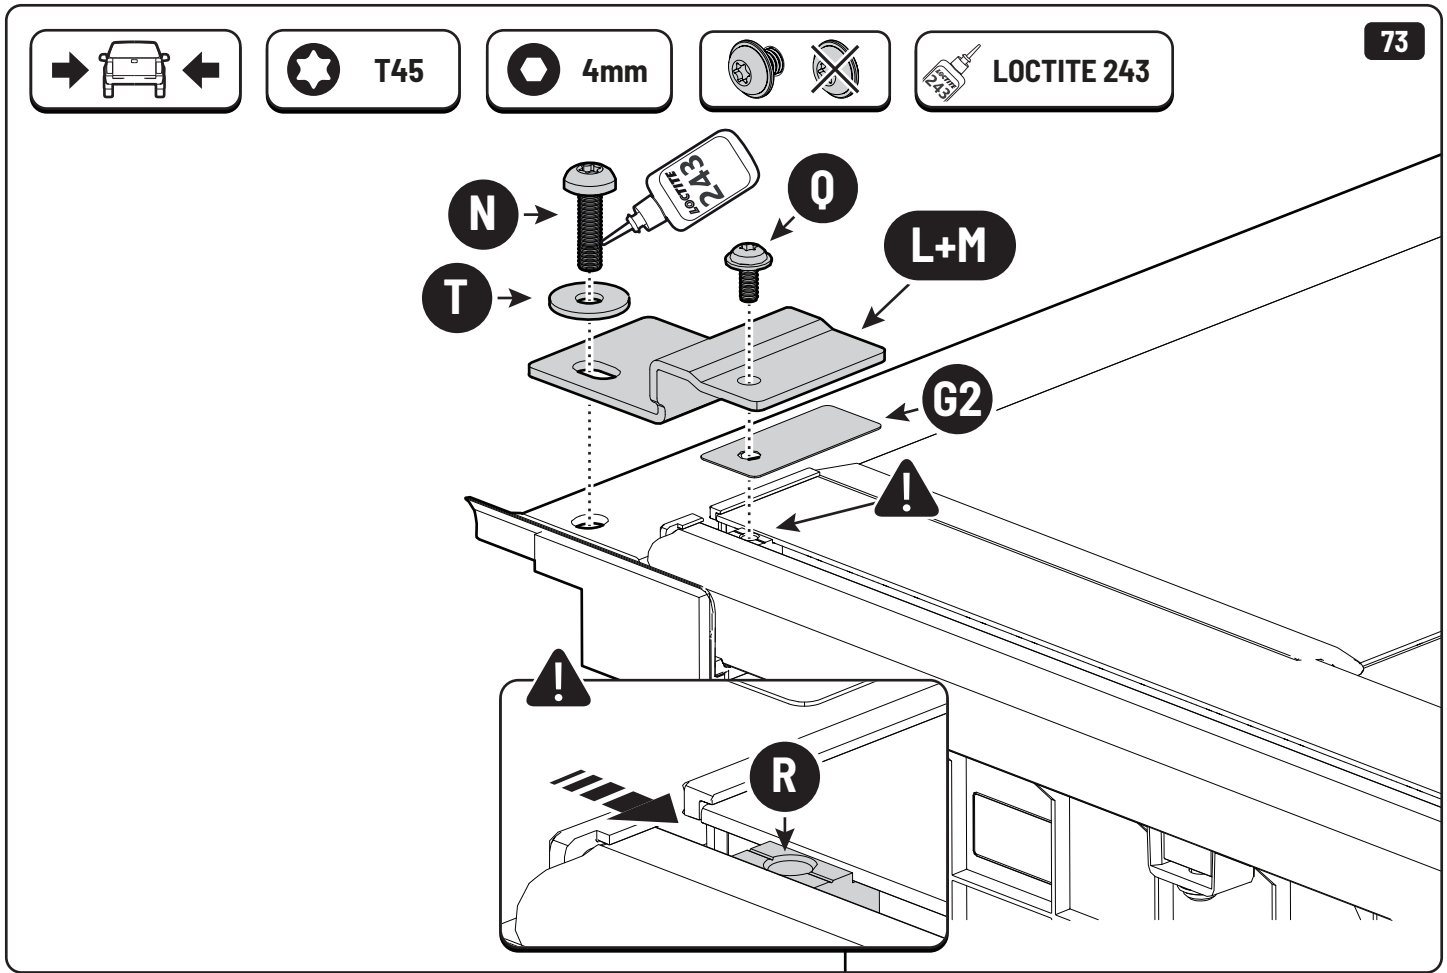


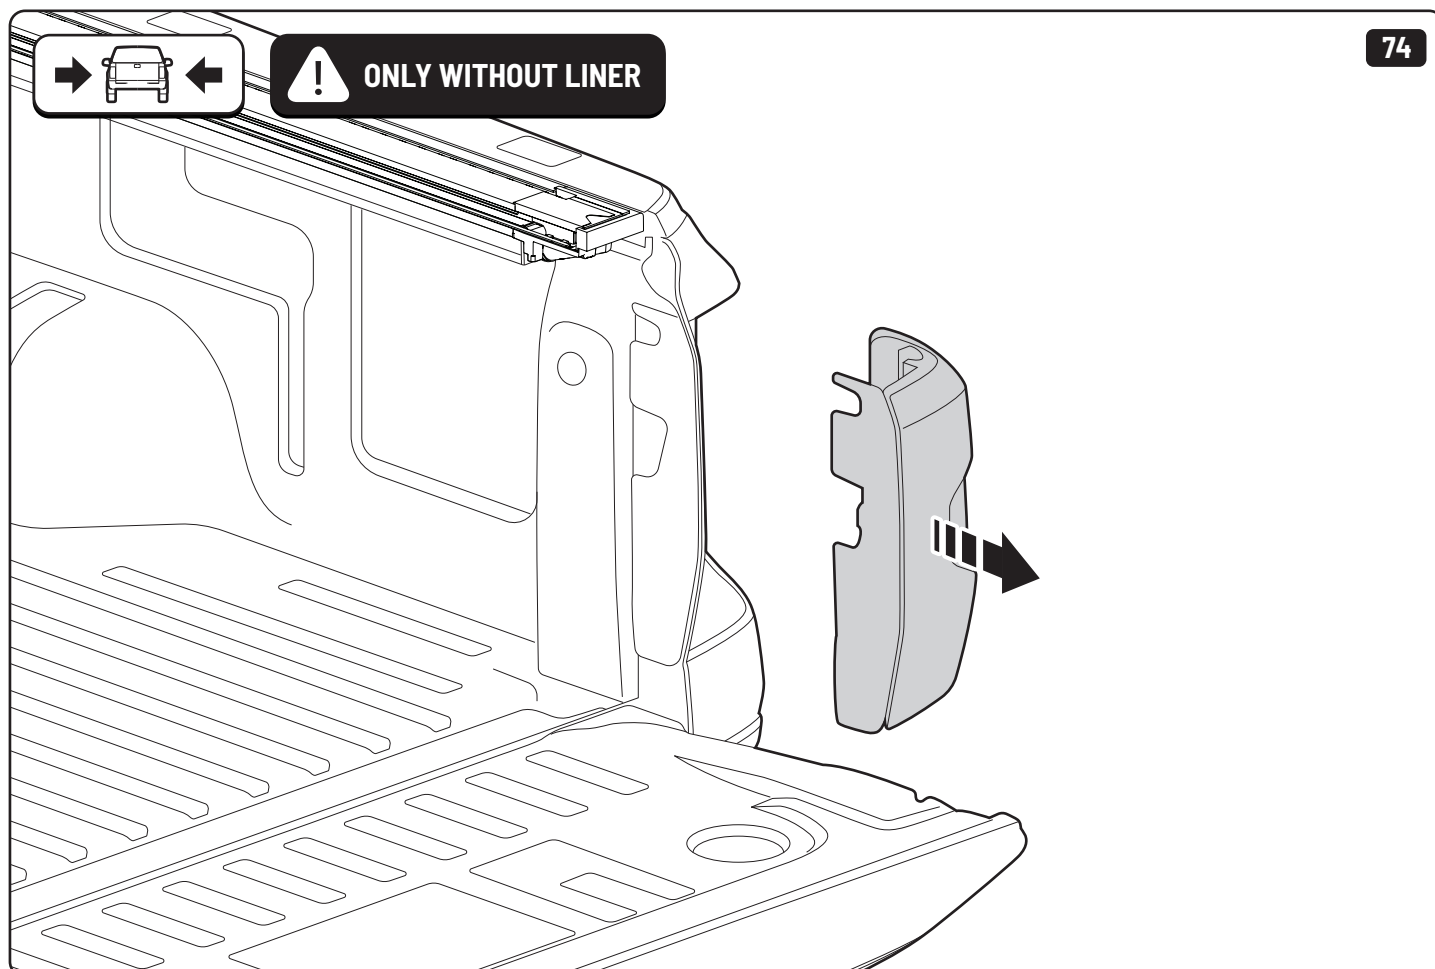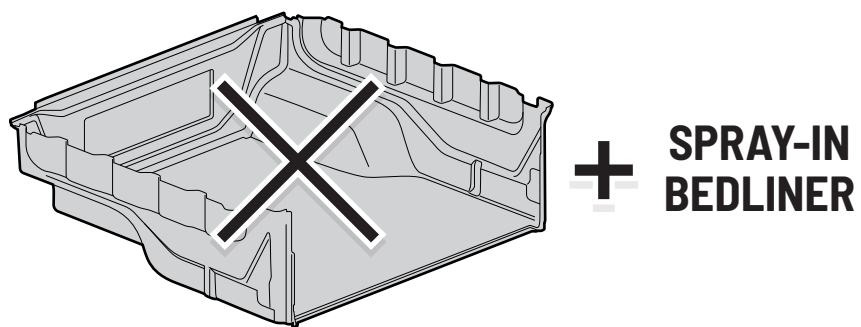
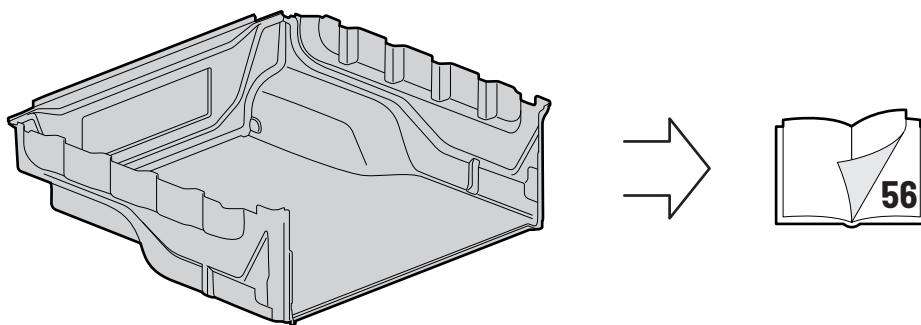


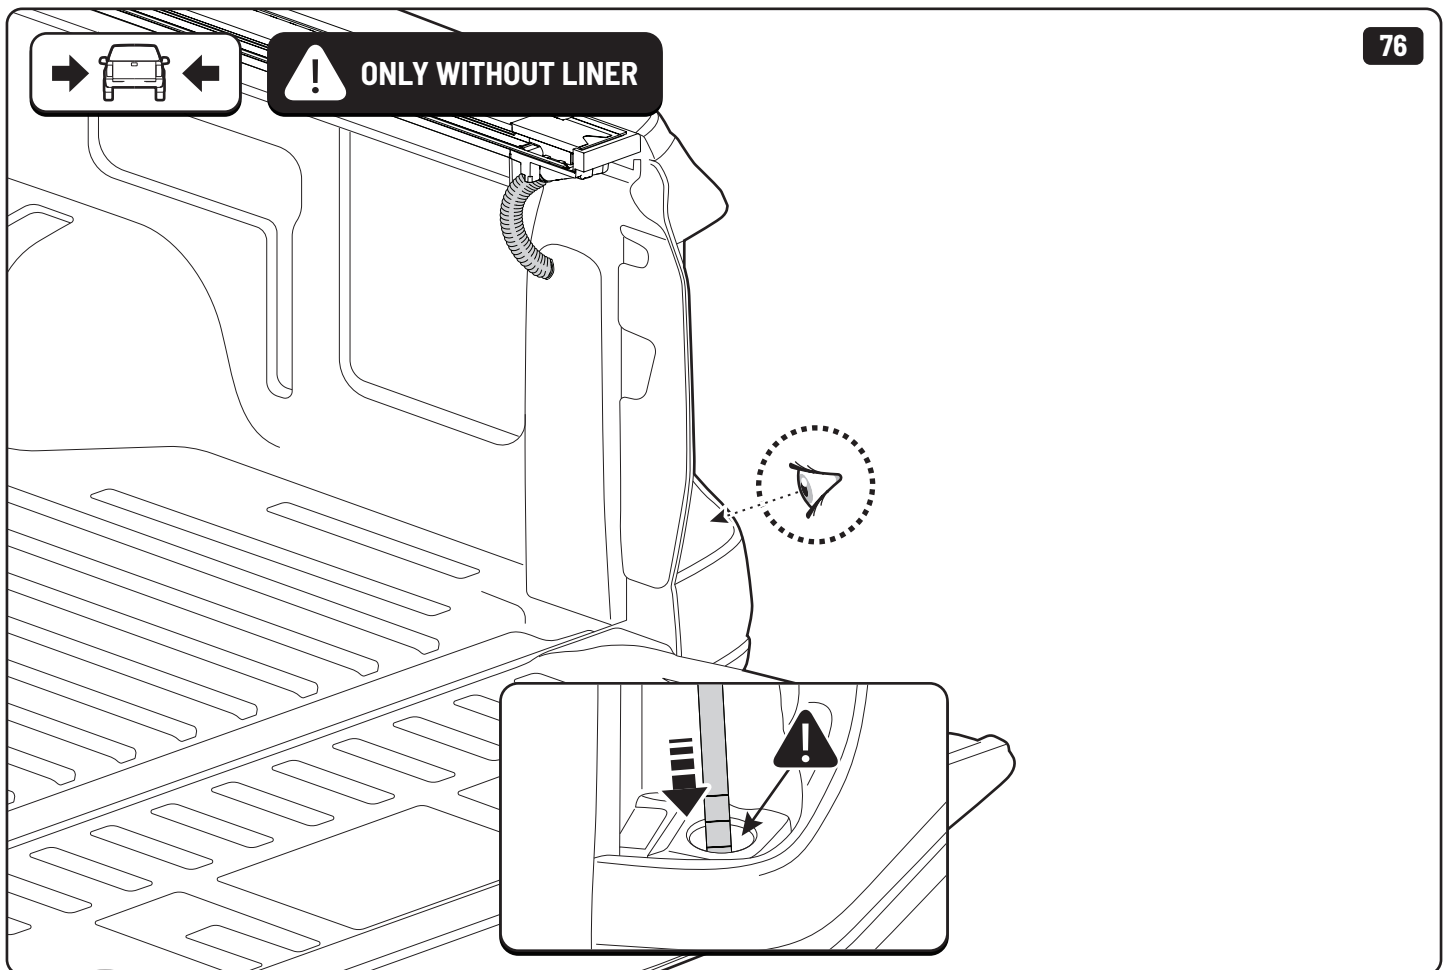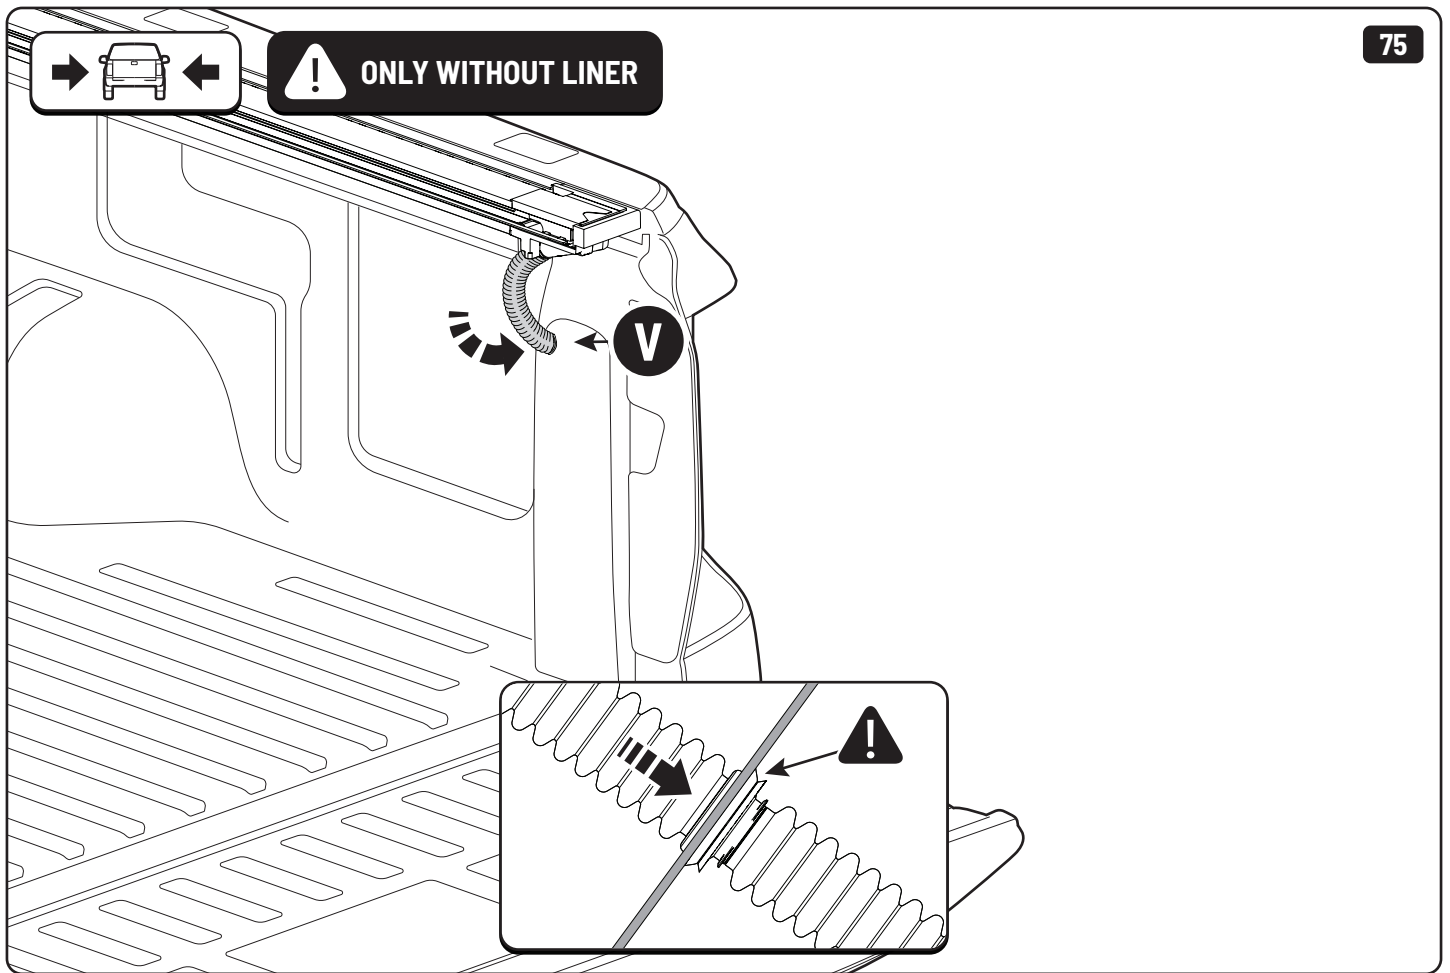

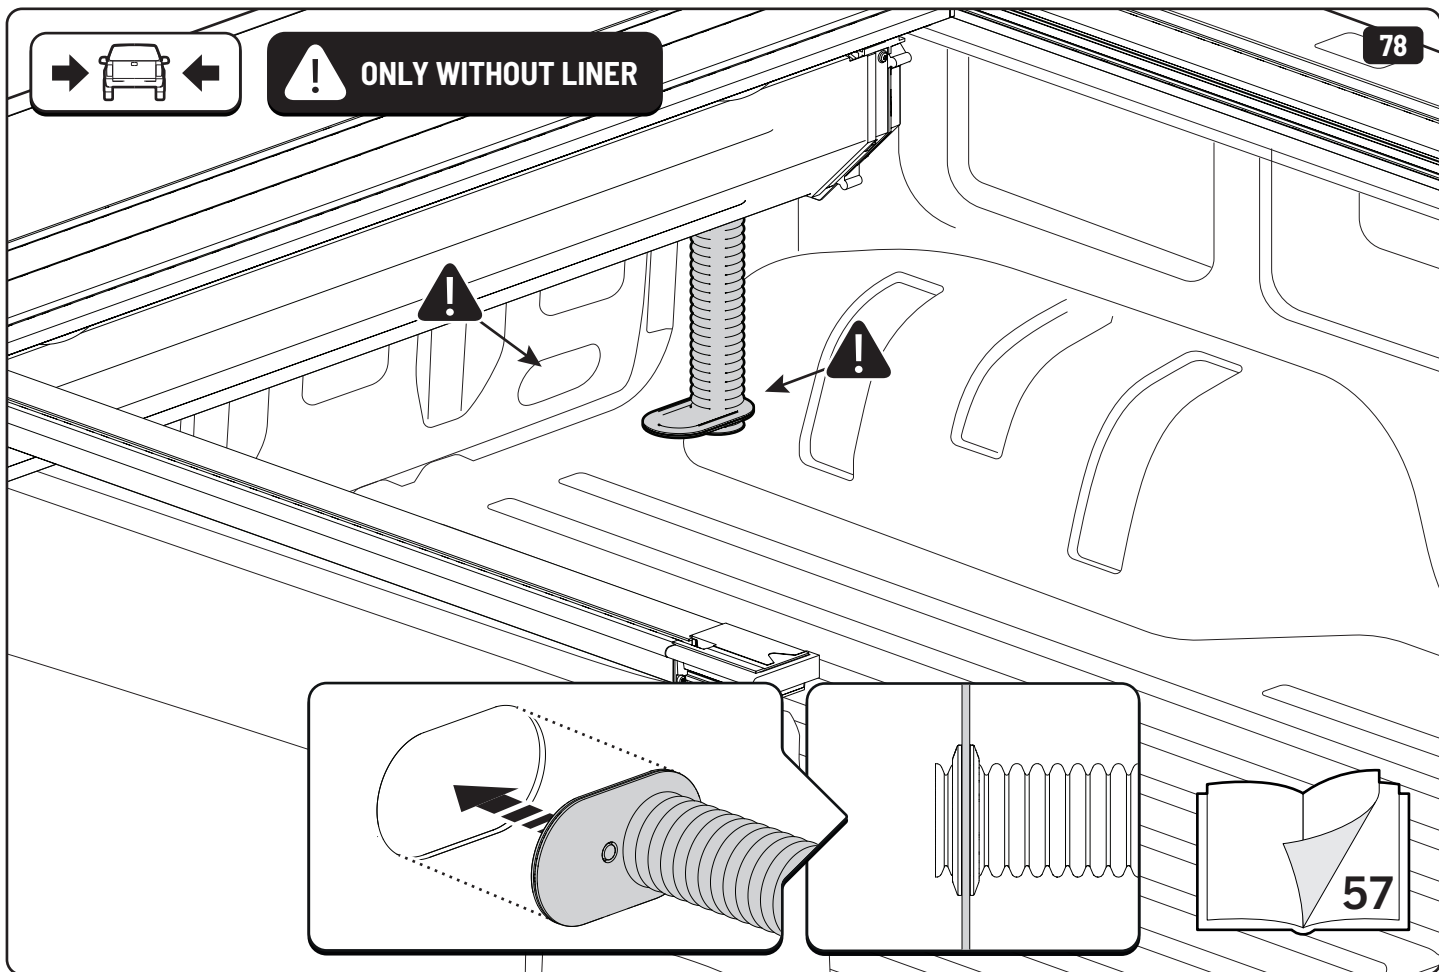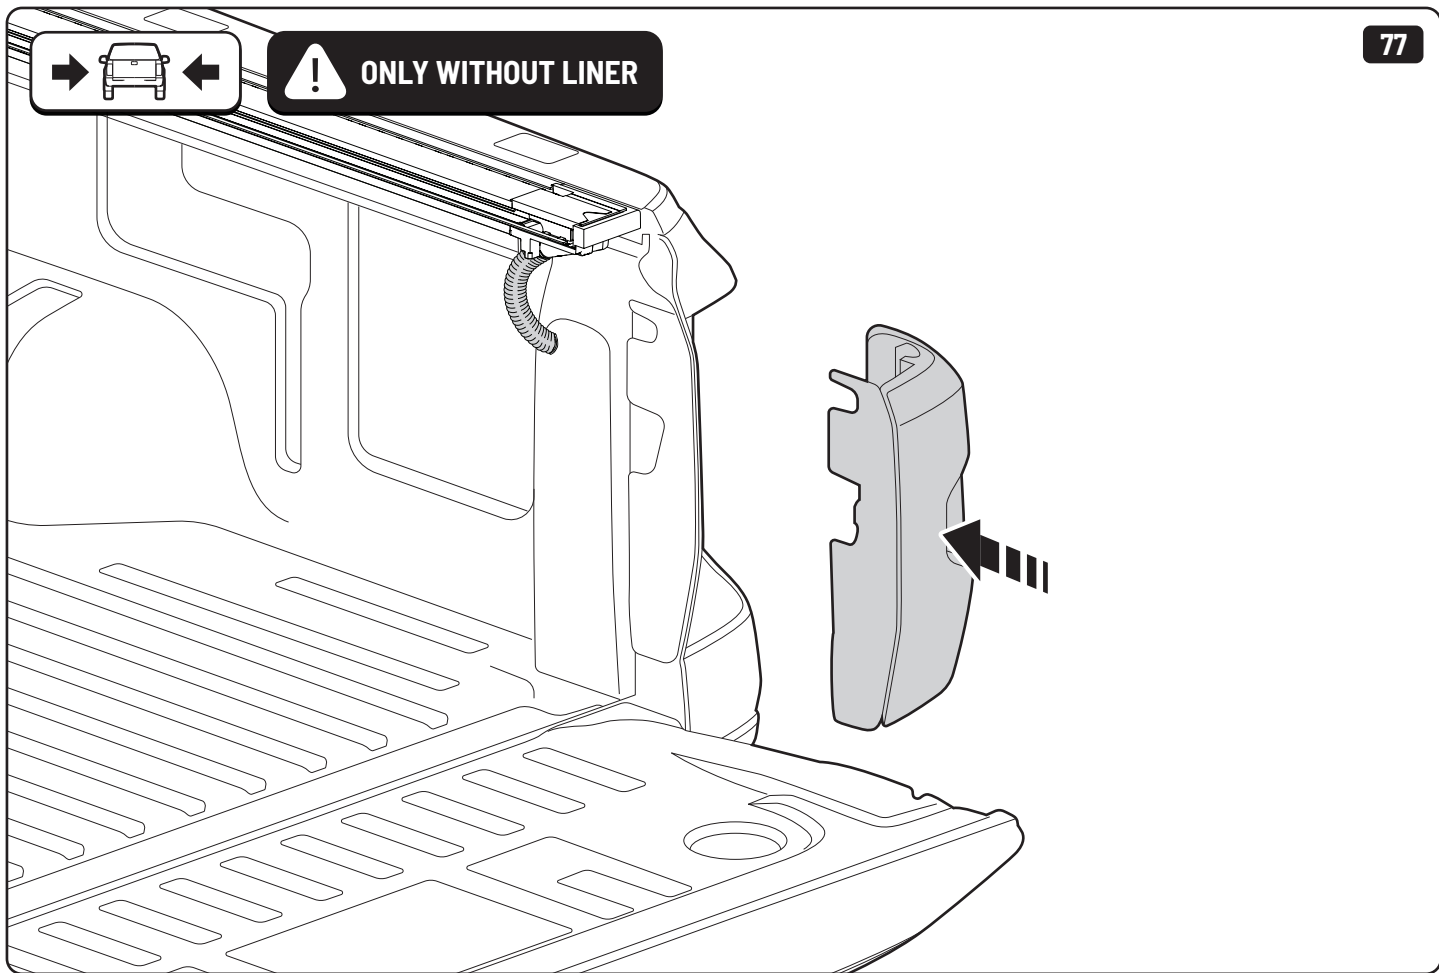

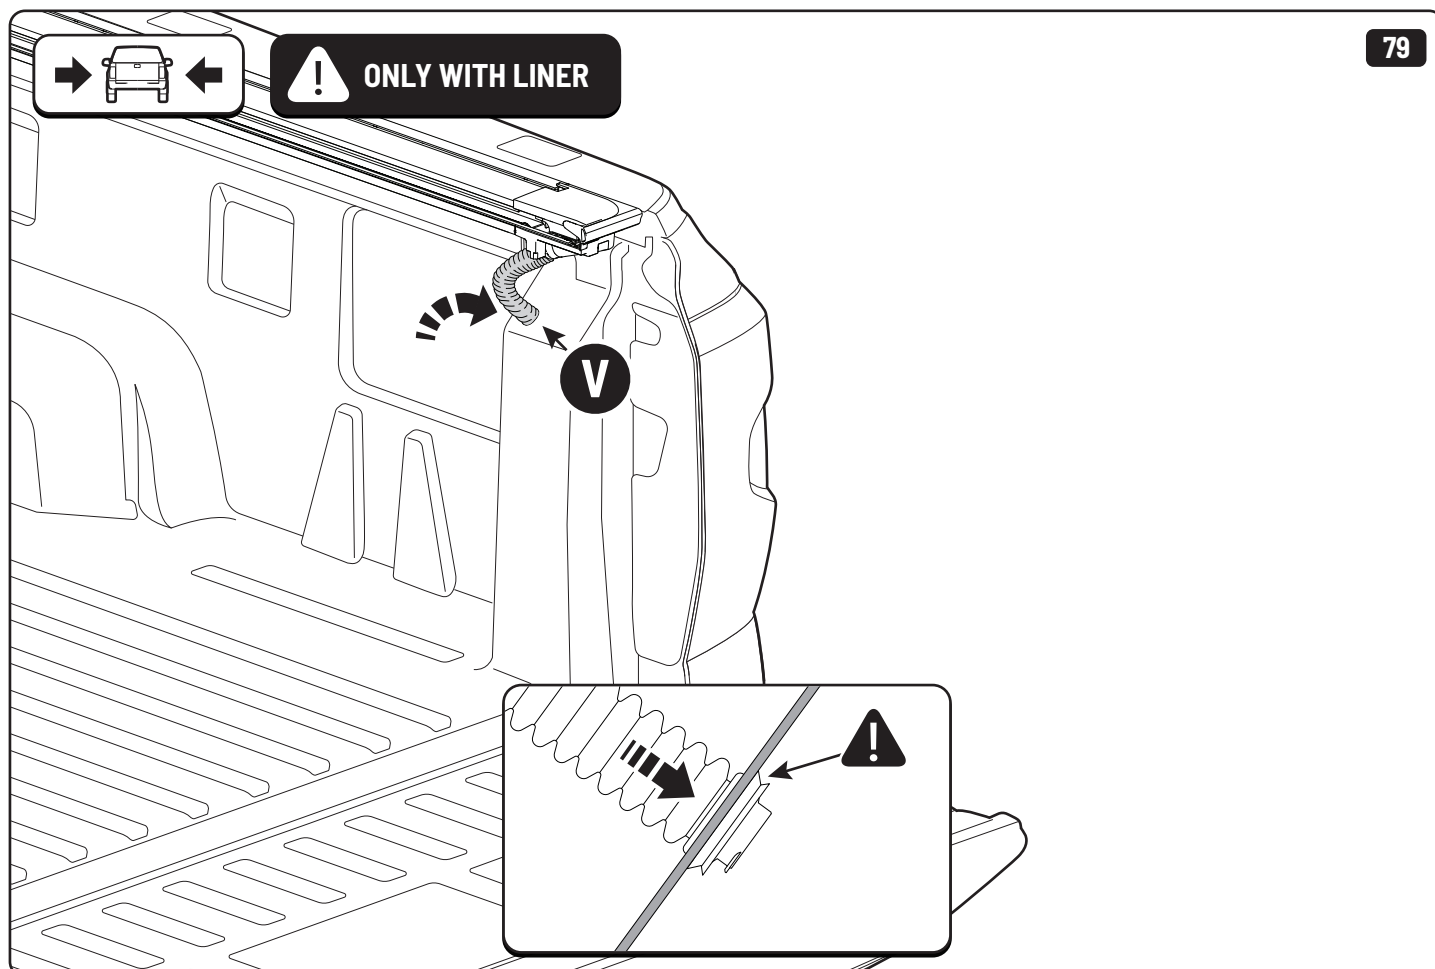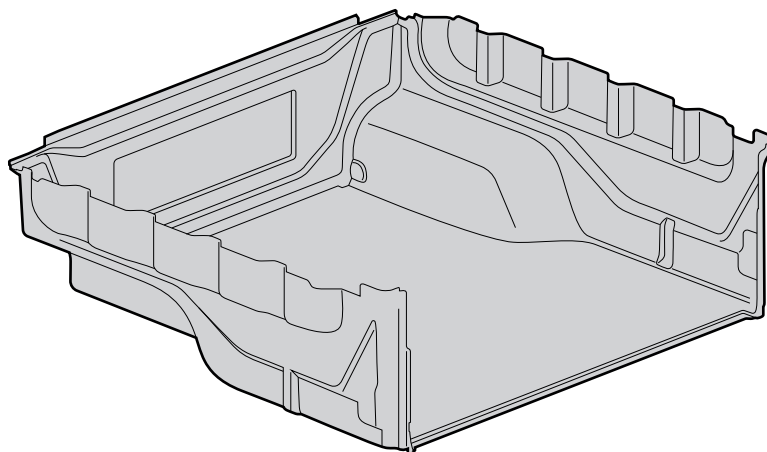

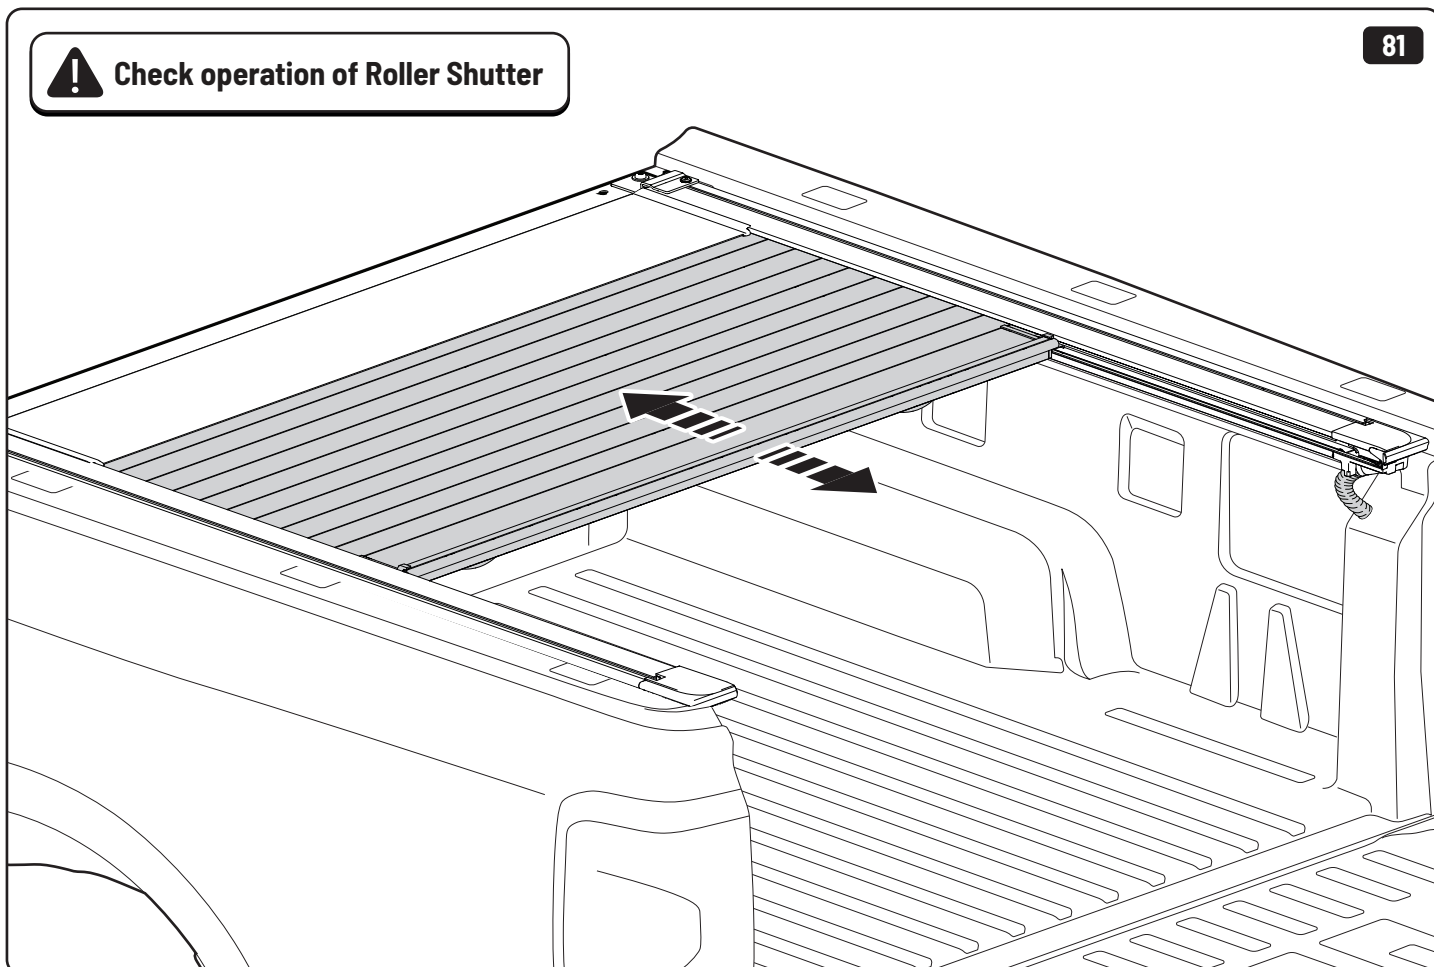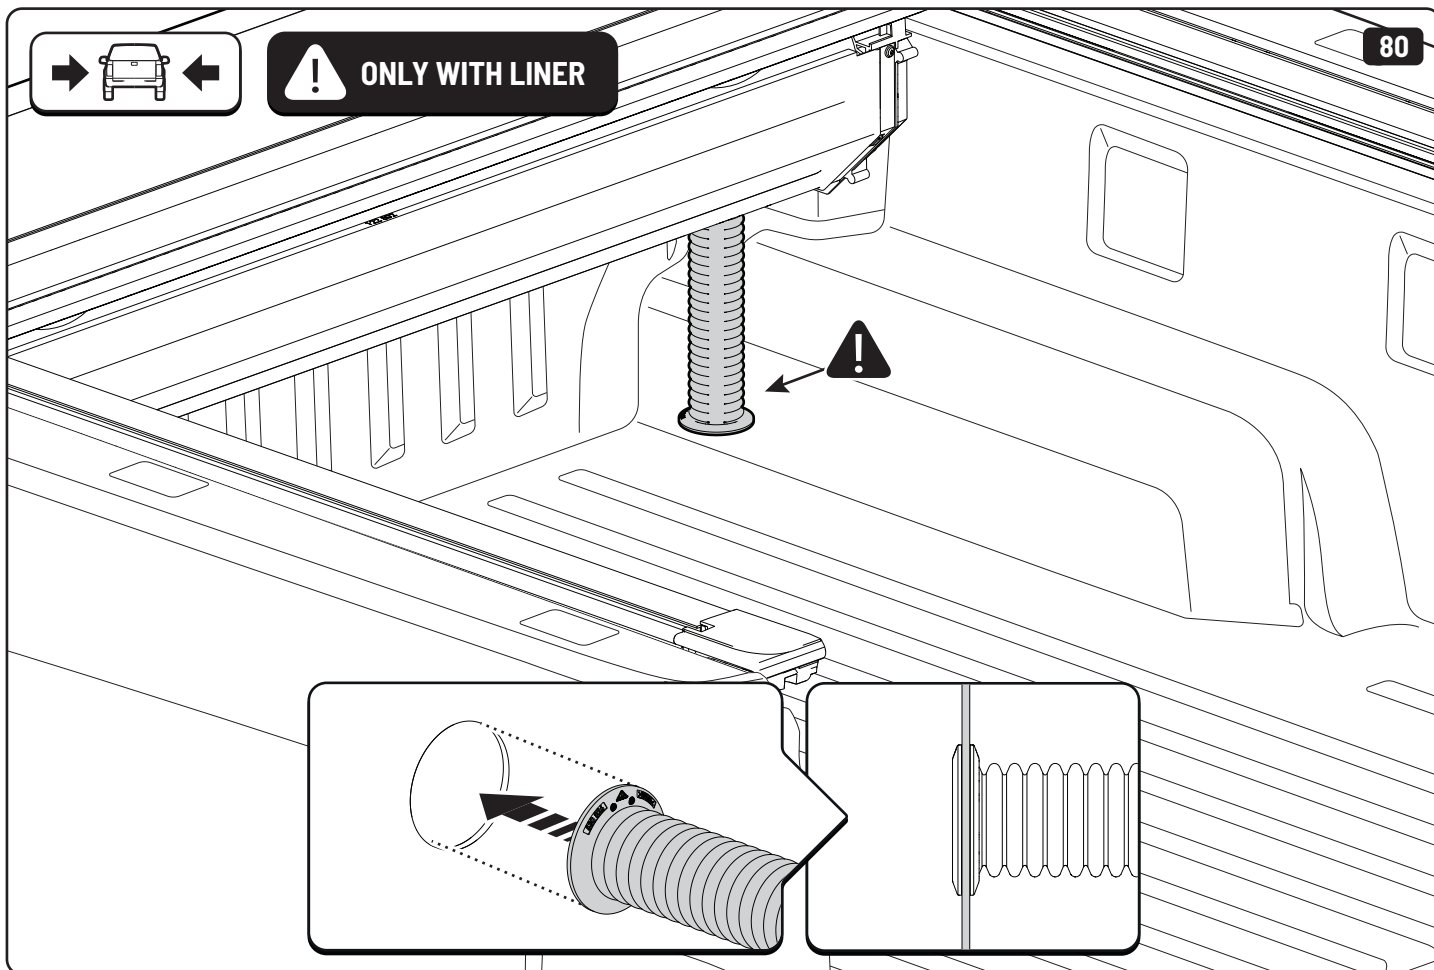

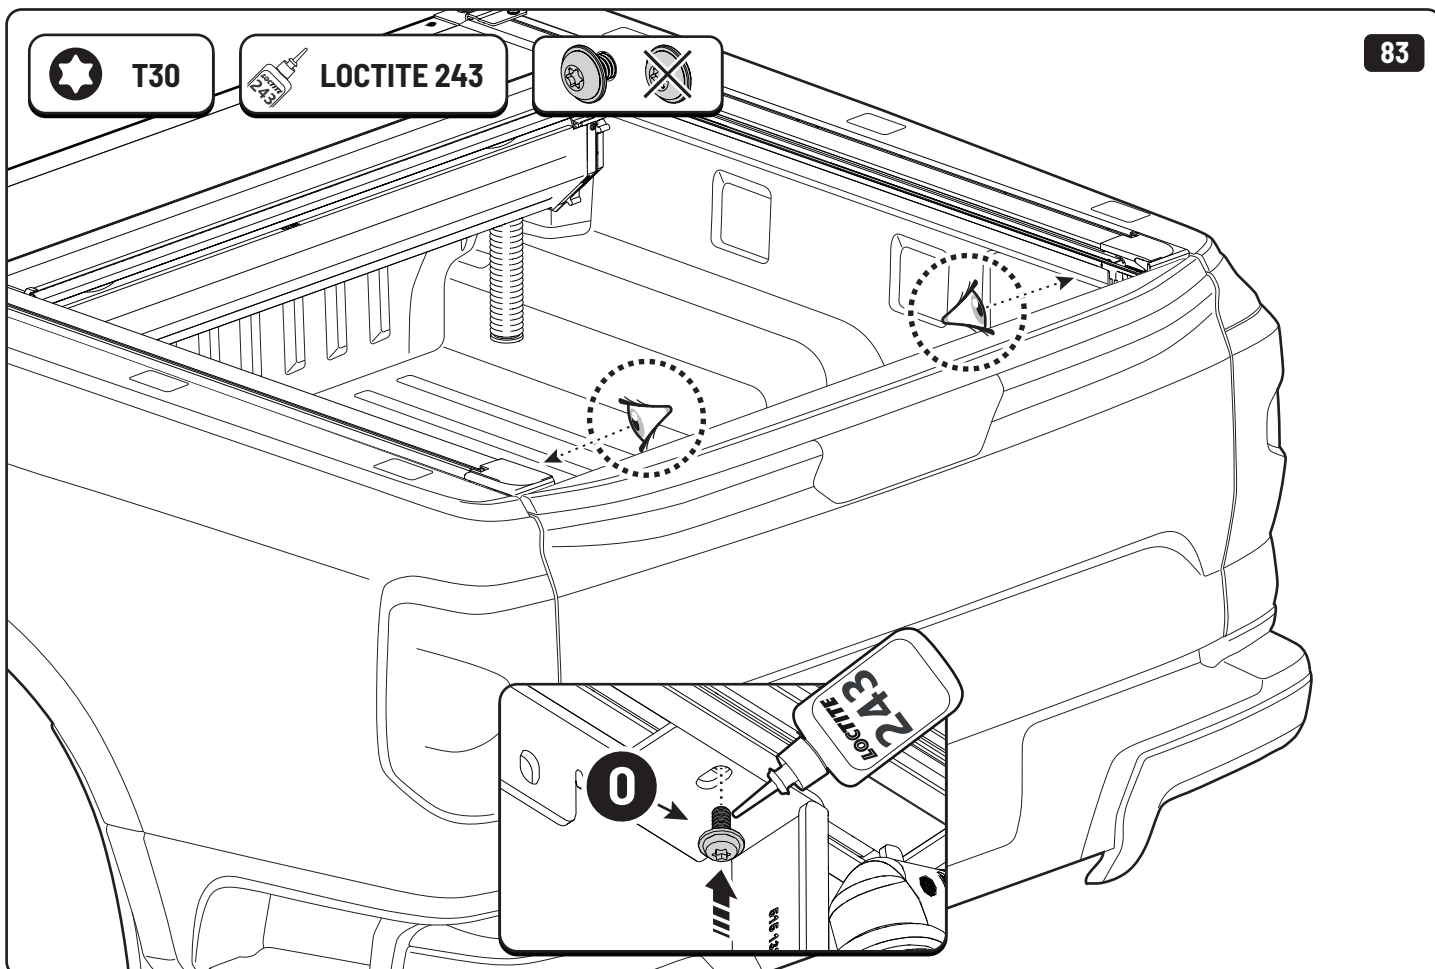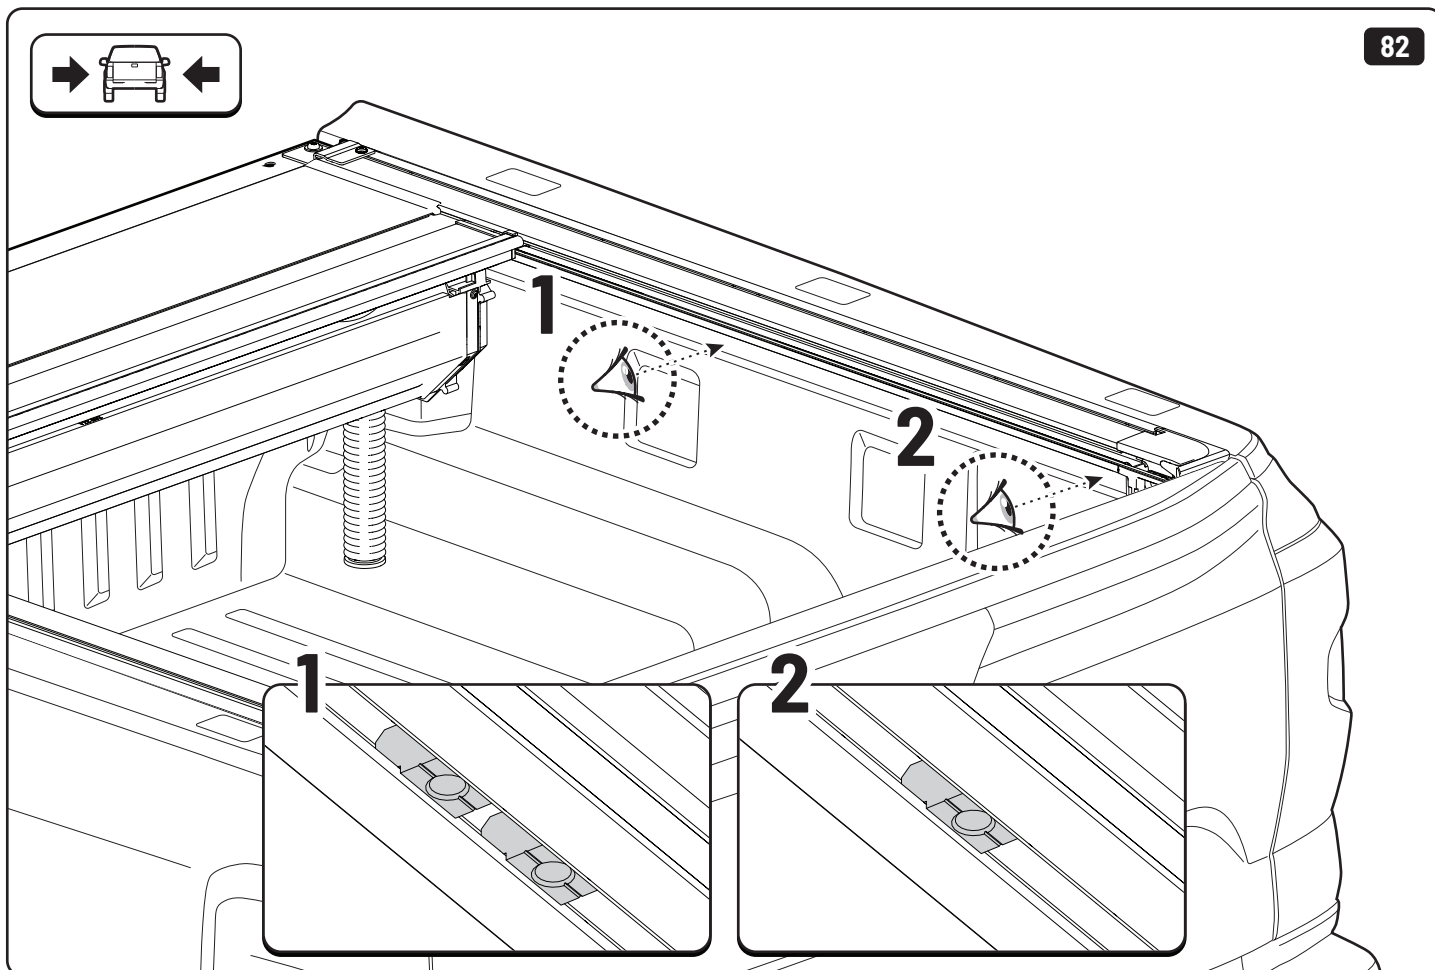




T30




LOCTITE 243

84

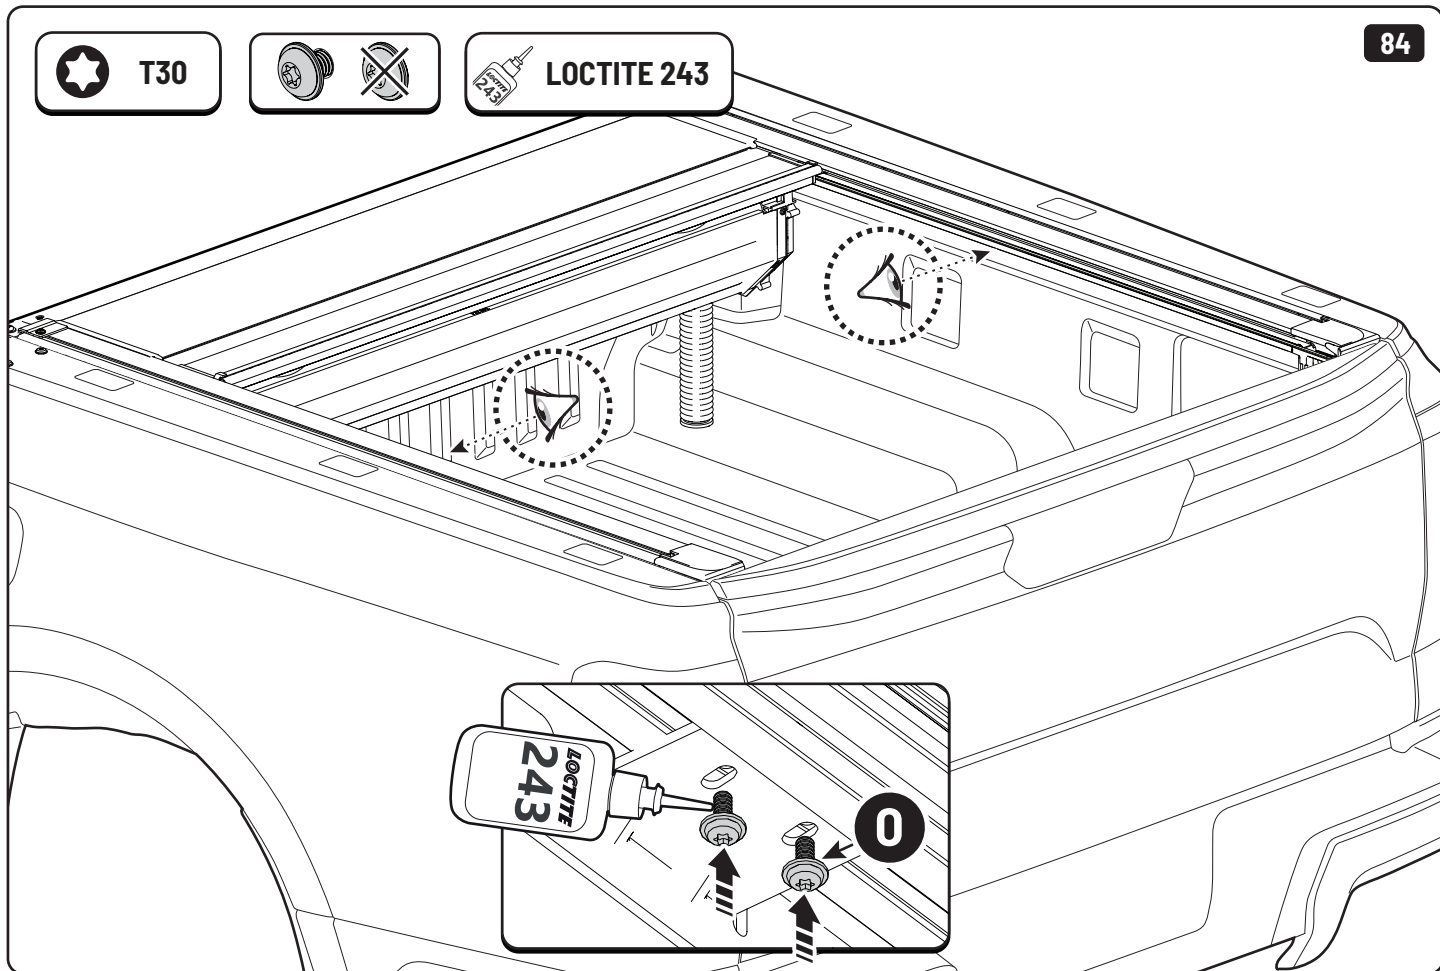

85

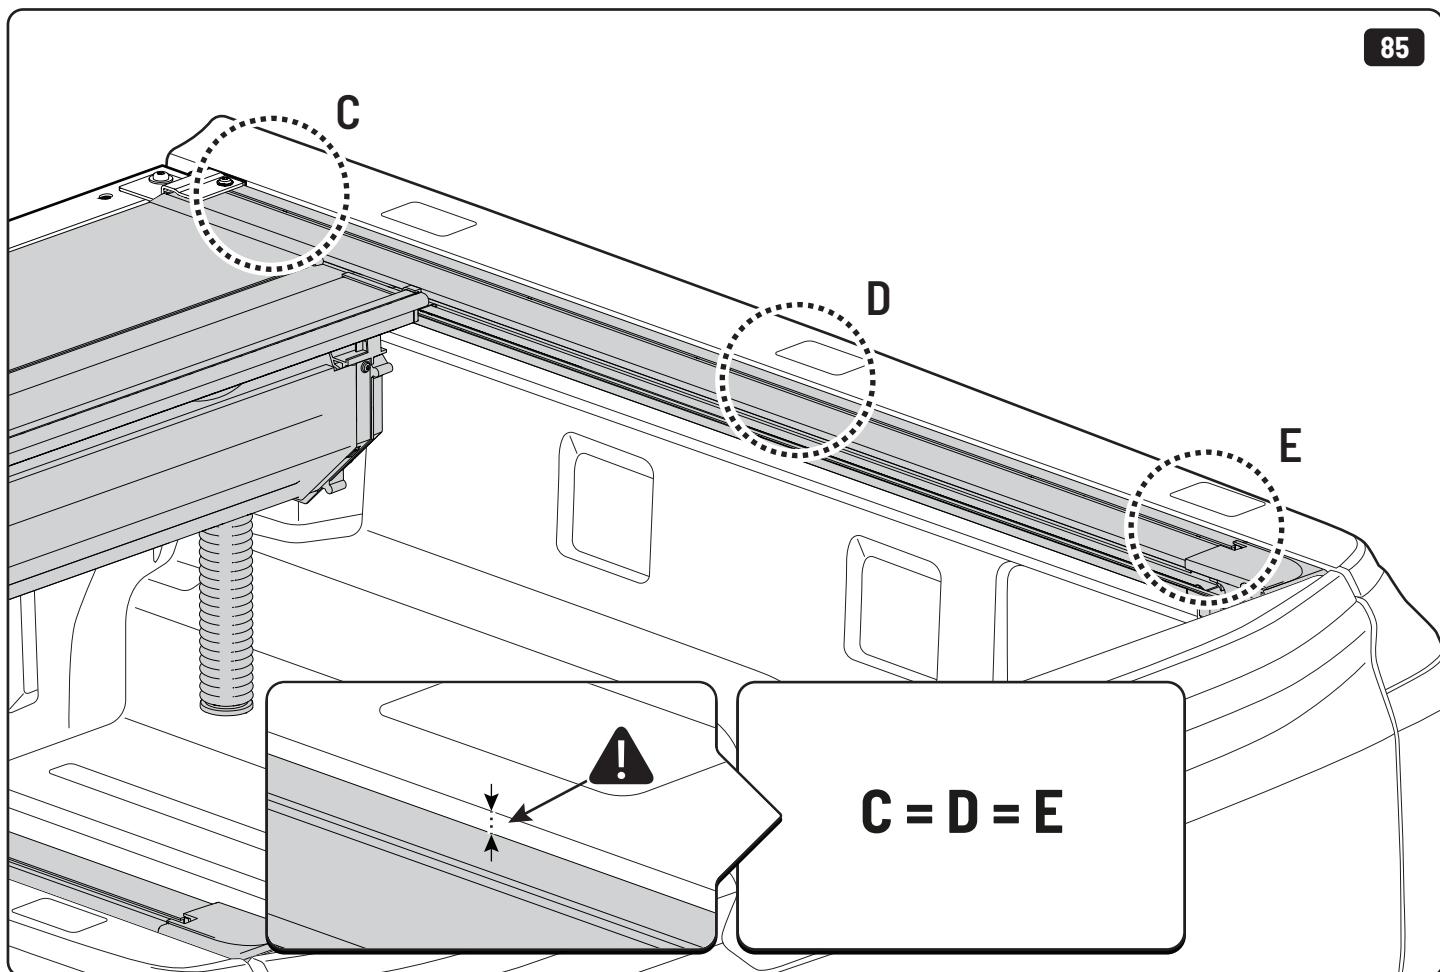




T30

10 Nm

86

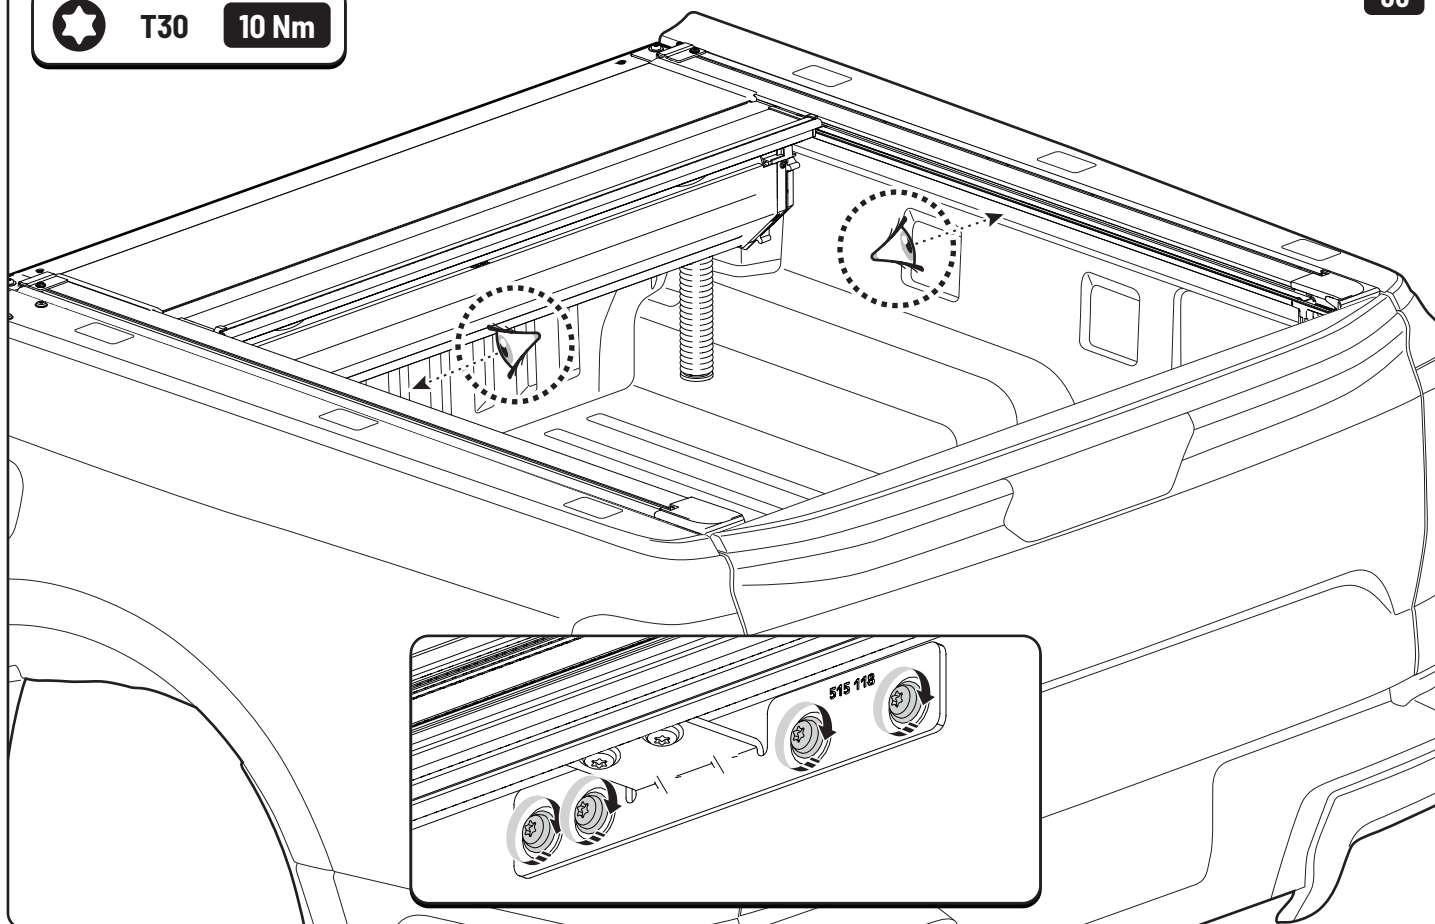

T30


10 Nm







T45



15 Nm



87


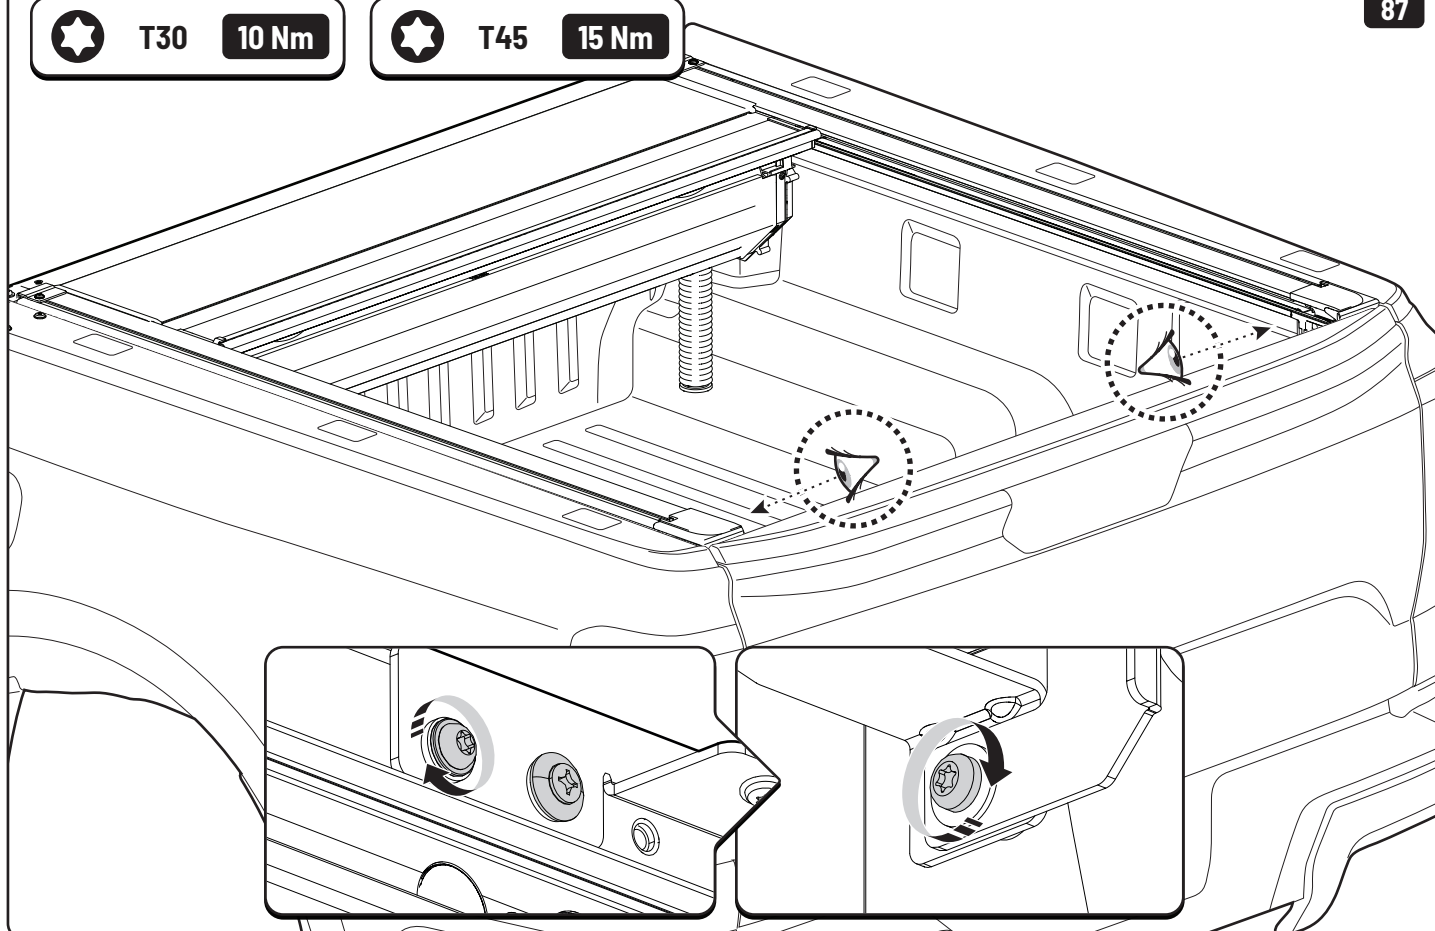


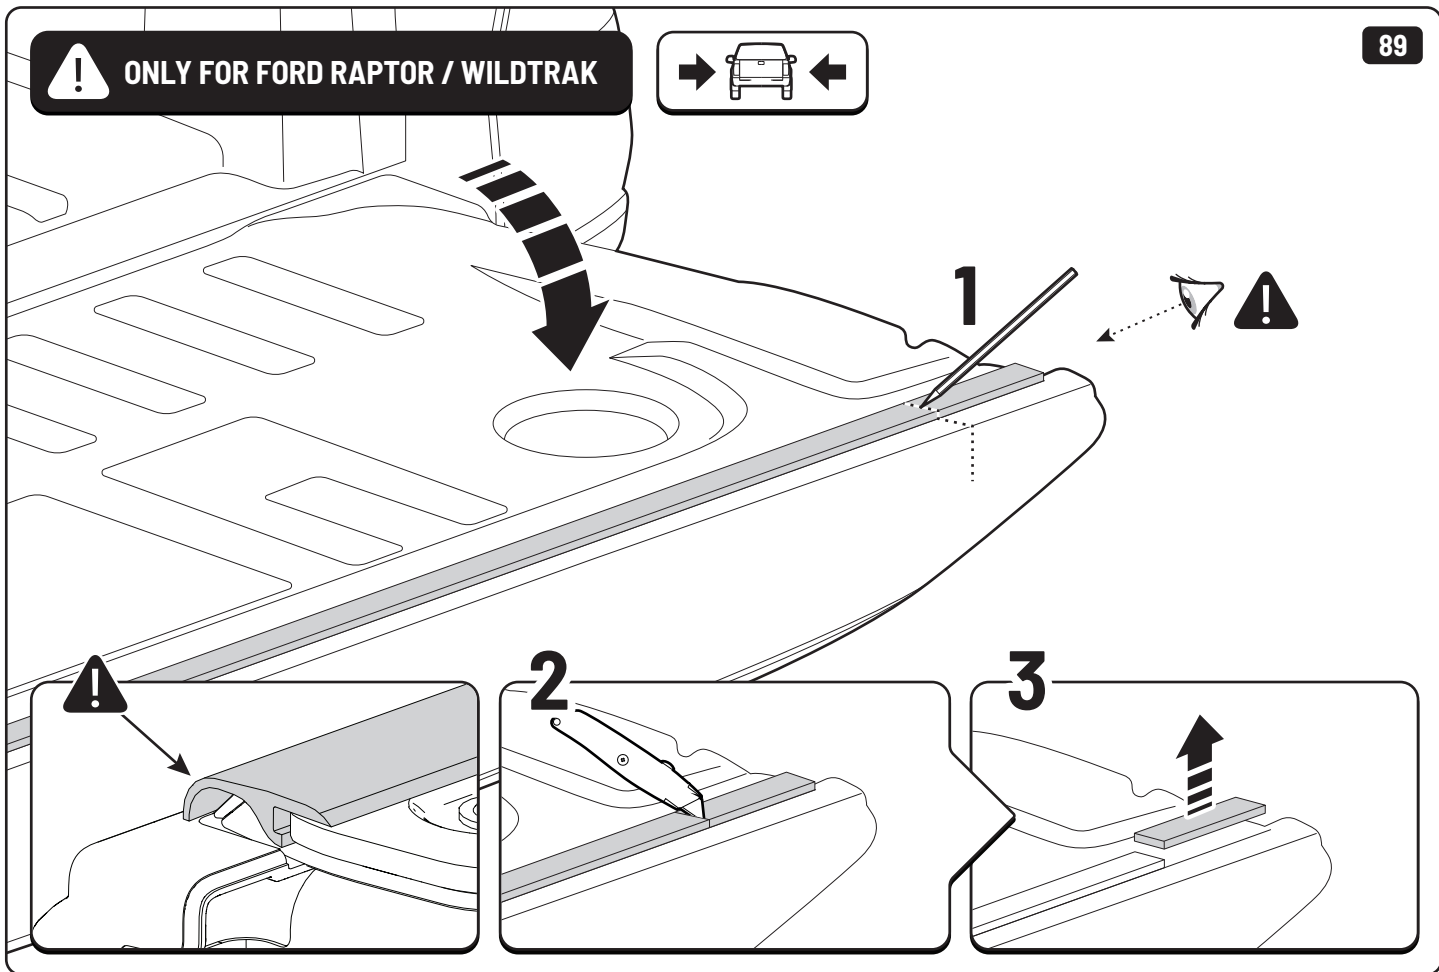
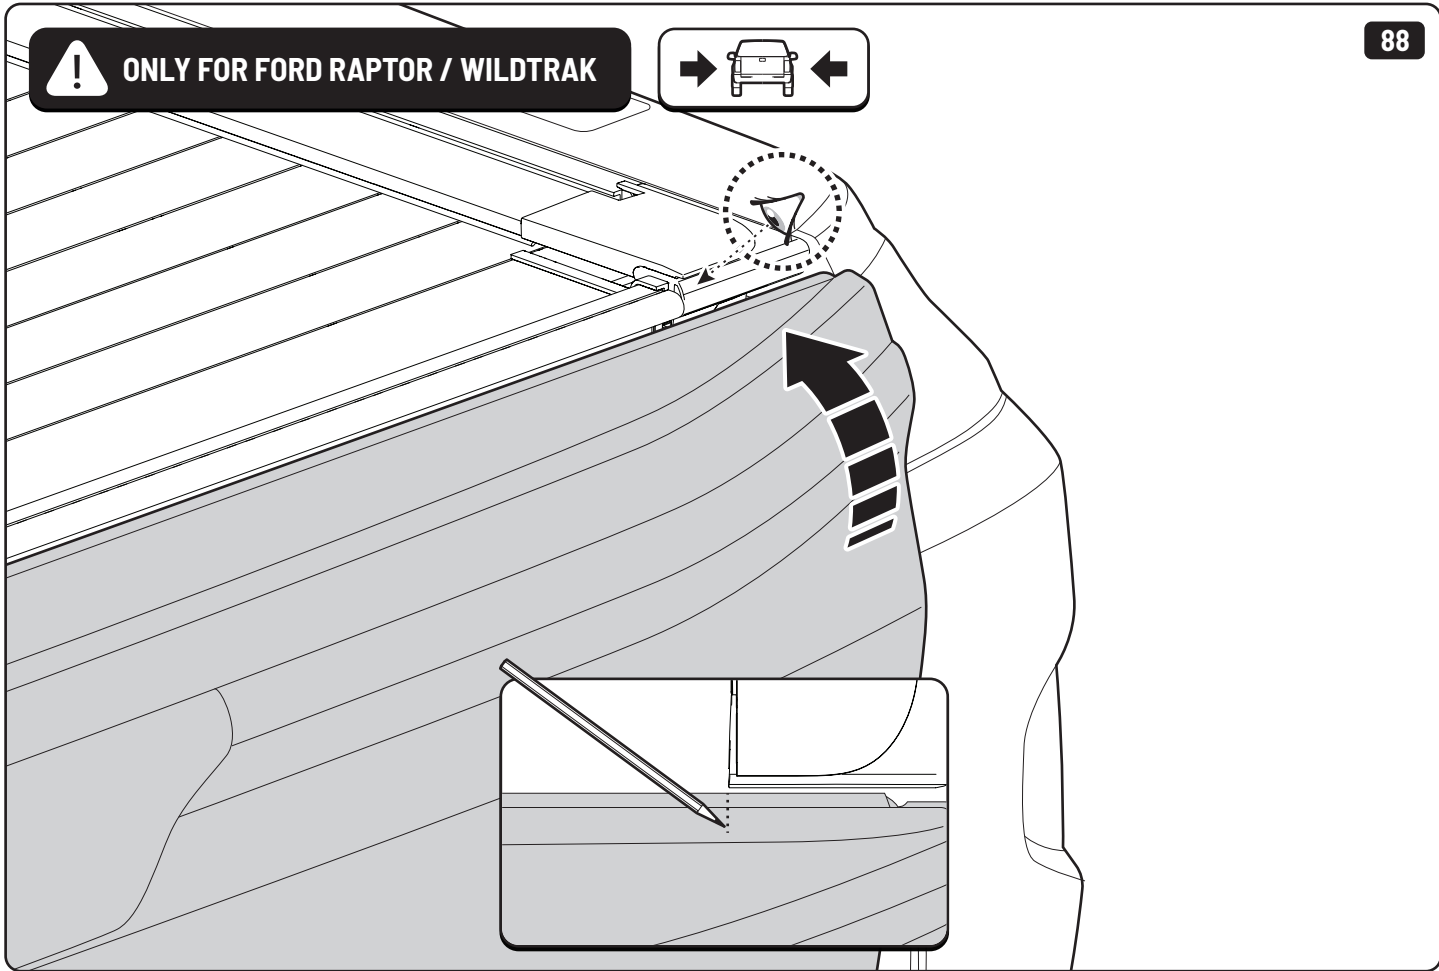


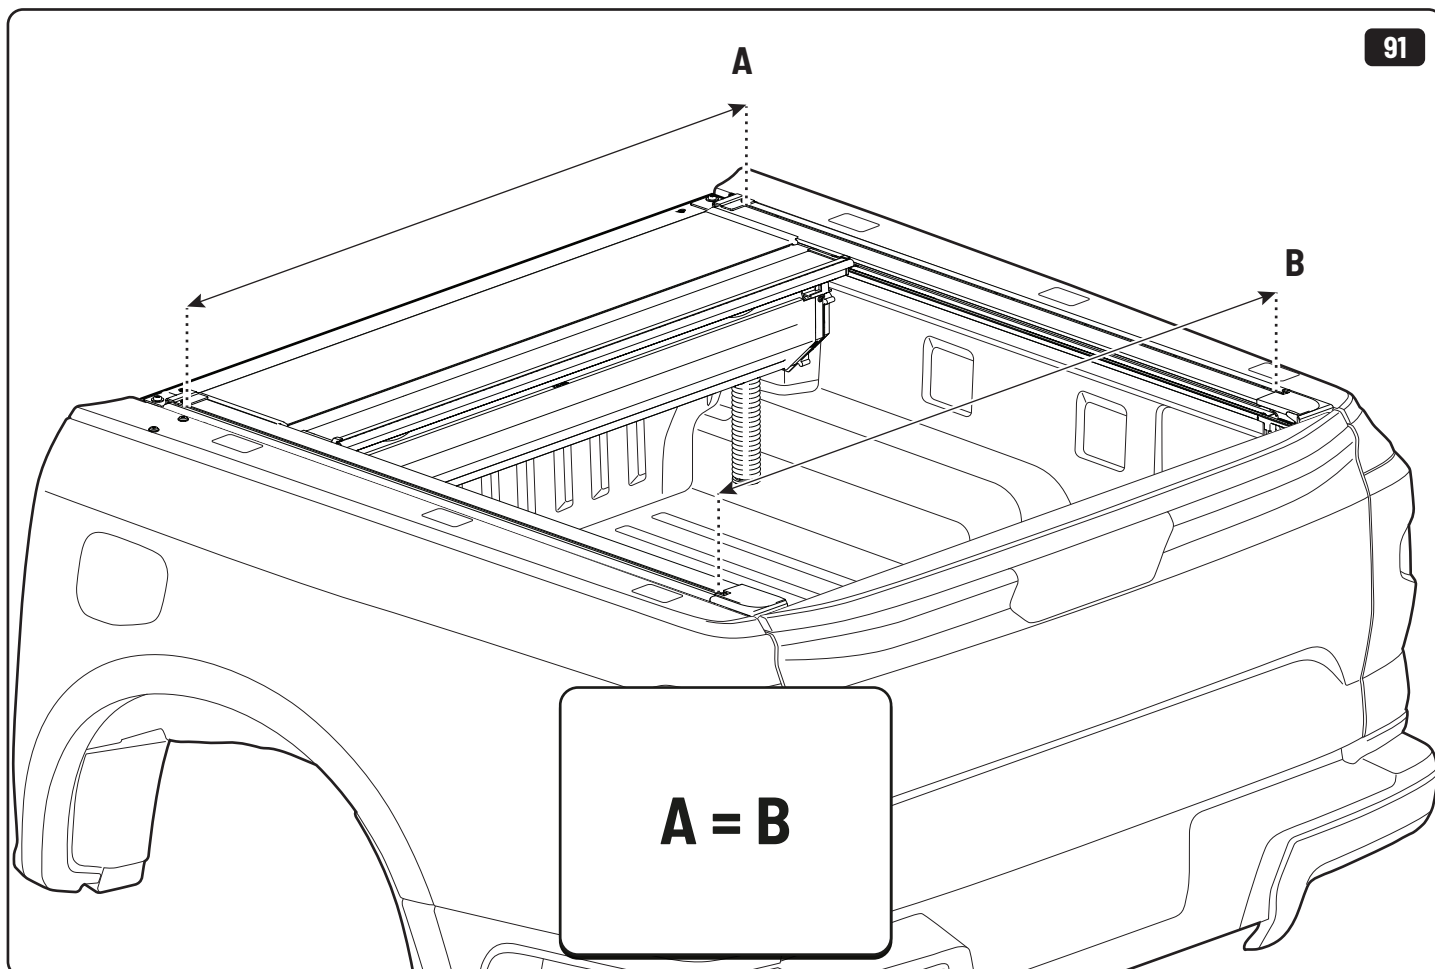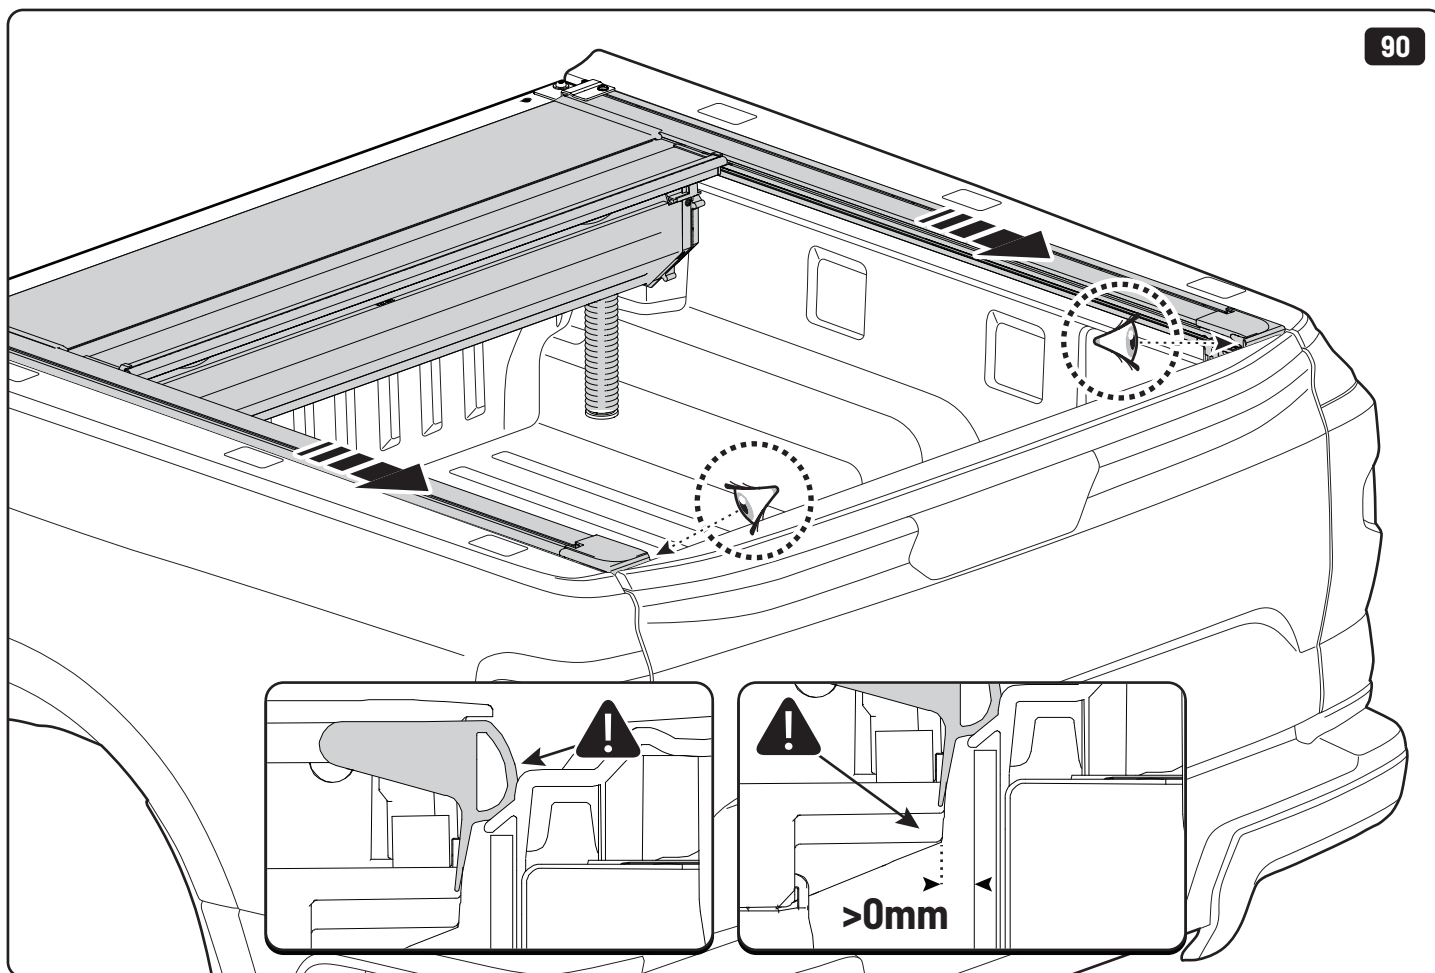

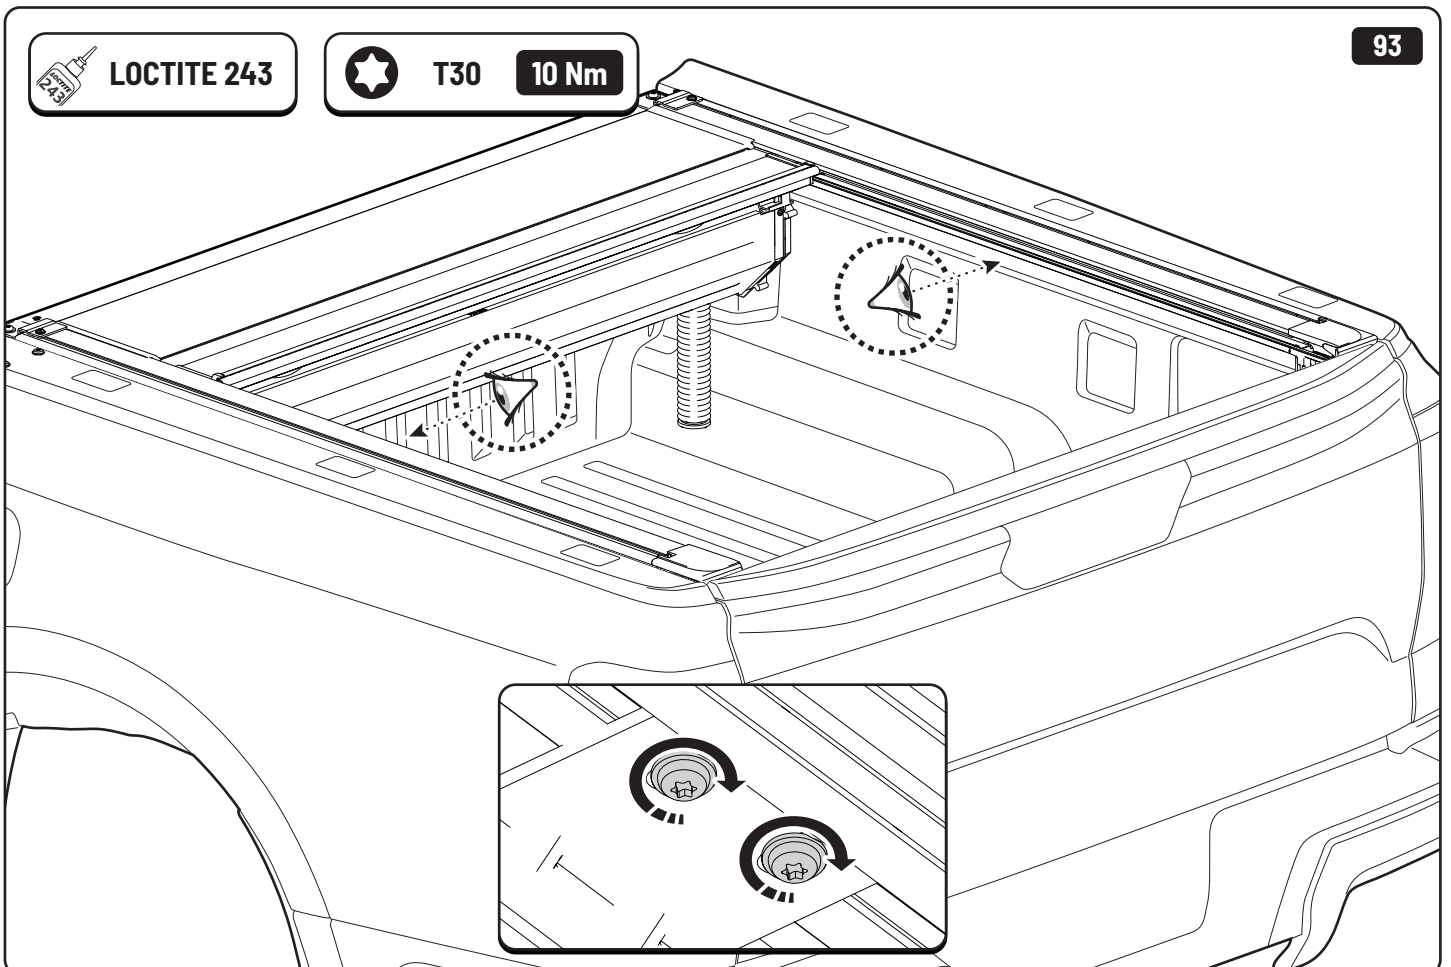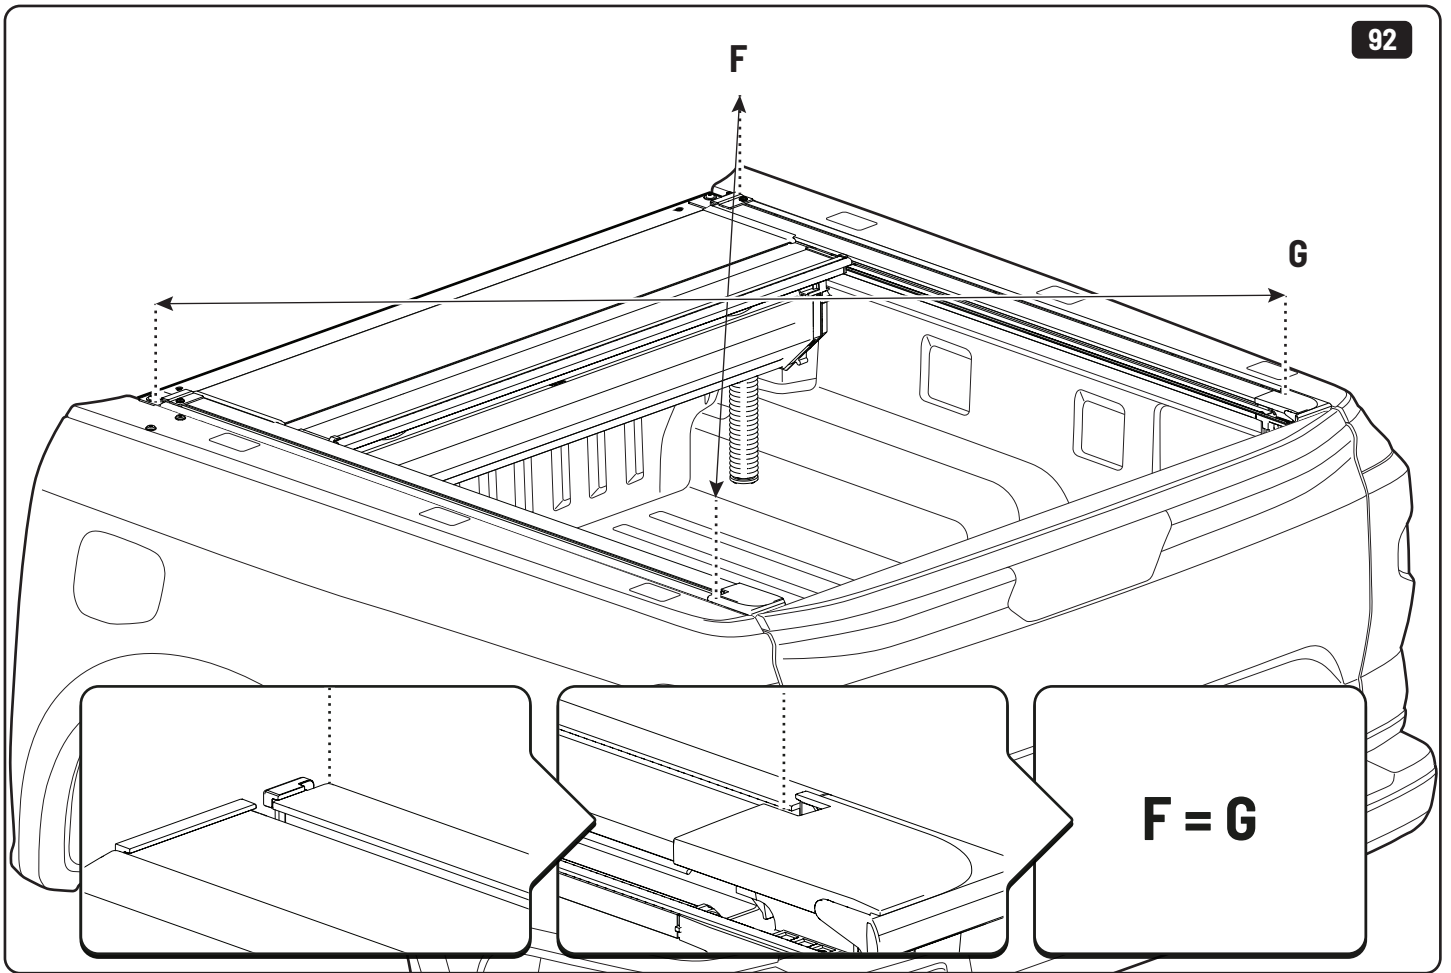

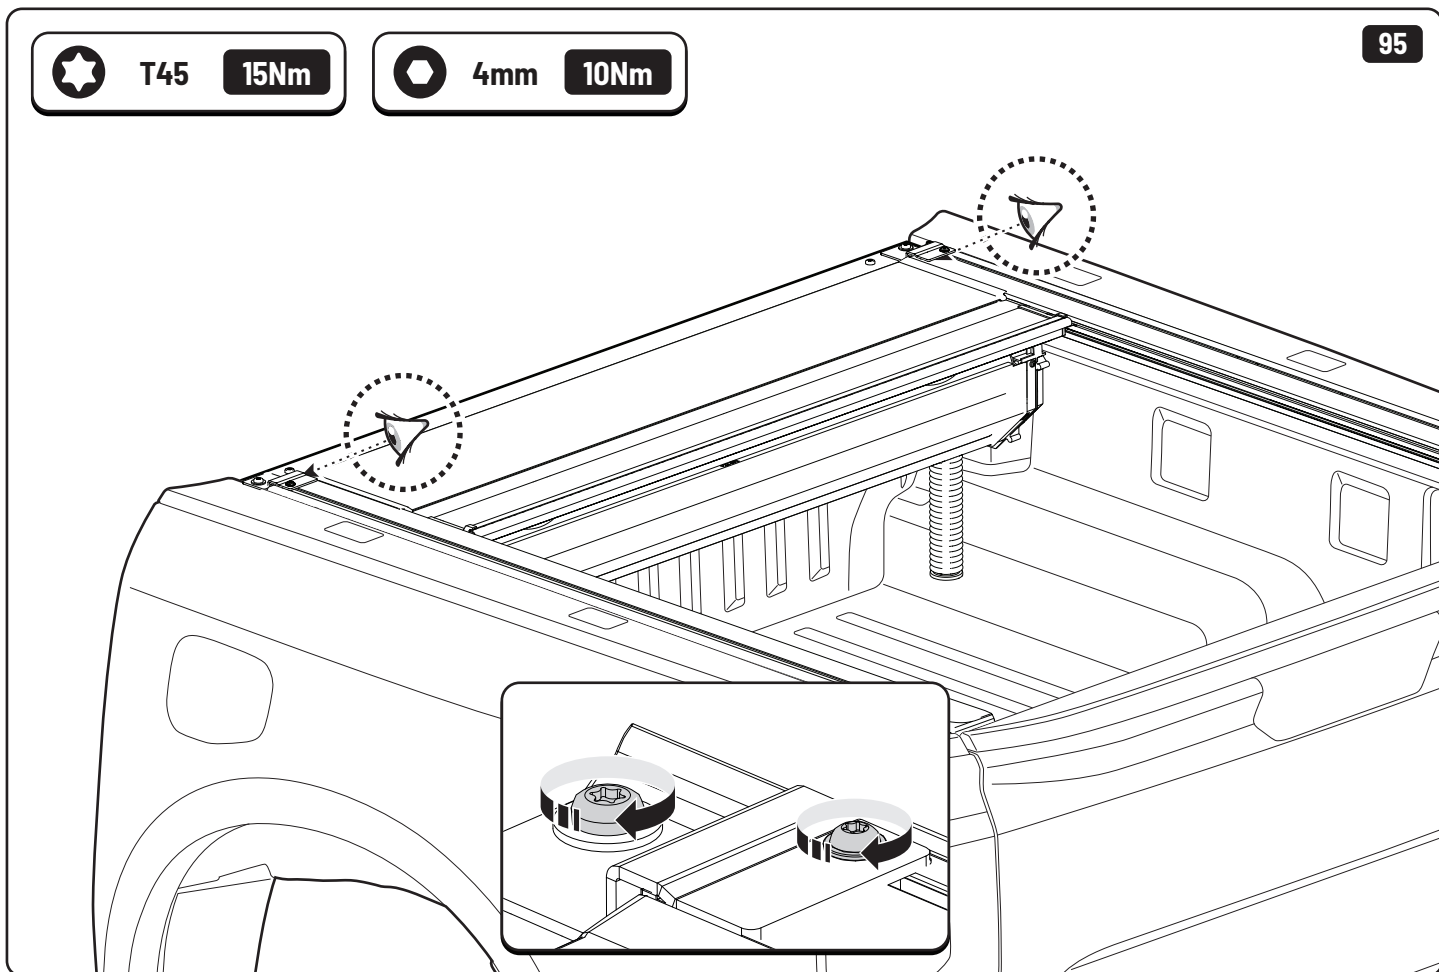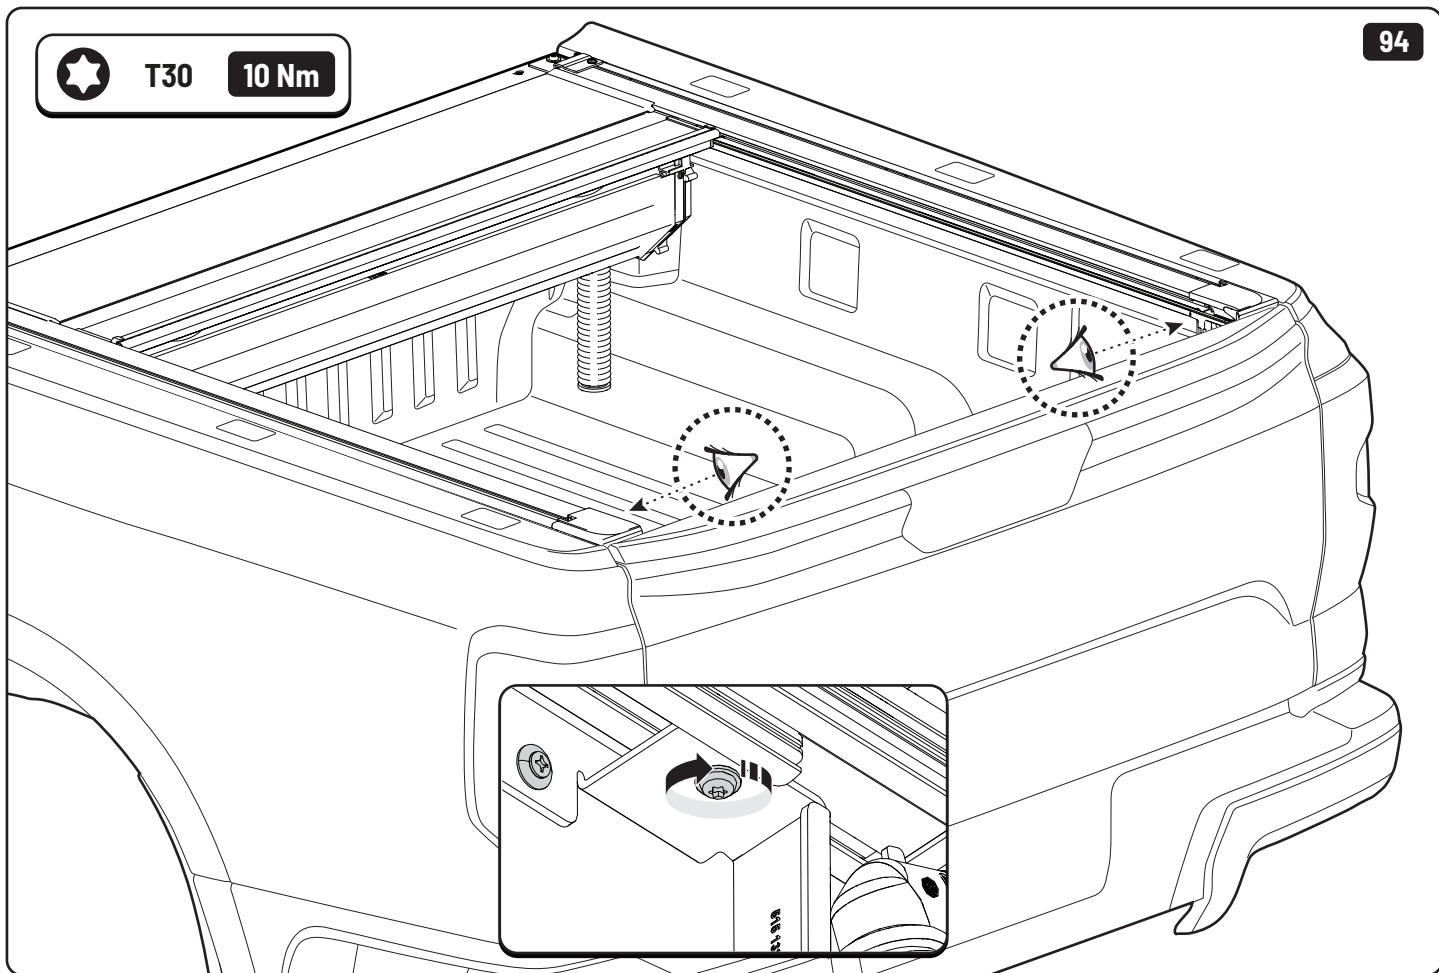

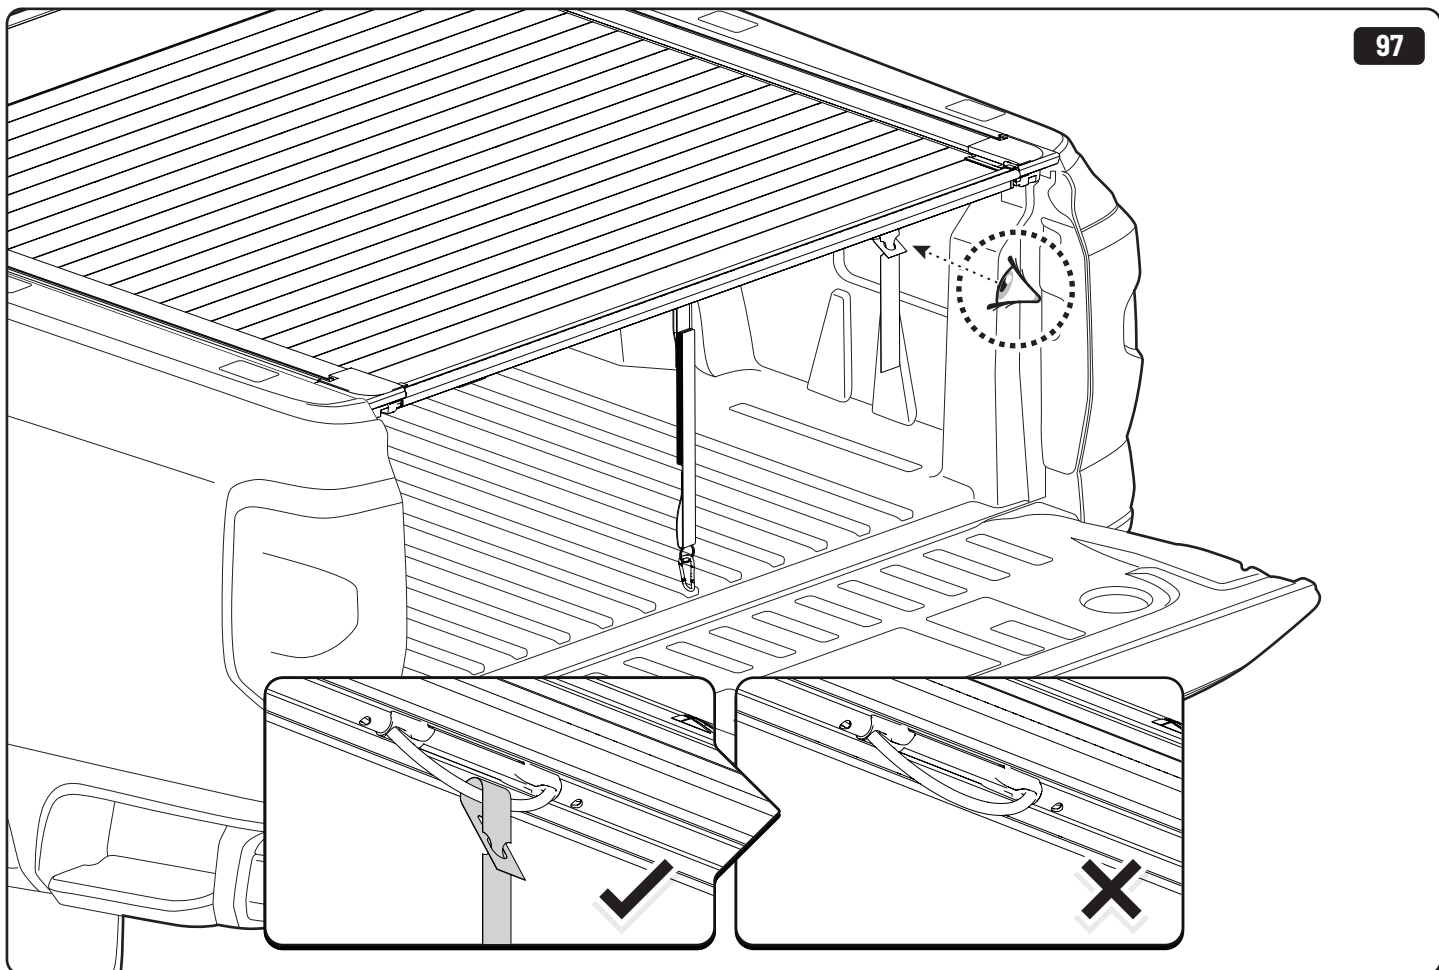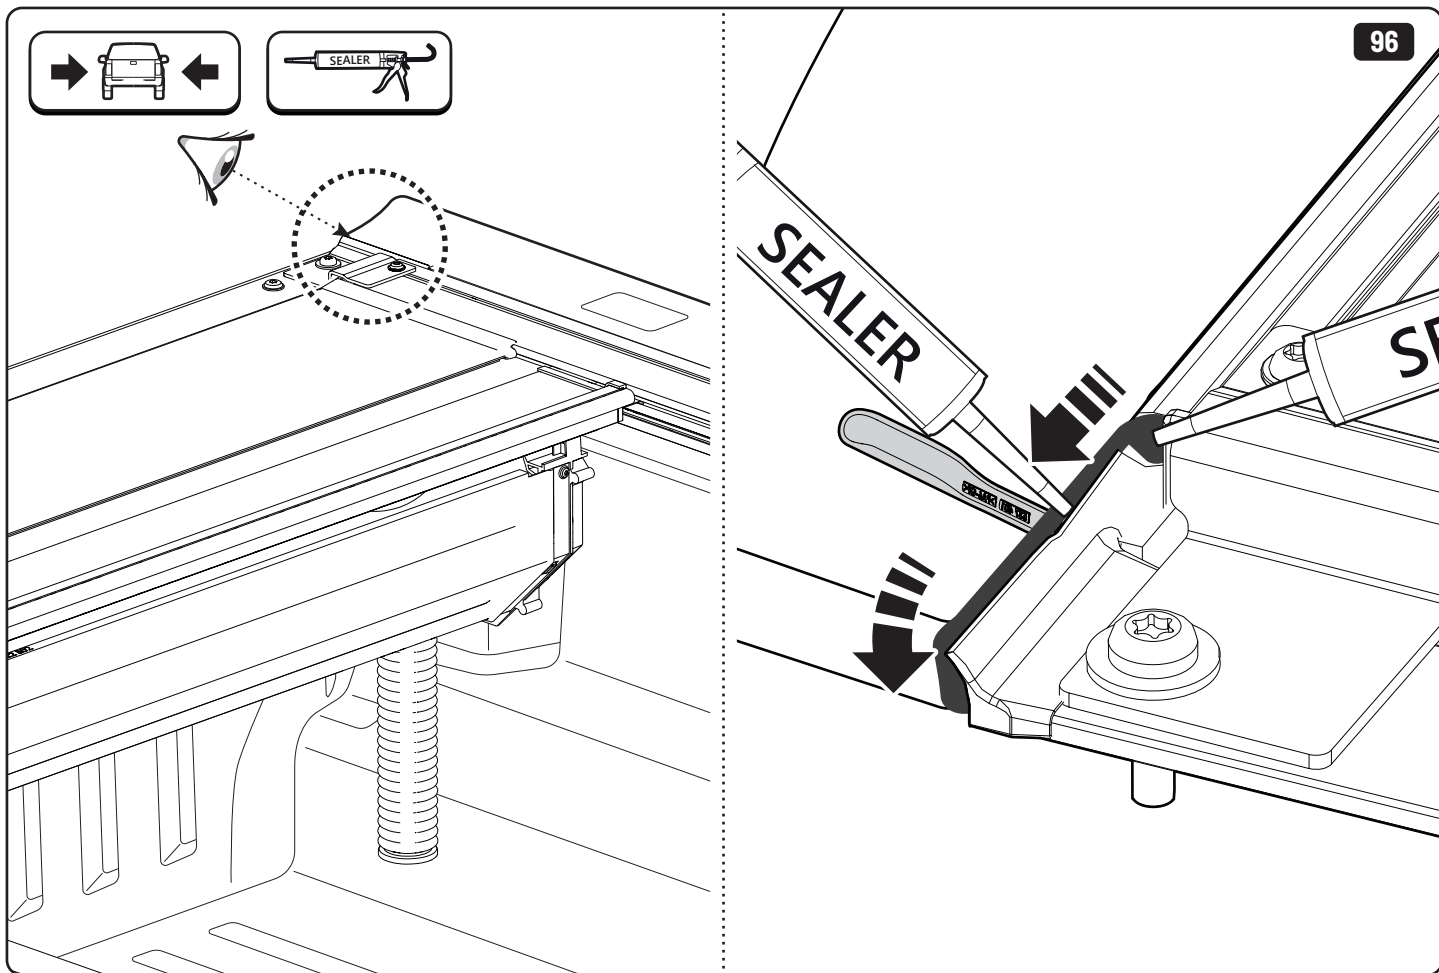

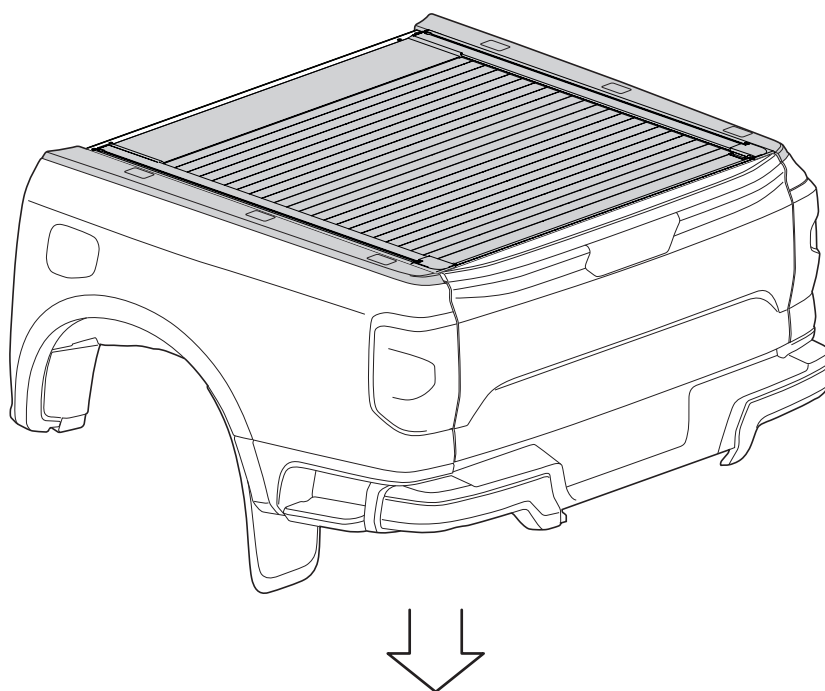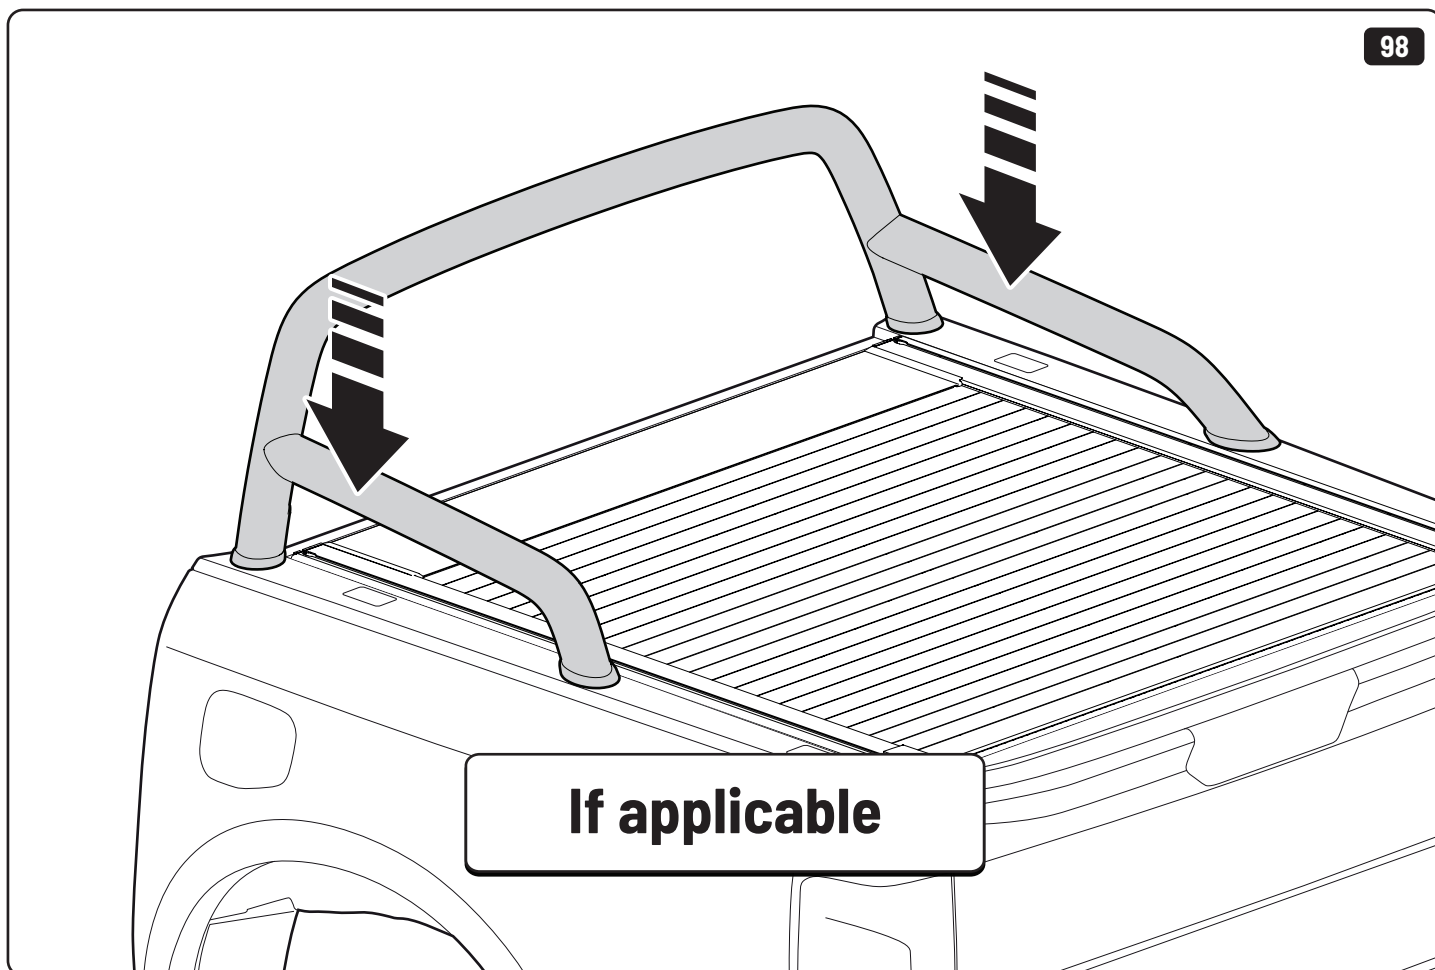

**For optimal water management.
Refer to the Water Managements Kit
installation manual.**



Steps	Page	Done by
Mounting gliding rail in canister	15	
Anti lock kit	16	
Holes for drain	30-32 + 35-36	
Mounting drain	53-57	
Width + Cross measurement	62-63	
Tightening bracket screws	63-64	



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Support info@realtruck.dk
Website www.realtruck.eu
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
MRC20F010A0	Ford Ranger/ 2022 ->	Double Cab	1 hour (s)	30 kg
MRC20F011A0	Ford Ranger/ 2022 ->	Rap Cab	1 hour (s)	34 kg
MRC20VW10A0	Volkswagen Amarok / 2022 ->	Double Cab	1 hour (s)	30 kg

GB	Installation manual	SV	Monteringsanvisning	DE	Einbauanleitung
FI	Asennusohje	ES	Instrucciones de montaje	CZ	Návod k instalaci
FR	Notice de montage	HU	Szerelési utasítás	IT	Istruzioni di montaggio
PL	Instrukcja montażu	PT	Instruções de instalação	EL	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RU	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	NO	Monteringsveiledning	RO	Instructiuni de instalare